 


 ZEBRONICS

sound bar
Juke Bar
3600Pro

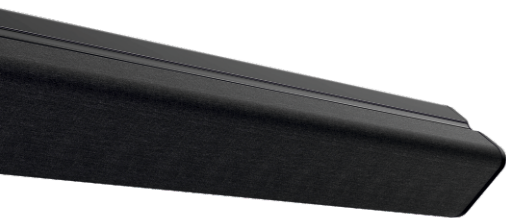

 
User Manual

www.zebronics.com

Important Safety Instruction

Thank you for purchasing the **ZEB-JUKE BAR 3600 PRO** Soundbar. Please read this user manual carefully and keep for future reference.

Warning

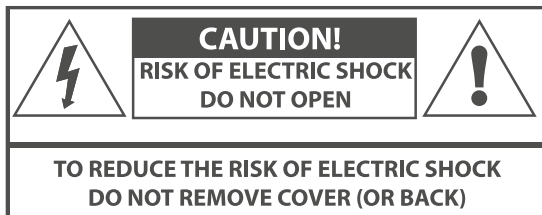

Caution:

- To reduce the risk of electric shock, do not dismantle the product and do not expose the apparatus to rain or moisture. No user-serviceable parts inside.
- Refer servicing to qualified personnel only.



The lightning flash within an equilateral triangle is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute an electric shock to a person or persons.



Important! This symbol alerts you to read and observe important warnings and instructions on the unit or in this manual.

Notice:

This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

1. To prevent possible hearing damage, do not listen at high volume levels for long time periods or a sudden high volume level.



2. Never use the device unsupervised! Switch off the device whenever you are not using it, even if not using it only for a short while.
3. The appliance is not intended to be operated by means of an external timer or separate remote control system.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
5. Before operating this system, check the voltage of this system to see if it is identical to the voltage of your local power supply.
6. The unit should not be impeded by covering the ventilation opening with items such as newspaper, table-cloths, curtains etc. Make sure that there are at least 20 cm of space above and at least 5 cm of space on each side of the unit.
7. The apparatus must not be exposed to dripping or splashing liquid, no objects filled with liquids such as vases, should be placed on the apparatus.
8. To prevent fire or shock hazard, do not expose this equipment to direct heat, rain, moisture or dust.
9. Do not position this unit near any water sources e.g. taps, bathtubs, washing machines or swimming pools. Ensure that you place the unit on a dry, stable surface.
10. Do not place this unit close to a strong

magnetic field.

11. Do not place the unit on a amplifier or receiver.

12. Do not place this unit in a damp area as the moisture will affect the life of electric components.

13. Do not attempt to clean the unit with chemical solvents as this might damage the finish. Wipe with a clean, dry or slightly damp cloth.

14. When removing the power plug from the wall outlet, always pull directly on the plug, never pull on the cord.

15. Depending on the electromagnetic waves used by a television broadcast, if a TV is turned on near this unit while it is also on, lines might appear on the LED TV. Neither this unit nor the TV is malfunctioning. If you see such lines, keep this unit well away from the TV set.

16. The mains plug is used to disconnect the device, the disconnected device should remain readily operable.

Important Safety Instructions

1. Read these instructions. Keep these instructions. Follow all instructions. Heed all warnings.

2. Do not use this apparatus near water.

3. Clean only with dry cloth.

4. Do not block any ventilation openings. Install in accordance with the manufacturer's

instructions.

5. Do not install near any heat sources such as radiators, heaters, stoves, or other apparatus (including amplifiers) that produce heat.

6. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles or at the point where they exit from the apparatus.

7. Only use attachments/accessories specified by the manufacturer.

8. Unplug this apparatus during lightning storms or when unused for long periods of time.

9. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, for example, when the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

10. The AC plug is used to disconnect the device, the disconnected device should remain readily operable. In order to disconnect the apparatus from the AC power completely, the AC plug must be removed from the AC outlet completely.

Important Notes

- Safety and operating instruction manual should be retained for future reference.

 
- The apparatus should not be exposed to dripping, splashing or placed in a humid atmosphere such as a bathroom.
- Do not install the product in the following areas:
 - Places exposed to direct sunlight or close to radiators.
 - On top of other stereo equipment that radiate too much heat -Blocking ventilation or in a dusty area.
 - Areas where there is constant vibration.
 - Humid or moist places.
 - Do not place near candles or other flames.
- Operate the product only as instructed in this manual.
- Before turning on the power for the first time, make sure the sound bar is plugged to power outlet.
- For safety reasons, do not remove any covers or attempt to gain access to the inside of the product. Refer any servicing to qualified personnel.
- Do not attempt to remove any screws, or open the casing of the unit; there are no user serviceable parts inside. Refer all servicing to qualified service personnel.

Power Source:

This soundbar is designed to operate in DC 24V \approx 1.75A.


Product Representation



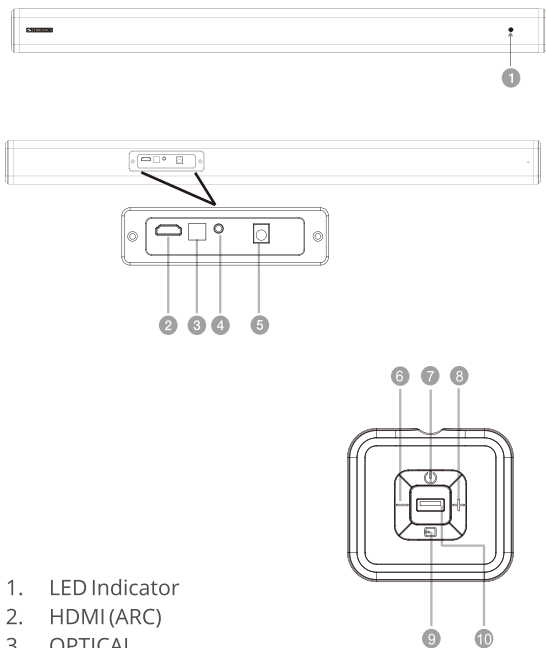

Sound Bar

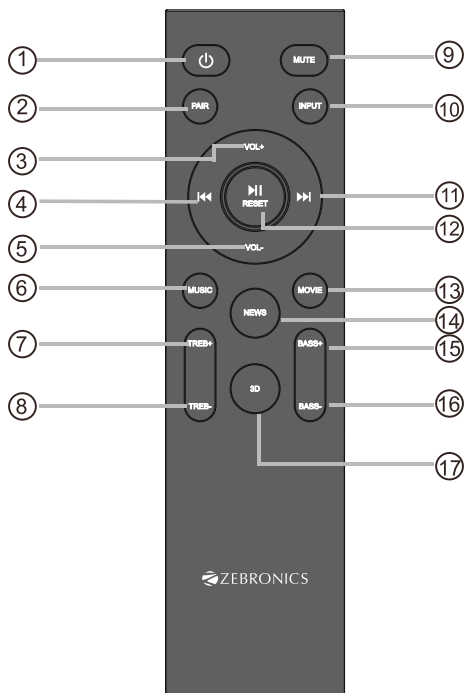 

1. LED Indicator
2. HDMI (ARC)
3. OPTICAL
4. AUX
5. DC IN
6. VOL-
7. STANDBY/POWER
8. VOL+
9. INPUT
10. USB

Remote Control

 
 


1.  : Standby mode for power on/off.
2. Pair : Connect or Disconnect to the Pairing Device.
(Press the Button more than 2 Seconds)
3. VOL+ : Master Volume Up.
4.  : Previous Track (Only work under USB & BT Mode).
5. VOL- : Master Volume Down.
6. MUSIC: Select the Music EQ effect.
7. TREB+ : Treble Volume Up.
8. TREB- : Treble Volume Down.
9. MUTE : Mute Mode.
10. INPUT : Input mode(AUX/USB/HDMI(ARC)/OPT/BT)
11.  : Next Track (Only work under USB & BT mode).
12.  / RESET
 Play/Pause : Play / Pause for Current Track (Only work under USB and BT mode).
 Reset : Press and hold the button more than 2 sec. to Set all functions to manufacturer defaults.
13. MOVIE : Select the Movie EQ effect.
14. NEWS : Select the News EQ effect.
15. BASS+ : Bass Increase.
16. BASS- : Bass Decrease.
17. 3D : Select the 3D EQ effect.

Positioning the Sound Bar

Place on a flat Surface


Place the sound bar horizontally on a flat surface such as a TV unit or shelves and align it centrally with the TV screen. Allow some space between the speaker and the wall. Don't place inside a cabinet or an a walled shelf. Follow this guidance for best sound output and good airflow around the sound bar.

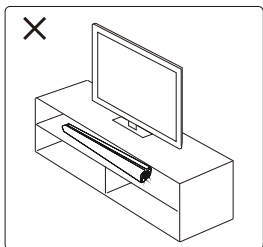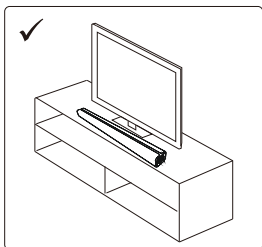

Mount on the wall



WARNING : If you don't feel confident to correctly and securely wall-mount the sound bar, Seek the assistance of an experienced person of professional.

 Install the speaker on a vertical, fast, reinforced area of wall. For plaster walls, it is recommended to screw into wall studs for greater security. For optimum performance, allow at least 25mm/1" distance between the sound bar and the TV.

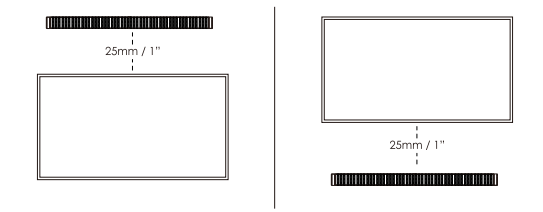

Follow below steps to mount the sound bar on the wall

  1. Make 2 holes on the wall with distance same as the wall bracket on the soundbar
2. Put the plastic anchors onto the wall and secure the screws to the plastic clip, do not tighten the screws all the way make sure leave some space
3. Attached the 2 EVA pads onto the wall mount bracket. This will make sure that there is enough room between the wall and the soundbar outlet, minimum 15mm
4. Once the screws securely fastened, hang the sound bar over by inserting the screws onto the wall mount bracket

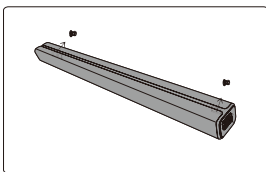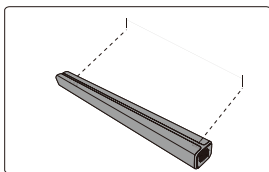

OPERATE INSTRUCTIONS

Setting the Soundbar

1. Plug the power cord in and the LED will light up.
2. Press the INPUT button to select the mode you need with the remote controller.
3. The indicator can change into 6 different colors, representing different states:

Red : Standby

Blue : BT Mode

Green : AUX Mode

 
Cyan : HDMI (ARC) Mode

Yellow : Optical mode

Pink : USB Mode

Powering On/Off

1. Plug the sound bar adapter into a wall outlet, it will automatically enter standby mode.
2. Short-press the input button to turn on the sound bar.
3. To turn off, press either the STANDBY button on remote control or soundbar or unplug from wall outlet.

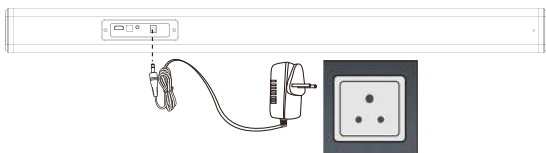

Playing Audio via BT Connection

1. Use either the buttons on the SoundBar or the "**Input**" button on the remote to activate BT mode. A Blue LED indicator will indicate that BT mode has been selected.
2. Activate the pairing function on your phone or other compatible device and select "**ZEB-JUKE BAR 3600 PRO**".
3. When successfully paired, you will hear a tone and the LED will stay on.
4. The remote control includes BT mode playback controls

Notes:

- *If your pairing device switched off or manual disconnected, the sound bar will automatically enter pairing mode.*
- *If the connected device is switched off or manual disconnected, the sound bar will automatically enter pairing successfully connected device will be re-established once you re-enter wireless range (10 meters). To connect to other devices, repeat the above pairing steps.*
- *There is no automatic shutdown in pairing mode. The sound bar will remain in pairing mode even if no device is paired, so switch off if not in use.*

Playing Audio via USB Port

 
When the USB flash drive is plugged in, the sound bar automatically switches to USB input mode. A Pink LED indicator will indicate that USB mode has been selected. This mode cannot be selected on the sound bar or remote control unless it is connected to a USB flash drive.

1. Ensure that your USB flash drive contains MP3 audio files (other file types not supported)
2. Connect the USB flash drive to the USB port on the sound bar (or your own USB extension cable connected to the USB port); music will automatically play.
3. The remote control includes USB input mode playback controls

Audio input (AUX) Connection


1. Use either the buttons on the SoundBar or the "**Input**" button on the remote to activate AUX mode. A green LED indicator will indicate that AUX mode has been selected.
2. Playback functions (play/pause, tracks, pair) cannot be adjusted through the SoundBar remote when in AUX mode. Others playback functions can be controlled from the buttons on the SoundBar.

***Note:** For some computers, you may need to access the audio control panel to manually set the sound bar as below picture.*

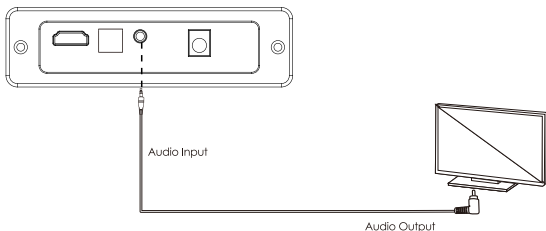

HDMI (ARC) Mode

 
1. Use either the buttons on the SoundBar or the "**Input**" button on the remote to active HDMI (ARC) mode. A Cyan LED indicator will indicate that HDMI (ARC) mode has been selected.
2. The Soundbar supports HDMI with Audio Return Channel (ARC). If your TV is HDMI ARC compliant, you can hear the TV audio through your Soundbar by using a single HDMI cable.
3. Using a High Speed HDMI cable, connect the HDMI (ARC) connector on the soundbar to the HDMI ARC connector on the TV. The HDMI ARC connector on the TV might be labelled differently. For details, see the TV user manual.

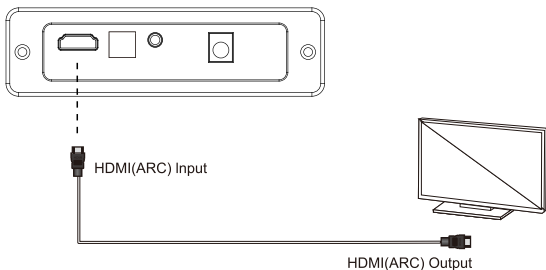

Optical Mode

1. Use either the buttons on the SoundBar or the "**Input**" button on the remote to active Optical mode. A yellow LED indicator will indicate that Optical mode has been selected.

 2. Playback functions (play/pause, tracks, pair) cannot be adjusted through the SoundBar remote when in Optical mode. Others playback functions can be controlled from the buttons on the SoundBar.

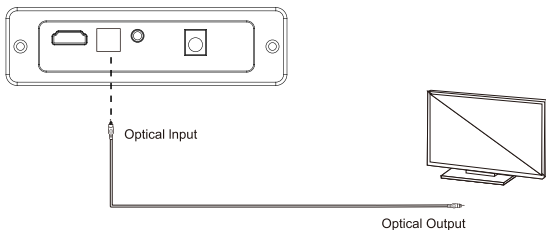

Troubleshooting

PROBLEM/TROUBLE	POSSIBLE CAUSE	SOLUTION
Sound	No sound from Soundbar speakers	Connect the audio cable from your Soundbar to your TV or other devices. However, you do not need a separate audio connection when the Soundbar and TV are connected through ARC connection. On the remote control, select the correct audio input.
	Distorted sound or echo	If you play audio from the TV through the Soundbar, make sure that the TV is muted.
Bluetooth	A device cannot connect with the Soundbar	Restart the soundbar and try pairing again
		You have not enabled the Bluetooth function of the device. See the user manual of the device on how to enable the function.
		The device is not correctly connected.
	Quality of audio play from a connected Bluetooth device is poor.	The Soundbar is already connected with another Bluetooth device. Disconnect the connected device, then try again.
The connected Bluetooth device connects and disconnects constantly	The Bluetooth reception is poor. Move the device closer to the Soundbar, or remove any obstacle between the device and the Soundbar.	

Features:

2.0 Channel Soundbar

Wireless BT/USB/AUX/Optical IN/ HDMI (ARC)

Quad drives

Remote control

Wall Mountable

Volume/Media Control

External Power Adapter

Specifications

Output Power(RMS) : 84W

Driver Size : 6.35cm x 4

Impedance : 3Ω

Frequency response : 70Hz-20kHz

S/N Ratio : ≥70dB

Separation : ≥36dB

File format support : MP3 (USB)

Line input : 3.5mm, Optical IN,
HDMI (ARC)

Max supported

memory size (USB) : 32 GB

BT name : ZEB-JUKE BAR
3600 PRO

BT version : 5.0

Product Dimension : 900 x 80 x 74 mm
(W x D x H)

Net. Weight : 1.8 kg

Package Contents:

Sound Bar	:1 U
Power Adapter	:1 U
Remote Control	:1 U
Input cable	:1 U
QR code guide	:1 U
Wall mount bracket with fasteners	:1 U

ISO 9001:2015 Certified Company

www.zebronics.com

