

NOKIA

Nokia 110

User Guide

1 About this user guide



Important: For important information on the safe use of your device and battery, read “For your safety” and “Product Safety” info in the printed user guide, or at www.nokia.com/support before you take the device into use. To find out how to get started with your new device, read the printed user guide.

Table of Contents

 
1	About this user guide	2
2	Table of Contents	3
3		5
	Keys and parts	5
	Set up and switch on your phone	6
	7
	Keypad	7
4	,	9
	Calls	9
	Contacts	9
	Send messages	10
5		11
	Change your ring or message tone	11
	Change the look of your home screen	11
	12
	Settings for Go to	12
	Personalize your SIM cards	13
6	Camera	14
	Photos and videos	14
7		15
	Find and save radio stations	15
	Listen to the radio	15
8	,	16
	Set the time and date manually	16
	Alarm clock	16
	Calendar	16
	16

9 Empty your phone	18
.....	18
Restore factory settings	18
10 Product and safety information	19
.....	19
.....	21
.....	21
.....	22
.....	22
.....	22
.....	23
.....	23
.....	23
.....	23
.....	23
.....	24
.....	24
(SAR)	24
.....	24
Copyrights and other notices	24

3

KEYS AND PARTS

Your phone

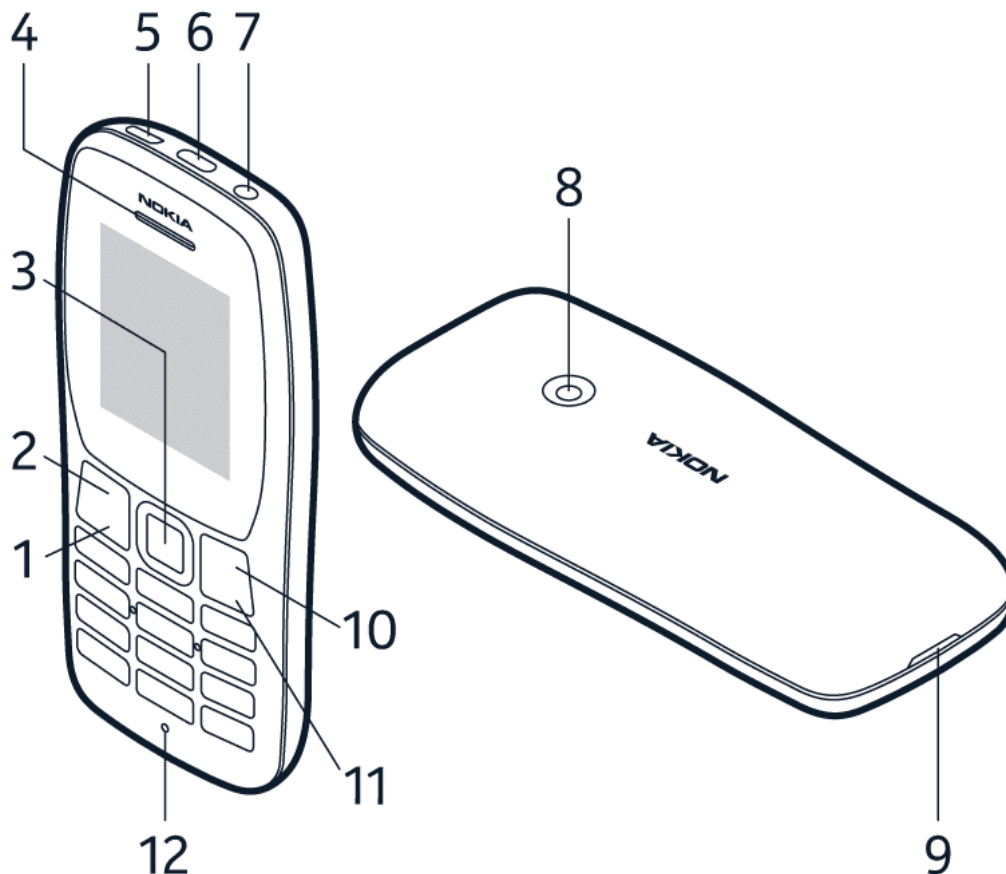

This user guide applies to the following model: TA-1192

- | | |
|--|----------------------------|
| 1. Call key | 7. Headset connector |
| 2. Left selection key | 8. Camera |
| 3. Scroll key. Press to access your apps and select items. | 9. Back cover opening slot |
| 4. Earpiece/Loudspeaker | 10. Right selection key |
| 5. USB connector | 11. End/Power key |
| 6. Flashlight | 12. Microphone |

Avoid touching the antenna area while the antenna is in use. Contact with antennas affects the communication quality and may reduce battery life due to higher power level during operation.

Do not connect to products that create an output signal, as this may damage the device. Do not connect any voltage source to the audio connector. If you connect an external device or headset, other than those approved for use with this device, to the audio connector, pay special attention to volume levels. Parts of the device are magnetic. Metallic materials may be attracted to the device. Do not place credit cards or other magnetic storage media near the device, because info stored on them may be erased.

Some of the accessories mentioned in this user guide, such as charger, headset, or data cable, may be sold separately.

 
SET UP AND SWITCH ON YOUR PHONE



: () -UICC



Set up your phone

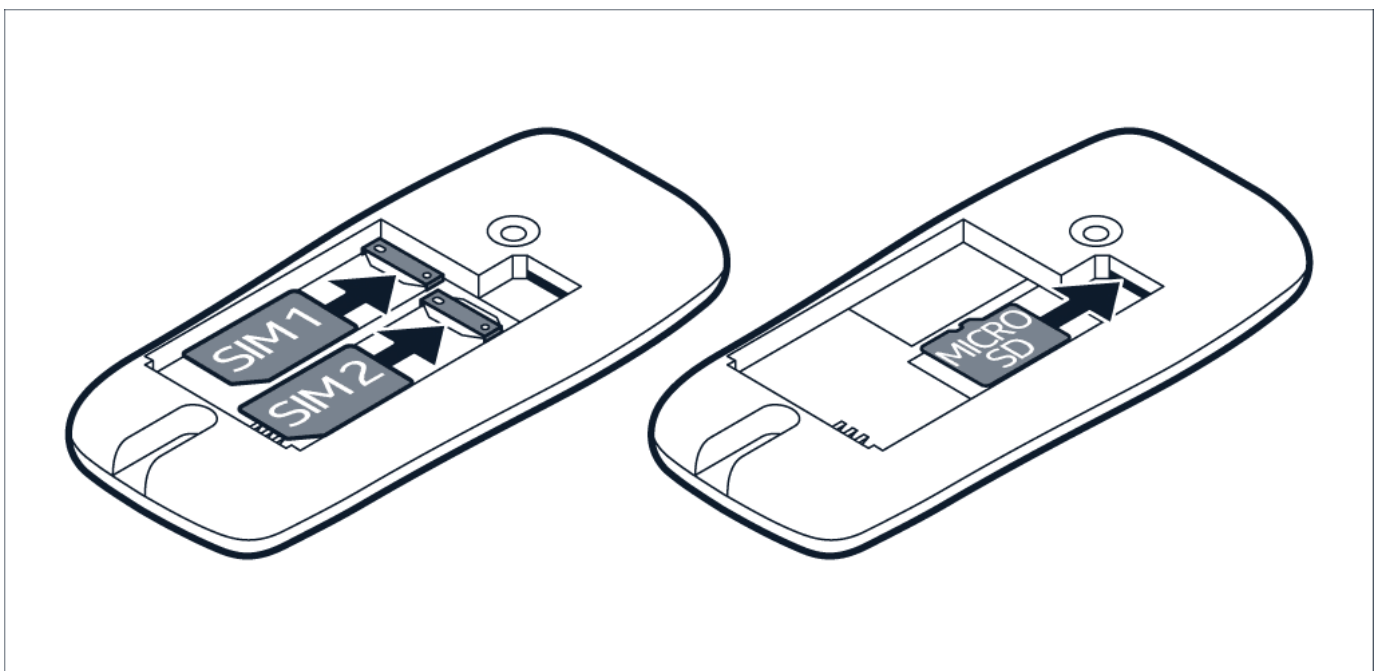

1. Put your fingernail in the small slot at the bottom of the phone, lift and remove the cover.
2. If the battery is in the phone, lift it out.
3. Slide the SIM card into the SIM1 slot with the contact area face down. If you have a second SIM, slide it into the SIM2 slot. Both SIM cards are available at the same time when the device is not being used, but while one SIM card is active, for example, making a call, the other may be unavailable.
4. If you have a memory card, slide it in the memory card slot.
5. Line up the battery contacts, and put the battery in.
6. Put back the back cover.



,

- 1.
2. , ,

,



: USB USB

KEYPAD

Use the phone keys

- To see the apps and features of your phone, on the home screen, select **Menu**.
- To go to an app or feature, press the scroll key up, down, left, or right. To open the app or feature, press the scroll key.

Lock the keypad

To avoid accidentally pressing the keys, lock the keypad: select **Go to** > **Lock keypad**. To unlock the keypad, select **Unlock**.

Switch on the flashlight

On the home screen, quickly scroll up twice to switch on the flashlight.

To switch off the flashlight, scroll up once.

Do not shine the light in anyone's eyes.

Write with the keypad

Press a key repeatedly until the letter is shown.

To type in a space press **0**.





To type in a special character or punctuation mark, select **Opt.** > **Insert options** > **Insert symbol**.

To switch between character cases, press **#** repeatedly.

To type in a number, press and hold a number key.







4 ,

CALLS


1.  + *'
2. 
3.  , 



CONTACTS


1.  >  > 
2.  
- 3.
4. 

Save a contact from call log


 

 



1. Select **Menu** >  > **Missed calls**, **Received calls**, or **Dialled numbers** depending on from where you want to save the contact.
2. Highlight the number you want to save, select **Opt.** > **Save**, and select where you want to save the contact.
3. Add the contact's name, check that the phone number is correct, and select **OK**.

Call a contact

You can call a contact directly from the contacts list.

1. Select **Menu** >  > **Names**.
2. Scroll to a contact and press the call key.




SEND MESSAGES

1.  > `<fp>messaging-alternative-s30-n</fp>` > 
- 2.
3.  > ,  
4. 

Writing options

You can find different options for writing a message under **Opt.** when you are in the message field. You can, for example, insert symbols and save messages.

To switch on predictive text, select **Opt.** > **Dictionary**.

1.  >  > 

2. 


''
 : 

SETTINGS FOR GO TO

You can add quick links to different applications and settings to **Go to**.

Edit Go to settings

On the bottom left of the home screen, you have **Go to**, and when you select it, you can quickly access different applications and settings. You can change the applications and settings to your liking.


1. Select **Menu** >  > **Go to settings**.
2. Select **Select options**.
3. Scroll to a shortcut you want to add on the **Go to** list on the home screen and **Mark** them.
4. Select **Done** to exit the list, and **Yes** to save changes.

You can also reorganize your **Go to** list.

1. Select **Organise**.
2. Scroll to an item you want to move and select **Move**.
3. Select if you want to move it up, down, to top, or to bottom of the list.
4. Select **Back** to exit the list, and **OK** to save changes.

PERSONALIZE YOUR SIM CARDS


Edit the SIM card settings

1. Select **Menu** >  > **Dual SIM settings**.
2. Select **SIM name**, and enter a name for your SIM card.
3. Select an icon for the SIM card.

6 Camera




PHOTOS AND VIDEOS

Take a photo

1. Select **Menu** > .
2. To take a photo, press the scroll key.

To see the photo you just took, select **Opt.** > **View photos**.

Record a video

1. To switch the video camera on, select **Menu** >  and scroll right.
2. To start recording, select .
3. To stop recording, select .


To see the video you just recorded, select  > **View videos**.

7

FIND AND SAVE RADIO STATIONS


Connect a compatible headset. It acts as an antenna.

Find your favorite radio stations

1. Select **Menu** > .
2. When the phone asks if you want to search all available channels, select **OK**.
3. To switch between stations, scroll up or down.
4. To save a found channel, select **Opt.** > **Save channel**.

LISTEN TO THE RADIO


Listen to your favorite radio stations

Select **Menu** > . To change the volume, scroll left or right. To listen to the radio using the loudspeaker, select **Opt.** > **Loudspeaker**. Keep the headset connected. To close the radio, select **Stop**.

8 ,


SET THE TIME AND DATE MANUALLY

Change the time and date

1. Select **Menu** >  > **Time settings**.
2. Switch **Auto-update of date and time** to **Off**.
3. To set the time, scroll down, and select **Clock** > **Set the time**. Use the scroll key to set the time, and select **OK**.
4. To set the date, scroll down, and select **Date setting**. Use the scroll key to set the date, and select **OK**.


ALARM CLOCK

Set an alarm

1. Select **Menu** >  > **Set alarms**.
2. Select an alarm.
3. To set the hour, scroll up or down. To set the minutes, scroll right and then up or down.
4. Select **OK**.


CALENDAR


Add a calendar reminder

1. Select **Menu** > .
2. Select a date and **Opt.** > **Add reminder**.
3. Type in a name for the event, and select **OK**.
4. To set an alarm, select **Alarm on**. To set the hour, scroll up or down. To set the minutes, scroll right and then up or down.
5. Select **OK**.

, ,












1.  > 

2.  ,

3. 



9 Empty your phone


1.  > `<fp>messaging-alternative-s30-n</fp>` > 
2.  >  >   
3.  >  >  
- 4.

RESTORE FACTORY SETTINGS

You can restore factory settings in this setting. Be careful, however, since you lose all personalization and all data you have added on the phone.

Reset your phone

If you are disposing your phone, note that you are responsible of removing all private content.

Select **Menu** >  > **Restore factory set.** . There is no more confirmation, but the phone is reset and all data is removed.

10 Product and safety information



’ ’ ’ ’ ’ ’



,



,



HMD Global Oy ,



-



,

SAR



RF , 0.2 (5) (SAR) SAR www.sar-tick.com

, - ,



:

-
- -
-

1. -

2.

3.

4.

:

-
-
- , - ,

''

- ,
 - -
 -
 - ,
 -
 -
 -
- , , ,



, , , (, ,) (,)

Crossed-out wheelie bin symbol



, , , : - ,

- HMD Global

, , , ,

, ; ; , , () -

(SAR)

() , ICNIRP , (SAR), SAR (RF) ICNIRP SAR 10 2.0 /
SAR , ,
RF 5/8 (1.5) , -

SAR- , SAR-
SAR-

www.sar-tick.com ,

(WHO) , - RF WHO- www.who.int/peh-emf/en

, , , ,

COPYRIGHTS AND OTHER NOTICES

Copyrights

The availability of products, features, apps and services may vary by region. For more info, contact your dealer or your service provider. This device may contain commodities, technology or software subject to export laws and regulations from the US and other countries. Diversion contrary to law is prohibited.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document. HMD Global reserves the right to revise this document or withdraw it at any time without prior notice.

To the maximum extent permitted by applicable law, under no circumstances shall HMD Global or any of its licensors be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

Reproduction, transfer or distribution of part or all of the contents in this document in any form without the prior written permission of HMD Global is prohibited. HMD Global operates a policy of continuous development. HMD Global reserves the right to make changes and improvements to any of the products described in this document without prior notice.

HMD Global does not make any representations, provide a warranty, or take any responsibility for the functionality, content, or end-user support of third-party apps provided with your device. By using an app, you acknowledge that the app is provided as is.

Downloading of maps, games, music and videos and uploading of images and videos may involve transferring large amounts of data. Your service provider may charge for the data transmission. The availability of particular products, services and features may vary by region. Please check with your local dealer for further details and availability of language options.

Certain features, functionality and product specifications may be network dependent and subject to additional terms, conditions, and charges.

All specifications, features and other product information provided are subject to change without notice.

HMD Global Privacy Policy, available at <http://www.nokia.com/phones/privacy>, applies to your use of the device.

HMD Global Oy is the exclusive licensee of the Nokia brand for phones & tablets. Nokia is a registered trademark of Nokia Corporation.

The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by HMD Global is under license.