

***VOLTAS* • beko**

User's Manual Washing Machine



WTL60UPWC WTL60UPGC
WTL62UPWC WTL62UPGB
WTL65UPGC WTL65UPGB
WTL70UPGC WTL70UPGB
WTL80UPGB WTL90UPGB

A **TATA** Product

Please read this user manual first!

Dear Customer,

Thank you for preferring a Voltas.beko product. We hope that you get the best results from your product which has been manufactured with high quality and state-of-the-art technology. Therefore, please read this entire user manual and all other accompanying documents carefully before using the product and keep it as a reference for future use. If you handover the product to someone else, give the user manual as well. Follow all warnings and information in the user manual.

Remember that this user manual is also applicable for several other models. Differences between models will be identified in the manual.

Explanation of symbols

Throughout this user manual the following symbols are used:

	Important information or useful hints about usage.
	Warning for hazardous situations with regard to life and property.
	Warning for electric shock.
	Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations.

Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.



This product was manufactured using the latest technology in environmentally friendly conditions.

TABLE OF CONTENTS

1 Important instructions for safety and environment	4	5 Operating the product	17
1.1 General safety	4	5.1 Control panel	17
1.2 Intended use	5	5.2 Preparing the machine	18
1.3 Children's safety	5	5.3 Main programmes	19
1.4 Package information	6	5.4 Process selection	21
1.5 Disposing of the waste product	6	5.5 Programme and Consumption table	22
1.6 Compliance with WEEE Directive	6		
2 Your washing machine	7	6 Maintenance and cleaning	23
2.1 Overview	7	6.1 Cleaning the detergent drawer	23
2.2 Technical specifications	8	6.2 Cleaning the body and control panel	23
		6.3 Cleaning the water intake filters	23
		6.4 Draining remaining water and cleaning the pump filter	24
3 Installation	9	7 Troubleshooting	25, 26
3.1 Appropriate installation location	9		
3.2 Connecting water supply	9		
3.3 Connecting to the drain	10		
3.4 Adjusting the feet	11		
3.5 Electrical connection	11		
3.6 Connection of inlet hose connector and tap	11		
3.7 Connecting to the water supply	12		
3.8 Using detergent /softener and bleach nector	12		
3.9 Put rat guard into the machine	12		
4 Preparation	13	8 Warranty	27, 28
4.1 Sorting the laundry	13		
4.2 Preparing laundry for washing	14		
4.3 Things to be done for energy saving	14		
4.4 Correct load capacity	15		
4.5 Loading the laundry	15		
4.6 Using detergent and softener	15		
4.6.1 Advanced detergent drawer	16		
4.6.2 Simple detergent drawer	16		

1 Important instructions for safety and environment

This section contains safety instructions that will help protect from risk of personal injury or property damage. Failure to follow these instructions shall void any warranty.

1.1 General safety

- This product can be used by children at and above 8 years old and by persons whose physical, sensory or mental capabilities were not fully developed or who lack experience and knowledge provided that they are supervised or trained on the safe usage of the product and the risks it brings out. Children must not play with the product. Cleaning and maintenance works should not be performed by children unless they are supervised by someone.
- Never place the product on a carpet-covered floor. Otherwise, lack of airflow beneath the machine will cause electrical parts to overheat. This will cause problems with your product.
- If the product has a failure, it should not be operated unless it is repaired by the Authorized Service Agent. There is the risk of electric shock!
- This product is designed to resume operating in the event of powering on after a power interruption. If you wish to cancel the programme, see "Cancelling the programme" section.
- Connect the product to a grounded outlet protected by a 6 A fuse. Do not neglect to have the grounding installation made by a qualified electrician. Our company shall not be liable for any damages that will arise when the product is used without grounding in accordance with the local regulations.
- The water supply and draining hoses must be securely fastened and remain undamaged. Otherwise, there is the risk of water leakage.
- Never remove the filter while there is still water in the drum. Otherwise, risk of flooding and injury from hot water will occur.
- Unplug the product when not in use.
- Never wash the product by spreading or pouring water onto it! There is the risk of electric shock!
- Never touch the plug with wet hands! Never unplug by pulling on the cable, always pull out by grabbing the plug.
- Use detergents, softeners and supplements suitable for automatic washing machines only.
- Follow the instructions on the textile tags and on the detergent package.
- The product must be unplugged during installation, maintenance, cleaning and repairing procedures.

Important instructions for safety and environment

- Always have the installation and repairing procedures carried out by the
- **Authorized Service Agent.** Manufacturer shall not be held liable
- for damages that may arise from procedures carried out by unauthorized persons.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
If the power cable is damaged, it must be replaced by the manufacturer,
- after sales service or a similarly qualified person (preferably an electrician) or someone designated by the importer in order to avoid possible risks.
- Place the product on a rigid, flat and level surface.
Do not place it on a long-pile rug or similar surfaces.
- Do not place the product on a high platform or near the edge on a cascaded surface.
Do not place the product on the power cable.
- Never use sponge or scrub materials. These will damage the painted, chrome plated and plastic surfaces.

1.2 Intended use

- This product has been designed for domestic use. It is not suitable for commercial use and it must not be used out of its intended use.



- The product must only be used for washing and rinsing of laundry that are marked accordingly.
- The manufacturer waives any responsibility arisen from incorrect usage or transportation.
- The service life of your product is 10 years. During this period, original spare parts will be available to operate the appliance properly.

1.3 Children's safety

- Packaging materials are dangerous to children. Keep packaging materials in a safe place away from reach of the children.
- Electrical products are dangerous for the children. Keep children away from the product when it is in use. Do not let them to tamper with the product. Use child lock to prevent children from intervening with the product.

Important instructions for safety and environment

- Do not forget to close the lid when leaving the room where the product is located.
- Store all detergents and additives in a safe place away from the reach of the children by closing the cover of the detergent container or sealing the detergent package.
- Children of less than 3 years should be kept away unless continuously supervised.

1.4 Package information

- Packaging materials of the product are manufactured from recyclable materials in accordance with our National Environment Regulations. Do not dispose of the packaging materials together with the domestic or other wastes. Take them to the packaging material collection points designated by the local authorities.
- This product complies with : India Gezztte : G.SR.261(E) 22/3/2018 / G.S.R.1349(E) 30/11/2017 - E Waste regulations And wide Environment protection act 1986/29

1.5 Disposing of the waste product

- This product has been manufactured with high quality parts and materials which can be reused and are suitable for recycling. Therefore, do not dispose the product with normal domestic waste at the end of its service life. Take it to a collection point for the recycling of electrical and electronic equipment. Please consult your local authorities to learn the nearest collection point. Help protect the environment and natural resources by recycling used products. For children's safety, cut the power cable and break the locking mechanism of the lid so that it will be non-functional before disposing of the product.
- This product complies with : India Gezztte : G.SR.261(E) 22/3/2018 / G.S.R.1349(E) 30/11/2017 - E Waste regulations And wide Environment protection act 1986/29

1.6 Compliance with WEEE Directive

This product complies with EU WEEE Directive (2012/19/EU).

This product bears a classification symbol for waste electrical and electronic equipment (WEEE).



This product has been manufactured with high quality parts and materials which can be reused and are suitable for recycling. Do not dispose of the waste product with normal domestic and other wastes at the end of its service life. Take it to the collection center for the recycling of electrical and electronic equipment. Please consult your local authorities to learn about these collection centers.


Compliance with RoHS Directive:

The product you have purchased complies with EU RoHS Directive (2011/65/EU). It does not contain harmful and prohibited materials specified in the Directive.

Call center number mentioned → 9818994444, 1860 599 4444 & service e mail / contact → wecare@voltasbeko.com

2 Your washing machine

2.1 Overview

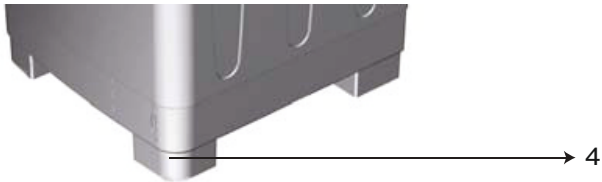

1- Loading door
2- Detergent drawer

3- Control Panel
4- Optional Feet

★ Some parts may vary according to model.

2.2 Technical specification

Models (EN)	WTL60UPWC	WTL60UPGC	WTL62UPWC	WTL62UPGB	WTL65UPGC	WTL65UPGB	WTL70UPGC	WTL70UPGB	WTL80UPGB	WTL90UPGB
Height (cm)	905	905	905	905	905	905	905	905	965	965
Width (cm)	525	525	525	525	525	525	525	525	540	540
Depth (cm)	550	550	550	550	550	550	550	550	565	565
Net weight (-4 kg.)	30	30	30	30	30	30	30	30	32	32
Electrical input (V/Hz)	230v-/50Hz	230v-/50Hz	230v-/50Hz	230v-/50Hz	230v-/50Hz	230v-/50Hz	230v-/50Hz	230v-/50Hz	230v-/50Hz	230v-/50Hz
Total power (W)	505	505	510	510	515	515	520	520	525	530
Spin speed (rpm/ min., max.)	700	700	700	700	700	700	700	700	700	700

Packing list

Name	Quantity
• Owner Manual	• One piece
• Inlet Hose	• One piece
• Bottom Cover	• One piece
• Washing Machine	• One set
• Screw	• 2 nos



Technical specifications may be changed without prior notice to improve the quality of the product.



Figures in this manual are schematic and may not match the product exactly.



Values stated on the product labels or in the documentation accompanying it are obtained in laboratory conditions in accordance with the relevant standards. Depending on operational and environmental conditions of the product, these values may vary.

3 Installation






Refer to the nearest Authorised Service Agent for installation of the product. To make the product ready for use, review the information in the user manual and make sure that the electricity, tap water supply and water drainage systems are appropriate before calling the Authorized Service Agent. If they are not, call a qualified technician and plumber to have any necessary arrangements carried out.

	Preparation of the location and electrical, tap water and waste water installations at the place of installation is under customer's responsibility.
	WARNING: Installation and electrical connections of the product must be carried out by the Authorized Service Agent. Manufacturer shall not be held liable for damages that may arise from procedures carried out by unauthorized persons.
	WARNING: Prior to installation, visually check if the product has any defects on it. If so, do not have it installed. Damaged products cause risks for your safety.
	Make sure that the water inlet and discharge hoses as well as the power cable are not folded, pinched or crushed while pushing the product into its place after installation or cleaning procedures.

3.1 Appropriate installation location

- Place the machine on a rigid floor. Do not place it on a long pile rug or similar surfaces.
- Place the product on a solid and flat floor that has sufficient load carrying capacity!
- Do not place the product on the power cable.
- Do not install the product at places where temperature may fall below 0°C.
- Place the product at least 1 cm away from the edges of other furniture.

3.2 Connecting water supply


	The water supply pressure required to run the product is between 1 to 10 bars (0.1 – 1 MPa). It is necessary to have 10 – 80 liters of water flowing from the fully open tap in one minute to have your machine run smoothly. Attach a pressure reducing valve if water pressure is higher.
	If you are going to use the double water-inlet product as a single (cold) water-inlet unit, you must install the supplied stopper to the hot water valve before operating the product. (Applies for the products supplied with a blind stopper group.)
	WARNING: Models with a single water inlet should not be connected to the hot water tap. In such a case the laundry will get damaged or the product will switch to protection mode and will not operate.
	WARNING: Do not use old or used water inlet hoses on the new product. It may cause stains on your laundry.
	<ol style="list-style-type: none">1. Connect the special hoses supplied with the product to the water inlets on the product. Red hose (left) (max. 90 °C) is for hot water inlet, blue hose (right) (max. 25 °C) is for cold water inlet.
	WARNING: Ensure that the cold and hot water connections are made correctly when installing the product. Otherwise, your laundry will come out hot at the end of the washing process and wear out.

2. Tighten all hose nuts by hand. Never use a tool when tightening the nuts.
3. Open the taps completely after making the hose connection to check for water leaks at the connection points. If any leaks occur, turn off the tap and remove the nut. Retighten the nut carefully after checking the seal. To prevent water leakages and damages caused by them, keep the taps closed when the machine is not in use.


Installation

3.3 Connecting to the drain

- The drain pipe must be put in place, otherwise may cause leakage.

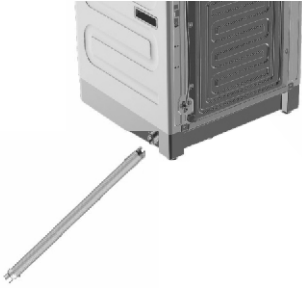

- The drain pipe must put down when the machine is working, and keep it not tangling.

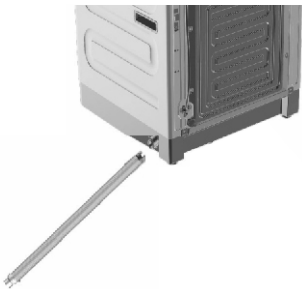


- The drain pipe should be less than 10cm, otherwise it may cause the machine can't normal spinning.



WARNING: Your house will be flooded if the hose comes out of its housing during water discharge. Moreover, there is risk of scalding due to high washing temperatures! To prevent such situations and to ensure smooth water intake and discharge of the machine, fix the end of the discharge hose tightly so that it cannot come out.

3.4 Adjusting the feet

- The one front feet of washing machine can adjust the positive, when the washing machine is not level, you can up the front of washing machine for a little, then left or right rotation to adjustable the feet, make it level. You can check the level by the help of the indicator on top cover.

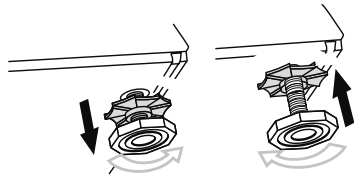

Installation

3.5 Electrical connection

Connect the product to a grounded outlet protected by a 6 A fuse. Our company shall not be liable for any damages that will arise when the product is used without grounding in accordance with the local regulations.

- Connection must comply with national regulations.
- Power cable plug must be within easy reach after installation.
- If the current value of the fuse or breaker in the house is less than 6 Amps, have a qualified electrician install a 6 Amp fuse.
- The voltage specified in the "Technical specifications" section must be equal to your mains voltage.
- Do not make connections via extension cables or multi-plugs.



WARNING: Damaged power cables must be replaced by the Authorized Service Agents.

Transportation of the product


1. Unplug the product before transporting it.
2. Remove water drain and water supply connections.
3. Drain all water that has remained in the product.
4. Install all styrofoams and then package the machine.



WARNING: Packaging materials are dangerous to children. Keep packaging materials in a safe place away from reach of the children.

3.6 Connection of inlet hose connector and tap

1. Press down the cap, remove the inlet h connector as shown in Fig a.
2. Loosen four screws on the inlet h connector, put the connector on the tap as shown in Fig b.
If the tap caliber is too large and the connector can not put on it, loosen four screws and remove the bushing as shown in Fig c.
3. Tighten four screws as shown in Fig d
4. Tighten nuts as shown in Fig e

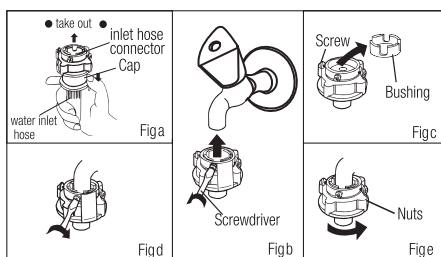


Installation

3.7 Connecting to the water supply

Important:


- The water supply pressure required to run the machine must be 1-10 bar (0,1 – 1 MPa).
- Connect the special hoses supplied with the machine to the water intake valves on the machine.

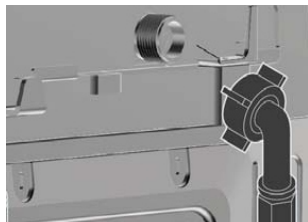


- Applies for the products supplied with a blind stopper group.
- Models with a single water inlet should not be connected to the hot water tap.
- When returning the appliance to its place after maintenance or cleaning, care should be taken not to fold, squeeze or block the hoses.

3.8 Using detergent /softener and bleach nector

When using detergent, softener, starch, fabric dye, bleach or limescale remover read the manufacturer's instruction the package carefully and follow the suggested dosage values. Use measuring cup if available.

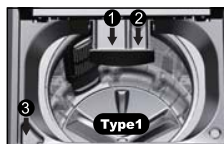


- Type 1:
1. for laundry detergent
 2. for softener
 3. for bleach

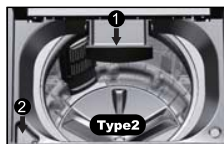

- Type 2:
1. for laundry detergent
 2. for softener

3.9 Put rat guard into the machine

 


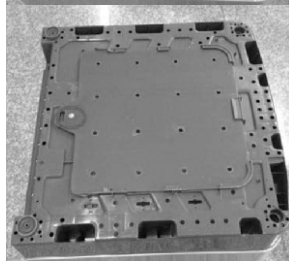




































If you want to put rat guard into the machine , you should take the screw out ,then assemble rat guard into the machine ,the last step is putting the screw to fix the rat guard .



4 Preparation

4.1 Sorting the laundry

- Sort laundry according to type of fabric, colour, and degree of soiling and allowable water temperature.
- Always obey the instructions given on the garment tags.

LAUNDRY WASH SYMBOLS										
 WASH	Machine Wash Symbols									
	Water Temperatures	Maximum	95°C	70°C	60°C	50°C	40°C	30°C		
	Symbol(s)									
 DRYING	Drying Symbols									
	Drying Settings									
 IRON	Iron -									
	Dry or Steam			Iron at high temperature	Iron at medium temperature	Iron at low temperature	Do not iron	Iron without steam		
	Maximum temperature			200 °C	150 °C	110 °C				
 BLEACH	 All bleaches are allowed			 Bleach (sodium hypochlorite) can be used		 Bleach is not allowed		 Only bleaches without chlorine are allowed		

4.2 Preparing laundry for washing

- Laundry items with metal attachments such as, underwired bras, belt buckles or metal buttons will damage the machine. Remove the metal pieces or wash the clothes by putting them in a laundry bag or pillow case.
- Take out all substances in the pockets such as coins, pens and paper clips, and turn pockets inside out and brush. Such objects may damage the product or cause noise problem.
- Put small size clothes such as infant's socks and nylon stockings in a laundry bag or pillow case.
- Place curtains in without compressing them. Remove curtain attachment items.
- Fasten zippers, sew loose buttons and mend rips and tears.
- Wash "machine washable" or "hand washable" labeled products only with an appropriate programme.
- Do not wash colours and whites together. New, dark coloured cottons release a lot of dye. Wash them separately.
- Tough stains must be treated properly before washing. If unsure, check with a dry cleaner.
- Use only dyes/colour changers and limescale removers suitable for machine wash. Always follow the instructions on the package.
- Wash trousers and delicate laundry turned inside out.
- Keep laundry items made of Angora wool in the freezer for a few hours before washing. This will reduce pilling.
- Laundry that are subjected to materials such as flour, lime dust, milk powder, etc. intensely must be shaken off before placing into the machine. Such dusts and powders on the laundry may build up on the inner parts of the machine in time and can cause damage.

4.3 Things to be done for energy saving

Following information will help you use the product in an ecological and energy-efficient manner.

- Operate the product in the highest capacity allowed by the programme you have selected, but do not overload; see, "Programme and consumption table".
- Always follow the instructions on the detergent packaging.
- Wash slightly soiled laundry at warm or cold water..
- Use faster programmes for small quantities of lightly soiled laundry.
- Do not use soaking and hot water for laundry that is not heavily soiled or stained.
- If you plan to dry your laundry in a dryer, select the longer spin time recommended during washing process.
- Do not use detergent in excess of the amount recommended on the detergent package.

Preparation

4.4 Correct load capacity

The maximum load capacity depends on the type of laundry, the degree of soiling and the washing programme desired.

The machine automatically adjusts the amount of water according to the weight of the loaded laundry.



WARNING: Follow the information in the "Programme and consumption table". When overloaded, machine's washing performance will drop. Moreover, noise and vibration problems may occur.

Laundry type	Weight (g)
Bathrobe	1200
Napkin	100
Duvet cover	700
Bed Sheet	500
Pillowcase	200
Tablecloth	250
Towel	200
Hand towel	100
Evening gown	200
Underclothing	100
Men's overalls	600
Men's shirt	200
Men's pajamas	500
Blouses	100

4.5 Loading the laundry

1. Open the lid.
2. Place laundry items loosely into the machine.
3. Close the lid and; Ensure all loads inside well distributed.



WARNING: In case of misplacing the laundry, noise and vibration problems may occur in the machine.

4.6 Using detergent and softener Detergent, softener and other cleaning agents

- Add detergent and softener before starting the washing programme.
- Never leave the detergent drawer open while the washing programme is running!
- Place the detergent bag or the dispensing ball directly among the laundry in the machine if you use them.

Choosing the detergent type

The type of detergent to be used depends on the type and colour of the fabric.

- Use different detergents for coloured and white laundry.
- Wash your delicate clothes only with special detergents (liquid detergent, wool shampoo, etc.) used solely for delicate clothes.
- Wash woolens with special detergent made specifically for woolens.



WARNING: Use only detergents manufactured specifically for washing machines.

WARNING: Do not use soap powder.

Adjusting detergent amount

The amount of washing detergent to be used depends on the amount of laundry, the degree of soiling and water hardness.

- Pour the detergent into the main wash compartment of the detergent drawer. If your machine is without detergent drawer, pour the detergent directly over the laundry in the tub.
- Do not use amounts exceeding the dosage quantities recommended on the detergent package to avoid problems of excessive foam, poor rinsing, financial savings and finally, environmental protection.
- Use less detergent for small amounts or lightly soiled clothes.

Preparation

Using softeners

Pour the softener into the softener compartment of the detergent drawer. If your machine is with simple detergent drawer (detergent drawer that does not include softener department) softener can be put at the dedicated compartment on the balance ring.

- Do not exceed the (>max<>) level marking in the softener compartment.
- If the softener has lost its fluidity, dilute it with water before putting it in the detergent drawer.

Using liquid detergent

- Liquid detergent stains your clothes when used with Delayed Start Optional function.
If you are going to use the Delayed Start function, do not use liquid detergent.

Using gel and tablet detergent

Apply the following instructions when using tablet, gel and similar detergents.

- If the gel detergent thickness is fluidal, put the gel detergent into the main wash detergent compartment during first water intake.
- If the gel detergent thickness is not fluidal or in the shape of capsule liquid tablet, put it directly into the drum before washing.
- Put tablet detergents into the main wash compartment or directly into the drum before washing.



Tablet detergents may leave residues in the detergent compartment. If you encounter such a case, place the tablet detergent between the laundry, close to the lower part of the drum in future washings.

Using starch

- Add liquid starch, powder starch or the fabric dye into the softener compartment.
- Do not use softener and starch together in a washing cycle.
- Wipe the inside of the machine with a damp and clean cloth after using starch.


Using bleaches

- Add the bleaching agent to the dedicated compartment on the top cover.
- Do not use bleaching agent and detergent by mixing them.
- Use just a little amount of bleaching agent and rinse the clothes very well as it causes skin irritation. Do not pour the bleaching agent onto the clothes and do not use it for coloured clothes.

4.6.1 Advanced detergent drawer

The detergent drawer is composed of three compartments:

- (1) for main wash
- (2) for softener
- (*) in addition, there is siphon piece in the softener compartment.

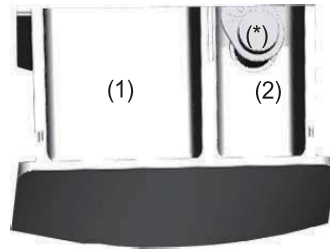

4.6.2 Simple detergent drawer


This detergent drawer has one compartment

- (1) for main wash




5 Operating the product

5.1 Control panel

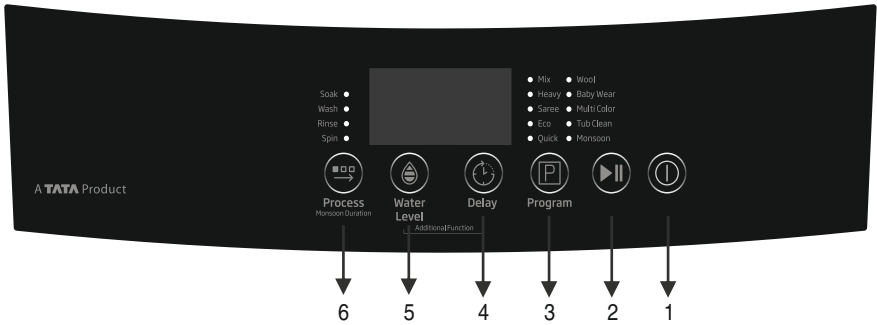

- 1 - On / Off button
- 2 - Start / Pause button
- 3 - Program
- 4 - Delayed Start Time button
- 5 - Water Level button
- 6 - Process

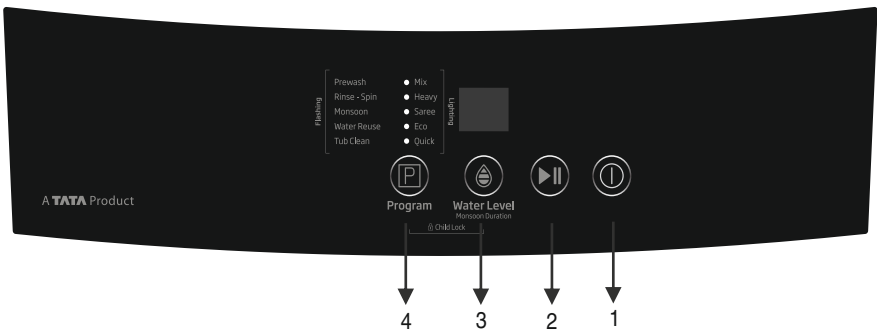

- 1 - On / Off button
- 2 - Start / Pause button
- 3 - Water Level button
- 4 - Program

Operating the product

5.2 Preparing the machine




Figures in this manual are schematic and may not match the product exactly.

• Power Button




Press this button once to operate. Press it again to turn the power off.

• Start/Pause Button

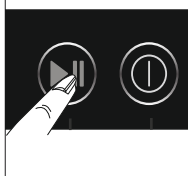


Use to pause and restart the operation. To change the washing procedure during an operation, press this button to stop, and again to restart after changing the procedure.

 • Program Select Button



Each time the button is pressed, the washing program changes.

 • Child Lock (Six Button)



This is a device to protect children from being accidentally hurt while playing with the washer.

How to start the Child-Lock function:

- Press the “Water level” button and “Delay” button at the same time for upto 3 sec.
- If Child Lock function is activated, Child Lock will be written in the display.

To release the function of Child-Lock: In case the “Child-Lock” is programmed, press both the “Water level” and “Delay” buttons at the same time.

• Remaining Time, Delay Start Time, Error Display



 
Displays the remaining wash time. Displays the reserved delay start time. Displays the error state if a problem occurs in the washing machine so that you can take action.

• Delay Start Time Button (Optional)



Adjusts delay start time. max. 18 h


• Water Level Button



The water level is automatically adjusted. However, you can select the water level manually by pressing this button.

The water level button only can be active during standby status, water level can be changed before start to running; and you can press the start/pause button then change water level while machine is running, press start/pause again back to work after finish water level setting. Displays selected program's default water level.
Low /2/3/4/5/6/7/8/9/10

 • Child Lock (Four Button)



This is a device to protect children from being accidentally hurt while playing with the washer.

How to start the Child-Lock function:

- Press the “Water level” button and “Program” button at the same time for upto 3 sec.
- If Child Lock function is activated, Child Lock will be written in the display.

To release the function of Child-Lock: In case the “Child-Lock” is programmed, press both the “Water level” and “Program” buttons at the same time.

Operating the product

5.3 Main programmes Six Button

Depending on the type of fabric, use the following main programmes.



Figures in this manual are schematic and may not match the product exactly.



• Mix

This programme selects the best water level and wash course automatically depending on the amount of laundry. Use this programme for washing cotton and blended items.

• Wool

Use this program for washing woolens clothes. Before washing your woolens check the care label for the washing instruction.

• Eco

This programme is suitable for washing lightly/daily soiled laundry in short time

• Tub Clean

Use this programme on a regular basis (e.g. once in a month) to sanitize and clean your machine and to prevent unwanted odours. Do not place any items or laundry in the machine when you use this programme, it must be operated when the washer is empty otherwise laundry or washer might be damaged. You can add a special purpose detergent suitable for cleaning machines.

• Saree

Use this programme for washing machine washable delicate (cotton, blended and wool) items such as sweaters, jumpers and cardigans. It is recommended to use special purpose detergents suitable for washing delicate laundry.

• Monsoon

This program is suitable during monsoons. It provides extra spin time for drying the clothes.

• Quick

This programme is suitable for washing a light load of lightly soiled cotton clothes in a short time.

• Heavy

This programme is suitable for washing up to a full capacity of heavily soiled durable cotton and blended clothes.

• Baby Wear

This program is suitable for washing up To a full capacity of heavily soiled durable cotton and Blended clothes.

• Multi Colour

This program is suitable for washing up To a full capacity of multi coloured clothes

Operating the product

Main programmes Four Button

Depending on the type of fabric, use the following main programmes.



Figures in this manual are schematic and may not match the product exactly.



• Mix

This programme selects the best water level and wash course automatically depending on the amount of laundry. Use this programme for washing cotton and blended items.

• Wool

Use this program for washing woolens clothes. Before washing your woolens check the care label for the washing instruction.

• Eco

This programme is suitable for washing lightly/daily soiled laundry in short time

• Tub Clean

Use this programme on a regular basis (e.g. once in a month) to sanitize and clean your machine and to prevent unwanted odours. Do not place any items or laundry in the machine when you use this programme, it must be operated when the washer is empty otherwise laundry or washer might be damaged. You can add a special purpose detergent suitable for cleaning machines.

• Saree

Use this programme for washing machine washable delicate (cotton, blended and wool) items such as sweaters, jumpers and cardigans. It is recommended to use special purpose detergents suitable for washing delicate laundry.

• Monsoon

This program only applies spin drying and provides extra spin time to dry clothes better during Monsoon season.

• Quick

This programme is suitable for washing a light load of lightly soiled cotton clothes in a short time.

• Heavy

This programme is suitable for washing up to a full capacity of heavily soiled durable cotton and blended clothes.

5.4 Process selection



Figures in this manual are schematic and may not match the product exactly.

• Wash



• Soaking

Select this function if you like to wash your laundry by soaking. Soaking is recommended for heavily soiled laundry items. You can add your normal amount of detergent and start the wash programme by selecting this function.



• Rinse

Select Rinse among Process section, to apply only rinsing during executed program.



• Spin

Select Spin among Process section, to apply only Spining during executed program.







5.5 Programme and consumption table

Program	Load(kg)	Water level	Functions						Monsoon					Duration (min)	
			S/W/R/S	W/R/S	Spin	R/S	W/R	Wash	10min	15min	20min	30min	60min		
Eco	Less than **	10	•	•	•	•	•	•	•	•	•	•	•	•	39
Eco	Less than 4 Kg	8	•	•	•	•	•	•	•	•	•	•	•	•	39
Eco	Less than 3 Kg	6	•	•	•	•	•	•	•	•	•	•	•	•	39
Eco	Less than 2 Kg	4	•	•	•	•	•	•	•	•	•	•	•	•	39
Eco	Less than 1 Kg	2	•	•	•	•	•	•	•	•	•	•	•	•	39
Eco		Low	•	•	•	•	•	•	•	•	•	•	•	•	39
Heavy	Less than **	10	•	•	•	•	•	•	•	•	•	•	•	•	51
Heavy	Less than 4 Kg	8	•	•	•	•	•	•	•	•	•	•	•	•	51
Heavy	Less than 3 Kg	6	•	•	•	•	•	•	•	•	•	•	•	•	46
Heavy	Less than 2 Kg	4	•	•	•	•	•	•	•	•	•	•	•	•	46
Heavy	Less than 1 Kg	2	•	•	•	•	•	•	•	•	•	•	•	•	43
Heavy		Low	•	•	•	•	•	•	•	•	•	•	•	•	43
Multi Color	Less than 3 Kg	7	•	•	•	•	•	•	•	•	•	•	•	•	46
Mix	Less than **	10	•	•	•	•	•	•	•	•	•	•	•	•	46
Mix	Less than 4 Kg	8	•	•	•	•	•	•	•	•	•	•	•	•	46
Mix	Less than 3 Kg	6	•	•	•	•	•	•	•	•	•	•	•	•	46
Mix	Less than 2 Kg	4	•	•	•	•	•	•	•	•	•	•	•	•	46
Mix	Less than 1 Kg	2	•	•	•	•	•	•	•	•	•	•	•	•	43
Mix		Low	•	•	•	•	•	•	•	•	•	•	•	•	43
Wool	Less than **	10	•	•	•	•	•	•	•	•	•	•	•	•	64
Saree	Less than **	10	•	•	•	•	•	•	•	•	•	•	•	•	46
Saree	Less than 4 Kg	8	•	•	•	•	•	•	•	•	•	•	•	•	46
Saree	Less than 3 Kg	6	•	•	•	•	•	•	•	•	•	•	•	•	46
Saree	Less than 2 Kg	4	•	•	•	•	•	•	•	•	•	•	•	•	46
Saree	Less than 1 Kg	2	•	•	•	•	•	•	•	•	•	•	•	•	43
Saree		Low	•	•	•	•	•	•	•	•	•	•	•	•	43
Baby Wear	Less than 3 Kg	7	•	•	•	•	•	•	•	•	•	•	•	•	57
Quick	Less than 1 Kg	2	•	•	•	•	•	•	•	•	•	•	•	•	23
Tub Clean		6			•										22

** Rated capacity of model

: Selectable

*:Water Efficiency Program: select Normal program and set water level 6.

	Process functions So:Soaking W:Wash R:Rinse Sp:Spin
	The auxiliary functions in the table may vary according to the model of your machine.
	Water and power consumption may vary subject to the changes in water pressure, water hardness and temperature, ambient temperature, type and amount of laundry, selection of auxiliary functions and spin speed, and changes in electric voltage.
	You can see the washing time of the programme you have selected on the display of the machine. It is normal that small differences may occur between the time shown on the display and the real washing time.

6 Maintenance and cleaning

Service life of the product extends and frequently faced problems decrease if cleaned at regular intervals.

6.1 Cleaning the detergent drawer

Clean the detergent drawer at regular intervals (every 4-5 washing cycles) as shown below in order to prevent accumulation of powder detergent in time.



1. Detergent drawer is closed.
 2. Pulling detergent drawer to the front side.
 3. Moving detergent drawer to upper side, and taking drawer out.
- Cleaning detergent drawer by water.


6.2 Cleaning the body and control panel

Wipe the body of the machine with soapy water or non-corrosive mild gel detergents as necessary, and dry with a soft cloth.

Use only a soft and damp cloth to clean the control panel.

6.3 Cleaning the water intake filters


There is a filter at the end of each water intake valve at the rear of the machine and also at the end of each water intake hose where they are connected to the tap. These filters prevent foreign substances and dirt in the water to enter the washing machine. Filters should be cleaned as they do get dirty.

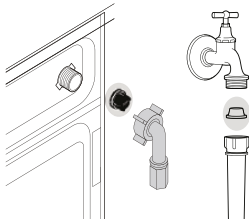

1. Close the taps.
2. Remove the nuts of the water intake hoses to access the filters on the water intake valves. Clean them with an appropriate brush. If the filters are too dirty, take them out by means of pliers and clean them.
3. Take out the filters on the flat ends of the water intake hoses together with the gaskets and clean thoroughly under running water.
4. Replace the gaskets and filters carefully in their places and tighten the hose nuts by hand.

6.4 Cleaning the fuzz collector

1. push to take the filter out.

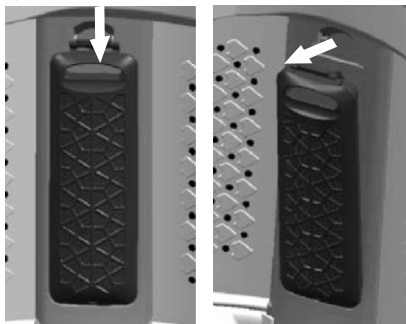

2. Open the filter and cleaning. Keep the filter rubber in the original position.



3. After cleaning assemble the filter on the right position.

7 Troubleshooting

Problem	Check & Solution
The power is cut off.	<ul style="list-style-type: none"> - Is the electric voltage normal? - Is the washer plugged in? Plug in the electric cord.
Water does not drain.	<ul style="list-style-type: none"> - Is the drain hose down? Put the drain hose down. - Is the drain hose folded? Unfold the drain hose. - Is the drain hose outlet clogged? Remove the waste cleanly.
Washing machine won't work.	<ul style="list-style-type: none"> - Is the washer lid open? Close the lid. - Is the Pause button on? Press the Start/Pause button one more time and check if the washer starts. - Is enough water filled to the water level? - If the water pressure is low, it takes a long time to start washing. - Is the tap closed? Open the tap to supply water.
If the drain hose, water tap and drum are frozen, do as follows.	<ul style="list-style-type: none"> - Add hot water to the frozen water tap and remove the drain hose. Soak into hot water. - Pour hot water into the drum for about 10 minutes. - Put a hot water towel on the drain hose connector. - If the drain hose defrosts, connect again and check for proper water draining.
The water does not drain out immediately.	<ul style="list-style-type: none"> - The drain is clogged with coins or pins. The drain hose is hung over the drain hose hook. - Half fill the drum with water and try for spinning again.
The water leaks at the water supply hose connector.	<ul style="list-style-type: none"> - If the connecting part is loose, water may leak. Repeat the assembling steps again. (Refer to "Connection of inlet hose connector and tap" and "Connecting to the water supply") - Is the water supply hose folded? Unfold the hose. - If the water supply is too strong, water may leak. Close the tap a little. - Is water leaking from the tap itself? Fix the tap.
Water is not supplied	<ul style="list-style-type: none"> - Did you press the Start/Pause button after selecting the water supply? If the Start/Pause button is not pressed, water is not supplied. Press the Start/Pause - button. - Is the tap closed? Turn on the tap. - Is the filter net at the water supply hose connector clogged with dirty matters? Clean the filter net by brushing with a toothbrush. - Is the water supply cut off? If the water supply is suspended, turn off the tap and power off.
Spinning makes loud noises and vibrations.	<ul style="list-style-type: none"> - Check if the laundry is spread evenly in the washer. Spread out the laundry evenly and start again. - Check if the washing machine levels on a sturdy flat floor. Set the machine at level. Adjust the feet for leveling. - Is around the washing machine filled with unnecessary stuffs? Remove those unnecessary things away from the wash machine.



WARNING: If you cannot eliminate the problem although you follow the instructions in this section, consult your dealer or the Authorized Service Agent. Never try to repair a nonfunctional product yourself.

Troubleshooting

Error Message	Error	Control
E0	The top lid is opened when preset is started	Close the top lid and clear up the alarm
E1	After draining 5 minutes, it still does not reach to water level	Open top lid, according to before troubleshooting and settlement to settle it, then close the top lid and clear up the alarm.
E2	The top lid is open when snipping	Close the top lid and clear up the alarm
E3	Spin does not balanced	Open the top lid, make the laundries place equally, then close it and clear up the alarm
E4	After inlet 20 minutes still not reach to setting water level	Open the top lid, according to before troubleshooting and settlement to settle it. Then close the top lid and clear up the alarm
E5	The top lid is opened after setting child-lock	Close the top lid and clear up the alarm
F1	Water level sensor is wrong	Cut the power supply and call the technicians



WARNING: If you cannot eliminate the problem although you follow the instructions in this section, consult your dealer or the Authorized Service Agent. Never try to repair a nonfunctional product yourself.

VOLTAS • beko

Dear Customer,

Your Voltas.beko Washing machine is covered for a comprehensive warranty of 3 year from date of purchase and additional 9 year warranty on Motor (3 Year Standard + 9 Year extended only on Motor only) irrespective of whether product is in use or not.

Warranty conditions:

- Warranty covers repair or replacement of functional spare parts if needed as a result of faulty material, defective components or manufacturing defect to make the unit functional and does not entitle replacement or refund of entire unit, or refund of money. However, any civil, plumbing or electrical addition / alteration to install, shift the product will be within the scope of the customer.
- The Company will make their best of efforts to repair or the required parts as and when required in the best possible time, but will not be bound for repairs within a specified period of time.
- Any breakage of part, component due to customer handling or accessories external to the unit will not be in the scope of this warranty.
- Warranty is personal to the original purchaser / customer and is not transferable.
- Customer must produce proof of purchase like original bill/ invoice of the product as and when required by the service or company personnel. Warranty card alone as proof of purchase will not make customer eligible for warranty.
- The warranty shall not be applicable if the product has been used for non-residential or commercial purpose.
- The Company shall not be liable for indirect, incidental, punitive, exemplary, consequential or damage or loss (including loss of profits, use, goodwill) arising from or related to this warranty.
- In case the warranty obligation could not be met due to any condition beyond our control, commercial settlement will be done considering the depreciation value of the product, based on the purchase date. The Company's decision in this regard shall be final and conclusive.
- This Warranty becomes void if there is any unauthorized repair, tampering, alteration, modification, misuse or damage to the Product.
- Warranty shall not be applicable in case of use of faulty stabilizer or in case of power surge/fluctuations.
- Repairs required due to corrosion or rust or leaks due to corrosive environment shall not be covered by this Warranty.

Warranty

- Terms of this Warranty shall not apply in case the product serial number is removed or defaced.
- This Warranty is not applicable to any defects and damages arising from force majeure conditions, accident, negligence, misuse, lack of proper care or handling and operation.
- Free installation or demo of the product if applicable can be availed only once within a month of purchase of the product and any additional installation, re location or demo will be carried out on chargeable basis.
- Defective parts replaced if any during the warranty period will be taken back by our service center.
- Services during the warranty period as per conditions mentioned above within municipal limits of the town/city where our service center is available will be provided free and for services outside the municipal limits will attract travelling and transportation charges as applicable.
- In case of any dispute or claims settlement arising out of current warranty will be subject to jurisdiction of court in Mumbai only.
- The Company assumes no responsibility or liability for its authorized agents or distributors. No credit or other reimbursement shall be issued for any repair performed by third parties, including distributors and service centers, other than as specifically authorized by the Company in writing.
- The Company reserves the right to amend and change the Terms and Conditions of the warranty anytime.

Customers are advised to register the product with the Company by contacting the customer care no --- 18605994444/ 9818994444 by providing the purchase data along with customer details like name, mobile no etc.

For Installation and demo of the product, please contact our customer care no – 18605994444/ 9818994444

Customer Purchase details

Model No.		Bill No. :	Bill Date : / /
Serial No.		Purchased From :	
Customer Name, Address & Mobile No.			

Voltas Beko Customer Care No.: 981899 4444 / 1860 599 4444

SMS <VB> 56677

Customer Care Mail ID : wecare@voltasbeko.com

Website : www.voltasbeko.com

Facebook: Voltasbeko

Twitter : Voltasbeko

Registered office :

Voltbek Home Appliances Private Limited

Voltas House 'A', Dr. Babasaheb Ambedkar Road, Chinckpokli, Mumbai - 400 033