



INSTRUCTION MANUAL



POP UP TOASTER

Model: PT 3720



Dear Customer,

Congratulations!

You are now the proud owner of USHA Pop Up Toaster.

Innovatively designed, using only the highest quality material and components, your USHA Pop Up Toaster is designed for years of trouble free performance.

Please read this Instruction Manual carefully before using and keep it cautiously after reading for future reference.

Best Wishes

IMPORTANT PRECAUTIONS


1. READ ALL INSTRUCTIONS CAREFULLY.
2. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the toaster.
3. This appliance is not advised to be used by anyone(including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless properly guided about the use of the appliance in a safe manner by the person concerned for their safety. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
4. CAUTION: During operation the appliance heats up/becomes hot and it is therefore recommend avoid touching the metallic parts of the appliance with bare hands. Use handles or knobs only.
5. Before storing the appliance let it cool down. Then pull the plug from the socket.
6. To protect against electrical shock, do not immerse cord, plug, or any part of the toaster in water or other liquid.
7. Unplug unit from outlet when not in use and before cleaning.
8. Do not operate the appliance with a damaged cord or plug, or in abnormal state. If its main cord is damaged, it must be replaced by the manufacturer, the nearest service agent or a qualified person.
9. Do not operate the appliance near or below curtains and other combustible materials, they must be watched.
10. Do not let the cord hang over edge of table or counter, or touch hot surface.
11. Do not place on or near a hot gas or electric burner, or in a heated oven.
12. Do not use the appliance for other than its intended use.
13. Don't attempt to dislodge food when toaster is in operation.
14. Oversize food, metal foil packages or utensils must not be inserted in the toaster as they may cause fire or electric shock.
15. When the bread is stuck unplug the toaster. Then use tongs to remove the bread. Be careful not to damage the heating wires and rendering the toaster inoperable.
16. The toaster is not suitable for preparation of sandwiches with fillings. ONLY toast bread slices therefore.
17. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
18. Be sure to take the bread out carefully after toasting so as to avoid injuries
19. This appliance has been incorporated with a grounded plug. Please ensure the wall outlet in your house is well earthed.
20. The appliance is not intended to be operated by means of an external timer or separate remote-control system.
21. **Warning:** if toast of small bread slices less than 85mm length, you must pay attention to the potential risk of burning when taking out the slices.
22. Don't use the appliance outdoors.



23. Use the appliance on a level and stable surface.
24. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
25. Save these instructions.

PRODUCT DESCRIPTION

HOUSEHOLD USE ONLY

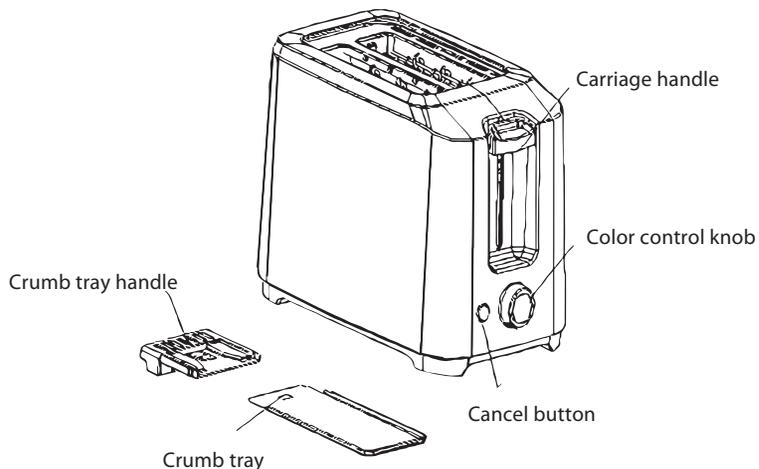

KEY FEATURES

Variable browning control - The color controller knob in the labeled diagram above allows the user to get the desired crispiness of toast. Some users may like to have crispy brown toasts while some may like it softer and less brown. Usha Popup Toaster allows user to get desired crispiness up to the maximum, 7 levels.

Easy to clean slide out crumb tray - Usha Popup Toaster comes with an easy to remove crumb tray to clean bread crumb collected due to toasting.

Mid cycle cancel function - A Mid cycle cancel function allows user to withdraw the bread being toasted from the slots at any point of time when the bread is being toasted.

TECHNICAL SPECIFICATIONS

Mains Voltage	220-240 V AC, 50 Hz
Power	700 Watts



OPERATING INSTRUCTIONS

1. Put bread slice into the bread slot, it can be inserted two slices at most every time. Only the regular slice can be placed into the bread slot.
Note: Make sure the crumb tray is completely positioned in place before using.
2. Plug the power cord into the outlet.
3. Set color control knob to your desired color. There is 7-position level, the lowest is set white and the highest is dark. The bread slice can be toasted to golden color at the middle position.
Note:
 - Toasting color for one side is darker than that for double bread at the same level.
 - If toasted continuously, toasting color for the latter bread is darker than the color of previous cycle at the same level.
4. Press carriage handle down vertically until it is positioned in place, the indicator of **Cancel** will be illuminated and toasting begins. Once the bread has been toasted to the preset color, the carriage handle will automatically sprung up, and you can remove the bread readily.
Note: The carriage handle can only be latched when the appliance connects to the power supply.
5. During the toasting process, you may observe the toasting color. If it is satisfactory, you may interrupt the toasting process by pressing the **Cancel** button at any time.

CAUTION:

1. Remove all protective wrapping prior to toasting.
2. If toaster starts to smoke, press **Cancel** button to stop toasting immediately.
3. Avoid toasting the food with extremely runny ingredients such as butter.
4. Never attempt to remove bread, jammed in the slots without unplugging the toaster from the electrical outlet first. Be sure not to damage the internal mechanism or heating elements when removing bread.
5. The bread slot is only applicable for toasting regular bread slice. Irregular bread or round bread cannot be toasted in the bread slot.

CLEANING AND MAINTENANCE:

1. Disconnect the power supply before cleaning.
2. Wipe the outside with soft dry cloth after toaster cools down, never use metal polish.
3. Pull out the crumb tray on the bottom of toaster by crumb tray handle and empty it. If toaster is used frequently, accumulated bread crumbs should be removed at least once a week. Make sure the crumb tray is completely closed before using the toaster again.
4. When not in use or storage, the power cord may be wound under the bottom of toaster.

ENVIRONMENT FRIENDLY DISPOSAL

You can help protect the environment!

Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal center.

Please remember to respect the local regulations: hand in the non-working electrical equipments to an appropriate waste disposal center.



WARRANTY CARD

This appliance is warranted for 2 years against all manufacturing defects from the date of sale. In the event of any complaint contact the nearest company service Centre or call our toll free number 1800 1033 111.

THIS WARRANTY IS VALID ONLY WHEN

1. The appliance has not been opened or tampered with, by any unauthorized person.
2. The warranty card or cash memo duly signed by the authorized dealer is presented with the complaint.
3. The appliance has been installed, used and maintained in accordance with the instruction manual.

THIS WARRANTY DOES NOT APPLY FOR

1. Damages due to chipping, peeling, plating and denting.
2. Breakage or damage to components made out of Bakelite, urea, ABS, SAN, and such plastic materials, rubber parts and cord.
3. Normal wear and tear of the parts of the appliance.
4. Damage resulting from accidents, mishandling or negligence on part of the customer.

Liability for consequential loss or damage is neither accepted nor implied

S.NO: _____

CASH MEMO: _____ DATE: _____

DEALER'S NAME & ADDRESS: _____

OWNER'S NAME & ADDRESS: _____

USHA care™

Toll free

1800-1033-111

usha_care@ushainternational.com

USHA INTERNATIONAL LTD.

Plot No.15, Institutional Area, Sector 32, Gurgaon - 122 001 (Haryana) Tel : +91-124-4583100, Fax : +91-124-4583200

E-mail : corporate@ushainternational.com Website : www.usha.com

Regd. Office : Surya Kiran Building, 19 Kasturba Gandhi Marg, New Delhi(India) Tel : +91 11 23318114 Fax : +91 11 23318118

ISO 9001:2015
Certified Company



Fans • Sewing Machines • Home Appliances • Engines & Pumpsets • Electrical Motors & Pumps • Water Coolers & Dispensers
• Inverters • Cook Tops, Hobs & Hoods • Auto Components

USHA

© Registered Trademark and Copyright of USHA INTERNATIONAL LTD.

SHRIRAM

© Registered Trademark of USHA INTERNATIONAL LTD.