

ولعلنا

KITCHEN

MAKING IT POSSIBLE

# SANDWICH MAKER



Over Heat Safety



Easy to Clean



Low Fat Cooking

**1 YEAR**  
WARRANTY



Welcome to the Lifelong family

Dear Customer,

Congratulations on purchasing Sandwich maker and a warm welcome to the Lifelong family.

At Lifelong, we take pride in developing quality products for your home, health and happiness. Through constant innovation in our products, we have been able to develop a wide spectrum of products across Home, Kitchen, Grooming and Wellness categories.

We strive to enrich the lives of the modern consumer every day. Keeping that in mind, we have offered all our products at a fair and honest price.

We hope that the Sandwich Maker serves you and your family's needs without any hassles. To get the best out of the product, we recommend you to read the instruction manual and keep it handy for any future reference.

Thanks again for becoming a part of the Lifelong family. Hope you enjoy using the product!

Warm Regards,

Team Lifelong

## DESCRIPTION OF PARTS



1. Handle
2. Upper housing
3. Power Light
4. Ready Light
5. Non-stick Coated Plate
6. Bottom Housing
7. Handle Lock

## SAFETY INFORMATION

- Please read these operating instructions thoroughly before first operating the sandwich maker and keep them in a safe place.
- If you pass this appliance on to a third party, these operating instructions must also be handed over.
- Incorrect operation and handling can lead to malfunction of the appliance and injuries to user.
- This appliance is intended for household use only.
- Before inserting the plug into the mains socket, please check that the current and power supply comply with the specifications on the type plate.
- Disconnect the mains plug from the socket when the appliance is not in use and before cleaning .
- Parts of the appliance become hot during use. Therefore, the appliance must only be held by the handle.
- Do not immerse the appliance or the mains plug in water or other liquids. There is danger to life due to electric shock!
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Appliances are not intended to be operated by means of an external timer or separate remote-control system.
- Do not use the appliance if the mains cable or plug show signs of damage, if the appliance has fallen on the floor or has otherwise been damaged. In such cases take the appliance to a specialist for checking and repair if necessary.
- Ensure that the mains cable is not hung over sharp edges and keep it away from hot objects and open flames.
- Place the appliance on a stable, level surface and not close to hot objects or open flames (e. g. hotplates).
- Never leave the appliance unattended during use.
- The temperature of accessible surfaces may be high when the appliance is operating.

## BEFORE INITIAL USE

- Remove all packaging.
- Clean the toasting surfaces with a soft damp cloth and then dry them.
- Unwind the mains cable completely.

## OPERATING INSTRUCTIONS

- Connect the appliance to an appropriate socket.
- The control lights illuminate and the toasting surfaces heat up.
- The appliance must be heated up before grilling. In the meantime prepare your food.
- As soon as the appliance has heated up, the control light goes out.
- You can now begin grilling .
- Open the appliance at the catch.
- Close the appliance, making sure that catch is engaged.
- Caution: If the foods have too much filling on, it will not be possible to close the appliance. Take some of the filling off. Never use force to close the appliance.
- During toasting the temperature regulating thermostat switches off and on again. The control light also switches off and on again.
- After completion of the grilling process (approx. 2-3 minutes) open the catch and remove the foods with the help of a flat wooden or plastic spatula. Never use sharp or metal object (e. g. knives, metal spatulas, etc.) as this will damage the Teflon coating.
- If you wish to grill move food, close the appliance again and wait until the toasting surfaces have reheated sufficiently.
- When the control light illuminates again you can repeat the toasting process as described above.
- After completion of the grilling process disconnect the mains plug immediately. With the appliance open allow it to cool down.

### Caution:

- The grilling surfaces as well as the sides and top of the appliance get very hot. Avoid any contact. Danger of burning! Only hold by the handle.
- The appliance must always be positioned horizontally during use.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Do not immerse the appliance in any liquid.
- The temperature of accessible surfaces may be high when the appliance is operating.

**WARNING:** Charcoal or similar combustible fuels must not be used with this appliance.

## CLEANING AND CARE

- Firstly, disconnect the mains plug!
- Only clean when the appliance has completely cooled down.
- Clean the housing surface and the toasting surfaces of the sandwich toaster with a soft, damp cloth.
- It is easiest to remove toast or food crumbs with a very soft brush.
- Never use abrasive cleaning agents or sharp objects (e. g. scrubbing brush or knife) for cleaning.

- Caution: Do not immerse the appliance in water or other liquids. There is danger to life due to electric shock.
- This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shop, offices and other working environments
  - farm houses
  - by clients in hotels, motels and other residential type environments
  - bed and breakfast type environments.

### TECHNICAL DATA

Operating voltage: 220-240V~50/60Hz

Power: 750W

### Wheelie bin symbol



To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol mustn't be disposed of with unsorted municipal waste, but recovered, reused, or recycled.

# Consumer Warranty Card

Dear Customer,

Thank you for choosing a Lifelong consumer product. All Lifelong Consumer products are designed and manufactured to the highest standards to deliver high quality performance, as well as easy installation and use. At Lifelong, we believe in providing not only service, but adding value to your purchase. The warranty has therefore been designed especially for you with your interest at heart.

## Warranty Service

All Lifelong consumer products are covered against manufacturing defects from their date of purchase.

Name of the product: \_\_\_\_\_

Model: \_\_\_\_\_

Warranty coverage: 1 year

Please note: Purchase receipt is necessary for warranty verification.

Customer Care: [customercare@lifelongindia.com](mailto:customercare@lifelongindia.com)

## Customer Details

Name: \_\_\_\_\_

Address: \_\_\_\_\_

Home Number: \_\_\_\_\_

Office Number: \_\_\_\_\_

E-mail Address: \_\_\_\_\_

## Product Details

Model No.: \_\_\_\_\_

Serial No.: \_\_\_\_\_

Purchase Date: \_\_\_\_\_

Invoice Number: \_\_\_\_\_

Online Site: \_\_\_\_\_

Please log onto to [www.lifelongindiaonline.com](http://www.lifelongindiaonline.com) and complete the online warranty form with your personal and product details within 14 days.

## Terms and Conditions:

1. This warranty is void if:
  - a. The completely filled warranty card is not presented at the time of servicing the product.
  - b. The product is not operated according to the instructions given under the user manual.
  - c. Damages are caused by lightning, abnormal voltage, water or other liquid intrusion, fire, flood, accident, negligence or improper handling.
  - d. Product has been damaged due to installation, repairs, alterations or modifications by unauthorized service organizations or persons.
  - e. Product label specifying the model number, serial number and production code has been removed and altered.
  - f. Defects or parts requiring replacement due to ordinary wear and tear, corrosion, rust or stains, scratches, dents on the casing or paintwork of the product.
  - g. Claims damaged and/or missing parts (accessories) after 7 days from the original date of goods received.
  - h. Defects or faults in product which have been used for commercial/industrial purposes or which have been rented/leased or have been otherwise subject to non-household/non-domestic use.
2. Repairs or replacements will be carried out by authorized service provider.
3. During the limited warranty period, Lifelong or its authorized service provider will repair without charge the defective unit inclusive of labor and parts and restore the unit to its optimum working condition. All defective parts used for the warranty repair should be surrendered to Lifelong and/or its authorised servicer.
4. All expenses incurred in collecting the unit (s) or part(s) thereof from authorised service provider as well as any other expenses and incidentals will be borne by the consumer.
5. Lifelong obligations are limited to the repair and replacement of the defective product. Except as set forth above, there are no other express or implied warranty and all warranted, conditions or other terms implied by statute or common law (including any warranty of satisfactory quality, merchantability or fitness for a particular purpose) are excluded to the fullest extent permitted by the laws.
6. Lifelong total liability for damages relating to or arising out of the purchase or use of the product regardless of the type or cause of such damage of the form of characterization of the claim asserted (e.g. contract or tort) shall not exceed the original purchase price paid for the product.
7. However in no event shall Lifelong and Lifelong authorized distributors be liable for any punitive, special incidental, indirect or consequential losses or damages whatsoever (including without limitation, damages for the loss of revenue, business, profits, goodwill, or contracts, business interruptions, loss of business information or any other pecuniary loss.) Whether or not Lifelong has been advised of the possibility of such damages. These limitations shall apply notwithstanding the failure of the essential purpose of any limited warranty. This limited warranty does not affect consumer's statutory rights under the law.
8. No carrier, dealer or employee is thereof authorized to make modifications to this warranty and you should not rely on any such representation. Lifelong reserves the right to amend the terms and conditions if necessary.

For queries and complaints:  
please contact: [customercare@lifelongindia.com](mailto:customercare@lifelongindia.com)  
[www.lifelongindiaonline.com](http://www.lifelongindiaonline.com)

Customer care: +91-9711558877