



boAt



AAVANTE BAR AAUPERA




User Manual

Important Safety Instruction

Thank you for purchasing the AAVANTE BAR AAUPERA Soundbar. Please read this user manual carefully and keep for future reference.

- The illustrations and screens in this manual are for instructional purposes only.
- The company names and product names in this manual are the trademarks or registered trademarks of their respective companies.
- Software may be revised and updated without prior notice.
- In this manual, iOS and Android mobile devices are collectively referred to as “mobile devices”. The specific type of mobile device is noted in explanations as needed.

Warning

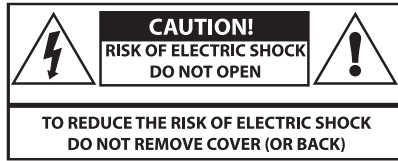

The lightning flash within an equilateral triangle is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute an electric shock to a person or persons.



Important! This symbol alerts you to read and observe important warnings and instructions on the unit or in this manual.

CAUTION:

To reduce the risk of electric shock, do not dismantle the product and do not expose the apparatus to rain or moisture. No user-serviceable parts inside. Refer servicing to qualified personnel only.

Notice:

This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, unless they are under supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not damage the appliance.

1. To prevent possible hearing damage, do not listen at high volume levels for prolonged time periods or a sudden high volume level.
2. Do not leave the device unattended. Switch off the device whenever it is not in use.
3. The appliance is not intended to be operated by means of an external remote control system, other than the branded remote, or as advised in the user manual.
4. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
5. Before operating this system, check the voltage of this system to see if it is identical to the voltage of your local power supply.
6. The unit should not be impeded by covering the ventilation opening with items such as newspaper, table-cloths, curtains etc. Make sure that there are at least 20 cm of space above and at least 5 cm of space on each side of the unit.
7. The apparatus must not be exposed to dripping or splashing liquids and that objects filled with liquids, such as vases, must not be placed on the apparatus.



Important Safety Instruction

8. To prevent fire or shock hazard, do not expose this equipment to direct heat, rain, moisture or dust.
9. Do not place this unit near any water sources e.g. taps, bathtubs, washing machines or swimming pools. Ensure that you place the unit on a dry, stable surface.
10. Do not place this unit close to a strong magnetic field. This may damage the system.
11. Do not place the unit on a amplifier or receiver.
12. Do not place this unit in a damp area as the moisture will affect the life of electric components.
13. Do not attempt to clean the unit with chemical solvents as this might damage the finish. Wipe with a clean, dry or slightly damp cloth.
14. When removing the power plug from the wall outlet, always pull directly on the plug, never pull on the cord.
15. Depending on the electromagnetic waves used by a television broadcast, if a TV is turned on near this unit while it is also on, there may be a disturbance on the TV screen. Neither this unit nor the TV is malfunctioning. If you see such disturbance, keep this unit some distance away from the TV set.
16. The mains plug is used to disconnect the device, the disconnected device should remain readily operable.

Important Safety Instructions

1. Read these instructions carefully and follow accordingly.
2. Do not place this apparatus under running water. It may adversely affect the electronic components inside
3. Clean only with dry cloth.
4. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
5. Do not install near any heat sources such as radiators, heaters, stoves, or other apparatus (including amplifiers) that produce heat.
6. Do not damage the power cord by walking over it or pinching it, particularly at plugs, convenience receptacles or at the point where they exit from the apparatus.
7. Only use attachments/accessories specified by the manufacturer.
8. Unplug this apparatus during lightning storms or when unused for long periods of time.
9. Ensure the servicing is done by a qualified service personal. Servicing is required when the apparatus has been damaged in any way, for example, when the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture. Does not operate normally, or has been dropped and is not functioning properly.
10. The AC plug is used to disconnect the device; the disconnected device should remain readily operable. In order to disconnect the apparatus from the AC power completely, the AC plug must be removed from the AC outlet completely.

Preparation for Use

Unpacking and Set Up

- Remove the Sound bar from the carton and remove all packing material from the Sound bar. Save the packing material, if possible, in case the Sound bar needs to be serviced or transported. The original carton and packing material is the only safe way to pack your Sound bar to protect it from damage in-transit.
- Place your Sound bar on a level surface such as a table, desk or shelf, conveniently nearby an AC outlet, out of direct sunlight, and away from sources of excess heat, dirt, dust, moisture, humidity or vibration.
- Unwind the Line cord connecting the AC adapter and extend it to its full length.

Protect Your Furniture

This model is equipped with non-skid rubber 'feet' to prevent the product from moving when you operate the controls. These 'feet' are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture. However certain types of oil based furniture polishes, wood preservatives, or cleaning sprays may cause the rubber 'feet' to soften, and leave marks or a rubber residue on the furniture. To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement center everywhere, and apply these pads to the bottom of the rubber 'feet' before you place the unit.

Power Source


This sound bar is designed to operate on normal AC Power source. For India, it works on a normal operating voltage of 110V-240V ~50hz/60Hz. Do not attempt to operate the Sound bar on any other power source. You could cause damage to the Sound bar that is not covered by your warranty.

Important Notes


- This sound bar was especially developed for LED/LCD/Plasma TV's: It should not be used in combination with CRTTV's (Cathode Ray Tube TV's) in order to avoid image interference.
- Before turning on the power for the first time, make sure the sound bar is plugged to power outlet.
- For safety reasons, do not remove any covers or attempt to gain access to the inside of the product. Refer any servicing to qualified personnel.
- Do not attempt to remove any screws, or open the casing of the unit; there are no user serviceable parts inside. Refer all servicing to qualified service personnel.

Product Diagram


Front Panel

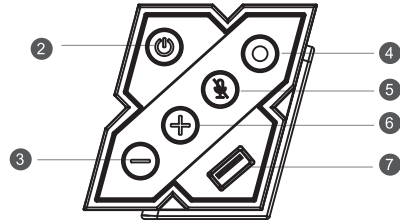

- 1: LED
- 2: POWER/INPUT
- 3: VOL-
- 4: (ALEXA) voice wake button
- 5: MIC MUTE
- 6: VOL+
- 7: USB

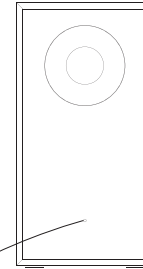


Rear Panel

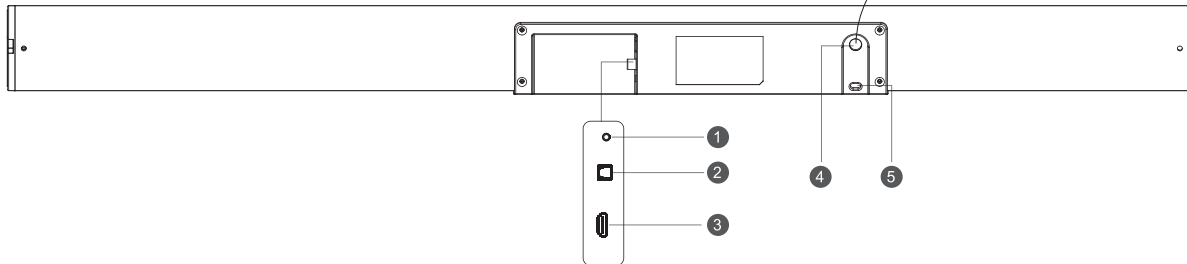

- 1: AUX
- 2: OPTICAL
- 3: HDMI(ARC)
- 4: CONNECT SUBWOOFER SPEAKER
- 5: AC IN

Remote Control

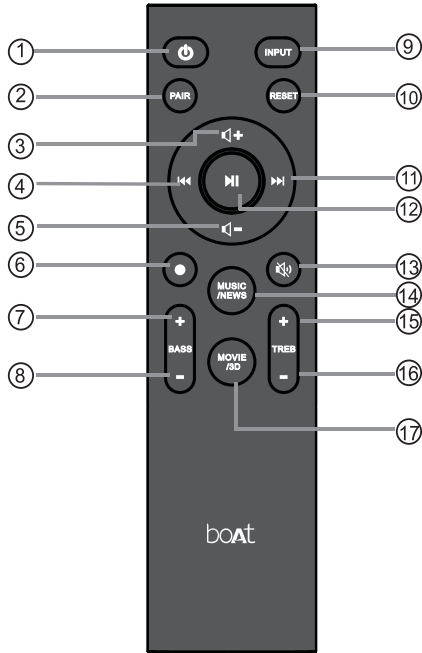

1. : Standby mode for power on/off.
2. PAIR: A) Press and hold it for more than 2 seconds to disconnect or re-connect to the paired device under BT mode. (When disconnection, the blue LED light is blinking, when re-connected the last paired device, the blue LED light is steady on with a beep).
B) Press and hold it for more than 2 seconds to enter network pairing mode under WIFI (The white LED light is blinking in pairing)
3. : Volume +: Master Volume up step by step by short-press, continuously master volume up by long-press. (The volume total value is 18, default value is 10, when soundbar is standby, and the volume value setting can be memorized. When soundbar is powered off, it is not memorized.)
4. : Pre button: Previous program by short-press it (Only work under USB&BT input source).
5. : Volume -: Master Volume down step by step by short-press, continuously master volume down by long-press. (The volume total value is 18, default value is 10, when soundbar is standby, and the volume value setting can be memorized. When soundbar is powered off, it is not memorized.)
6. : "Alexa" voice wake button: short-press it to wake up ALEXA voice control system
7. TR+: Treble volume up to maximum 4db by short-press or long-press. (LED lights right when TREBLE volume increases. Default as 0db, one LED lights on in the middle.)
8. TR-: Treble volume down to maximum 4db by short-press or long-press. (LED lights left when TREBLE volume decreases. Default as 0db, one LED lights on in the middle.)
9. INPUT: Input source by short-press it (BT/AUX/OPT/HDMI (ARC)/USB/WIFI), Note: LED brightness is reduced by half when soundbar is not operated.
 - BT: Blue light indicating
 - AUX: Purple light indicating
 - OPT: Orange light indicating
 - HDMI (ARC): Yellow light indicating
 - USB: Pink light indicating
 - WIFI: White light indicating
10. Reset: Press and hold the button more than 3 seconds to set functions to manufacturing defaults. After the reset is successful, the corresponding source LED light flashes once, the volume reset is defaulted as value 10, treble and bass reset is defaulted as mid-tone value 0db.
11. : Next button: Next program by short-press it (Only work under USB & BT input source).
12. : Play or pause by short-press it (Only work under USB and BT input source).
13. : MUTE: Short-press it to mute mode, source LED light blink slowly, press MUTE again or VOLUME+/- to unmute.
14. MUSIC / NEWS: Select the MUSIC/NEWS EQ effect.
15. BASS +: Bass volume up to maximum 4db by short-press or long-press. ((LED lights right when BASS volume increases. Default as 0db, one LED lights on in the middle.)
16. BASS -: Bass volume down to maximum 4db by short-press or long-press. (LED lights left when BASS volume decreases. Default as 0db, one LED lights on in the middle.)
17. MOVIE / 3D: Select the MOVIE/3D EQ effect.

Special Note:

- 1: When the soundbar is connected to a Bluetooth device, the next Bluetooth device cannot search and connect to this soundbar unless the last Bluetooth device automatically exits. You have to long press the remote control "PAIR" button to forcibly exit the previous Bluetooth device before you can discover and connect to this soundbar for next bluetooth device.
- 2: Press the remote control "PAIR" button for the second time to connect back to the last connected Bluetooth device.

Remote Control

Operating range of the remote control

- When the unit is mounted on a wall, point the remote control at the remote control sensor on the panel.
The provided Remote Control allows the unit to be operated from a distance.
- Even if the Remote Control is operated within the effective range 26.2 feet (8m), remote control operation may be impossible if there are any obstacles between the unit and the remote control.
- If the Remote Control is operated near other products which generate infrared rays, or if other remote control device using infra-red rays are used near the unit, it may operate incorrectly. Conversely, the other products may operate incorrectly.

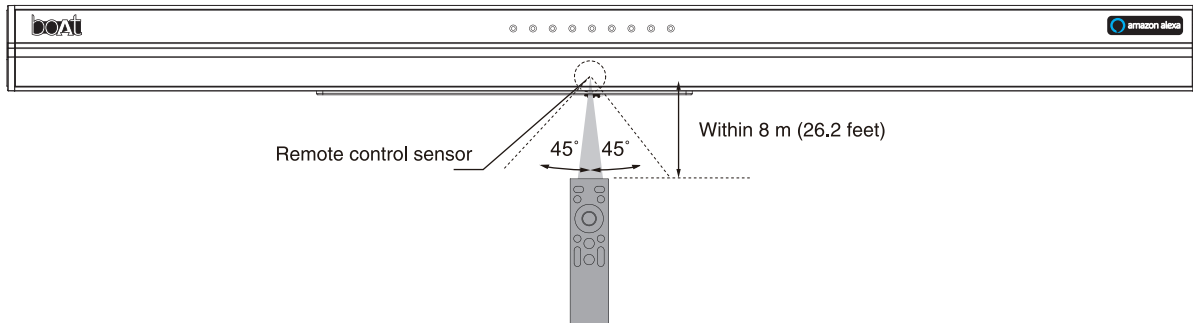


Table Placement



Table Placement

- Place the soundbar horizontally on a solid surface, such as a TV unit or shelves and align it centrally with the TV screen.
- For best sound output and good airflow around the soundbar, place your soundbar as shown on the right.
- Do not stack the soundbar directly with other devices, otherwise; it may cause result in failure due to vibration.
- Do not apply force to it when moving the soundbar, otherwise; it may damage the speaker or the parts covered with steel grill.

This model is equipped with non-skid rubber 'feet' to prevent the product from moving when you operate the controls. These 'feet' are made from non-migrating rubber material specially formulated to avoid leaving any marks or stains on your furniture.

However certain types of oil based furniture polishes, wood preservatives, or cleaning sprays may cause the rubber 'feet' to soften, and leave marks or a rubber residue on the furniture.



To prevent any damage to your furniture we strongly recommend that you purchase small self-adhesive felt pads, available at hardware stores and home improvement center everywhere, and apply these pads to the bottom of the rubber 'feet' before you place the unit.

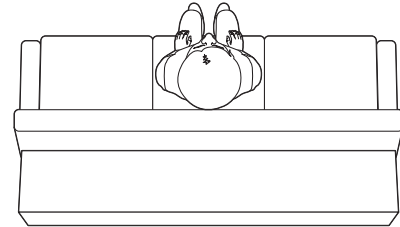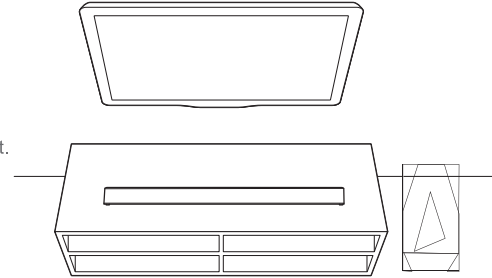

Mount on the wall

Follow the steps below to mount the soundbar on the wall

1. Make 2 holes on the wall with distance same as the wall bracket on the soundbar
2. Put the plastic anchors onto the wall and secure the screws to the plastic clip, do not tighten the screws all the way make sure leave some space
3. Attached the 2 EVA pads onto the wall mount basket. This will make sure that there is enough room between the wall and the soundbar outlet, minimum 3.5mm
4. Once the screws securely fastened, hang the sound bar over by inserting the screws onto the wall mount bracket

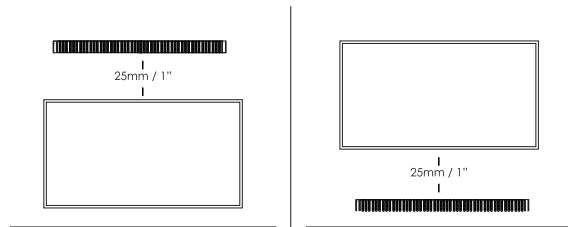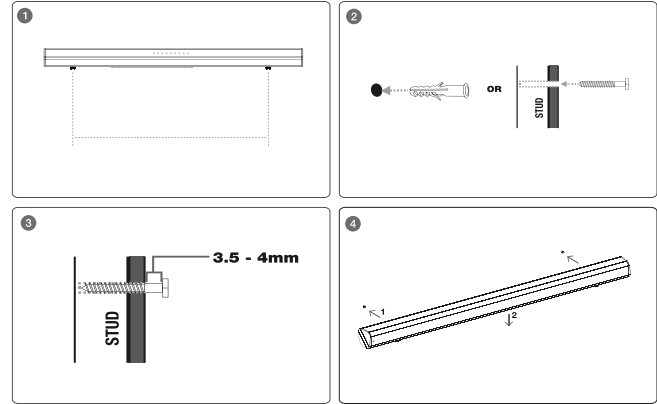

Using the Soundbar

If you don't feel confident to correctly and securely wall-mount the soundbar, Seek the assistance of an experienced person or professional.

Install the speaker on a vertical, fast, reinforced area of wall. For plaster walls, it is recommended to screw into wall studs for greater security. For optimum performance, allow at least 25mm/1" distance between the soundbar and the TV.

OPERATING INSTRUCTIONS

Power ON, Standby and Power OFF

1, Plug one side of power cord into the AC IN port on the soundbar and the other side into wall outlet of main sockets. When you connect the soundbar to the power supply, the soundbar enters standby mode with LED lights bright red. If there is no operation on soundbar or remote control for about 5 seconds, the soundbar will enter the power-saving mode and LED brightness will be reduced by half.

2, Short-press the "POWER" button on the soundbar or remote control to turn it on, the LED light shows startup running status


3: After power on, the input sources can be changed and selected by pressing the "INPUT" button on soundbar or on the remote control. (See right diagram)

4: The following is the light color corresponding to the input source indicated in LED:

BT: Blue AUX: Purple OPTICAL: Orange
HDMI(ARC): Yellow USB: Pink WIFI: White

5: if the TV or external device is disconnected with the soundbar, long-press the "POWER" button on soundbar or remote control for about 3 seconds to turn it off, the soundbar will enter standby mode.

- To turn off the device completely, unplug the power plug from the main sockets.
- Turn off the device completely when not in use to save energy.

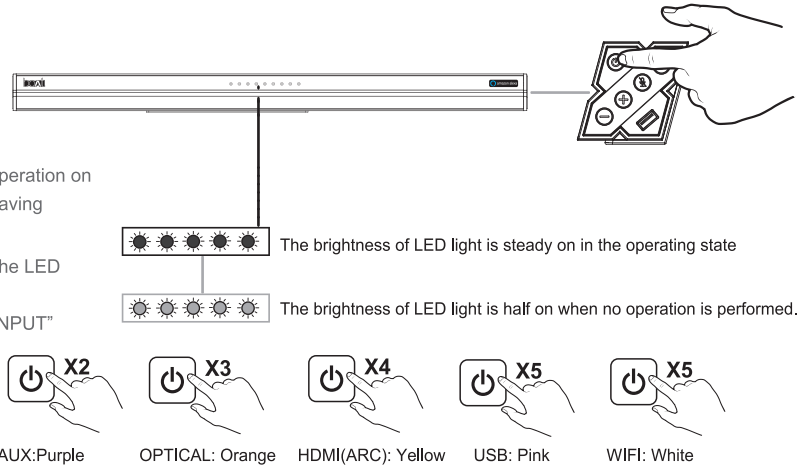

Please note:

- 1, The soundbar has memory function after power off:
 - A): Each time the standby soundbar is turned on; all the settings before shutdown are saved.
 - B): Turn it on after power off; all settings will be memorized before power off.
- 2, the sound bar automatically goes into standby mode if there's neither operation nor input within 20 minutes.

Playing Audio via Input (BT) Connection




Through Bluetooth, connect the Soundbar with your Bluetooth device (such as an iPad, iPhone,iPod touch, Android phone, or laptop), and then you can listen to the audio files stored on the device through your Soundbar speakers. What you need:

- A Bluetooth device which supports Bluetooth profile A2DP, AVRCP and with Bluetooth version as 5.0.
 - The maximum operational range between the Soundbar and a Bluetooth device is approximate 8 meters (26.2 feet).
1. Use either the "INPUT" button on the Soundbar or on the remote to activate Bluetooth mode. The "BLUE" LED light will indicate that BT mode has been selected.
 2. Activate the Bluetooth pairing function on your phone or other compatible device and select the Bluetooth list "AAVANTE BAR AAUPERA_XXXX" (****4 number is randomly generated)" from those devices.
 3. When it is pairing or connecting, the blue LED light blinks, when successfully paired, the blue LED light will steady on with a beep.
 4. The remote control includes BT mode playback controls, long-press "PAIR" button on the remote for more than 2 seconds to disconnect Bluetooth and long-press it to connect Bluetooth again ("PAIR" button on remote control is available only under BT mode)

Playing Audio via Input (USB) Connection

1. The soundbar automatically switches to USB input mode with the LED indicating "PINK" when a USB flash drive is inserted.
2. When soundbar is powered on and a USB flash drive is inserted, use either the "INPUT" button on the soundbar or on the remote to activate USB mode. The "PINK" LED light will indicate that USB mode has been selected and the music in the USB will be automatically played. (In case it doesn't change automatically when a USB flash drive is inserted)
3. This mode cannot be used on the soundbar until a USB flash drive is connected.
 - A): Ensure that your USB flash drive contains MP3 audio file (other file types are not supported.)
 - B): Some external devices may require USB connector for connecting the USB flash drive to the USB port on the soundbar (or your own USB extension cable connected to the USB port).
 - C): The remote control includes USB input mode playback controls.

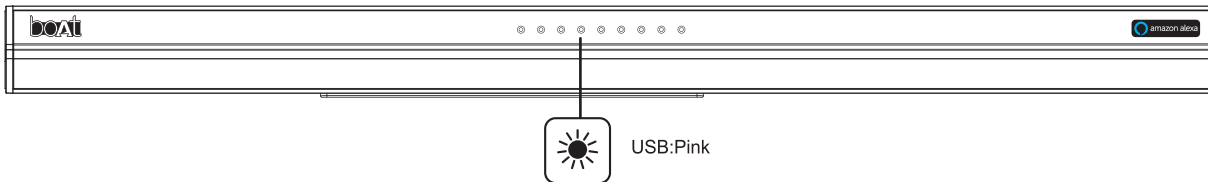

OPERATING INSTRUCTIONS

Using voice commands (Amazon Alexa) to operate the device

You can talk to Amazon Alexa on your phone. Use Alexa to play music, listen to the news, check the weather, and control smart home devices and more.

To use Amazon Alexa, firstly you must have an Amazon account and your soundbar must be connected to the WIFI network mode.

Use the “boAt Aavante Smart” application to enter your Amazon account information and login to the service. With the correct language commands, Alexa can do the following:

For example, simply command:

- Adjust voice: “Alexa, turn up the volume” “Alexa, turn down the volume”
- Listen to Music streams: “Alexa, play some jazz music”
- Operation broadcast: “Alexa, play next song” “Alexa, stop the music” “Alexa, what is this song?”
- Check the weather: “Alexa, what’s the weather?”
- Listen to news: “Alexa, Check live cricket scores.”

Note:

- 1, Amazon Alexa supports English as well as Hindi language. Just say, “Alexa please switch to Hindi”.
 - 2, Services are limited to specific areas.
 - 3, you may need to subscribe to listen to Amazon Music or Amazon Kindle on your phone.
- For more information, visit [Amazon.com](https://www.amazon.com)
- 4, for information about other media services, visit the websites of their service providers.
 - 5, this service may not be available in some countries or regions
 - 6, some functions may require third-party service agreements.
 - 7, to avoid unexpected or incorrect reactions from Alexa, or to protect your privacy, light touch the MIC MUTE button on soundbar to disable the microphone.
 - 8, to enable or call Alexa, you can call “ALEXA”, or press the “●” on the remote, or touch the “○” on the soundbar.




With built-in Alexa, you can operate the device and access music playlists. Alexa may not be available in your area, some Amazon music or Amazon kindle have to be played for a fee. More information can be found at [Amazon.com](https://www.amazon.com).

OPEARATING INSTRUCTIONS


How to use Alexa on the soundbar connected to your phone?

- 1, After soundbar gets switched on, use "INPUT" button on the remote or soundbar to switch input source to WIFI mode.
- 2, long-press (Alexa) voice button to enter network mode, the white LED light flashes with a prompt tone to remind entering the network.
- 3, Then open your phone APP and configure the network according to the prompts of the mobile phone APP. WIFI connection can be used only. (Note: the phone needs to connect to WIFI before opening the APP.
- 4, After the network is successfully configured, press the button "O" to wake up ALEXA manually. The cyan LED light will be shown in the waking up process, and the blue LED light will be shown after wake up is successful.
- 5, the automatic wakeup word "ALEXA" can also wake up the ALEXA voice control system.
- 6, If WIFI disconnects, ALEXA prompts "Sorry, your device lost connection" and red LED light will be shown
- 7, ALEXA cannot be waked up when MIC MUTE is disabled.

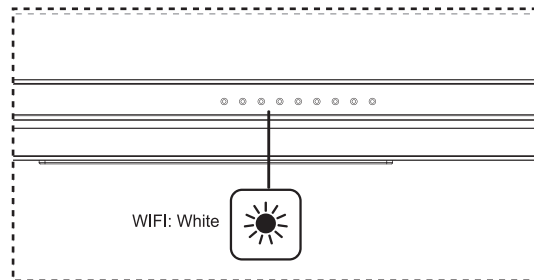

Set Up via boAt Aavante Smart

- 1, Download the "boAt Aavante Smart" APP
- 2, Mobile phone connected to wireless LAN (Must be WiFi network, mobile phone 4G network is not available)
- 3, Open the boAt Aavante Smart app (follow up the illustrated instructions to set up the APP in the following manner)
- 4, Can use ALEXA function after setting up instructions

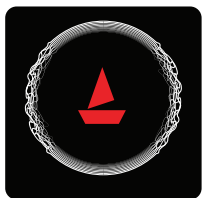

1: Download boAt Aavante Smart app



2: The phone connects to a wireless LAN



3: Open the downloaded APP on your phone

OPERATING INSTRUCTIONS




4: Follow the instructions and click next




5: Click "indicator is blinking"




6: Click "Setup this device"

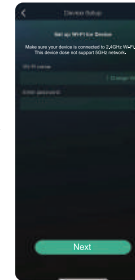

7: Set up Wi-Fi for device to next step

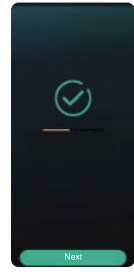


8: Connected network to next step

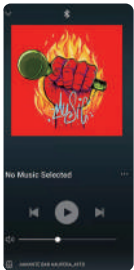


13: Alexa is activated




12: Log in to your registered Amazon account

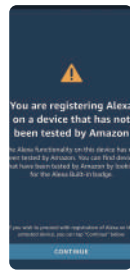

11: Click "Continue"

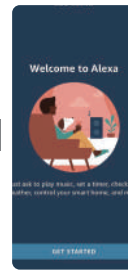


10: Click "Get started"

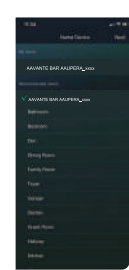

9: Select the correct bluetooth name from bluetooth list to next step

OPERATING INSTRUCTIONS


Playing Audio through the connecting cable

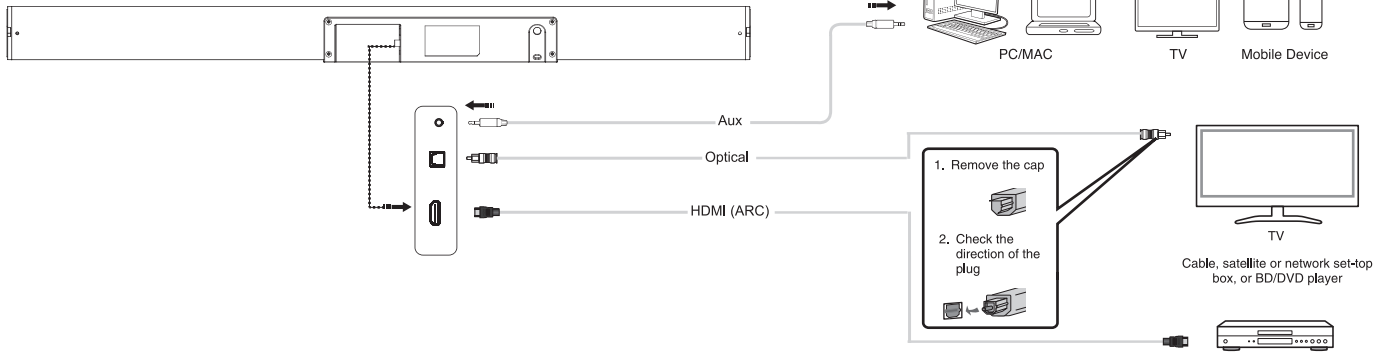

Playing Audio via Input (AUX) Connection

1. Firstly connect the sound bar to your PC, laptop, smart-phone, TV, or other audio devices by using an AUX cable provided. Make sure that these devices have both AUX IN and AUX out terminals.
2. Then short-press the "INPUT" button on the soundbar or on remote control to switch the sound bar to AUX mode, once the sound bar is connected to AUX mode, the LED light will indicate "PURPLE" color. Playback can only be controlled on your connected device.

Note: For some computers, you may need to access the audio control panel to manually set the sound bar as shown steps on above.

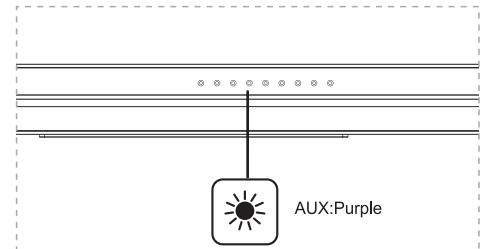

OPEARATING INSTRUCTIONS

Playing Audio via Input (OPTICAL) Connection

-Remove the cap of optical cable (keep the cap for the future use); check the direction of the plug.

Connect the soundbar and TV with the optical cable.


-Use this mode to play music from a TV with optical digital output on the sound bar. In TV sound settings, select the soundbar optical connection (output for audio). When the optical cable is connected, the TV audio output is set to PCM format.

-The TV must have an optical digital output. Use the supplied optical cable to make the connection as follows:

1. Connect the optical cable to the optical digital output of your TV.
2. Connect the optical cable to the optical digital input of your soundbar.
3. Switch on the TV set and the soundbar. Set the connected TV to "PCM Stereo". Set the audio output mode as <automatic> or <decoded output as PCM state>.
4. Start playing on the TV.
5. Using either "INPUT" button on the soundbar or on the remote control to activate the OPTICAL mode. Once connected, the "ORANGE" LED light will be indicated on the soundbar. Playback can only be controlled on your connected device.
6. Use the volume buttons to adjust the volume to your requirements.
7. You can also change the audio settings by using the relevant buttons on the remote control.

Note:

1. When connecting a device such as a TV/Set-top box/ DVD/ game console with optical cable, set the audio output mode of the device to PCM mode (digital optical output).
2. Do not bend the optical cable, otherwise the cable inside will be damaged.

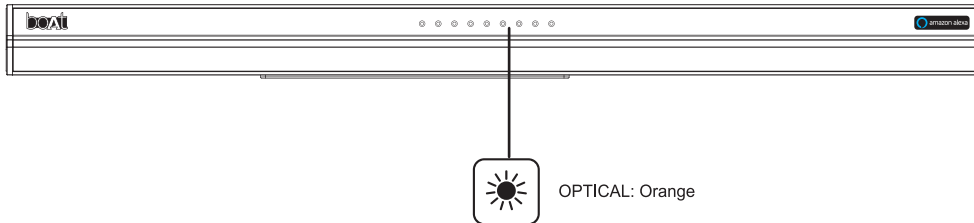


OPERATING INSTRUCTIONS

Playing Audio via Input HDMI (ARC) Connection

1. The sound bar supports HDMI(ARC) with audio return channel (ARC). You can hear the TV audio through your sound bar by using a single HDMI(ARC) cable. But on condition that your TV is ARC compliant.
2. Using a high speed HDMI(ARC) cable, connect the HDMI(ARC) connector on the sound bar to the HDMI(ARC) connector on the TV. The HDMI(ARC) connector on the TV might be labeled differently. For details, see the user manual of your TV.
3. Press "INPUT" button on the remote control or on sound bar to select HDMI (ARC) mode. After connection, the LED light is indicating "YELLOW" color. Different TV might be different setting, please refer to your TV User Manual.
4. Use the volume buttons to adjust the volume to your requirements.
5. You can also change the audio settings by using the relevant buttons on the remote control.

Note:

1. When connecting a device such as a TV/Set-top box/DVD/ game console with HDMI(ARC) cable, set the audio output mode of the device to PCM mode <digital HDMI (ARC) output>.
2. The TV is connected to a HDMI(ARC) port with sound bar. Different TVs might have different setup menus, but the operation approach is the same.
3. If need arises to connect set-up box meanwhile, please firstly connect the HDMI(ARC) connector and paired to the sound bar. Then connect the set-top box.

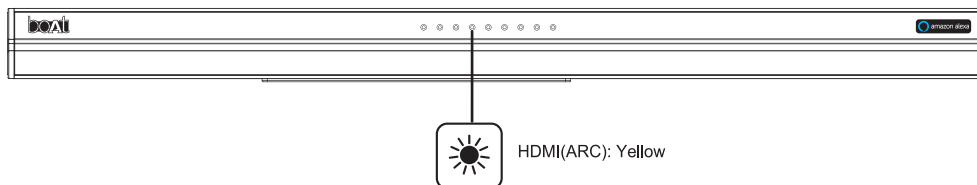

OPERATING INSTRUCTIONS

PROBLEM/TROUBLE	POSSIBLE CAUSE	SOLUTION
Sound quality of audio play from a connected Bluetooth device is poor and connection is not stable.	The Bluetooth reception is poor.	Move the device closer to the sound bar, or remove any obstacle between the device and the sound bar.
No sound can be heard or sound breaks (Bluetooth mode)	The volume on the Bluetooth device may be too low.	Raise the volume on the Bluetooth device.
	Bluetooth is not selected as the input source.	Select the Bluetooth as the input source.
	Playback on the device has not been performed.	Perform playback on the device.
	The sound output on the Bluetooth device may not be set to this unit.	Select this unit as the output device on the Bluetooth device.
	The connection to the Bluetooth device was cut off.	Connect with the Bluetooth device one more time.
There is no sound from sound bar - HDMI TV (ARC) Mode	The unit may be too far away from the Bluetooth device.	Move the Bluetooth device near this unit.
	A device emitting electromagnetic waves (such as a microwave oven, a wireless device and so on) may be placed nearby.	Do not use this unit near device that emit electromagnetic waves.
	Incorrect HDMI cable is used causing no signal to be sent to soundbar. Incorrect input mode is selected.	1. Make sure that the user connected TV and sound bar by a 19-core HD ARC cable. 2. The sound bar and TV are connected through TV (ARC) port output; make sure that the TV is ARC compliant. 3. Set the TV to HDMI ARC (CEC). Set the audio output mode of TV to PCM format. (Or refer to your TV user manual)
There is no sound from sound bar (OPTICAL Mode)	OPTICAL cable might be damaged and no signal is received by the soundbar due to a failed connection and incorrect operation mode selected.	1. Replace the OPTICAL cable with a new one to connect. 2. Set your TV audio output to PCM format. (Pls refer to your TV user manual)
There is no sound from sound bar (USB mode)	USB file type is not support & Sound bar doesn't switch to USB input mode automatically when USB is inserted.	Make sure that USB flash drive contains MP3 files because other file types are not supported. Switch the input mode once again, then playback again.
Alexa cannot operate this device	Alexa is not configured correctly The device is not connected to the network	Using the "boAt Avante Smart" APP to configure Alexa, for details, see the content: Use the voice command (Amazon Alexa) to operate this soundbar Connecting the soundbar and switch input source to the WIFI network mode, for details, see the following: connect to network with "boAt Avante Smart" application.
There is no response to call Alexa	The MIC is disabled	Tap "MIC MUTE" to enable the microphone function

PROBLE/TROUBLE	POSSIBLE CAUSE	SOLUTION
There is no sound output from sound bar.	Another input source is selected.	Select an appropriate input source.
	The mute function is activated.	Cancel the mute function.
	The volume of sound bar or TV/other device is adjusted too low.	Increase the volume level on sound bar or by remote control or on TV.
	The power cable of the unit is not connected properly.	Make sure that the power cable of the unit is connected to an AC wall outlet securely.
	Input jacks on a playback device are connected.	Connect the input jack on the sound bar and the output jack on the playback device.
The sound is distorted or echoed.	Signals that the sound bar cannot playback when being input.	When sound bar and TV or other devices are connected by an audio cable through TV (ARC) port output, Select the correct audio input and output. Make sure the digital audio output setting on the playback device to PCM format. Since the output format of our sound bar is PCM, if it is used, the decoding format of TV or other devices will be adjusted to PCM state.
	TV volume is not muted.	If you play audio from TV through the sound bar, make sure that the TV is muted.
The volume decreases when the unit is turned on.	The automatic volume adjustment function is activated. To prevent excessive loudness, the unit automatically controls its volume within a certain level when the unit is turned on.	Turn up the volume as required.
Noise is heard.	The sound bar is too close to another digital or high-frequency device.	Move those devices away from the sound bar.
The unit cannot be operated by using the remote control.	The unit is out of the operating range.	Use the remote control within the operating range.
	The batteries are weak.	Replace with new batteries.
The TV cannot be operated by using the TV's remote control.	The remote control sensor of the sound bar is exposed to direct sunlight or strong lighting.	Adjust the lighting angle or reposition the sound bar. Make sure our product cannot be used in sunlight.
	The unit is blocking the TV's remote control sensor.	Position the unit so that it does not obstruct the TV's remote control sensor.
A device cannot connect the sound bar or the unit cannot be connected to a Bluetooth device.	Bluetooth function of the device is not activated, not paired or connected correctly.	Restart the sound bar and try pairing again. You have not enabled the Bluetooth function of the device; see the user manual of the device on how to enable the function and correctly connected the device. The sound bar is already connected with another Bluetooth device. Disconnect the connected device, and then try again.
	Bluetooth is not selected as the input source.	Select Bluetooth as the input source.
	The unit is connected to a different Bluetooth device.	Un-pair the Bluetooth device that is currently connected and pair with the desired Bluetooth device.
	The unit is too far away from the Bluetooth device.	Move the Bluetooth device closer to this unit.
	A device emitting electromagnetic waves (such as a microwave oven, a wireless device and so on) may be placed nearby.	Do not use this unit near devices that emit electromagnetic waves.
A Bluetooth device that you are using may not support the protocol.	The Bluetooth device that you are using may not support the protocol.	Use a Bluetooth device that supports the protocol.
	The connection profile registered in the Bluetooth device may not be functioning correctly for some reason.	Delete the connection profile in the Bluetooth device and then connect the Bluetooth device to this unit.

Specifications

Specifications

Output Power (RMS):	120W (60W + 30W X 2)
Driver Size:	2.25"×4 SB + 6.5inch SW
Input impedance :	6Ω*2+3Ω Frequency response: 45Hz-20KHz
S/N Ratio:	≥66dB
Separation:	≥40dB
File format support (SUB):	MP3
Line input:	3.5mm, Optical IN & HDMI (ARC)
Max supported memory size(USB):	32GB
BT name:	AAVANTE BAR AAUPERA_XXXX
Bluetooth Version:	5.0
Product Dimension (W X D X H):	Sound bar:73H*78D*960L mm Subwoofer: 190W*368H*315D mm