

WARRANTY STATEMENT

Amkette's Evo Gamepad Pro 4 is backed by a 1 Year performance warranty against any manufacturing defects in material or workmanship from the date of original purchase. This warranty entitles the purchaser to get the product repaired / replaced under the following conditions:

- The warranty applies to the original purchaser. Proof of original purchase is required.
- The warranty does not cover the damage caused by misuse, abuse or improper storage.
- In no event shall Amkette be responsible for any direct, incidental, consequential or other damages of any kind.

Please contact our Technical Support Line and/or send the defective product, postage pre-paid, together with the proof of purchase to our Customer Care Service Center to avail warranty service. Return postage will be paid by us.

CUSTOMER CARE CENTER

Amkette House, C-64/4, Okhla, Phase-II, New Delhi-110020



1800-11-9090 (Toll Free)
(Mon-Sat / 9:30AM - 6:00PM)



93126 91448 (Call or WhatsApp)
(Mon-Sat / 9:30AM - 6:00PM)



techsupport@amkette.in

WANT TO ADD 3 MONTHS

to your warranty and get
Hassle Free Service?

Register your product now
www.amkette.com/register



READ ME FIRST

User Manual

EVO GAMEPAD *pro 4*



CONTROLLER OVERVIEW

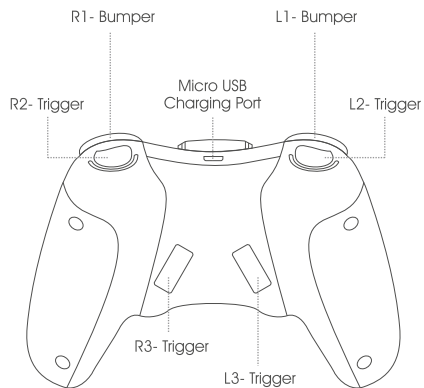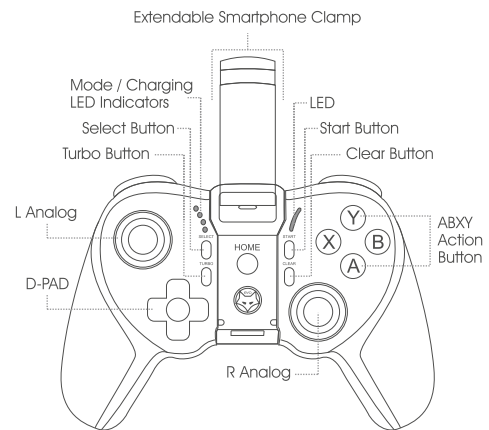

WHAT'S IN THE BOX



Evo Gamepad Pro 4



Micro USB Charging Cable



Quick Start Guide



User Manual

TURBO FUNCTION

Turbo function is used more in shooting games. Your fingers could easily get tired if you continuously press the same button. By enabling Turbo function, you can shoot by holding the shooting button.

SETTING METHOD- Press the action button for a long time, and then press the TURBO key to turn it ON.

Press the action key for a long time, and then press the CLEAR key. The TURBO function will be turned OFF.

NOTE:

After you power off or restart the game pad, the previous TURBO settings will not be stored. If you want to enable turbo function buttons again, then please reset TURBO function.

LED INDICATIONS

OFF	CHARGING	LED 4 Blinks Slowly
	FULLY CHARGED	LED 4 Stay ON
ON CONNECTED	CHARGING	LED 4 Blinks Slowly
	FULLY CHARGED	LED 4 Stay ON
	LOW BATTERY	LED 4 Blink Rapidly


SPECIFICATIONS

Bluetooth Version	: v 4.0
Bluetooth Range	: Up to 8 m
Battery Capacity	: 400 mAh
Play Time	: Up to 12 Hours
Standby Time	: Up to 30 Days
Charging Voltage/Current	: DC 5V/500 mA
Supported Screen Size	: Up to 6 inches
Instant Play Mode	: YES
Connection Type	: Bluetooth

ANDROID HID MODE (NATIVE GAMEPAD SUPPORT)

To connect in HID Mode:

1. When OFF, Press **Home + X** for 2 seconds to enter HID mode, **LED 3 will flash rapidly**
2. Search for devices on your Smartphone Bluetooth settings.
3. Connect to **Evo Gamepad Pro 4**. **LED 3 will remain ON** after connected successfully.

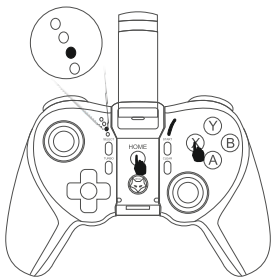

DOWNLOAD THE AMKETTE EVO GAMEPAD APP

Find all officially supported gamepad games.


TO DOWNLOAD THE APP
SCAN THE QR CODE OR SEARCH
FOR **EVO GAMEPAD APP** ON THE
GOOGLE PLAY STORE




ACTIVATION CODE FOR
THE EVO GAMEPAD APP

YOLO

HOW TO MOUNT YOUR SMARTPHONE

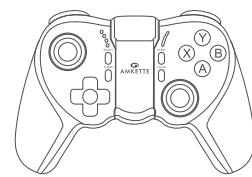

Flip the Clamp
Just flip the clamp on
the outside
to open it.

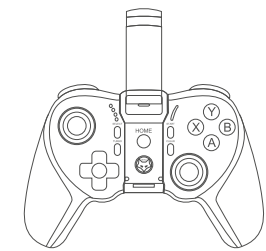

Extend the Clamp
The clip can expand and contract
with respect to your device size.
Supports smartphone screen size up to 45-85mm



Insert the Smartphone
Place the smartphone
in between the
clamp and align it.

2 MODES TO PLAY

You can play games on your Android Phones in 2 different ways depending on games.

HID Mode

These games have native Controller support. Hence no
need to program controller keys for game playing.
Refer User Manual

Connect using **Home+X**

Instant Play

You can program any game to the Controller Keys
using this Mode including BGMI, Free Fire, Mobile
Legends etc. **See Below.**

Connect using **Home+A**

INSTANT PLAY MODE – ANDROID

To connect in Instant Play Mode on Android

1. When OFF, press and hold the **HOME + A** button together for 2 seconds till the **LED 1 starts flashing rapidly**. Now the Gamepad is in pairing mode.
2. Search for devices on your Smartphone Bluetooth Settings.
3. Connect to Gamepad. **LED 1 will remain ON** after connected successfully.



NOTE:

In case you connect to another device then you need to forget and re-pair your device.

Additional Note:

For BGMI and other shooting games you can remap the touch buttons by using the **ShootingPlus V3** App. Please read the Quick Start Guide.

To download **Shooting Plus V3 App** for Android Smartphones Scan the QR Code.



Scan me!

FAQs

What Games will work with the Evo Gamepad Pro 4 on my device?

For android devices the Games which can be played in instant play mode is compatible. For better Gaming experience and more Games, download '**Shootingplus V3**' App.

Does the Evo Gamepad Pro 4 vibrate?

Evo Gamepad Pro 4 does not support vibration functionality.

What should I do when the Evo Gamepad Pro 4 cannot be turned OFF / ON / Frozen?

When the Evo Gamepad cannot be turned OFF / ON / Frozen, firstly check whether the Evo Gamepad is charged or not. If the Evo Gamepad is not out of battery, you can factory reset the Evo Gamepad: Locate a small reset hole at the back of the Evo Gamepad. Use a pin to press the button. Now turn on your Evo Gamepad again.

Can I play Games like BGMI and shooting games using the Evo Gamepad Pro 4?

Yes, you can play BGMI and other shooting games by using the Evo Gamepad Pro 4 with out getting banned. This Gamepad supports Instant play mode.

Why i am unable to play BGMI by using this controller?

At this time Instant Play is designed to work with phones that have Snapdragon, Kirin, or Exynos processors only. HID mode will work with all Android Phones including MediaTek.