

# CLAW™



## SHOOT WIRED CONTROLLER FOR PC

### Button Map



### Change mode

The default mode on PC is X-Input (LED 4 is ON).

#### Switch to D-Input (Analog mode),

long press the HOME button (LED 2 + 3 is ON).

#### Switch to D-Input (Digital mode),

short press the HOME button (LED 2 is ON)

X-Input mode is used for most modern PC games. In the X-Input mode, you will see the gamepad as 'XBOX360 controller'. In the D-Input mode, you will see 'PC controller'. To double check the mode status, kindly visit Control Panel (Settings) > Devices.

### Dual Vibration Function

The Gamepad has two strong vibration motors. The controls are represented more realistically with the vibration effect.

Note : Please note that the vibration works only if the game or the program supports this function and the corresponding feature has been activated in the game option.

### Features and Specifications

**Plug-N-Play:** The CLAW Trigger gamepad requires no drivers, simply plug in the 1.8 m USB cable to your PC and you're ready to game.

**Well-built Layout and Buttons:** Ergonomic and streamlined layout featuring a rubberized textured grip on both handles along with 2 Analog sticks, 8 Way Directional D-Pad, 4 Action Buttons, 2 Triggers, 2 Shoulder Buttons, 4 Function Buttons, 4 LED Indicators and 2 Built-in Vibration Motors.

**Dual Vibration Motors:** Experience realistic gameplay with our Dual Vibration Motors which give you a thrilling experience.

**Broad game support:** Thanks to the dual input support (X-Input & D-Input), you can play old and new games by simply changing modes. Supports top games such as FIFA, GTA, PUBG PC, Call of Duty PC, NFS and many more.

- Connection type: USB
- Buttons: 12 buttons / 8 way D-Pad / 2 Analog sticks
- Cable length: 1.8 meters
- Weight: 237 grams
- Dimensions: 12 x 6.5 x 16 cm
- Platform Compatibility: Windows 10, Windows 8.1, Windows 8, Windows 7 & Windows XP

### Box Contents

- SHOOT Wired Gamepad
- User Manual

### Connection setup

Connect the Gamepad to any available USB port on your computer. It will automatically recognize your device.

### Safety instructions

Never try to open the device to undertake any repairs or modifications. Avoid contact with the main voltage. Do not short-circuit the product. The device is not approved for outdoor use. Please use it only in dry places. Protect it from high humidity, water and snow. Keep the device away from high temperatures.

Do not expose the device to sudden changes in temperature or strong vibration, as this could damage the electronic components. Do not use the device for purpose other than those described in the user manual. This product is not a toy.

### Warranty Information

1. This product comes with a 1 year warranty from date of purchase. Kindly register your product at [www.myclaw.in](http://www.myclaw.in) and retain your invoice copy which will be required at the time of warranty claim.
2. CLAW will repair or replace any part of the faulty unit which may prove defective under normal use during the offered warranty period.
3. Any physical or liquid damage to the product will void the warranty.

You may contact us via the below methods to initiate a warranty claim:

**Email:** [service@originmarketing.in](mailto:service@originmarketing.in)

**Call:** 022 40224087 / 9870294946

**Website:** [www.myclaw.in](http://www.myclaw.in)

**Facebook:** [www.fb.com/MyClaw](https://www.facebook.com/MyClaw)

*We would like to take this opportunity to thank you for your purchase. We hope the gamepad enhances your gaming experience. If it does, kindly consider posting a review! This helps us to continue providing great products and helps potential buyers to make confident decisions.*

*Thank you in advance for your review and for being a preferred customer. Happy Gaming!*