

ROCKERZ 378



USER MANUAL

boat

ROCKERZ 378

Thank you for choosing boAt Rockerz 378. This manual is meant to guide you through the functionality of the wireless earphone neckband. Knowledge of Bluetooth and device connection is essential for the usage of the headset. Therefore, we strongly advise that this manual be thoroughly read before use, and referred to in times of difficulty, so that you can always be easily guided towards the shores of musical bliss.



PACKAGE CONTAINS:

- 1 x boAt Rockerz 378
- 1 x USB Type C charging cable
- 2x Additional Earmuffs
- 1 x User Manual
- 1 x Warranty Card
- 1 x Catalogue

PRODUCT OVERVIEW



TO PAIR WITH BLUETOOTH

- (1) When switched off, press and hold the MFB ("Multifunction Button") for 3 seconds to switch on the wireless earphones and put them into pairing mode. The earphones automatically enter pairing mode with a voice prompt 'pairing', the blue and red LEDs flash alternately to indicate the same.
 - (2) Open Bluetooth functionality on your media device and search for "Rockerz 378" from the list of available devices.
 - (3) Choose "Rockerz 378" from the list and if asked for a passcode, enter the pairing code "0000" to establish Bluetooth connectivity.
 - (4) Once successfully connected, the blue LED flashes every 10 seconds to indicate the same.
- Note: The wireless neckband automatically turns off if there is no pairing established in 5 minutes.*

FUNCTIONALITIES

- (1) **Power on:** When switched off, press and hold the MFB for 3 seconds. The voice prompt "Power On" confirms the same. The blue LED flashes once to indicate the same.
 - (2) **Power off:** In powered on state, press and hold the MFB for 5 seconds. The voice prompt "Power Off" confirms the same. The red LED flashes once before the device gets turned off.
 - (3) **Play/Pause:** Single tap the MFB to play/pause music at your convenience.
 - (4) **Volume Up:** Tap the Volume Up button in steps to increase the volume. The voice prompt "Volume Max" indicates maximum volume.
 - (5) **Volume Down:** Tap the Volume Down button in steps to decrease the volume.
 - (6) **Answer/End call:** Tap the MFB once when answering or ending a call to complete the action.
 - (7) **Reject call:** Press and hold the MFB for 2 seconds during an incoming call to reject the call.
 - (8) **Previous Track:** To go back to the previous track or start the track from beginning, press and hold the Volume Down button for 2 seconds.
 - (9) **Next Track:** To skip to the next track, press and hold the Volume Up button for 2 seconds.
 - (10) **Reset Device (Clear Paired List):** Press and hold the Volume Up and Volume Down buttons simultaneously for 5 seconds to clear the list of paired devices. The red and blue LEDs flash quickly for 2 seconds to indicate the same.
 - (11) **Voice Assistant:** Double press the MFB to wake up smart voice assistant.
 - (12) **BEAST™ Mode with Spatial Bionic Sound Tuned by THX™:** Single press the Quick Switch button to switch to Low Latency (BEAST™) mode infused with Spatial Bionic Sound Tuned by THX™. Once switched on, it gets notified via a prompt. Single press the Quick Switch button to turn off BEAST Mode and Spatial Bionic Sound.
- Made for the Gamers - By Gamers, the BEAST™ Mode reduces the latency significantly and improves the overall gaming experience. On the other hand, Spatial Bionic Sound Tuned by THX™ offers impeccable spatial sound developed for a superior listening experience.

"Tuned by THX™ is a trademark belonging to THX Ltd."

TO CHARGE

Use a USB Type C charging cable to charge the earphone through either a laptop or an adaptor.

- (1) **Low Battery:** When the remaining battery is below 20%, there is a 'Battery Low' prompt every 5 minutes and red LED quickly flashes 3 times every few seconds to indicate the same.
- (2) **Charging:** Solid red LED indicates that the earphone is being charged (please note that the earphone cannot / should not be turned on while charging).
- (3) **Fully charged:** Solid blue LED indicates the same.

SAFETY CAUTIONS

- Please don't dismantle the product in any way or remove the product's battery by yourself, as this can lead to a fire or electrical breakdown. Any maintenance or servicing of the earphones should be done only through a qualified service provider/manufacturer.
- Please clean the earphones with the utmost of care with only a damp soft cloth, if cleaning is required. Please do not use any oily volatile liquid. In addition, ensure that the earphones are kept away from extremely hot or cold substances.
- Any damage to the earphones that is NOT a manufacturing issue will make the products warranty null and void.
- Do not use earphones when it is unsafe to be wearing them, such as while operating a vehicle, crossing a street, or during any activity where full awareness of your surroundings is required.
- To avoid damage to your hearing, make sure that the volume on your music player is at an appropriate level when you are putting on the earphone. Exposure to any noise levels at or above 85 dB can gradually lead to a loss of hearing.

SPECIFICATIONS

Bluetooth Version	V5.1
Operating Range	10m
Frequency	20Hz-20kHz
Driver Size	10mm*2
Battery	200mAh
Talk time	Up to 25 hours
Music time	Up to 25 hours
Bluetooth Profile	HFP/HSP/A2DP/AVRCP
Standby time	6 months
Charging Time	30 Min
Charge Interface	Type C
Driver Impedance	16Ω
BEAST Mode with Spatial Bionic Sound Tuned by THX™	Yes
Latency	65ms
Product Weight	27g