

AIRDOPES FLEX 454 ANC



boat


AIRDOPES FLEX 454 ANC

Get ready to immerse yourself in musical bliss with your very own pair of boAt Airdopes Flex 454 ANC. Please consider this manual as your guiding map towards the unparalleled shores of musical bliss. Knowledge of Bluetooth and device connectivity is essential for steering this boat and therefore we strongly recommend thorough reading of this manual. Also, you may refer to the same at times when you face any sort of difficulty.



PACKAGE CONTAINS:

- 1x Pair of TWS Earbuds
- 1x Charging Case
- 1x Type-C Charging Cable
- 2x Pairs of Extra Earmuffs
- 1x User Manual
- 1x Warranty Card
- 1x Catalogue
- 1x FAQ Card

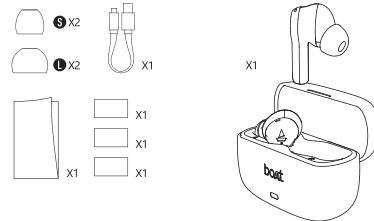

POWER ON (FIRST TIME USER)

Step 1: To switch the earbuds on (Smart Power On) simply open the lid of the charging case (when earbuds are inside). Our IWP™ (Insta Wake N' Pair) Technology enables the earbuds to power on automatically, get connected and enter into the connection mode

OR

Long touch the CTC (Capacitive Touch Control) on both earbuds for 3 secs to manually power on the earbuds
Step 2: Both the earbuds will automatically pair with each other. The earbuds will enter into the Connection Mode indicated by white LED flashes

CONNECTION MODE

Step 3: Turn on the Bluetooth functionality on your phone/media device & scan
Step 4: Search for 'Airdopes Flex 454 ANC' and pair accordingly.

Congratulations! Your earbuds are now connected successfully via Bluetooth

Note:

- Pairing mode lasts for 5 minutes. If the pairing time is missed, then you will need to reconnect the earbuds and follow the above-mentioned procedure.
- Airdopes Flex 454 ANC remembers previously connected devices; once switched on, the earbuds automatically reconnect to the previously connected devices in working range.




SINGLE EARBUD USAGE

Step 1: Please note that both the earbuds can be used in mono mode. Use Smart Power On or Manual Power On for switching on the desired earbud
Step 2: The selected earbud will automatically enter the connection mode
Step 3: Turn on Bluetooth on your phone/media device and search for 'Airdopes Flex 454 ANC' to connect

Notes:

- To switch to Stereo mode, simply take out the other earbud from the case. It will automatically power on and pair with the previously selected earbud, hence enabling Stereo usage

- 3 Seconds Long touch both CTCs for 3 sec to manually power on
- 3 Seconds Right Earbud Long touch the right CTC for 3 seconds to toggle ANC OFF/ Ambient/ ANC ON modes
- 3 Taps Tap the left CTC 3 times turn on/off BEAST (gaming) mode
- 5 Seconds Long touch both CTCs for 5 sec to manually power off
- 10 Seconds Long press the Reset Button on case for 10 sec to perform factory reset

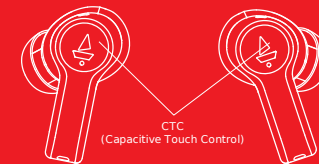

CHARGING THE EARBUDS

Step: Please insert the earbuds back inside the charging case in correct orientation.

Remaining Earbuds Battery	LED Indication
Low Battery	White blinks (3 times) when the Case lid gets opened
Min 30%-100%	Solid white LED (3 seconds) when the Case lid gets opened

Note:

- Before using the ear-buds for the first time, it is recommended to fully charge the ear-buds. Also, please keep the lid of the charging case closed while charging.

CHARGING THE CASE

Step: To charge the case, plug one end of the provided cable into the case and connect the other end to a computer/ wall adapter/ powerbank, etc.

Case Remaining Battery	Charging State	Normal (Non-Charging) State
Less than 30%	First shows the normal state, then goes into red breathing LED	Red LED blinks 3 times upon opening the case lid
30%-70%	First shows the normal state, then goes into white breathing LED	White LED blinks 3 times upon opening the case lid
More than 70%	First shows the normal state, then goes into Green breathing LED	Green LED blinks 3 times upon opening the case lid

Case LED Indication about inserting earbud into the case - This is to indicate TWS is charging from the case (when lid gets closed):
• If either of the earbuds is getting charged from the case, then purple LED blinks for 5 seconds
• If both the earbuds are fully charged, blue LED for 5 seconds

BASIC FUNCTIONS

• Ambient Mode, ANC and Normal Modes: Long touch the right CTC for 3 secs to switch among Ambient mode, ANC mode and Normal mode for music. Ambient mode is for transparency towards the audible surroundings. By virtue of ANC mode you can cancel out the external noise and let yourself fully immerse in your playlists.

Note: The default mode is ANC OFF (Normal Mode). The order of change is ANC OFF (Normal mode) --> Ambient Mode --> ANC Mode

- Answer: Single tap the CTC on either earbud to answer incoming calls
- Hang Up/Reject Calls: Double tap the CTC on either earbud to end/reject calls
- Play/Pause Music: Simply plug in the earbuds inside your ears to start playback; whereas, you can remove them to pause music

OR
Single tap CTC on either earbud to play or pause a track
• Next Track: When playing music, double tap the right CTC to skip to the next song
• Previous Track: When playing music, double tap the left CTC to return to the previous song

Triple tap the left CTC to switch to Low Latency mode, also known as the BEAST™ Mode. Once switched on, it gets notified via a sound prompt. Triple tap the left CTC once again, to turn it off and return to Music Mode.

Made for the Gamers - By Gamers, BEAST™ Mode reduces the latency significantly and improves the overall gaming experience

AI ENx™ TECH

Our ENx™ tech algorithm cancels out the background noise so that you can be heard crystal clear via voice calls. One need not activate ENx™ as the mics are equipped with the same and activated by default.

Deliver your voice without interruptions anywhere - traffic, railway stations, airports, work space; literally anywhere!

MULTI-POINT CONNECTIVITY

Airdopes Flex 454 offers multi-point connectivity feature; thereby letting you stay connected to two devices simultaneously. You can follow the below steps:
1. Firstly, connect the earphone to one of the devices.
2. Then, switch both the earphone and the device's Bluetooth off.
3. Thereafter, connect the earphone to the second device.
4. Again, switch the first device's Bluetooth on. The earphone gets connected to both devices.

SMART POWER OFF

Step 1: After usage, remove both the earbuds from your ears
Step 2: Place the earbuds back into the charging case in correct orientation and close the lid
The earbuds automatically switch off (and enter charging mode).

MANUAL POWER OFF

Step 1: Long touch both CTCs for 5 seconds to manually power off the earbuds
Step 2: Once the earbuds get turned off, place them back inside the case and close the lid

FACTORY RESET

Perform the Factory Reset in case you face any difficulty while operating your Airdopes Flex 454 ANC
*Note: Before performing reset, clear "Airdopes Flex 454 ANC" from pairing device history by forgetting device

Step 1: Place the earbuds inside the case.
Step 2: While the earbuds are inside the case long press the Reset Button for 10 seconds.

After successful factory reset:
• Red LED blinks quickly 5 times on the Charging Case
• White LED blinks quickly 5 times on the Earbuds
Step 3: Close the lid and then re-open it again after a few seconds.
Step 4: Perform a fresh connection attempt and enjoy!
Congratulations! Your Airdopes Flex 454 ANC has been Reset.



OTA COMPATIBILITY

Keep your Airdopes Flex 454 ANC up to date with OTA compatibility feature via boAt Hearables App. The updates can include performance improvement, feature addition, stability improvement, etc.

SPECIFICATIONS

Headphone Type	ANC TWS Earbuds
Bluetooth Version	V5.2
Water Resistance	IPX5
IWP™ Technology	Yes
ANC	Up to 32dB
ENx™ Equipped Microphones	4
Latency with BEAST™ Mode	60ms
Music Playtime	Up to 10H per charge, Up to 50H additional Case playtime (Non-ANC mode) Up to 8H per charge, Up to 40H additional Case playtime (ANC mode) at 60% vol.
Standby	100H
Charging Technology	ASAP™ Charge
Transmission Range	10m
Driver Size	10mm
Google Fast Pair	Yes
Codec Support	SBC and AAC
Frequency	20Hz-20kHz
Battery	480mAh (Case) 35mAh*2 (Earbuds)
Charging Time	25min (Earbud) & 90min(Case)
Charging Interface	Type C

WARNING

- Please follow the instructions to operate
- Please don't use the earbuds in extreme temperatures
- Please don't use the product near water
- Please keep the product away from heat sources, as the heat may damage it
- Don't jam the ports such as charger port, LED port, etc.
- It is recommended to utilize the product below the maximum volume in order to protect hearing and extend the ear-buds' service life

Advisable: The earbuds may start at a 100% volume and it may need to be reduced when they are switched on at first. This can be done by using volume control on media device.

TROUBLESHOOTING

Potential Problem	Solution
If one earbud is not working	Perform the Factory Reset
If earbuds are not in connection/ scan mode	Perform the Factory Reset
If earbuds disconnect during phone call	Charge the earbuds or perform the Factory Reset
If there are other exceptions in usage	Place the earbuds back into the charging case & try using them again or perform the Factory Reset
If Touch Controls don't seem to respond	After long usage, residual stains & perspiration can affect the touch control area, please use a clean cloth to wipe those areas softly



Charging norms & Precautionary Guidelines: -	
1) Charger/Brick/Adapter	: 5V 2A
2) Cable/Wire	: Standard Cable (35 strands @0.10mm diameter/ strand)
Any other accessory can be paired up with the product as long as the specifications are as per above norms.	