



NIRVANA NEBULA



NIRVANA NEBULA

Thank you for choosing boAt NIRVANA NEBULA. Please consider this manual as your guiding map to the unparalleled shores of musical bliss. Knowledge of Bluetooth and device connectivity is essential for steering this boAt. Therefore, we strongly recommend thoroughly reading this manual. Also, you can refer to this if you face difficulties.




PACKAGE CONTENTS

- 1 1x Pair of TWS Earbuds
- 2 1x Charging Case
- 3 1x Type-C Charging Cable
- 4 1x User Manual
- 5 1x Warranty Card
- 6 1x Catalogue
- 7 3x Pairs of Additional Earmuffs
- 8 1x FAQ Card

OVERVIEW

- 1 CTC (Capacitive Touch Control) / Power Button

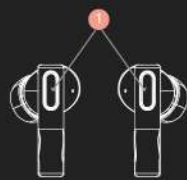

POWER ON (FIRST TIME USER):

Step 1: To switch the earbuds on (Smart Power On), simply open the lid of the charging case when the earbuds are inside. Our IWP™ (Insta Wake N' Pair) technology enables the earbuds to power on automatically, indicated by the blue LED flashing for 1 second.

Step 2: Both the earbuds will automatically pair with each other and enter into the Connection Mode with alternate blue and red LED flashes.

CONNECTION MODE

Step 3: Turn on the Bluetooth functionality on your phone/media device and scan.

Step 4: Search for 'NIRVANA NEBULA' and pair accordingly.

Congratulations! Your earbuds are now successfully connected via Bluetooth.

Note :

- Pairing mode lasts for 5 minutes. If the pairing time is missed, then you will need to reconnect the earbuds and follow the above-mentioned procedure.
- NIRVANA NEBULA remembers previously connected devices; once switched on, the earbuds automatically reconnect to the previously connected devices within the working range.

MONO (SINGLE EARBUD) MODE:

Step 1: Please note that both the earbuds can be used in Mono mode. Use Smart Power On for switching on the desired earbud.

Step 2: The selected earbud will automatically enter the connection mode.

Step 3: Turn on Bluetooth on your phone/media device and search for 'NIRVANA NEBULA' to connect.

Notes:

- To switch to Stereo mode, simply take out the other earbud from the case. It will automatically power on and pair with the previously selected earbud, hence enabling Stereo usage.
- Please note that you cannot activate Dolby Audio, ANC, and Ambient modes during single earbud usage.
- Wear detection features for calls and ANC is applicable only in Stereo Mode.

QUICK GLANCE AT THE FUNCTIONALITIES:

- 2 Seconds Long touch the right earbud CTC for 2 seconds to toggle between Normal/ Ambient/ ANC modes manually.
- 2 Seconds Long touch the left earbud CTC for 2 seconds to switch between Dolby Audio and boAt Signature Sound modes.
- 10 Seconds Long touch the charging case reset button for 10 seconds to perform factory reset.
- 4 Times Tap the left earbud CTC for 4 times to trigger the voice assistant.

BASIC FUNCTIONS:

• **Answer Calls:** Plug both earbuds into your ears to answer incoming calls. ANC mode is activated automatically. Once the call ends, the earbuds switch from ANC mode back to the previous operational mode.

OR

Single tap the CTC on either earbud to answer incoming calls.

• **Hang Up/ Reject Calls:** Double tap the CTC on either earbud to reject incoming calls or end an ongoing call.

• **Play/Pause Music:** Simply plug in the earbuds inside your ears to start playback and remove them to pause music.

OR

Single tap the CTC on either earbud to play or pause a track.

• **Next Track:** When playing music, double tap the right earbud CTC to skip to the next song.

• **Previous Track:** When playing music, double tap the left earbud CTC to return to the previous song.

• **Dual EQ Modes:** Long press the left earbud CTC for 2 seconds to switch between boAt Signature Sound & Dolby Audio modes. By default, the Dolby Audio mode remains active.

• **In-Ear Detection in ANC Mode:** Insert both earbuds inside your ears and remove them to switch between ANC and Normal modes respectively.

Note: Playback in the earbuds is automatically paused after accepting an incoming call.

MULTI-DEVICE CONNECTIVITY:

Step 1: Switch on the Bluetooth on your first phone/media device and search for 'NIRVANA NEBULA'. After the selection is done, the earbuds are paired with your phone/media device.

Step 2: Turn off the Bluetooth function of your first phone/media device. The earbuds are ready to be paired again.

Step 3: Now switch on the Bluetooth function on your second phone/media device. Scan and select 'NIRVANA NEBULA' to connect.

Step 4: Switch on the Bluetooth of the first phone/media device again and select 'NIRVANA NEBULA' from the list of available devices for pairing. The earbuds are now reconnected to the first phone/media device.

Congratulations! Your earbuds are now connected to both your devices

CHARGING THE EARBUDS:

Step 1: Please insert the earbuds back inside the charging case in the correct orientation.

Earbuds Battery Level	LED Indication
Less than 30%	Red LED blinks 3 times when the case lid is opened
30%-100%	Blue LED blinks for 1 second when the case lid is opened

Note:

- Before using the earbuds for the first time, it is recommended to fully charge them. Also, please keep the lid of the charging case closed while charging.
- Use only authorized/company chargers for the product as unauthorized ones may cause damage and invalidate the warranty.
- The earbuds cannot be utilized for the purpose of listening while they are being charged.

CHARGING THE CASE:

Step: To charge the case, plug one end of the provided cable into the case and connect the other end to a computer, wall adapter, power bank etc.

Case Remaining Battery	Charging State	Normal (Non-Charging) State
Less than 30%	Red LED flashes 3 times rapidly to indicate the battery level and then blinks slowly	Red LED blinks 3 times on opening the case lid
30%-70%	Blue LED flashes 3 times rapidly to indicate the battery level and then blinks slowly	Blue LED blinks 3 times on opening the case lid
More than 70%	Green LED flashes 3 times rapidly to indicate the battery level and then blinks slowly	Green LED blinks 3 times on opening the case lid
Fully Charged (100%)	Green LED remains steady	Green LED flashes for 3 seconds and then powers off

Case LED indication when the earbuds are charging within the case:

Earbuds Status	Case LED State (when the lid is closed)
Left earbud on charging	Cyan LED flashes for 5 seconds
Right earbud on charging	Purple LED flashes for 5 seconds
Fully charged (100%)	Blue LED flashes for 5 seconds

Note: Earbuds charging status will be shown after the case charge status.

VOICE ASSISTANT:

Step 1: Tap the left earbud CTC for 4 times to activate the smart voice assistant.

Step 2: The respective voice assistant screen pops up and you can speak your commands easily.

Tips: You can try out the following commands:

- What is the weather?
- Play a song
- Set a reminder

Note: If the voice assistant is not triggered, then the functionality needs to be first enabled via your media device settings.

AMBIENT, ANC, AND NORMAL (AMBIENT AND ANC OFF) MODES:

Long press the CTC on the right earbud for 2 seconds to toggle between Normal, Ambient and ANC modes of music. Ambient mode is for transparency towards the audible surroundings, while ANC mode cancels out the external noise up to 35 dB so that you can immerse fully in your playlists.

Note:

- By default, the Normal mode stays active.
- The operational cycle is Normal Mode (Ambient and ANC OFF) --> Ambient Mode --> ANC Mode

DOLBY AUDIO AND boAt SIGNATURE SOUND:

Long press the left earbud CTC for 2 seconds to switch between Dolby Audio and boAt Signature Sound. By default, Dolby Audio remains active.

BOAT ADAPTIVE EQ:

Adaptive EQ in these earbuds generates custom profiles tailored to your hearing level. As a result, you can hear unintelligible dialogue and sound elements without straining as the audio adapts to your profile automatically. The EQ level can be set up on the boAt Hearables app, attuned to your listening comfort.

BEAST™ MODE:

Triple tap the left CTC to switch to low-latency gaming mode, also known as the BEAST™ Mode. Tap the left CTC 3 times once again, to turn it off and return to standard music mode.

Made for the Gamers - By Gamers, BEAST™ Mode reduces the latency significantly and improves the overall gaming experience.

AI ENX™ TECH:

Our AI-powered ENX™ tech algorithm cancels out the background noise so that you can be heard crystal clear on voice calls. You don't have to activate AI ENX™ as the 6x mics are equipped with the same and activated by default.

Deliver your voice without interruptions everywhere – traffic, railway stations, airports, workspace, literally wherever you are!

SMART POWER OFF:

Step 1: After usage, remove both the earbuds from your ears.

Step 2: Place the earbuds back into the charging case in correct orientation and close the lid.

Step 3: The earbuds will automatically switch off (and enter into charging mode).

FACTORY RESET:

Perform the Factory Reset in case you face any difficulty while operating your NIRVANA NEBULA.

Note: Before performing reset, clear "NIRVANA NEBULA" from pairing device history by forgetting the device.

Step 1: Open the case lid and place the earbuds inside in the correct orientation.

Step 2: Long press the charging case reset button for 10 seconds to perform factory reset. Green LED blink 5 times on case, Red LED blinks for 5 times rapidly on the earbuds and the charging case to indicate successful factory reset.

Step 3: Close the lid and re-open it again after 5 seconds.

Step 4: Take out the earbuds from the charging case and perform a fresh connection.

Congratulations! Your NIRVANA NEBULA earbuds have been reset.



Reset Button

TROUBLESHOOTING:

Potential Problem	Solution
If one earbud is not working	Perform the Factory Reset
If the earbuds are not in connection/scan mode	Perform the Factory Reset
If earbuds disconnect during phone call	Charge the earbuds or perform the Factory Reset
If there are other exceptions in usage	Place the earbuds back into the charging case and try using them again or perform the Factory Reset
If the touch controls don't perspiration seem to respond	After long usage, residual stains and can affect the touch control area, please use a clean cloth to wipe softly
If the left and right earbuds unpair with each other due to any anomaly	Perform the Factory Reset.

SPECIFICATIONS

Headphone Type	ANC TWS Earbuds
Bluetooth Version	v5.3
Water Resistance	IPX5
IWP™ Technology	Yes
ANC	Up to 35 dB
AI ENX™ Equipped Microphones	6
Latency with BEAST™ Mode	60 ms
Music Playtime	Up to 8 hrs per charge, Up to 42 hrs additional Case playtime (Non-ANC mode) at 60% volume; Up to 7 hrs 45 minutes per charge, Up to 42 hrs additional Case playtime (ANC mode) at 60% volume
Charging Technology	ASAP™ Charge(5-min charge = 60 mins playtime)
Transmission Range	10 m
Driver Size	11 mm*2
Codec Support	SBC and AAC
Frequency	20 Hz-20 kHz
Battery	500 mAh (Case); 45 mAh*2 (Earbuds)
Charging Time	1.5 hours (Case); 60 mins (Earbuds)
Charging Interface	USB Type-C

Charging norms & Precautionary Guidelines: -	
1) Charger/Brick/Adapter	5V 2A
2) Cable/Wire	Standard Cable (35 strands @0.10mm diameter/ strand)

Note: Any other accessory can be used to charge the product as long as the above-mentioned norms are followed.

Note: Any other accessory can be used to charge the product as long as the above-mentioned norms are followed.

SAFETY CAUTION:

- Please follow the instructions to operate the earbuds smoothly.
- Please don't use the earbuds in extreme temperatures.
- Please don't use the product in water.
- Please keep the product away from heat sources, as the heat may damage it.
- Please don't jam the ports, such as the charger port, LED port, etc.
- It is recommended to utilize the product below the maximum volume to protect your hearing and extend the service life of the earbuds.

RECOMMENDATION:

- The earbuds may start at 100% volume level when first switched on. You can adjust the volume to your preferred level using the volume controls on your phone/media device.

HEARABLES APPLICATION:



1. boAt Adaptive EQ
 2. Self Diagnostics: One tap fix for any errors
 3. Over-the-Air Updates
 4. Connection & disconnection status
 5. Battery Level Monitor
 6. Button Customization Control
- Exciting features coming soon, stay tuned
*Only compatible with Android devices