



Thank you for choosing CPPlus ezykam.

For further assistance, you can reach us via ezycare@cpplusworld.com

**** Please read the instruction carefully before using the product ****


Voice control works with Alexa or Google Assistant

- You can control your camera using just your voice with Alexa or Google Assistant-enabled devices.



*Alexa capability only include streaming video and not controlling the light.

Installation Instruction

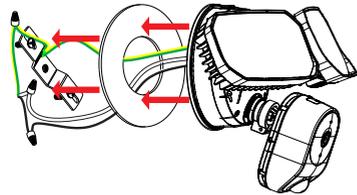


Power cord colors respectively


1. Black: live wire (L)
2. White: zero wire (N)
3. Yellow + Green: ground wire (E)

Bracket installation


- 1 There is a junction box on the wall
- 2 Mounting brackets

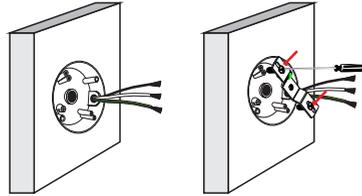


The dustproof pad is attached to the bottom of the product

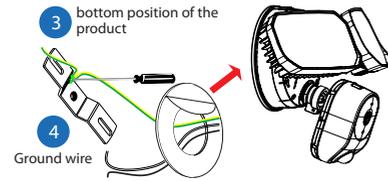

Power cord connection diagram

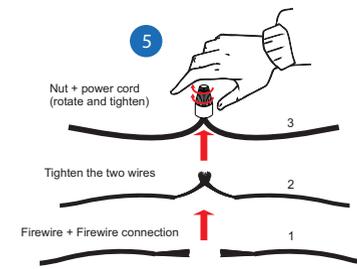

Tighten the screw

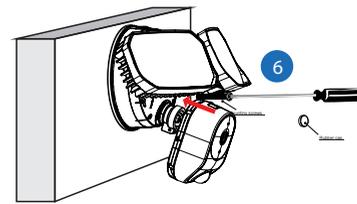

System Requirements

- Smartphone running iOS® 9.0 or higher or Android™ 5.0 or higher
- Existing Wi-Fi Network with internet connection

Technical Specifications

- Camera: up to 4MP (2560x1440) at 20frames / sec. H.265 encoding
- Field of view: 3.6MM 85.9°(H) , 45.5°(V), 107 °(D)
- Audio: Internal Speaker and Microphone
- Storage: supports up to 128GB Micro SD card (not included)
- Wi-Fi: IEEE 802.11b/g/n, 2.4GHz (not compatible with 5GHz Wi-Fi networks)




Quick Operation Guide

F41A

Thank you for choosing CP PLUS ezykam. Get started using your new devices by downloading ezykam+ app, one convenient app that manages everything straight from your smart phone. Easily connect to your home Wi-Fi and control multiple devices from the touch of your fingertips


What's in the Box

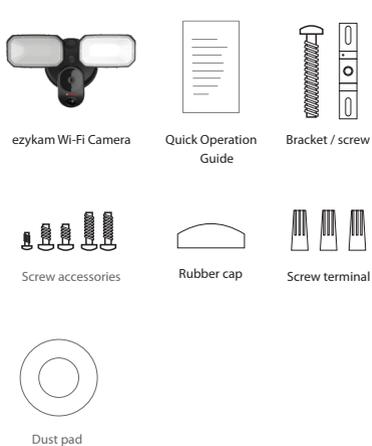


Get Ready

- Know your Wi-Fi network and password.
- Make sure your mobile device is running iOS® 9.0 or higher or Android™ 5.0 or higher.
- Make sure you're connecting to a 2.4GHz Wi-Fi network (It can't connect to 5GHz networks)

1. Download the ezykam+ app from App Store or on Google Play.

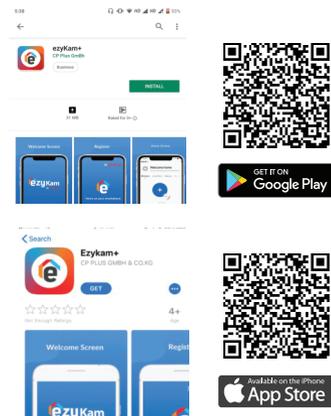


2. Register an account on your ezykam+ app.

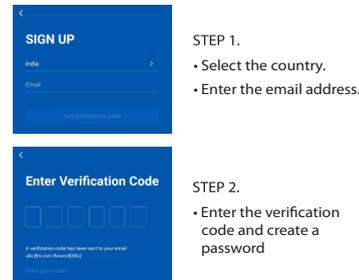

3. Plug in


How do I reset my camera?

- Use the reset pin to press the Reset Button for several seconds until the camera starts to beep.
- **Optional:** Insert Micro SD card

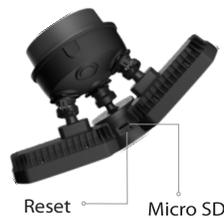

4. Add Camera

- Open ezykam+ app, click "+" on the top right corner of the "HOME" page, then select "Specific model to add".
- Make sure that the Red LED indicator is blinking and voice prompt is audible.

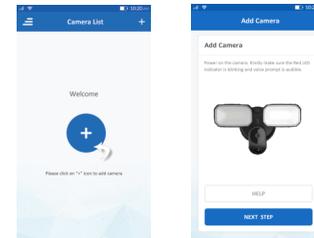


- Enter your "Wi-Fi network and password", click "CONFIRM".



- 4.0 Add Camera

- Read the instruction about "Scan the camera QR code" and click "Continue".
- Scan the QR Code on your phone with camera. Heard a voice prompt, click "Heard the beep"

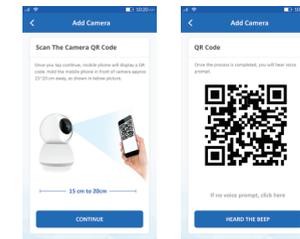

- 4.1 Add Camera

- When the indicator light on the device turn to steady blue light, the network configuration is complete.
- Please refer to the specific APP interface if there are any difference.



Frequently Asked Questions

1. Can I share camera with family and friends?
Yes, you can share your cameras with family and friends who will have access to view the camera.
2. What's the Wireless Range?
The range of your home Wi-Fi is heavily dependent on your home router and the conditions of the room. Check with your router specifications for exact range data.
3. The camera appears offline or unreachable?
Make sure you entered the correct Wi-Fi password during the Wi-Fi setup. Check whether there is any Internet connection problem. If the Wi-Fi signal is too weak, reset your Wi-Fi router and try again.
4. Cannot connect to your Wi-Fi network.
Make sure you entered the correct Wi-Fi password during the Wi-Fi setup. Check whether there are any Internet connection problems. If the Wi-Fi signal is too weak, reset your Wi-Fi router and try again.
5. How many cameras can I control?
CP Plus app can control unlimited number of cameras in unlimited amount of locations. Your router may have a limit of how many cameras can be connected to one router.