




boat

AAVANTE BAR GROOVE

RAISE THE BAR



USER MANUAL

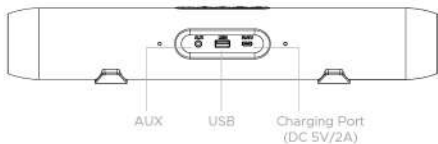

AUX/USB MODES

Turn on the soundbar and switch it to the desired mode. Connect it with the respective mode (AUX/USB) and start the playback.

CHARGING

- Connect one end of the provided charging cable to the charging input and the other end to a standard 5V/2A adapter.
- While getting charged, the LED stays red. Once the speaker gets fully charged, the LED turns off.

Charging norms & Precautionary Guidelines: -

1) Charger/Brick/Adapter	: 5V/2A
2) Cable/Wire	: Standard Cable (35 strands @0.10mm diameter/ strand)

Any other accessory can be paired up with the product as long as the specifications are as per above norms.

Thank you for choosing Aavante Bar Groove. You are now just a step away from the realm of pure audio bliss. With the Aavante Bar Groove, experience immersive, cinematic audio on a whole new level at home. Stay plugged into the sound with an array of wired connections, USB, and Bluetooth wireless technology. Bring your home to life with the boAt Aavante Bar Groove. Allow this manual to guide you through the functioning of your sound system.

Package Contains:

- 1x Wireless Soundbar
- 1x USB Type C Charging Cable
- 1x Audio Cable
- 1x User Manual
- 1x Warranty Card
- 1x Catalogue


SPECIFICATIONS

Model:	boAt AAVNATE BAR Groove
Bluetooth Version:	V5.0
Net Weight:	0.68kgs
Working Range:	10m
Driver Size:	2"×2
Supported Profiles:	A2DP, AVRCP
Frequency:	82Hz-20kHz
Input Voltage:	DC 5V/2A
Output Power:	16W RMS
Charging Time:	About 4 hours
Charging Interface	USB Type C
Playing Time:	Up to 5HRS (at 60% volume)
Battery:	2000mAh



PRODUCT OVERVIEW

 SOUNDBAR CONTROL PANEL:



- 1 - Volume Decrease/Previous Track
- 2 - Play/Pause
- 3 - Volume Increase/Next Track
- 4 - Power/Mode Button
- 5 - Mode Indicator
- 6 - Charging Indicator

'-' Volume Decrease/ Previous Track:	Short press in steps to decrease the volume in any mode. Long press in USB Bluetooth modes to return to previous song.
'+' Volume Increase/ Next Track:	Short press in steps to increase the volume in any mode. Long press in USB/Bluetooth modes to skip to next song.
⏮ Play/Pause	Short press to play/pause

SAFETY & WARNINGS

Caution

To reduce the risk of electric shock, do not dismantle the product and do not expose it to rain or moisture. The unit has no user-serviceable parts inside. Refer servicing to a qualified personnel only.

The lightning flash within an equilateral triangle is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute an electric shock to a person or persons.

Important! This symbol alerts you to read and observe important warnings and instructions on the unit or in this manual.

Notice:

This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they are under proper supervision. Children should be supervised to ensure that they do not play with the appliance.

1. To prevent possible hearing damage, do not listen at high volume levels for longer periods of time.
2. Never use the device unsupervised! Switch off the device when not in use.
3. The appliance is not intended to be operated by means of an external timer or separate remote controller system.
4. If the power supply cord is damaged, it must be replaced by the manufacturer, service agent or similarly qualified persons in order to avoid a hazard.
5. Before operating this system, check the voltage of this system to see if it is identical to the voltage of your local power supply.
6. The unit should not be impeded by covering the ventilation opening with items such as newspaper, table-cloths, curtains etc. Make sure that there are at least 20 cm of space above and at least 5 cm of space on each side of the unit.
7. The system must not be exposed to dripping or splashing. Do not place objects filled with liquids such as vases, bottles or humidifiers on the unit.
8. To prevent fire or shock hazard, do not expose this equipment to direct heat, rain, moisture or dust.
9. Do not place this unit near any water sources e.g. taps, bathtubs, washing machines or swimming pools. Ensure that you place the unit on a dry, stable surface.

Power/Mode Button	Long press the Power/Mode button for 3 seconds to turn the soundbar on/off. Single press the Mode / Power button to switch among Bluetooth, USB or AUX modes.
Mode Indicator LED (left)	Mode indications are as follows; Bluetooth mode in blue LED, USB mode in purple LED, and AUX mode in red LED.
Charging Indicator LED (right)	During charging the red LED gets lit, whereas once the charge gets complete it gets indicated by the LED getting turned off.

BLUETOOTH PAIRING

1. Turn the soundbar on. (By default, Bluetooth mode gets switched on)

2. Activate your media device's Bluetooth functionality and search for "Aavante Bar Groove" and as soon as it gets selected by you and paired, music can be played wirelessly.

Note:

• The soundbar can automatically reconnect to the last paired device whenever switched on in the BT mode.



10. Do not place this unit close to a strong magnetic field.
11. Do not place the unit on an amplifier or a receiver.
12. Do not place this unit in a damp area as the moisture will affect the life of electric components.
13. Do not attempt to clean the unit with chemical solvents as this might damage the finish. Wipe with a clean, dry or slightly damp cloth.
14. When removing the power plug from the wall outlet, always pull directly on the plug, never pull on the cord.
15. Depending on the electromagnetic waves used by a television broadcast, if a TV is turned on near this unit while it is also on, lines might appear on the LED TV. Neither this unit nor the TV is malfunctioning, if you see such lines, keep this unit away from the TV set.
16. The mains plug is used to disconnect the device, the disconnected device should remain readily operable.

IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions. Keep these instructions. Follow all instructions. Heed all warnings.
2. Do not use the device near water.
3. Clean only with a dry cloth.
4. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
5. Do not install near any heat sources such as radiators, heaters, stoves, or other devices (including amplifiers) that produce heat.
6. Do not ignore the safety measures of a polarized or grounding-type plug. A polarized plug has two blades, one wider than the other.
7. Pay special attention to the positioning of cords, plugs, and power sockets, especially the point where they exit from the unit.
8. Only use attachments/accessories specified by the manufacturer.
9. Unplug this apparatus during lightning storms or when not in use.
10. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, for example, when the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.