

boAt

# ROCKERZ

Wireless Bluetooth Headsets

Thank you for purchasing the boAt Rockerz wireless in-ear headphone and welcome to the boAt Family!

NOTE: Before using this product, please read and follow the instructions carefully in the user's guide. It will help you set up and operate your wireless in-earheadphone properly. Please keep this user guide for future reference.

The new Rockerz are equipped with the latest Bluetooth 4.1-CSR8635 chipset and 10mm drivers. Together they ensure crystal clear wireless transmission in true HD sound. Redefine your style statement with bright Neon green and black blend of the Rockerz. With its 6 hours play time, you're sure to spend a quarter of your day with these earphones. Listen to music, take calls or activate voice-controlled smartphone assistants because touching your phone to control it is too mainstream! The magnetic earbuds secure the earphones from falling and keeps them safe when not in use. Experience the redefined symbol of wireless earphones and plug into nirvana!

## SPECIFICATION

- Drivers:- 10MM
- BT Version:- V 4.1, CSR#8635
- BT Profile:- HSP, HFP, A2DP and AVRCP
- Bluetooth Range:- <10m
- Power Source:- 3.7 V, 110mAh
- Frequency Response:- 20Hz-20KHz
- Playback Time:- 6 hours
- Charging Time:- 1.5 hours
- Standby Time:- 1 0 hours
- Impedance:- Speaker 16Ω
- Sensitivity (dB):- 107±3Db
- Water proof profile:- IPX 5

## PAIRING

1. Make sure your phone, computer or music device is turned on and within 1 meter of each other.
2. Hold down the centre multifunction button for about 3 seconds until Blue LED light starts flashing quickly.
3. Activate the Bluetooth feature on your phone or device and set it to search for Bluetooth device (discoverable).
4. Select "boAt Rockerz" from the list of found devices.
5. If necessary, enter passcode "0000" to pair and connect the headphones to your device.
6. Once successfully paired, the LED light will flash Blue once every few seconds.

## PLAYBACK/CONTROLS

1. Press multifunction button Play/Pause to start and pause audio.
2. Long Press (Volume +) button to skip forward to next track. Short Press the (+) button to increase volume.
3. Long Press (Volume -) button to go back to previous track. Short Press the (-) button to decrease volume.

NOTE: The controls will not function when charging.

## CHARGING THE HEADPHONES

Use the Micro USB cable and connect headphones to your computer or adaptor device made for USB charging. A red LED indicator will turn on when the headphones are charging. The red LED light will turn off when headphones are fully charged.

## CALLS

1. To answer an incoming call, short press the centre multifunction button.
2. To end call, press the centre multifunction button for about 1 second.



## IMPORTANT SAFETY INFORMATION

### Listen Responsibly

To avoid hearing damage, make sure that the volume on your music player is turned down before connecting your in-ear headphones.

After placing in-ear headphones in/on your ears, gradually turn up the volume until you reach a comfortable listening level. Noise levels are measured in decibels (dB), exposure to any noise at or above 85 dB can cause gradual hearing loss. Monitor your use; hearing loss is a function of loudness versus time. The louder it is, the less time you can be exposed to it. The softer it is, the more time you can listen to it.

### Use Responsibly

Do not use Rockerz when it's unsafe to do so- while operating a vehicle, crossing streets, or during any activity or in an environment where your full attention to your surroundings is required.

It's dangerous to drive while wearing in-ear headphones, and in many places, illegal because it decreases your chance of hearing life-saving sounds outside of your vehicle, such as another car's horn and emergency vehicle sirens. Please avoid wearing your in-ear headphones while driving.



## SAFETY INFORMATION

### WARNING

Please read these safety warnings and cautions carefully to ensure your personal safety and prevent property damage.



### ACTIVE VOICE ASSISTANT

• Long press Multi Function button for 1.5-2 seconds to active voice assistant. (Make sure your phones voice assistant is enabled before use)

### FIRE AND ELECTRIC SHOCK HAZARD

- Do not expose your Rockerz to extremely high or low temperatures.
- Do not leave your Rockerz in direct sunlight for extended periods of time.
- Do not leave your Rockerz near open flames such as cooking burners, candles, or fireplaces.
- Do not use your Rockerz in open while it is raining, as it is water resistant, not water proof.
- Do not put water or any other liquid on Rockerz.
- Do not block any ventilation openings.

### BATTERY/CHARGER HAZARD

- Do not dispose of your Rockerz in a fire. The battery could explode causing injury or death.
- Only charge the battery in accordance with the user instructions supplied with the Rockerz.
- Do not attempt to disassemble the Rockerz charger or force open the built-in battery because this may result in electric shock.
- Do not clean the Rockerz when it is being charged. Always unplug the charger first before cleaning the Rockerz.

### CAUTION

- Do not use abrasive cleaners to clean your Rockerz because this could cause scratches and damage.
- Do not bring your Rockerz in to contact with any sharp objects because this could cause scratches and damage.
- Do not insert anything into your Rockerz unless otherwise specified in the user instructions. This may damage the internal components.
- Do not attempt to repair, modify, or disassemble your Rockerz yourself, it does not contain any user-serviceable components.
- Do not attempt to replace your Rockerz battery, it is built-in and is not changeable.
- Observe all signs and displays that require an electrical device or RF radio product to be switched in designated area.
- Dispose of the Rockerz and the Rockerz's battery in accordance with local regulations. Do not dispose of the battery with regular household waste.

CONNECT WITH US ON



boAT-lifestyle.com

facebook.com/boat.nirvana



instagram.com/boat.nirvana



twitter.com/BoatNirvana