

BLAUPUNKT

STANDALONE SOUNDBAR

POWERED BY
INTERNAL BATTERIES




Dear customer:

Thank you for choosing our product. please read all the instructions carefully and retain the manual for future use.


Enjoy it.

Presentation of the product

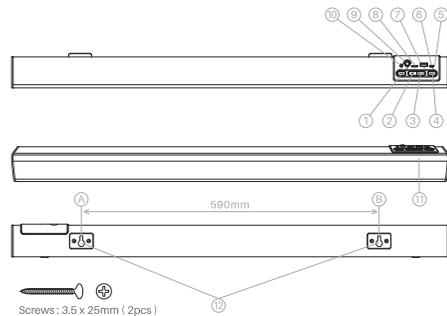

- 1 Short press : Previous track
Long press : Volume decrease
- 2 Short press: Pause / Play
Long press : TWS connection
- 3 Long press : On/Off switch
Short press mode switch : Wireless / FM / AUX / USB / TF Card mode switch
- 4 Short press : Next track
Long press : Volume increase
- 5 LED indicator
- 6 Charging port
- 7 USB flash drive slot
- 8 Micro TF card slot
- 9 Guitar & microphone input slot
- 10 AUX input
- 11 Play status indicator
- 12 Mounting holes

Remote control

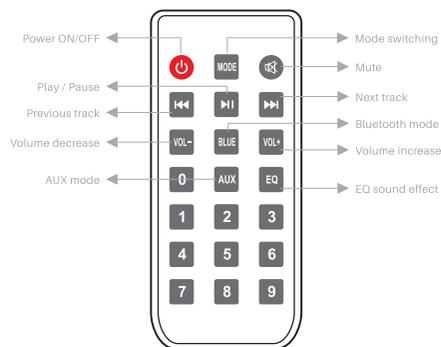

Attention

- Next/Previous track buttons will not function in AUX Mode.
- Songs select number buttons only function in the TF Card / USB Mode.
- Shortpress the power on/off button on remote control can soft-switches the soundbar, actually the soundbar is not power off. Press again the soundbar will be turned on.
- Switch the EQ sound effects by using the EQ button:
 - 1 ordinary music
 - 2 rock music
 - 3 pop music
 - 4 classical music
 - 5 jazz music
 - 6 country music

Listening to music wirelessly

Please ensure that your device (Mobile phone, tablet or other devices) is paired with the Wireless Speaker to stream music wirelessly. once it is paired, play music from your device.

Music mode	Function	Operation buttons
Playing music	Increase Volume	Long press ►► key
Playing music	Decrease Volume	Long press ◄◄ key
Playing music	Pause	Short press ► key
Pause	play	Short press ► key
Playing music	Previous track	Short press ◄◄ key
Playing music	Next track	Short press ►► key

Note: the above functions can be used in all mode, such as Wireless play mode, USB flash drive play mode, Micro TF card play mode, as well as FM radio mode. In AUX input mode, you need to control the medias through the media source devices, you need to operate with the source devices for previous / next track.

TWS connection

- Turn ON two speakers.
- Long press the ►|| button on two speakers and you will hear "Ding Dong", then the speakers are connected successfully in TWS mode.
- Search for "BLAUPUNKT SBWBWT" in your mobile phone and pair it with this device.
- Enjoy your music.
- If you don't need TWS mode, please long press the ►|| button, you will hear "Ding Dong" voice then the speakers are not in TWS mode.

Guitar & microphone input function

- You can use the delivered microphone to sing, support the use of guitar to play music, FM mode does not support the use of Guitar & microphones input function.

Stream music from TF card or USB flash drive

- Turn ON the speaker.
- Insert the micro TF card or USB flash drive preloaded with songs, into the micro TF card slot or USB flash drive slot of the speaker correspondingly, sound message "USB mode" or "TF card mode" respectively will be heard. Speaker would automatically start playing songs from the micro TF card or USB flash drive.

Listening to FM radio

- Turn ON the speaker.
- Insert the Micro USB end of the USB rechargeable cable into the charging port, and leave the other end of the cable open. USB rechargeable cable serves as FM antenna while in FM Radio mode.
- Short press key M/O to each time until it reaches FM radio mode, sound message "The Radio Mode" will be heard.
- To AUTO-SCAN the stations, long press the key ►|| for 3 seconds.
- Short press key ►|| in to pause FM playback.
- It will take few minutes to search all the stations, once all the stations are scanned, they get registered in memory, automatically.
- Short press key ◄◄ or ►► to skip selected stations.
- Long press key ◄◄ or ►► to decrease or increase the volume.

Play music through "Auxiliary" mode

- Turn ON the speaker.
- Insert one end of the auxiliary cable (included) into the auxiliary port, sound message "AUX mode" will be heard. Plug the other end to the audio device (such as phone / MP3 / Player / computer / tablet...etc)
- Select your favorite song at the source device to play.
- Long press key ◄◄ or ►► to decrease or increase the volume.

Note: media can be controlled only through the source devices, while playing music in auxiliary mode.

Tips!!

When the speaker is not in use, turn it OFF in order to save the battery power.

Troubleshooting

Problem	Possible cause	Solution
Low sound level	Source (Tablet, Mobile phone, Laptop, etc.) volume too low.	Adjust source volume
	Low battery or battery dead	Low battery or replace battery
Sound distorted	Low battery or battery nearly dead	Low battery or replace battery
	Source (Tablet, Mobile phone, Laptop.) turned off.	Turn the source on
No sound at all	Speaker turned off	Turn the speaker on
	Media paused on source	Play media from source
	There are short functional obstacles in the product	Restart the speaker
Wireless BT cannot connect	Product has been connected with other devices	Disable wireless BT of other source devices and search for wireless BT again

Specification

Wireless version	5.0 + EDR
Wireless distance	up to 10 metres
FM frequency range	87-108MHz
Unit size	L850 x W67 x H62mm
Power input	DC 5V (1A)
Built-In rechargeable battery	3.7V / 2400mAh
Micro TF card/USB flash drive	Support up to 32GB
Multiple functions	Guitar & microphone / Wireless play / FM radio / USB flash drive / Handsfree calling / Micro TF card / AUX input / TWS connection

Charging the speaker

The speaker has built-in rechargeable battery. When the battery is drained out, speaker would turn off automatically. Please recharge the battery.

Plug the Micro USB end of the USB rechargeable cable into the charging port. Plug the other end into a USB port on your computer or other devices made for USB charging. Red LED Light illuminates indicating that the device is being charged. Once the speaker is fully charged, LED Light would turn OFF.

Important reminder

- Please do not disassemble, repair or transform the product.
- This product used lithium battery, please do not discard or put it in the fire.
- Do not expose this product to rain or humidity, so as to avoid the damages to the device.
- Please do not recharge the device repeatedly, otherwise the lithium battery inside would be aging quickly.
- In the FM radio mode, please insert the charging line to the charging port, to get better radio signals and better listening experience.

Pairing the device

- Long press key M/O to power on the speaker.
- You will hear beeping sound and words "The wireless device is ready to pair". The status LED will flash blue, indicating that the device is in pairing mode.
- Set your wireless-enabled device to search for wireless devices.
- When the wireless-enabled device finds the wireless devices, select "BLAUPUNKT SBWBWT" from the list of found devices connection pairing to connect and pair.
- After a successful pairing, words "The wireless device is connected successfully" will be heard, indicating that the device is paired and the status LED will stay solid blue.

Warranty Information 1 Year*

If you have issue with our product please contact our service center Service Centre.

Authorized Service Center Blaupunkt Speakers
Address: Envent World Wide Pvt Ltd.
Khasra No- 15/15(4-16), Village Samalkha, Tehsil Vasant Vihar, New Delhi- 110037
E-Mail: wecare@blaupunktudioin
Tel. 18008434333

Please prepare & submit the following information during the telephone or e-mail notification to facilitate the process:

- Serial Number
- Date of purchase
- A copy of proof of purchase in case of warranty

Note- Important Information

Please use the original packaging or other suitable packaging to protect the unit in transit.

Care and maintenance

Read the following recommendations before using the wireless speaker, following these you will be able to enjoy the product for many years.

- Do not expose the unit to liquid, moisture or humidity to avoid the product's internal circuit being affected.
- Don't use abrasive cleaning solvents to clean the unit.
- Do not expose the unit to extremely high or low temperature as this will shorten the life of electronic devices, destroy the battery or distort certain plastic parts.
- Don't dispose of the unit in fire as it will result in an explosion.
- Don't expose the unit to contact with sharp objects as this will cause scratches and damage.
- Don't let the unit fall down onto the floor, the internal circuit might get damaged.
- Don't attempt to disassemble the unit as it may get damaged if you are not professional.

