

USER MANUAL

boAt



**AAVANTE BAR A2060 Dolby**

# USER MANUAL

Thank you for choosing the boAt Aavante Bar A2060 Dolby as the audio source for your home. You are a step away from the realm of pure audio bliss. Stay plugged into the sound with an array of wired connections, USB port, and wireless Bluetooth v5.3 technology. This 2.1 channel Dolby soundbar with a wired Subwoofer provides balanced sound for movies, music, and even video games where you can experience cinematic sound that revolves around you. We recommend that this manual be carefully read for proper usage and referred to in case of difficulties.

## WHAT'S IN THE BOX

- 1x Soundbar
- 1x Wired Subwoofer
- 1x AUX Cable
- 1x Remote Control
- 1x Power Cable
- 1x User Manual
- 1x Warranty Card
- 1x Wall-Mount Kit
- 2x AAA Batteries

## SAFETY & WARNINGS

### Caution:

To reduce the risk of electric shock, do not dismantle the product and do not expose it to rain or moisture. The unit has no user-serviceable parts inside. Please refer servicing to qualified personnel only.



The lightning flash within an equilateral triangle is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute an electric shock to a person or persons.



Important! This symbol alerts you to read and observe important warnings and instructions on the unit or in this manual.

### Notice:

This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

1. To prevent possible hearing damage, do not listen at high volume levels for longer periods of time.
2. Never use the device unsupervised! Switch off the device when not in use.
3. The appliance is not intended to be operated by means of an external timer or separate remote controller system.
4. If the power supply cord is damaged, it must be replaced by the manufacturer, service agent or similarly qualified persons to avoid a hazard.
5. Before operating this system, check the voltage of this system to see if it is identical to the voltage of your local power supply.
6. The unit should not be impeded by covering the ventilation opening with items such as newspaper, tablecloths, curtains etc. Make sure that there is at least 20 cm of space above and at least 5 cm of space on each side of the unit.
7. The system must not be exposed to dripping or splashing. Do not place objects filled with liquids such as vases, bottles, or humidifiers on the unit.
8. To prevent fire or shock hazard, do not expose this equipment to direct heat, rain, moisture, or dust.
9. Do not place this unit near any water sources e.g. taps, bathtubs, washing machines or swimming pools. Ensure that you place the unit on a dry, stable surface.

10. Do not place this unit close to a strong magnetic field.
11. Do not place the unit on an amplifier or a receiver.
12. Do not place this unit in a damp area as the moisture will affect the life of electric components.
13. Do not attempt to clean the unit with chemical solvents as this might damage the finish. Wipe with a clean, dry, or slightly damp cloth.
14. When removing the power plug from the wall outlet, always pull directly on the plug, never pull on the cord.
15. Depending on the electromagnetic waves used by a television broadcast, if a TV is turned on near this unit while it is also on, lines might appear on the LED TV. Neither this unit nor the TV is malfunctioning. If you see such lines, keep this unit away from the TV set.
16. The mains plug is used to disconnect the device, the disconnected device should remain readily operable.

## IMPORTANT SAFETY INSTRUCTIONS

1. Read these instructions. Keep these instructions. Follow all instructions. Heed all warnings.
2. Do not use this apparatus near water.
3. Clean only with dry cloth.
4. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
5. Do not install near any heat sources such as radiators, heaters, stoves, or other apparatus (including amplifiers) that produce heat.
6. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles or at the point where they exit from the apparatus.
7. Only use attachments/accessories specified by the manufacturer.
8. Unplug this apparatus during lightning storms or when unused for long periods of time.
9. Refer all servicing to qualified service personal. Servicing is required when the apparatus has been damage in any way, for example, when the power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
10. The AC plug is used to disconnect the device, the disconnected device should remain readily operable. In order to disconnect the apparatus from the AC power completely, the AC plug must be removed from the AC outlet completely.

 
 
## UNPACKING AND SET UP

- Remove the soundbar from the carton and remove all packing material from the soundbar. Save the packing material, if possible, in case the soundbar ever needs to be serviced or transported. The original carton and packing material are the only safe way to pack your soundbar to protect it from damage in transit.
- Remove any descriptive labels or stickers on the front or top of the cabinet. Do not remove any labels or stickers from the back or bottom of the cabinet.
- Place your soundbar on a level surface such as a table, desk, or shelf, convenient to an AC outlet, out of direct sunlight, and away from sources of excess heat, dirt, dust, moisture, humidity, or vibration.
- Unwind the line cord connecting the AC adapter and extend it to its full length.

## INSTALLATION - FREE STANDING




This soundbar can sit free-standing on a surface, or it can be mounted to a wall.

- Place the soundbar horizontally on a flat surface such as a TV unit or shelf and align it centrally with the TV screen.
- Allow some space between the speaker and the wall.
- Don't place it inside a cabinet or a walled shelf. Follow this guidance for the best sound output and good airflow around the soundbar.

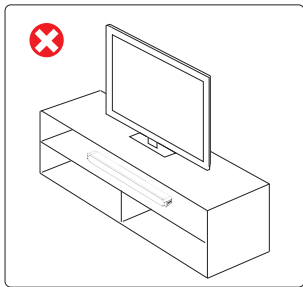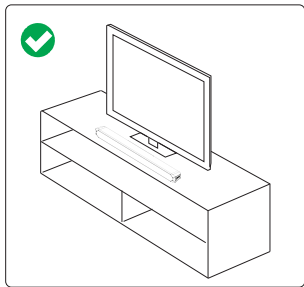

# CONTROLS AND CONNECTIONS

   
Get to know your soundbar:

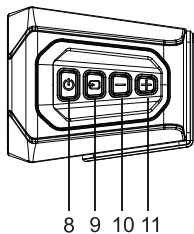



- 1. DISPLAY
- 2. SUB OUT
- 3. USB
- 4. AUX
- 5. OPTICAL
- 6. HDMI(ARC)

 
- 7. AC IN
- 8. STANDBY/POWER
- 9. INPUT
- 10. VOL-
- 11. VOL+

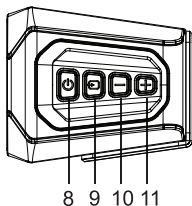**Buttons on the Soundbar:**



Standby/Power		Standby mode to power on/off
Input		Input mode (AUX/USB/HDMI(ARC)/OPTICAL)
Volume Button	-	Decrease the volume
Volume Button	+	Increase the volume

## PORTS ON THE SOUNDBAR:

 

SUB OUT (Subwoofer Speaker Output)	Connect to the wired subwoofer
USB Port	Connect the USB flash drive to the USB port on the soundbar
AUX	Auxiliary Audio input from Mp3/Phone/set-top box devices.
Optical	Connect to an optical audio output on TV or digital devices.
HDMI TV(ARC)	Connect to HDMI (ARC)
AC IN (110-240V 50/60 Hz)	Connect to power supply

## REMOTE CONTROL BATTERY SETUP AND REPLACEMENT

**Please insert the batteries as shown below-**

 
**Step 1:** Remove the battery compartment cover.

**Step 2:** Insert two AAA batteries according to the polarity markings (+ / -) inside the compartment. Make sure the batteries are correctly aligned and properly pushed into place.

**Step 3:** Close the battery compartment.

### **Precautions When Using Batteries:**

- Do not use old and new batteries together.
- The batteries must not be exposed to excessive heat such as sunshine, fire etc.

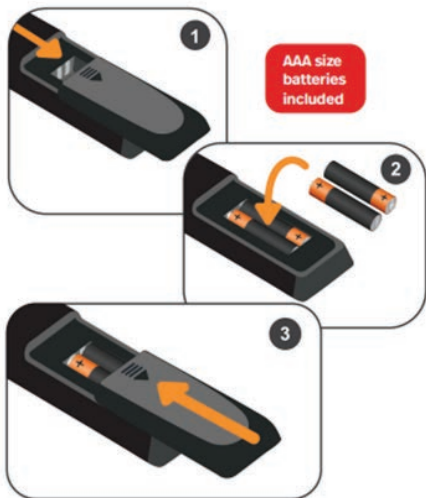

- Do not use different types of batteries together.
- Install the batteries correctly as per the polarity markings to prevent battery leakage.
- Remove the batteries from the remote if you do not intend to use it for a long time.
- When discarding used batteries, follow the guidelines for recycling and disposal of batteries that apply in your local area.
- Keep batteries away from children and pets.


### **Operating range of the remote control**

 - When the unit is mounted on a wall, point the remote control at the remote-control sensor on the panel. The provided Remote Control allows the unit to be operated from a distance.
- Even if the Remote Control is operated within the effective range of 26.2 feet (8m), remote control operation may be impossible if there are any obstacles between the unit and the remote control.
- If the Remote Control is operated near other products which generate infrared rays, or if other remote-control device using infrared rays are used near the unit, it may operate incorrectly. Conversely, the other products may operate incorrectly.






# REMOTE CONTROL OVERVIEW

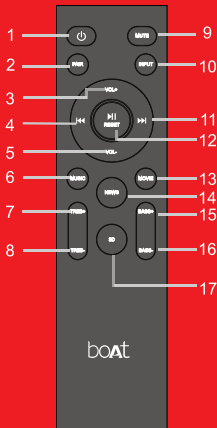1. Power Button : Standby mode for power on/off.
2. PAIR : Connect or disconnect to the pairing device.  
(Press the button more than 2 seconds).
3. Volume+ : Master volume up
4. Pre button : Previous program (Only works in USB & BT modes)
5. Volume- : Master volume down
6. MUSIC : Select the Music EQ mode
7. TR+ : Treble volume up
8. TR- : Treble volume down
9. MUTE: Mute mode
10. INPUT: Input modes (AUX/USB/HDMI(ARC)/OPT/BT)
11. Next button : Next program (Only works in USB and BT modes)
12. Play/Pause (Only works in USB and BT modes)
12. Reset : Press and hold the button for more than 2 seconds to reset all functions to the default setup.
13. MOVIE : Select the Movie EQ mode
14. NEWS : Select the News EQ mode
15. Bass+ : Bass volume up
16. Bass- : Bass volume down
17. 3D : Select the 3D EQ mode



## GENERAL OPERATION

Function	Action
Turn the soundbar ON	Press the  button on the soundbar or press the (Power)  button on the remote control to switch the soundbar on. The default input mode will appear on the display after being switched on.
Turn the soundbar OFF	Short press the  button on the remote control or unplug from the wall outlet to switch the soundbar off.
Change the input source/mode	When the soundbar is on, press the INPUT button on the remote repeatedly to change the input source.
Increase/decrease the volume	Press the + / - buttons on the soundbar or the VOL + / VOL - buttons on the remote control to adjust the volume level

## INPUT MODES:

Mode	Description
HDMI (ARC)/Optical	Audio from TV (via HDMI ARC port or OPTICAL jack)
Bluetooth	Sound from a Bluetooth-connected device
USB	Sound from a USB storage device
AUX	Sound from a connected device (via AUX port)

## AUTO STANDBY

1. The unit will automatically turn to standby mode when no audio input is received for 20 minutes. The soundbar will wake up from standby mode when any button is pressed, or source input is received.
2. If the TV or the external unit is disconnected, switch off the soundbar. To switch the unit off completely, remove the mains plug from the mains socket. Please turn the unit off completely to save energy when not in use.

## BLUETOOTH PAIRING

Connect the Soundbar to your Bluetooth device (such as an iPad, iPhone, iPod touch, Android phone, or laptop), and then you can listen to the audio files stored on the device through your Soundbar speakers.

1. Turn on the soundbar and short press the INPUT button repeatedly on the unit or the INPUT button on the remote control to switch the soundbar to Bluetooth mode. The display on the soundbar will indicate Bluetooth pairing mode.
2. Switch on the Bluetooth on the media device, search for and select “Aavante Bar A2060 Dolby” on your Bluetooth list to pair. If prompted for a password, please use “0000”.
3. Wait until you hear a sound prompt from the soundbar. The LED display on the soundbar will stay ON.

### **Note:**

- *If your pairing device is switched off or manually disconnected, the soundbar will automatically enter pairing mode.*
- *The connection to the device will be re-established once you re-enter wireless range (8-10 m).*
- *To connect to other devices, repeat the above pairing steps.*
- *There is no automatic shutdown in pairing mode. The soundbar will remain in pairing mode even if no device is paired, so switch off if not in use.*

## PLAYING VIA USB PORT:

The soundbar automatically switches to USB input mode with the LED display 'US' when a USB flash drive is inserted (this mode isn't selectable on the soundbar or remote control unless a USB flash drive is connected).

1. When a USB flash drive is inserted and soundbar is powered on, press the INPUT key on remote control or the STANDBY button on soundbar to switch to USB input mode (in case it doesn't change automatically) with LED display lighting up "US", and music in the USB will be automatically played.
2. This mode cannot be used on the soundbar until a USB flash drive is connected.
3. Ensure that your USB flash drive contains MP3 audio files (other file types are not supported.)
4. Connect the USB flash drive to the USB port on the soundbar or by USB adapter (or your own USB extension cable connected to the USB port) and the music will be played automatically.
5. Press the VOL +/- buttons to adjust the volume to your desired level.

## PLAYING VIA AUX MODE:

1. Firstly connect the soundbar to your PC, laptop, smart-phone, TV, or other audio devices by using an AUX cable. Use a 3.5mm to 3.5mm audio cable to connect the PC, tablet, smartphone, TV's headphone socket to the AUX socket on the soundbar.

Make sure that these devices have both AUX IN and AUX OUT terminals.

2. Then press the STANDBY button or INPUT button on remote control to switch the soundbar to Aux mode. Once the soundbar is connected in Aux mode, the screen will display "AUX", and the music on your connected device will play. Playback can only be controlled on your connected device.

***Note: For some computers, you may need to access the audio control panel to manually set the soundbar as per the steps mentioned above.***

## PLAYING VIA OPTICAL MODE:

Using an optical cable, connect the OPTICAL connector on your Soundbar (Optical digital input) to the OPTICAL OUT connector on the TV or other device. The TV or other device must have an optical digital output.

-Remove the cap of optical cable (keep the cap for the future use); check the direction of the plug. Connect the soundbar and TV with the optical cable.

-Use this mode to play music from a TV with optical digital output on the soundbar. In TV sound settings, select the soundbar optical connection (output for audio). When the optical cable is connected, the TV audio output is set to Dolby or Auto mode.

-Use the supplied optical cable to make the connection as follows:

1. Connect the optical cable to the optical digital output of your TV.
2. Connect the optical cable to the optical digital input of your soundbar.
3. Switch on the TV set and the soundbar. Set the connected TV to "Dolby or Auto mode".
4. Start playing on the TV.
5. Press "INPUT" button on the remote control or "STANDBY" button on the soundbar to select OPTICAL mode.
6. Use the volume buttons to adjust the volume to your requirements.
7. You can also change the audio settings by using the relevant buttons on the remote control.

### **Note:**

1. *When connecting a device such as a TV/Set-top box/ DVD/ game console with optical cable, set the audio output mode of the device to Dolby or Auto mode (digital optical output).*
2. *Do not bend the optical cable, otherwise the cable inside will be damaged.*

## PLAYING VIA HDMI TV (ARC) MODE:

### Connect to HDMI TV (ARC) Socket

Some 4K HDR TVs require the HDMI input or picture settings to be set for HDR content reception. For further setup details on HDR display, please refer to the instruction manual of your TV.

1. The soundbar supports HDMI (ARC) with audio return channel (ARC). You can hear the TV audio through your soundbar by using a single HDMI (ARC) cable only if your TV is ARC compliant.
2. Using a high-speed HDMI (ARC) cable, connect the HDMI (ARC) connector on the soundbar to the HDMI (ARC) connector on the TV. The HDMI (ARC) connector on the TV might be labelled differently. For details, see the user manual of your TV.
3. When HDMI (ARC) is connected, TV sound setting in “sound output” mode should be set as <external Dolby or Auto mode>. In addition, digital audio output mode should be set as <automatic> or <decoded output as Dolby>. When the HDMI (ARC) cable is connected, the TV digital audio output is set as Dolby or Auto mode. Then start playing music on the TV.
4. Press “INPUT” button on the remote control or “STANDBY” button on soundbar to select HDMI (ARC) mode.
5. Use the volume buttons to adjust the volume to your requirements.
6. You can also change the audio settings by using the relevant buttons on the remote control.

### **Note:**

1. *When connecting a device such as a TV/Set-top box/DVD/ game console with HDMI (ARC) cable, set the audio output mode of the device to Dolby or Auto mode <digital HDMI (ARC) output>.*
2. *The TV is connected to a HDMI (ARC) port with soundbar. Different TVs might have different setup menus, but the steps remain the same.*
3. *If you need to connect set-top box, please first connect the HDMI (ARC) connector and pair to the soundbar. Then connect the set-top box.*

 
## SPECIFICATIONS:

Model Name	boAt Aavante Bar A2060 Dolby
Bluetooth Version:	v5.3
Net Weight:	5.85kg
Working Range:	8-10m
Driver Size:	2.25"*4 SB + 6.5" SW
Working Voltage	AC 110-240V , 50/60Hz
Frequency:	20Hz-20Khz
Output Power:	160 W RMS
Compatibility	USB 2.0 /BT v5.3 /AUX/Optical/HDMI(ARC)


# INSTALLATION – WALL MOUNT

## Warnings:

- If you don't feel confident to correctly and securely wall-mount the soundbar, seek the assistance of an experienced person or professional.
- Install the speaker on a vertical, secure, reinforced area of the wall.
- For plaster walls, it is recommended to screw into wall studs for greater security.
- For optimum performance, allow at least 25mm/1" distance between the soundbar and the TV.

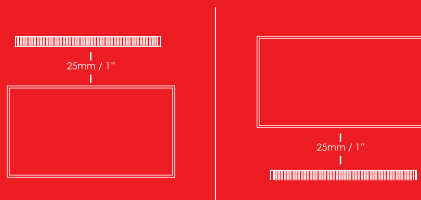

 Wall mounting instructions are as follows:

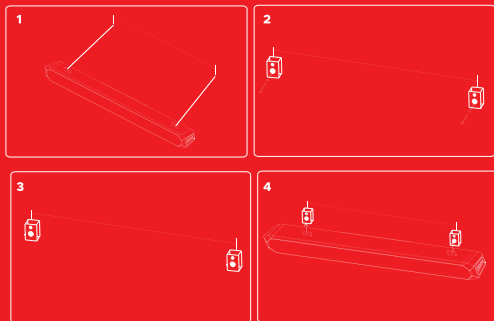

1. Make 2 holes on the wall with distance same as the wall bracket on the soundbar.
2. Put the plastic anchors onto the wall and secure the screws to the plastic clip, do not tighten the screws all the way to make sure and leave some space.
3. Attach the 2 EVA pads onto the wall mount bracket. This will make sure that there is enough room between the wall and the soundbar outlet, minimum 15mm.
4. Once the screws securely fastened, hang the soundbar over by inserting the screws onto the wall mount bracket.