



## TITANIUM MICRO CRIMPER

- Professional silver titanium plate with crimper function
- Titanium plates with Nano Titanium Technology emit gentle, far-infrared heat that is kinder to hair, leaving hair soft and shiny
- Professional PTC Heater for immediate heat up and rapid heat recovery
- Adjustable temperature dial settings up to 230 °C for all hair types
- Crimper plates allows you to make hair with crimper effects
- Salon length swivel cord

## highlighted features

- Connect the appliance to the right power supply by putting the plug into the power point.
- To turn the iron on, push the power switch ON.
- When the iron is turned on, a red light will illuminate to indicate the iron is on. During heating up process, a green light will flash. When the desired temperature is reached, the green light will stop flash and the straightener is ready for styling.
- During styling, the green light will turn on and off as the temperature rises and lowers.
- There is a temperature dial, you can select the desired temperature setting depend on the hair condition.
- When using for the first time, begin with the lowest settings.
- Separate a 2-inch section of hair, gently place the hair between the crimper plates, then squeeze the handles together and glide slowly through hair beginning at the roots, slightly flip in/out the ends.
- To remove hair from the straightener, simply release pressure and allow the hair to gently slip out from the smoothing plates.
- Allow hair to cool before combing or brushing.
- Repeat the process until you have achieved the look you desire.
- To turn the iron off, push the power switch OFF.
- Wait for the appliance to cool before storing.

## operation instructions

When using electrical appliances, especially when children are present, please always follow the basic safety precautions as listed below:

READ ALL INSTRUCTIONS BEFORE USING

KEEP THE UNIT AWAY FROM WATER

**DANGER:**

- As for most electrical appliance, electrical parts are electrically live even if the unit is turned off.

**For reducing fatal risk by electrocution:**

- Always unplug the appliance immediately after using.
- Do not use while bathing/showering.
- Do not place or store the appliance where it can fall or be pulled into a water tub or sink.
- Do not place in or drop into water or other liquid.
- If the appliance falls into water, unplug it immediately.
- Do not reach into water.

**WARNING:**

To reduce the risk of burns, electrocution, fire or injury to any person:

- User should not leave an appliance unattended when it is plugged in.
- Extra care should be paid when appliance is used by, on, or near children or individuals with certain disabilities.
- Do not use any attachments which are not provided by the manufacturer, Follow all instructions mentioned in this manual when using.
- Never use the appliance when cord/plug is damaged. Also if the appliance does not work properly or is dropped into water/fluid, do not use it or/and return the appliance to a service center for examination and repair.
- Keep the power cord away from heated surfaces. Do not wrap the cord around the appliance.
- Do not use outdoor or/and never use the appliance together with any aerosol (spray) product.
- Never use this appliance while oxygen is administered.
- Do not let eyes and bare skin touch the heated plates when using. Always use the handle.
- Do not reset the heated parts directly on any surface during use.
- Never drop or insert any object into any opening on the appliance.
- Attachments become hot during use. Let them cool before handling.
- Never use while sleeping.
- Do not use an extension cord with this appliance.

important  
safety  
instructions

- 
- This warranty is valid for one year from the date of purchase.
  - The product is replaceable within three months, or repaired within one year of the original purchase date if it is found to be defective in material or workmanship.
  - Please save your receipt as proof of date of purchase.
  - The defective product must be returned in its original packing and along with this warranty, to the original place of purchase, along with proof of purchase.
  - This warranty does not apply to the product showing abuse, damage, or to parts which in our judgment are not defective, nor does it extends to irons which have been

warranty

tampered with, altered or repaired other than by the manufacturer or its authorised agents.

- This warranty does not cover items damaged by normal wear and tear including chips, scratches, abrasions, discolouring or fading; use of improper voltage and current; negligence, misuse, disassembly and dropping.
- Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

warranty

- 
- This guarantee does not confer any rights other than those expressly set out above.
  - Nothing in the guarantee excludes, restricts or otherwise affects your statutory rights.

liability