 


FOXSKY™

TV USER'S MANUAL

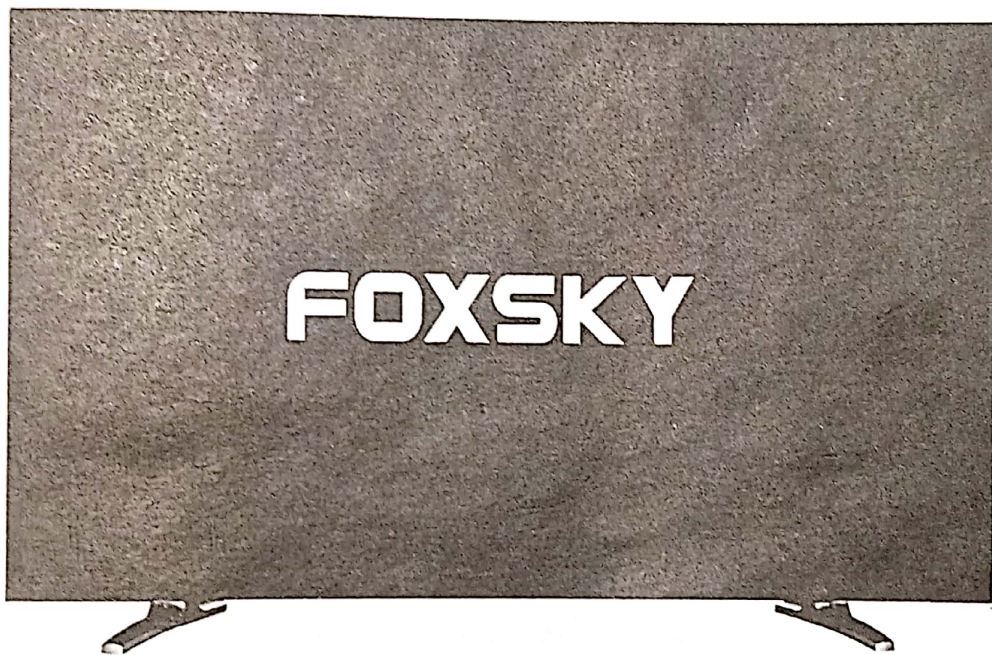

LED TV



Contents

Safety	1
Remote Controller	3
OSD Menu Operation	4
Channel	5
Picture	7
Time	9
Option	9
Media	10
Troubleshooting	12

- Read these instructions - All the safety and operating instructions should be read before this product is operated.
- Keep these instructions - The safety and operating instruction should be retained for future reference. Heed all warnings- All warnings on the appliance and in the operating instruction should be adhered to.
- Follow all instructions - All operating and use instructions should be followed.
- Do not use this apparatus near water – The appliance should not be used near water or moisture - for example, in a wet basement or near a swimming pool, and the like.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacture's instructions.
- Do not install near any heat source such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
- Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. WHEN a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug the apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Please keep the unit in a well- ventilated environment.
- **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that object filled with liquids, such as vases, shall not be placed on apparatus.
- **WARNING:** The wall socket plug is used as disconnect device, the disconnect device shall remain readily operable.
- **WARNING:** The batteries shall not be exposed to excessive heat such as sunshine, fire or the like.



- THIS lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non- insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.
- To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel.
- The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.
- This equipment is a Class II or double insulated electrical appliance. It does not require a grounded connection.

To ensure reliable and safe operation of this equipment, please read carefully all the instruction in this user guide, especially the safety information below:

 
Electrical safety

- The TV set should only be connected to a main power supply with voltage that matches the label at the rear of the product.
- To prevent overload, do not share the same power supply socket with too many other electronic components.
- Do not place any connecting wires where they may be stepped on or tripped over.
- Do not place heavy items on them, which may damage the leads.
- Hold the main plug, not the wires, when removing from a socket.
- During a thunderstorm or when not using the television for long periods, turn off the power switch on the back of the television.
- Do not allow water or moisture to enter the TV or power adapter. DO not use in wet, moist areas, such as bathrooms, steamy kitchens or near swimming pools.
- Pull the plug out immediately, and seek professional help if the main plug or cable is damaged, liquid has spilt onto the set, if accidentally exposed to water or moisture, if anything accidentally penetrates the ventilation slots or if the set does not work normally.
- Do not remove the safety covers. There are no user serviceable parts inside. Trying to service the unit yourself is dangerous and may invalidate the product's warranty. Only qualified personnel should service this apparatus.
- To avoid battery leakage, remove exhausted batteries from the remote control, or when not using for a long period.
- Do not break open or throw exhausted batteries in a fire.

Physical safety

- Do not block ventilation slots in the back cover. You may place the TV in a cabinet, but ensure at least 5 cm (2") clearance all around.
- Do not tap or shake the TV screen, this may damage the internal circuits. Take good care of the remote control.
- To clean the TV use a soft dry cloth. Do not use solvents or petroleum based fluids.
- Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding- type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong, the wide blade, or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at plugs.
- Unplug the apparatus during lightning storms or when unused for long periods.
- Refer all servicing to a qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled, or objects have fallen into the apparatus, has been exposed to rain or moisture, does not operate normally, or has been dropped.

Remote Controller

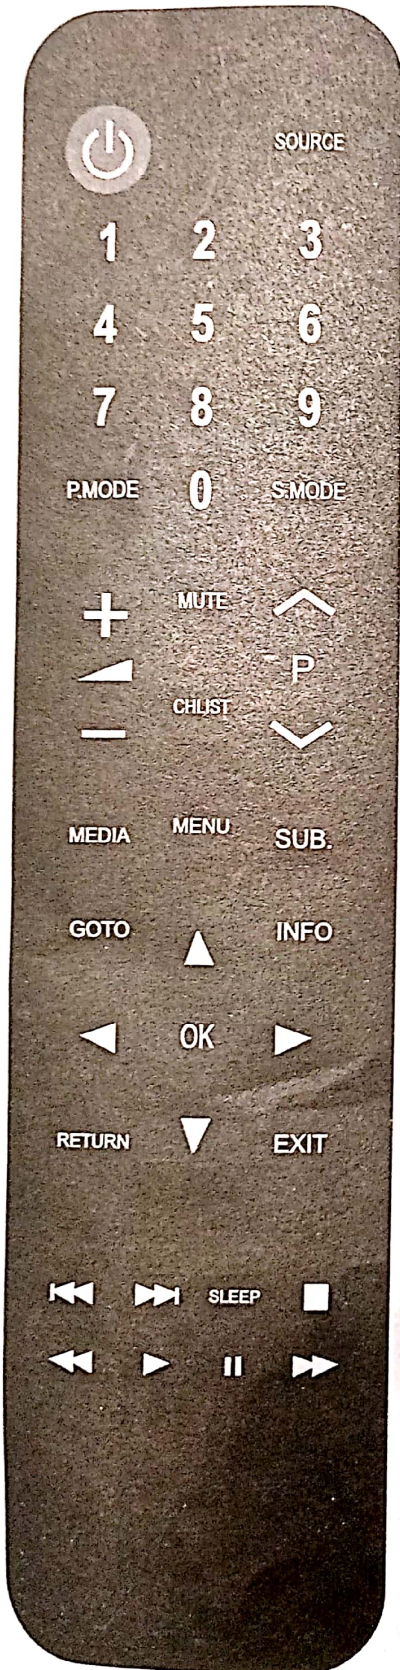

⏻ (POWER): Turns the TV on and off.

SOURCE: Displays and selects the available video sources.

0-9: Press to directly access to channels.

P.MODE: Output image mode selection.

S.MODE: Setting audio options.

MUTE: Cuts off the sound temporarily.

VOL-/VOL+: Adjust the volume.

CH LIST: Displays channel lists on the screen.

CH-/CH+: Changes channels.

MEDIA: Displays Media Play.

MENU: Displays the main on-screen menu.

SUB.: Select subtitle of media video file. (needs the support of disk or file)

GOTO: Play from the desired location.

INFO: Display information on the TV screen.

UP/DOWN.LEFT/RIGHT: Selects the on-screen menu items and changes the values seen on the manu.

RETURN: Returns to the previous menu.

EXIT: Exits the menu.

⏮ : Previous file or chapter.

⏭ : Next file or chapter.

SLEEP: Set the sleeptime.

■ : Stop.

⏪ : Fast rewind playback.

▶ : Play.

⏸ : Pause.

⏩ : Fast forward playback.

OSD Menu Operation

GO TO: Play from the desired location.

SUBTITLE: Select subtitle of media video file (needs the support of disk or file).

FAV.CH: Pressing FAV.CH displays favorites

P.SIZE: Cycles through wide screen mode settings

Red button (DELETE): Delete to remove the program that don't like. (TV source)

Green button (RENAME): Edit the program that you like change a name is by himself/herself. (TV source)

Yellow button (MOVE): Move to the program liked most front. (TV source)

Blue button (SKIP) : The program that don't like oneself jumps. (TV source)

OSD Menu Operation

1. ON/OFF TV

ON TV: Press "Power" button on TV set or power button on remote controller, then indicator LED change from red to green.

 
OFF TV: Press "Power" button on TV set or power button on remote controller, then indicator LED change from green to red.

2. Select input source

Press SOURCE to display the input source list:


Press "▲/▼" button to select your desired source, and press "OK" button to confirm

Press EXIT to hide the ON-Screen menu, or it will disappear after seconds. (The time you can set, MENU-TIME-OSD Timer)

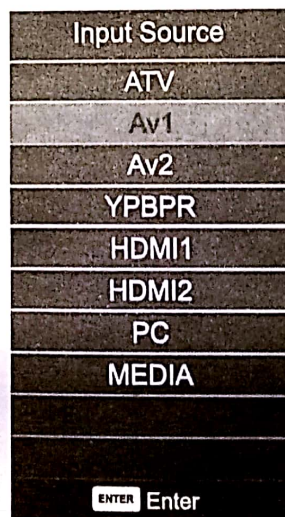

CHANNEL

 
1. Press the "MENU" button to enter the OSD menu. Then press "◀/▶" button to select the "Channel" menu. Enter the "channel" menu by Pressing "▲/▼" button select setting options

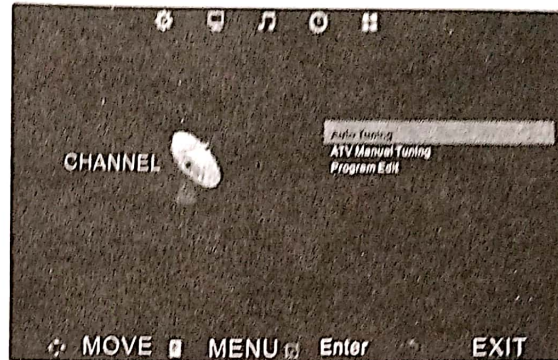

2. Press "▲/▼" button to select "Auto Tunning" and press the "OK" button to enter auto search.

Note: Press "menu" button exit auto search. tips "Do you want to exit tuning?" press "◀" button confirmation exit tuning, press "▶" button cancel.

 3. Press "▲/▼" button to select "TV Manual Tuning" and press the "OK" button to the TV manual tuning menu.

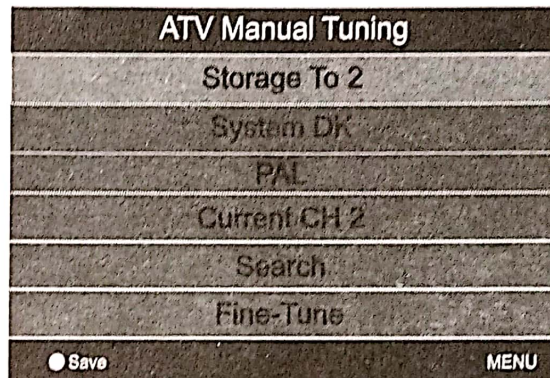

- 3.1 Press "▲/▼" button to select "Storage to 1" and press the "◀/▶" button to select the storage to channel.

- 3.2 Press "▲/▼" button to select "System", and press the "◀/▶" button to select the sound system "DK/ I/ BG/ MN".

- 3.3 Press "▲/▼" button to select "PAL" and press the "◀/▶" button to select the color system "PAL, PAL-M, PAI-N, PAL-60, NTSC, NTSC-44, SECAM".

- 3.4 Press "▲/▼" button to select "Current CH1" and press the "◀/▶" button to select the current channel.

- 3.5 Press "▲/▼" button to select "Search" and press the "◀/▶" button to manual search.

- 3.6 Press "▲/▼" button to select "Fine-Tune" and press the "◀/▶" button to fine tune.

- 3.7 Set to complete by the "Red" button to save. Press "Menu" button back menu.

4. Press "▲/▼" button to select "Programme Edit" and press the "OK" button to the Programme edit menu.

This option has four functions.

- 4.1 Press "▲/▼" button to select one channel in the list, press "Red" button delete channel.

 
- 4.2 Press "▲/▼" button to select one channel in the list, press "Green" button to enter the rename channel's. Name of the editing complete, press the green button to confirm.

4.3. Press "▲/▼" button to select one channel and press "YELLOW" button to pitch on. Press "▲/▼" button to select another channel which you want to move. Press "YELLOW" button to confirm.

4.4. Press "▲/▼" button to select one channel and press "BLUE" button to select skip the channel on or off.

4.5. Press "▲/▼" button to select one channel and press "FAV". button to setting the favourite channel.

4.6. Press "OK" button to saving.

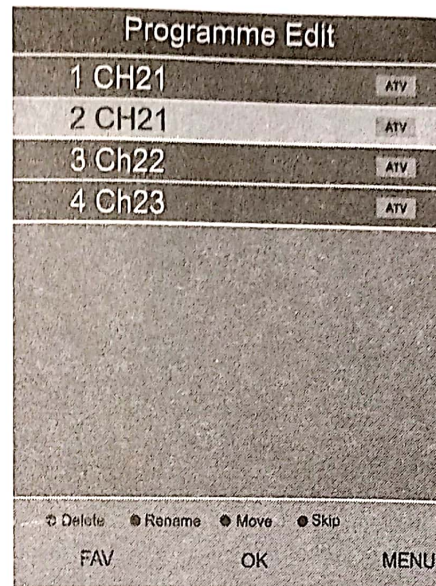

5. Press "▲/▼" button to select "Software Update (USB)" and press the "OK" button to the Software update.

SCREEN MENU:

Note: this menu only the PC source user.

6. Press "◀/▶" button to select "SCREEN" and press the "OK" button to the PC Screen menu.

6.1. Press "▲/▼" button to select "Auto Adjust" and press the "OK" button to do auto adjustment.

6.2. Press "▲/▼" button to select "Horizontal Position" and press the "◀/▶" button to adjust PC Horizontal Position.

6.3. Press "▲/▼" button to select "Vertical Position" and press the "◀/▶" button to adjust PC Vertical Position.

6.4. Press "▲/▼" button to select "Size and press the "◀/▶" button to adjust size.

6.5. Press "▲/▼" button to select "Phase": and press the "◀/▶" button to adjust phase.

 
7. Press "Menu or Exit" button back or exit menu.



PICTURE


You can select the type of picture, which best corresponds to your viewing.

1. Press the "MENU" button to enter the OSD menu. Then press "◀/▶" button to select the "PICTURE" menu. Enter the "Picture" menu by Pressing "▲/▼" button select options.

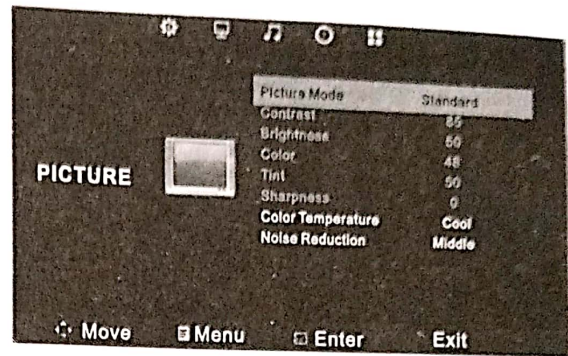

2. Press "▲/▼" button to select "Picture Mode" and press the "OK" button to the picture mode menu.

 2.1 In picture mode menu, press "▲/▼" button to select the picture mode such as Standard, Mild, User, Dynamic.

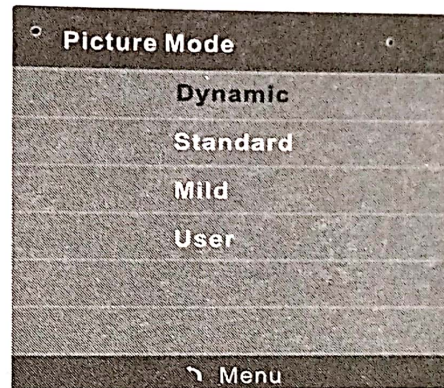

Note: In User mode press "▲/▼" button to select setting Contrast, Brightness, Color, Sharpness, Tint User

2.2. Press "▲/▼" button to select "Contrast" and press the "◀/▶" button to adjust contrast.

2.3. Press "▲/▼" button to select "Brightness" and press the "◀/▶" button to adjust brightness.

 
2.4. Press "▲/▼" button to select "Color" and press the "◀/▶" button to adjust color.

2.5. Press "▲/▼" button to select "Sharpness" and press the "◀/▶" button to adjust sharpness.

2.6. Press "▲/▼" button to select "Tint" and press the "◀/▶" button to adjust Tint.

Note: The item tint is only for NTSC

3. Press "▲/▼" button to select "Color Temperature" and press the "enter" button to the color temperature menu.

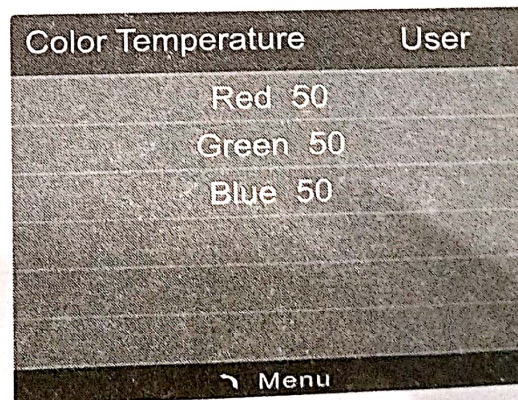

3.1: In color temp menu press the "◀/▶" button to select the color temp such as Cool, Medium, Warm, User.

Note: In "User" mode press "▲/▼" button to select setting color.

3.2. Press "▲/▼" button to select "Red" and press the "◀/▶" button to adjust red.

3.3. Press "▲/▼" button to select "Green" and press the "◀/▶" button to adjust green.

3.4. Press "▲/▼" button to select "Blue" and press the "◀/▶" button to adjust blue.

 
4. Press "▲/▼" button to select "Aspect Ratio" and press the "enter" button to the aspect ratio menu.

In aspect ratio menu, press the "▲/▼" button to select picture size Auto, 4:3, 16:9, Zoom1, Zoom2, Just scan, Panorama.

5. Press "▲/▼" button to select "Noise Reduction" and press the "enter" button to the noise reduction menu.

In noise reduction menu, press the "▲/▼" button to select noise reduction Off, Low, Middle, High.

6. Press "Menu or Exit" button back or exit menu.

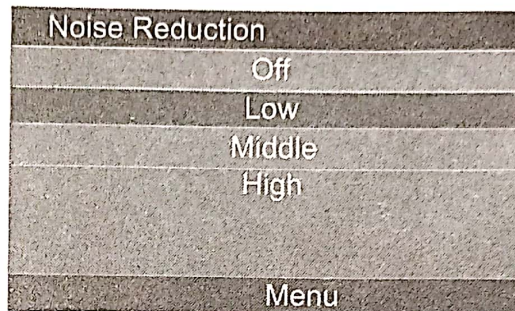

SOUND

You can select the type of sound, which best corresponds to your listening

1. Press the "Menu" button to enter the OSD menu. Then press "◀/▶" button to select the "Sound" menu. Enter the "Sound" menu by pressing "▲/▼" button select options.
2. Press "▲/▼" button to select "Sound Mode" and press the "OK" button to submenu.
 - 2.1. In sound mode menu, press the "▲/▼" button to select the sound mode such as User, Standard, Music, Movie, Sports.



 
Note: In "User" mode press "▲/▼" button to select setting treble and bass.

- 2.2. Press "▲/▼" button to select "Treble" and press the "◀/▶" button to adjust treble.
- 2.3. Press "▲/▼" button to select "Bass" and press the "◀/▶" button to adjust bass.
3. Press "▲/▼" button to select "Balance" and press the "enter" button to balance menu. Press "◀/▶" adjust balance.
4. Press "▲/▼" button to select "Auto Volume" and press the "◀/▶" button to select the Auto Volume function on or off.
5. Press "Menu or Exit" button back or exit menu.

TIME

You can setting turn on/off time, sleep time in the time system.

1. Press the "Menu" button to enter the Time menu. Then press " \leftarrow/\rightarrow " button to select the "Time" menu. Enter the "Time" menu by pressing " $\blacktriangle/\blacktriangledown$ " button select setting options.
2. Press " $\blacktriangle/\blacktriangledown$ " button to select "Sleep Timer" and press the "OK" button to submenu. and press " $\blacktriangle/\blacktriangledown$ " button to select "Off, 10min, 20min, 30min, 60min, 90min, 120min, 180min, 240min.
3. Press " $\blacktriangle/\blacktriangledown$ " button to select "Auto Sleep" and press the "OK" button and press the " \leftarrow/\rightarrow " button to select the Auto Sleep function on or off.
4. Press "Menu or Exit" button back or exit menu.

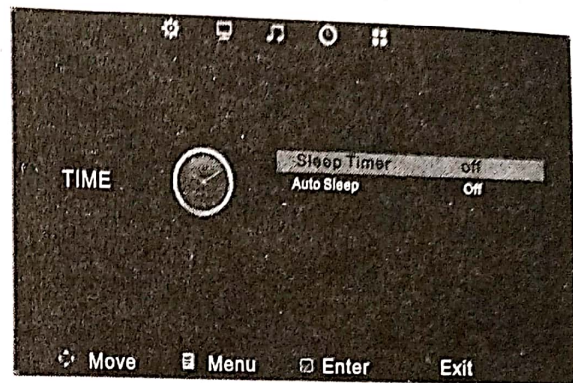

OPTION

1. Press the "Menu" button to enter the Option menu. Then press " \leftarrow/\rightarrow " button to select the "Option" menu. Enter the "Option" menu by Pressing " $\blacktriangle/\blacktriangledown$ " button select setting options.
2. Press " $\blacktriangle/\blacktriangledown$ " button to select "OSD Language" menu and press the "OK" button to the submenu. and press " $\blacktriangle/\blacktriangledown$ " button to select the OSD language which you desire.
3. Press " $\blacktriangle/\blacktriangledown$ " button to select "Restore factory default" and press the "enter" button to the confirmation menu "Are you sure?", press " \leftarrow " button confirmation reset OSD, press " \rightarrow " button cancel.
4. Press " $\blacktriangle/\blacktriangledown$ " button to select "OSD Duration" and press the "OK" button and press the " \leftarrow/\rightarrow " button to select the OSD Duration function off or 5sec/10sec/15sec.
5. Press " $\blacktriangle/\blacktriangledown$ " button to select "Keypad lock" and press the "OK" button and press the " \leftarrow/\rightarrow " button to select the keypad lock function on or off.
6. Press " $\blacktriangle/\blacktriangledown$ " button to select "Blue Screen" and press the "OK" button and press the " \leftarrow/\rightarrow " button to select the blue screen function on or off.
7. Press "Menu or Exit" button back or exit menu.



Media

1. Press the "Source" button to enter the source menu. Press " $\blacktriangle/\blacktriangledown$ " button to select "Media". Press "OK" button to enter the media Interface

Enter media menu.

you can select play PHOTO, MUSIC, MOVIE and TEXT item selected by pressing " $\blacktriangle/\blacktriangleright$ " button. play the item selected by press "OK" button to the submenu.

- 1.1. PHOTO: In media menu Press " $\blacktriangle/\blacktriangleright$ " button to select photo, press "OK" button to the USB directory. press "enter" button to the select picture file play photos. Into the USB file directory, select picture file, press the "OK" button to enter the picture file. Press " $\blacktriangle/\blacktriangleright$ " button to select the picture you want to play, then "OK" button to confirm, select the complete press " $\blacktriangleright/\blacksquare$ " button to play picture Play picture press "display" button to enter function options such as : " Pause, Previous, Next, Stop, Repeat-all/none/1, Music on/off,Playlist, Info, Rotate, Zoom in, Zoom out and Move view function. Select these function press " $\blacktriangle/\blacktriangleright$ " select, press "enter" button confirm or select.

 
- 1.2. Press " $\blacktriangle/\blacktriangleright$ " button to select music, press "OK" button to the USB directory. press "OK" button select music file play music.

Into the USB file directory, select music file press the "OK"


button to enter the music file. Press " $\blacktriangle/\blacktriangleright$ " button to select the music you want to play, then "enter" button to confirm, select the complete press " $\blacktriangleright/\blacksquare$ " button to play music.

multimedia player interface. These function options: "Pause, FB, FF, Previous, Next, Stop, Repeat-all/none/1, Mute, Playlist, Info, and Go Time function. "SELECT these function press " $\blacktriangleright/\blacksquare$ " select, press "enter" button confirm or select.


Media Interface

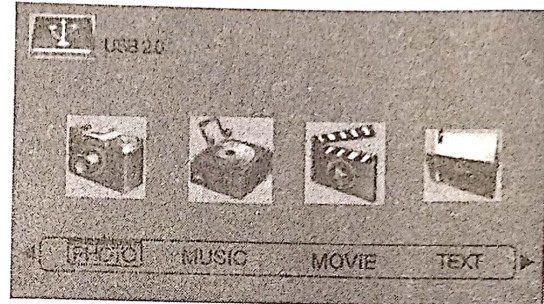

USB file directory

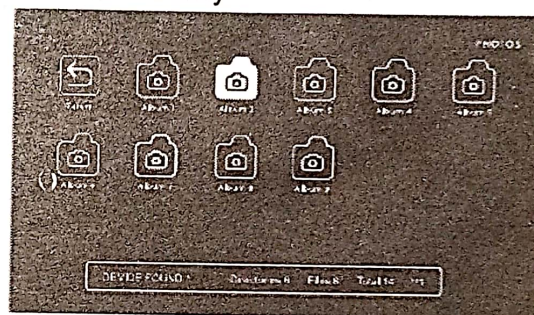 

USB picture file

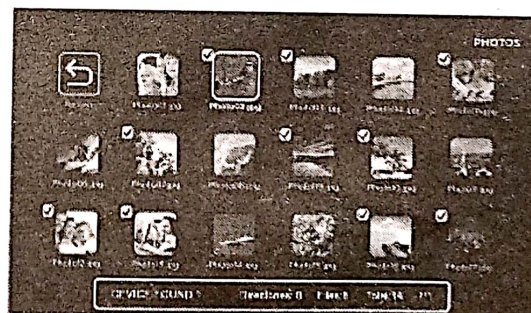 

1.3. Press "◀/▶" button to select movie, press "OK" button to the USB directory. Press "OK" button select movie file play movie. Into the USB file directory, select music file, press the "OK" button to enter the movie file. Press "◀/▶" button to select the movie you want to play, then "OK" button to confirm, select the complete press "▶/⏏" button to play movie . play movie press "display" button to enter function options such as:

"Pause, FB, FF, Previous, Next, Stop, Repeat all/ none/1, Set A-B, Playlist, Info, Slow FW, Step FW, Goto time, Zoom in, Zoom out, Aspect ratio, Move view and L+R function"

Select these function press "◀/▶" select, press "enter" button confirm or select.

1.4. Press "◀/▶" button to select text, press "OK" button to the USB directory. press "OK" button select text file.

Into the USB file directory, Select text file, press the "OK" button to enter the text file. Press "◀/▶" button to select the text file you want to play, then "OK" button to confirm, select the complete press "▶/⏏" button to play text file. Play movie press "display" button to enter function options such as:

 
 
"Prev. page, Next page, Previous, Next, Stop, Music on/off, Playlist and Info function".

Select these function press "◀/▶" select, press "enter" button confirm or select.

2. Press "Exit" button return or exit menu.



Multimedia function options menu

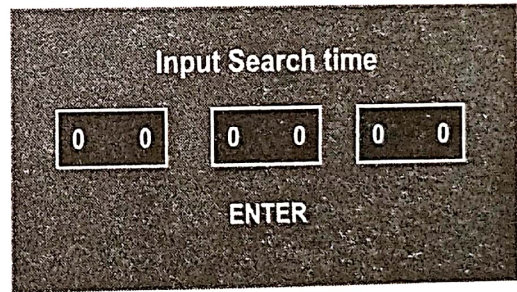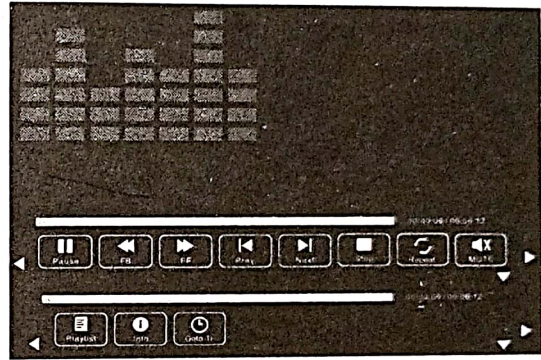

Carry out the problem-solving measures described in the following section before contacting customer support. Turn off the device immediately as soon as you suspect a malfunction and unplug the power plug. Do not attempt to repair the device yourself.

SYMPTOM	CHECK ITEM
LCD screen stays Dark	Make sure the unit is turned on and the connections are correct. Make sure the power adapter is correctly connected.
There is no sound	Make sure the system connection is correct. Make sure the power of speaker is turned on.
There is no picture or picture move up and down unsteady.	Check if the connection with the external AV signal source are correct. Correctly set the items in the picture menu. Check if the video type input signal is not corresponding to the unit. Make sure the unit is turned on and in correct video type.
The remote control does not work.	Make sure there are no obstruction between the remote control and the unit. make sure the remote control is pointing at the unit. Make sure the batteries are inserted or the polarity is correct. Make sure the batteries are not weak. Replace the weak battery.

Other Notes:

Static or other external interfere may cause the player to behave abnormally. In this occurs, unplug the power-supply cord from the outlet and plug it in again to reset the player. If the problems persist, then please disconnect the power and consult a qualified technician.