

Marketed and Serviced By:
 EUREKA FORBES LIMITED
 B-1/B-2, 701, 7th Floor, Marathon Innova, Marathon NexGen, Off Ganapatrao Kadam Marg, Lower Parel, Mumbai-400 013.
 Tel: 022 30449700, 30449888 Fax: 022 30449701, www.eurekaforbes.com



Aquasure Range Of Water Purifier

Xpert
 RO+UV+UF with Tasteguard technology
 MRP ₹ 20999/-

Nano
 RO Water Purifier
 MRP ₹ 10499/-

Smart
 UV Water Purifier
 MRP ₹ 7499/-

Forbes Range Of Vacuum Cleaners

Easy Clean Plus
 MRP ₹ 2699/-

Quick Clean DX
 MRP ₹ 4399/-

Trendy Steel
 MRP ₹ 7499/-

EUREKA FORBES
 Your friend for life

FORBES
 Clean Home. Healthy Family.

**TRENDY
 WET & DRY DX**

Multi-purpose Wet and Dry Vacuum Cleaner
 With powerful suction and blower function

USER MANUAL

Dear Customer,

We share your concern in keeping your home cleaner, fresher and healthier – for your family.

Congratulations! On your choice of your cleaning help and welcome to the happy family of over 2.5 million satisfied owners of Eureka Forbes Vacuum Cleaners.

Your Forbes Trendy Wet & Dry DX Vacuum Cleaner, with a powerful motor provides you a power packed performance and high suction that takes care of the toughest dirt and more importantly, seeks and destroys the dreaded invisible, allergy causing dust mites. Dust mites are microscopic creatures that multiply by the thousands in pillows, mattresses, furniture and carpets. A single gram of dust from your home could contain close to 19,000 dust mites. These allergy causing creatures cannot be eliminated by dusting, sweeping or swabbing.

The revolutionary Forbes Trendy Wet & Dry DX assures you a dust mite free, healthy home. It is a vacuum cleaner that can sweep and mop in one action. It is also packed with a number of special features; each designed to make cleaning your home more fast and efficient. Equipped with power suction, it can satisfy your every cleaning requirement.

The Forbes Trendy Wet & Dry DX is designed specially for Indian homes, to provide you with years and years of satisfaction, should you require any assistance you can rest assured that we are just a call away.

To always ensure the optimal functioning and performance of your product, we would like to advise the following;

1. Before using the appliance for the first time, carefully read the operating and safety instructions and adhere to these at all times.
2. Please keep these instructions after reading them and be sure to include them in case you pass along this product to someone else.

Happy Cleaning!

WARRANTY

Forbes Trendy Wet and Dry DX Vacuum Cleaners are warranted against defects arising out of faulty design, workmanship and materials, for a period of 12 months from the date of the Invoice, subject to the following conditions.

1. The customer will notify the company promptly about any defects noticed and give the company or its authorised dealer sufficient opportunity to inspect, test and remedy them, for which the customer will deposit the goods, if necessary, with the company's office/ service centre along with the original invoice, in the city where they are sold.
2. Inspection and test report of the company's office/ service centre will be treated as final and binding under the warranty for determining defects, repairs/ alterations required or carried out, or certifying working of the goods thereafter.
3. The company or its authorised dealer will be entitled to retain any defective parts replaced under the warranty.
4. The company's liability under the warranty will be limited only to defects which occur under the conditions of normal operation and under proper use. It excludes defects occurring because of abuse, faulty care or maintenance, repairs/ alterations to goods or parts by others, use on electrical supply for which the goods are not designed or to damage caused by lightning or other electrical disturbances.
5. Components subject to wear, such as flexible cable, carbon brushes and accessories, are not covered by this warranty.
6. The customer will have no claim under this warranty in respect of any personal injury, damage to property or consequential damages, or for utilisation of the goods not in accordance with the user manual.

Note: The underlined expressions should have the following meanings:

'The goods' shall mean goods described in the purchase agreement.

'The Customer' shall mean the original purchaser under the purchase agreement.

'The company' shall mean 'EUREKA FORBES LIMITED'.

NB: For registration of the warranty, please fill up the details in the warranty card and mail the same to Eureka Forbes Limited.

POST-WARRANTY


1. The Customer may be offered a yearly Service Contract at the prevailing Company rates and terms.
2. In case the Customer does not wish to enter the Service Contract, he has the option of calling our Service Centre and having his Forbes Trendy Wet & Dry DX serviced on an actuals basis i.e. by paying for labour cost and spares needed to attend to that Service/ Complaint call at the prevailing company rates. Such service will be rendered by the Company in towns/ places where the company has its Service Centres.

Note: Colour and graphics shown on the product and accessories may differ from the actual product.



BUSINESS REPLY CARD

Postage
will be
paid by
addressee

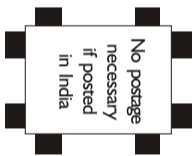

PERMIT NO. : 331.
Prabhadevi P.O. 19104

TO
EUREKA FORBES LIMITED
P. O. BOX NO. 19104
PRABHADEVI P. O.
MUMBAI-400 025

INDEX

Getting started with the Trendy Wet & Dry DX	1
Safety information	2
Carton content list	3
Assembling the Trendy Wet & Dry DX	4
Attention	7
Caution	8
Maintenance and Care	9
Warranty & Post warranty	10
Business Reply Card	



GETTING STARTED WITH THE Trendy Wet & Dry DX

Parts Identification



WARRANTY CARD

1 YEAR WARRANTY

To be retained by the customer.

No.

Unit / Serial No. (M/C): _____

Customer's Name and Address: _____

Phone (Residence): _____ (Office): _____

Invoice No.: _____

Date of Purchase: _____

Dealer's Stamp & Signature:



WARRANTY CARD

1 YEAR WARRANTY

JUST FILL IN THE WARRANTY CARD AND MAIL IT TO US WITHIN 7 DAYS FROM THE DATE OF PURCHASE.

Date of Purchase: _____

(Please help us to understand you better; just fill in the details or tick the appropriate boxes, wherever provided. Thank you.)

My Name: _____

My Age 18-25 25-30 30 + My Occupation : _____

My approx. monthly household income (Rs.) Above 4,000 Above 8,000 Above 15,000

I own the following household appliances (please specify brand/s).

Air Purifier _____ Water Purifier _____ Microwave Oven _____

Others: _____

My Residential Address: _____

City: _____ State: _____ Pin : _____

My Tel. No. (Residence): _____ (Office): _____

My Signature: _____

Dealer's Stamp & Signature:



Blowing Function

The device has blow function, if necessary, fix the hose connector to the exhaust of the device (the same method with inlet connection), then fix the accessories to use. (picture 1 1)

CARE AND MAINTENANCE

ATTENTION!

Before storing the vacuum cleaner, the dust drum and filter should be emptied and cleaned.

The accessories should be stored in the storage base(Picture 1 2). The vac should be stored indoors.


To clean the device casing switch off and disconnect the plug from the mains socket.


Never expose the vacuum cleaner cleaner to the effects of the weather (rain, etc.). No parts may be washed in a dish washer.

The casing, dust collecting chamber and filter chambers of the vacuum cleaner cleaner can be wiped with a damp cloth if required. No liquid must enter the vacuum cleaner in the process. Never use strong cleaning substance(scouring liquids, thinners), since these will corrode the plastic surface. Only place the plug back in the mains socket when you have made sure that all the parts are thoroughly dry.

Hair and fluff may gather on the running wheels and on the floor nozzle of the vacuum cleaner in time.You should remove these to ensure that handling of the vacuum cleaner is always easy.

Lubricating or oiling of the roller bearing is not recommended, because this will cause dirt and fluff to stick even better.

 **Correct disposal of this product:** This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

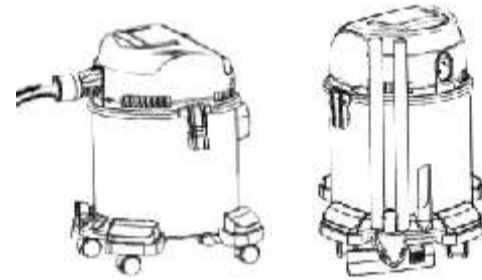

Picture 1 1

Picture 1 2

SAFETY INFORMATION

ATTENTION!

Read all safety rules carefully before attempting to operate.

DANGER!

Never operate this unit when flammable materials or vapors are present because electrical devices produce arcs or sparks that can cause a fire or explosion.


WARNING!

1. Do not leave vacuum cleaner when plugged in. Unplug from outlet when not in use and before servicing.
2. To reduce the risk of electric shock, do not expose to rain-store indoors.
3. Use only as described in this manual. Use only Manufacturer's recommended attachments.
4. Do not use with damaged cord or plug. If vacuum cleaner is not working as it should, has been dropped, damaged, or dropped into water, return it to a service center.
5. Do not pull or carry by cord, use cord as a handle, close a door on cord or pull cord around sharp edges or corners.

6. Do not run vacuum cleaner over cord. Keep cord away from heated surfaces.
7. Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
8. Do not handle plug or vacuum cleaner with wet hands.
9. Do not put any object into openings. Do not use with any openings blocked.
10. Keep hair, loose clothing, fingers and all parts of body away from openings and moving parts.
11. Turn off all controls before unplugging.
12. Do not use to pick up flammable or combustible liquids such as gasoline or use in areas where they may be present.
13. To avoid spontaneous combustion, empty tank after each use.
14. Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
15. Do not use without dust bag and/or filter in place.
16. To reduce the risk of the electric shock. Make sure the plug is dry and do not operate with wet hands.

17. Do not run vacuum cleaner unattended.
18. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
19. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

CARTON CONTENTS LIST

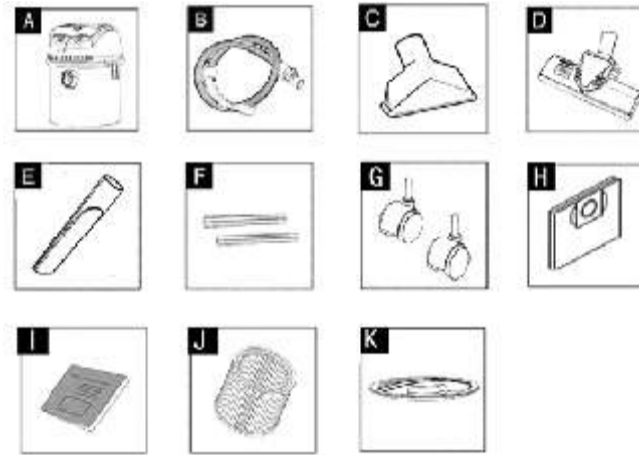

ITEM	DESCRIPTION	QTY
A	Vacuum Cleaner	1
B	Flexible hose pipe	1
C	Upholstry brush	1
D	Carpet & Floor brush	1
E	Crevice nozzle	1
F	Extension tube	2

ITEM	DESCRIPTION	QTY
G	wheels	4
H	Dust bag	1
I	User manual	1
J	HEPA filter	1
K	HEPA Filter Cover	1

Wet Vacuuming

CAUTION:

Always remove the dust bag when you commencing wet vacuuming.

1. When picking up small amounts of liquid the HEPA filter may be left in place.
2. When picking up large amounts of liquid we recommend that the HEPA filter be removed. If the HEPA filter is not removed, it will become saturated and misting may appear in the exhaust.
3. When the liquid in the drum reaches a predetermined level, the float mechanism will rise automatically to cut off air-flow, the indicator light turn on at the same time. When this happens, turn off the vac, unplug the power cord, and empty the drum.
4. After using the vac to pick up liquids, the HEPA filter must be dried to reduce the risk of possible mildew and damage to the filter.

Dry Vacuuming

CAUTION:

Never dry-vacuum cleaner without the filter assembly installed.

1. For dry –vacuum cleaner using, there are two filting methods: 1) dust bag 2) HEPA filter. For mass dust cleanning, we advise to use dust bag. For a bit but tiny dust cleanning, we advise to use HEPA filter. Since the HEPA fliter have better filting performace but will low down the air flow.
2. The device has dirt full and block indication function, the light turns on that means the air routeway is blocked. In this case, user should switch off the device and check:
 - 1) Is the hose or accessories blocked by large dirt?
 - 2) Is the filter blocked by dirt?


User should take actions:

- 1) Clean the dirt in the hose or other accessories.
- 2) Change or clean the dustbag (the HEPA filter).

ATTENTION!

1. Make sure all the assembly is according to the instructions. Connect the hose to the unit, then install the specific accessories for the intended cleaning purpose.
2. Pull the cable to suitable length, insert the plug into the socket. Press the ON/OFF switch button, start the using.
3. After using, press the ON/OFF switch button to stop. Unplug the cable from the socket. Then press the cord rewind button to roll back the cable steadily. (picture 10)

NOTE: If the cable can not rewind completely, please pull out the cable a little bit and press the rewind button again. You can repeat the rewind steps until the cable is rewind completely.

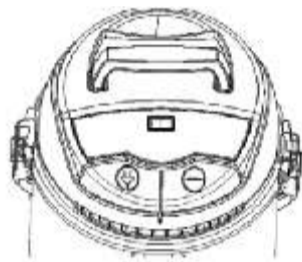

Picture 10

DRUM ASSEMBLY


ATTENTION!

If any part is missing or damaged, please do not assemble until you have all the parts.

Invert drum to install wheel.

Insert the four wheels (part G) into the socket of wheel base.

Be sure that wheels spin freely. (picture 1)

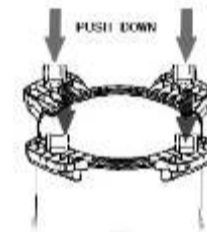

Picture 1

ASSEMBLING THE DEVICE

Fitting the HEPA filter. Put the HEPA filter (part J) into float holder, then lid the HEPA filter cover (part K), fasten it clockwise.

On the contrary, remove the HEPA filter anticlockwise. (picture 2)

NOTE:

HEPA filter---High Efficiency Particulate Air Filter

When picking up small amounts of liquid the HEPA filter may be left in place.


When picking up large amounts of liquid we recommend that the HEPA filter be removed. If the HEPA filter is not removed, it will become saturated and misting may appear in the exhaust.

Fitting the dust bag. Put the dustbag board (part H) into inlet base. (Dustbag board should aim at the slot of the inlet base). Rotate the board clockwise 90 degrees to fasten the dustbag according to arrow direction (LOCK side) (picture 3).

To remove the dustbag from the inlet base, just rotate the dustbag board anticlockwise 90 degree (OPEN side), then take out the dustbag.




Picture 2

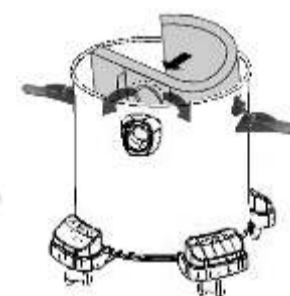


Picture 3


NOTE: The dust bag use only for dry-vacuum cleaner can not be used for wet suction
Install the power head assembly onto the drum assembly as shown. (picture4)
Rotate both latches down and press until you hear them snap over the flanges on the drum. (picture5)
Insert the flexile hose connector into the inlet base of the vacuum cleaner. (Picture6)

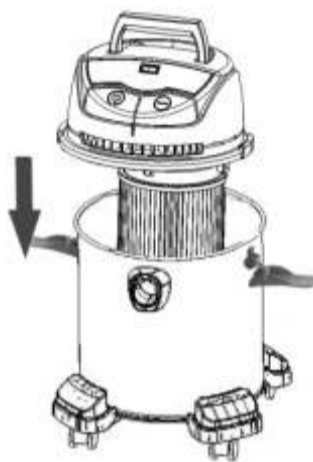

Picture 4

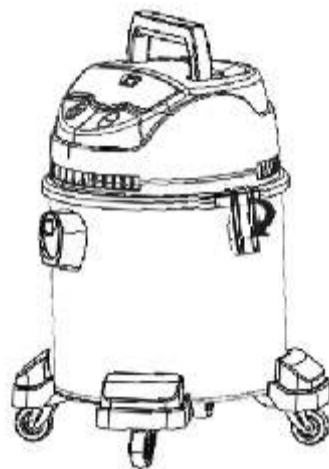

Picture 5

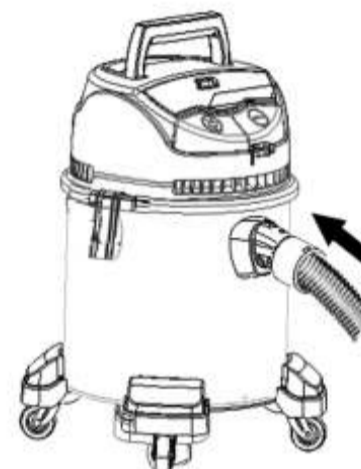

Picture 6

OPERATION

Accessories use instructions:

The vacuum cleaner is equipped with three nozzles for different applications. Each individual nozzle can either be fitted onto the connecting tube or directly onto the handle of the flexible hose.

1. Floor brush


This is suitable for cleaning wide areas. The floor brush is fitted with a practical 360° tie-in, this ensures that you can reach easily into any corner. (Picture7)

2. Sofa brush


You can use this to clean the dust from books or sensitive objects such as picture frames etc. This nozzle is suitable for the careful cleaning of upholstered furniture, mattresses, cushions, curtains etc. (Picture8)



Picture 7

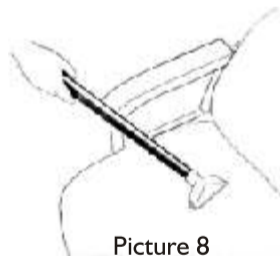

Picture 8

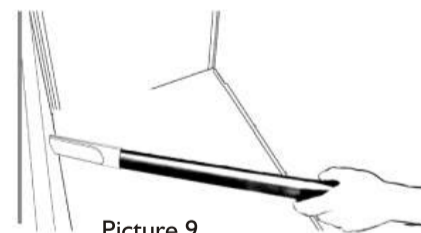

Picture 9

3. Crevice nozzle

This nozzle is suitable for sucking and cleaning the corners or niches that cannot be reached with the floor brush. Besides, it can be used as blowing tool. (picture9)