WARRANTY TERMS & CONDITIONS

The warranty will be effective only if the warranty card is completed and returned to company within 15 days from the date of purchased. our guarantee the provision of free services of KRISONS product within the warranty period from its date of purchased from Authorised

This period and conditions of our services are as follows:

- 1. The warranty covers services by our KRISONS Authorised service center. The warranty card together with invoice must be presented when servicing is required. The warranty card is irreptaceable in the event of lose
- 2. Repair services will be provided for defects arising from normal usage for the following period commencing from the date of purchase from KRISONS Services center. (parts would be replaces when necessary)
- A. Flectrical parts... ... 6 months
- B. Technical services free 6 months
- Under the following circumstance, service and parts will be chargeable even within warranty period.
- A. Failure to present the warranty card and invoice when service is required Full particulars not clearly shown or alterations made against information. For E.g. Alteration of date of purchases. serial number altered
- B. This unit being tempered with, altered in any way by any unathorised technicians or which has been subjected to misuse, negligence or accident. This warranty does not cover damage occurning in transit by or from the customer
- The defect is caused by the attack of household pests, fire lighting, natural disasters pollution. abnormal voltage or the usage of generator.

Specifications

Thunder

Output Power:

Front Speakers: 15wx 2 (THD+N=10%, 1KHz)

Subwoofer: 35W THD+N-10%, 80Hz)

Speaker Unit:

Front speakers: 3"4Ω

Subwoofer: 4"4Ω Power: 220V-240V - 50Hz

Compatible: Smartphone's and tablets supporting

Bluetooth (A2DP) Protocol. Frequency Response:

> Subwoofer: 50Hz-120 Hz Front Speakers: 1KHz-15KHz

Separation:≥35db s/n Ratio: < 65db

Contains Package

- 1. Main Unit 1Pc.
- 2. Remote Control -1Pc.
- 3. Operating Manual -1Pc.
- 4. 2 RCA to 1 EP Stereo Aux Cable -1Pc.
- 5. Warranty Card.

Marketing and Manufacturing by :

KRISONS ELECTRONICS SYSTEMS LIMITED.

Address: A-137, IInd Floor, Okhla Industrial Area Phase-II, New Delhi-110020 INDIA

Email Id: service@krisons.com Website: www.krisons.com

Customer Helpline No.: +91-9910016757, 8287124581

(Timing: 10.30 AM-6.00 PM) Monday - Satuday

USER MANUAL KRISÖNS®



THUNDER

Tower Speakers

Dear User,

Thank you for purchasing this products. You are requested to read this manual carefully before using this device.

CAUTION:

- Do not place the system in the high-temp and humid environment prevent it from raining or rough handling and strong shock.
- In order to avoid electric shock and other accidents do not open the set for repair without any professional guidance.
- In case fragments or other liqids is accidentally sprinkled inside the cabinet please switch off power immediately in case of repair please visit to the professional maintenance for help.
- Switch off the power and take off the plug from the power socket when the system is not on work.
- Keep it safe from water drops or splashing water. and no liquids container should be a allowed to be put on its top side.
- Keep the cabinet vent away from the wall by least 20 mm the vent should not be blocked from air. Do not keep it close to the fire.

Key Function of Front Panel & Back Panel Thunder



Bluetooth

USB / Pen Drive Port

- Display Micro SD Card Socket

Vol (—) ◀◀ Previous Long Press : Volume will be Short Press: (FM) select previous

(USB) select previous song (BT) select Previous song in device

Play / Pause / Scan

Long press (FM) : It will Auto tune the channel and memorized also sequentially. (USB/AUX/BT) Mic Priority will on/off. Note: During Mic Priority sound level will auto decrease in all mode when you speak

Short Press (FM/Aux) : Sound will

(USB/BT): Song will pause Vol (+)▶► Next

Long Press : Volume will increase (+) in all mode short press : (FM) select next channel (USB)-Select Next Song (BT) - Select next song in device list.

8. Mode: Long Press
Mic will on/off in all mode Short Press: Change the function to FM, Bluetooth, line in / AUX & USB

9. Rotary Volume/Bass/Trables

- 10. Aux/Lne in Socket.
- 11. Mic Socket
- 12. FM Antenna
- 13. On/Off Power Swotch
- 14. Power Cord

Remote Key Function

- 1. Power: White press off the product comes in standby mode display goes off no function will work.
- 2. Mode : Short press Change the function to FM. Bluetooth, Line in/Aux & USB.
- 3. Equalizer Function: Long Press Select Audio Effect through Pre Equalized (i.e.) Jazz, Rock, Pop, Classic, Country Normal Note: This function will work only during USB Short Press - Select Mic Level and Mic
- Echo to Change 4. Mute: While press you can mute the
- 5 CURSOR BUTTON: Volume/Mic: +/-in all mode.

- (USB): Short press will be next song. Long press will be fast forward the song. (FM): Short press Manual tuning (+) Long press will be Fine turning (+) (Bluetooth): Next Song.
- iii. Previous ◀◀ (USB): Short press will be Previous song Long press will be fast forward the song. (FM): Short press Manual tuning (-) Long press will be Fine turning (-) (Bluetooth): Previous Song.
- iv. Play/Pause ▶II (USB & Bluetooth): You can play & pause
- (FM): Select saved channel of FM (+) 6. SCAN: Auto tune the FM channel and memmorized also sequentially.
- 7. REPEAT: You can choose option of song play Repeat Random, folder option wh USB play.
- 8. Numeric Buttons: (0-9) You can select song track while Playing USB drive and change FM Programme/Starions directly.

WARRANTY CARD

WARRANTY REGISTRATION CERTIFICATE

Mr/Mrs/Ms First Name :
Last Name:
Address
Contact No.
Model No.
Serial No.
Date of Purchased:
Invoice No.
Retail outlet/Website name Where Purchased :

Purchased Order No./Date

