

The warranty will be effective only if the warranty card is completed and returned to company within 15 days from the date of purchased. our guarantee the provision of free services of KRISONS product within the warranty period from its date of purchased from Authorised dealer.

This period and conditions of our services are as follows :

1. The warranty covers services by our KRISONS Authorised service center. The warranty card together with invoice must be presented when servicing is required. The warranty card is irreplaceable in the event of lose.
2. Repair services will be provided for defects arising from normal usage for the following period commencing from the date of purchase from KRISONS Services center. (parts would be replaces when necessary)
 - A. Electrical parts 6 months
 - B. Technical services free 6 months
3. Under the following circumstance, service and parts will be chargeable even within warranty period.
 - A. Failure to present the warranty card and invoice when service is required Full particulars not clearly shown or alterations made against information. For E.g. Alteration of date of purchases. serial number altered or removed.
 - B. This unit being tempered with, altered in any way by any unauthorised technicians or which has been subjected to misuse, negligence or accident. This warranty does not cover damage occurring in transit by or from the customer.
 - c. The defect is caused by the attack of household pests, fire lighting, natural disasters pollution. abnormal voltage or the usage of generator.

Ultima / Moon Star

Output Power :
Front Speakers : 30Wx1 (THD+N=10%, 1KHz)
Speakers Unit : Frontspeakers : 8"/3Ω x1
Power : 3.7 V / 2400 mAh
Compatible : Smartphone's and tables supporting Bluetooth (A2DP) Protocol.
Frequency Response :
Front Speakers : 840 Hz-10 KH
Separation : > 35 db
s/nRatio : <65db

Contains Package

1. Main Unit - 1Pc.
2. Remote Control-1 Pc.
3. Wireless Mic - 1 Pc.
4. Batteries for Mic - 2 Pcs.
5. Operating Manual - 1Pc.
6. Chargeable Cable - 1Pc.
7. Warranty Card.

Marketing and Manufacturing by :
ZYTEL ENTERPRISE PRIVATE LIMITED
 Address : A-137, 2nd Floor, Okhla Industrial Area,
 Phase-2, New Delhi-110020, INDIA

E-mail : service@krisons.com
 Website : www.krisons.com
Customer Helpline No. : +91 9910016757, 8287124581
 (Timing : 10.30 AM-6.00PM (Monday - Saturday))

USER MANUAL

KRISONS®



ULTIMA

MOON STAR


SIMPLY MATCHLESS!

Bluetooth Speaker

Dear User,
 Thank you for purchasing this products. You are requested to read this manual carefully before using this device.

CAUTION :

- Do not place the system in the high-temp and humid environment prevent it from raining or rough handling and strong shock.
- In order to avoid electric shock and other accidents do not open the set for repair without any professional guidance.
- In case fragments or other liquids is accidentally sprinkled inside the cabinet please switch off power immediately in case of repair please visit to the professional maintenance for help.
- Switch off the power and take off the charger from the power socket when the system is not on work.
- Keep it safe from water drops or splashing water. and no liquids container should be a allowed to be put on its top side.
- Keep the cabinet vent away from the wall by least 20 mm the vent should not be blocked from air. Do not keep it close to the fire.

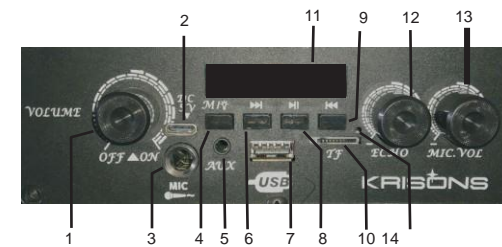

ULTIMA/MOON STAR

1. **On / Off Switch with Rotary Volume control**
2. **5V Charging socket.** You can charge with any charger whose capacity is Minimum 1 Amp or More
3. **Mic Socket** (This Option you can play any wired mic simultaneously with wireless mic)
4. **Mode.** Change the function to FM, Bluetooth, Line in/Aux & USB.
5. **AUX Socket** (Any other source of external stereo audio signal can apply from TV, Mobile Laptop, and Computer by connecting the aux wire.)
6. **Next ►► (USB):** Short press will be next song. Long press will be fast forward the song.
(FM): Short press Next preset program will change **Long press** will be manual tune of FM station.
(Bluetooth) : will be Next Song.
7. **USB/Pen Drive Port.** (You can play Audio songs in MP3 Format)
8. **Play/Pause: Short press : (FM, USB & Bluetooth):** You can play & pause the songs.
Long Press: its work only in **FM**, if you long press in FM, it will Auto tune the FM channel and memorized also sequentially
9. **Previous ◄◄ (USB):** Short press will be previous song. **Long press** will be fast rewind the song.
(FM): Short press previous preset program will change **Long press** will be manual tune of **FM** station.
(Bluetooth): will be previous Song.
10. **Micro SD Card Socket.** (You can play Audio songs in MP3 Format)
11. **Display.**
12. **Echo level control** (you can adjust the level of echo effect during using mic)
13. **Mic Level** (you can adjust the level of mic according to your choice)
14. **Charging indicator.** (During charging this will indicate in Red)

Remote Key Function



1. **Power :** While press off the product comes in standby mode, display goes off No function will work.
2. **Mode : Short press** change the function to FM, Bluetooth, Line in/Aux & USB.
3. **Equalizer Function :** Select Audio Effect through Pre equalized (e.i.) Jazz, Rock, Pop, Classic, Country Normal.
Note : This function will work only during USB Play & Bluetooth.
4. **Mute :** While press you can mute the sound.
5. **CURSOR BUTTON :**
 - i. **Volume :** +/- Volume will be Increase or Decrease in all mode.
 - ii. **Next ►► (USB) : Short press** Next song will be change **Long press** Will be Fast forward the song.
(FM) : Short press Next preset programme will be change
Long Press will be Manual search of FM programme.
(Bluetooth) : Next Song will be play.
 - iii. **Previous ◄◄ (USB) : Short press** Previous song will be change **Long press** Will be Fast rewind the song.
(FM) : Short press Previous preset programme will be change
Long Press will be Manual search of FM programme.
(Bluetooth) : Previous Song will be play.
 - iv. **Play/Pause (USB, FM & Bluetooth) :** You can play & pause the songs.
Long Press Its work only in FM, if you long press in FM it will auto tune the FM Channel & memorized also sequentially.
6. **SCAN :** Auto tune the FM channel and memorized also sequentially.
7. **REPEAT :** You can choose option of song play Repeat Random, folder option while USB play.
8. **Numeric Buttons :** (0-9) You can select song track while Playing USB drive and change FM Programme directly.

WARRANTY CARD

WARRANTY REGISTRATION CERTIFICATE

Mr/Mrs/Ms First Name :

Last Name :

Address

.....

Contact No.

Model No.

Serial No.

Date of Purchased :

Invoice No.

Retail outlet/Website name Where Purchased :

.....

Purchased Order No./Date

