



User Manual

Refrigerator-Freezer

HRB-758SIKGU1

HRF-758SIBGU1

EN

Haier

Thank you for purchasing a Haier Product.

Please read these instructions carefully before using this appliance. The instructions contain important information which will help you get the best out of the appliance and ensure safe and proper installation, use and maintenance.

Keep this manual in a convenient place so you can always refer to it for the safe and proper use of the appliance.

If you sell the appliance, give it away, or leave it behind when you move house, make sure you also pass this manual so that the new owner can become familiar with the appliance and safety warnings.

Legend




Warning – Important Safety information



General information and tips



Environmental information

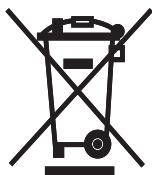

Disposal

Help protect the environment and human health. Put the packaging in applicable containers to recycle it. Help to recycle waste of electrical and electronic appliances. Do not dispose appliances marked with this symbol with the household waste. Return the product to your local recycling facility or contact your municipal office.



WARNING!

Risk of injury or suffocation!

Refrigerants and gases must be disposed of professionally. Ensure that the tubing of the refrigerant circuit is not damaged before being properly disposed of. Disconnect the appliance from the mains supply. Cut off the mains cable and dispose of it. Remove the trays and drawers as well as the door catch and seals, to prevent children and pets to get closed in the appliance.

1. Safety information	4
2. Intended use	8
3. Product description	9
4. Settings	10
5. Use	13
6. Equipment	20
7. Energy saving tips	23
8. Care and cleaning	24
9. Troubleshooting	26
10. Installation	29
11. Technical data	33
12. Customer service	34

Accessories

Check the accessories and literature in accordance with this list:



2 Egg trays



3 spacers



Warranty
card



User
manual

Before switching on the appliance for the first time read the following safety hints!:



WARNING!

Before first use

- ▶ Make sure there is no transport damage.
- ▶ Remove all packaging and keep out of children's reach.
- ▶ Wait at least two hours before installing the appliance in order to ensure the refrigerant circuit is fully efficient.
- ▶ Handle the appliance always with at least two persons because it is heavy.

Installation

- ▶ The appliance should be placed in a well-ventilated place. Ensure a space of at least 20 cm above and 10 cm around the appliance.
- ▶ Never place the appliance in a damp area or location where it might be splashed with water. Clean and dry water splashes and stains with a soft clean cloth.
- ▶ Do not install the appliance in direct sunlight or in the near of heat sources (e.g. stoves, heaters).
- ▶ Install and level the appliance in an area suitable for its size and use.
- ▶ Keep ventilation openings in the appliance or in the in-built structure clear of obstruction.
- ▶ Make sure that the electrical information on the rating plate agrees with the power supply. If it does not, contact an electrician.
- ▶ The appliance is operated by a 220-240 VAC/50 Hz power supply. Abnormal voltage fluctuation may cause the appliance to fail to start, or damage to the temperature control or compressor, or there may be an abnormal noise when operating. In such case, an automatic regulator shall be mounted.

Use a separate earthed socket for the power supply which is easy accessible. The appliance must be earthed.

- ▶ **Only for UK:** The appliance's power cable is fitted with 3-cord (grounding) plug that fits a standard 3-cord (grounded) socket. Never cut off or dismount the third pin (grounding). After the appliance is installed, the plug should be accessible.
- ▶ Do not use multi-plug adapters and extension cables.
- ▶ Ensure that the power cable is not trapped by the refrigerator. Do not step on the power cable.
- ▶ Do not damage the refrigerant circuit.

**WARNING!**

Daily use

- ▶ This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- ▶ Keep away children under 3 years of age from the appliance unless they are constantly supervised.
- ▶ Children shall not play with the appliance.
- ▶ If cool gas or other inflammable gas is leaking in the vicinity of the appliance, turn off the valve of the leaking gas, open the doors and windows and do not unplug a plug in the power cable of the refrigerator or any other appliance.
- ▶ Notice that the appliance is set for operation at a specific ambient range between 10 and 43°C. The appliance may not work properly if it is left for a long period at a temperature above or below the indicated range.
- ▶ Do not place unstable articles (heavy objects, containers filled with water) on top of the refrigerator, to avoid personal injury caused by falling or electric shock caused by contact with water.
- ▶ Do not pull on the door shelves. The door may be pulled slant, the bottle rack, may be pulled away, or the appliance may topple. Open and close the doors only with the handles. The gap between the doors and between the doors and the cabinet is very narrow.
- ▶ Do not extend your hands in these areas to avoid pinching your fingers. Open or close the refrigerator doors only when there are no children standing within the range of door movement.
- ▶ Do not store or use inflammable, explosive or corrosive materials in the appliance or in the vicinity.
- ▶ Do not store medicines, bacteria or chemical agents in the appliance. This appliance is a household appliance. It is not recommended to store materials that require strict temperatures.
- ▶ Never store liquids in bottles or cans (besides high percentage spirits) especially carbonated beverages in the freezer, as these will burst during freezing.
- ▶ Check the condition of food if a warming in the freezer has taken place.



WARNING!

Daily use

- ▶ Do not set unnecessarily low temperature in the refrigerator compartment. Minus temperatures may occur at high settings. Attention: Bottles can burst.
- ▶ Do not touch frozen goods with wet hands (wear gloves). Especially do not eat ice lollies immediately after removal from the freezer compartment. There is the risk to freeze or the formation of frost blisters. FIRST aid: keep immediately under running cold water. Do not pull away!
- ▶ Do not touch the inside surface of the freezer storage compartment when in operation, especially with wet hands, as your hands may freeze onto the surface.
- ▶ Unplug the appliance in the event of a power interruption or before cleaning. Allow at least 5 minutes before restarting the appliance, as frequent starting may damage the compressor.
- ▶ Do not use electrical devices inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

Maintenance / cleaning

- ▶ Make sure children are supervised if they carry out cleaning and maintenance.
- ▶ Disconnect the appliance from the electrical supply before undertaking any routine maintenance. Allow at least 5 minutes before restarting the appliance, as frequent starting may damage the compressor.
- ▶ Hold the plug, not the cable, when unplugging the appliance.
- ▶ Do not clean the appliance with hard brushes, wire brushes, detergent powder, petrol, amyl acetate, acetone and similar organic solutions, acid or alkaline solutions. Please clean with special refrigerator detergent to avoid damage.
- ▶ Do not scrape off frost and ice with sharp objects. Do not use sprays, electric heaters like heater, hair dryer, steam cleaners or other sources of heat in order to avoid damage to the plastic parts.
- ▶ Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.

**WARNING!****Maintenance / cleaning**

- ▶ If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- ▶ Do not try to repair, disassemble or modify the appliance by yourself. In case of repair please contact our customer service.
- ▶ Eliminate the dust on the back of the unit at least once in the year to avoid hazard by fire, as well as increased energy consumption.
- ▶ Do not spray or flush the appliance during cleaning.
- ▶ Do not use water spray or steam to clean the appliance.
- ▶ Do not clean the cold glass shelves with hot water. Sudden temperature change may cause the glass to break.

Refrigerant gas information**WARNING!**

The appliance contains the flammable refrigerant ISOBUTANE (R600a). Make sure the refrigerant circuit is not damaged during transportation or installation. Leaking refrigerant may cause eye injuries or ignite. If a damage has occurred, keep away open fire sources, thoroughly ventilate the room, do **not** plug or unplug the power cords of the appliance or any other appliance. Inform the customer service.

In case of eyes get into contact with the refrigerant, rinse immediately it under running water and call immediately the eye specialist.

**WARNING!**

- ▶ Taking care to avoid causing a fire by igniting flammable material.
- ▶ **WARNING:** When positioning the appliance, ensure the supply cord is not trapped or damaged.
- ▶ **WARNING:** Do not locate multiple portable socket-outlets or portable power supplies at the rear of the appliance.
- ▶ Appliances which use flammable insulation blowing gases, instructions shall include information regarding disposal of the appliance.

Intended use

This appliance is intended for cooling and freezing food.

This appliance can be used at home or for other similar applications,

Such as:


- Shop, office or the kitchen of other working area;
- Farm, hotel, motel and customer in an environment of living;
- Guesthouse environment
- Catering industry and similar applications of non-retail industry

It is not intended for commercial or industrial use.


Changes or modifications to the device are not allowed. Unintended use may cause hazards and loss of warranty claims.



CAUTION!

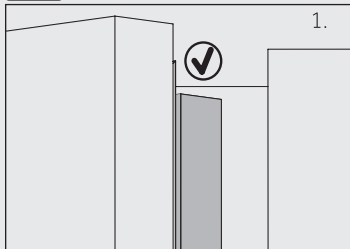

When you close the door, the vertical door strip on the left door should be bent inside (1).

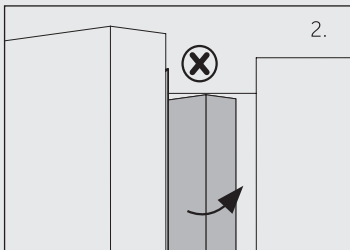


If you try to close the left door and the vertical door strip is unbent (2), you should bend it firstly, otherwise the door strip will hit the fixing shaft or right door. Thus a damage to the door slip or a leak will occur.

There is a heating thread inside the frame. The temperature of the surface will rise a little, which is normal and won't affect the function of appliance.



Notice

Due to technical changes and different models, some of the illustrations in this manual may differ from your model.

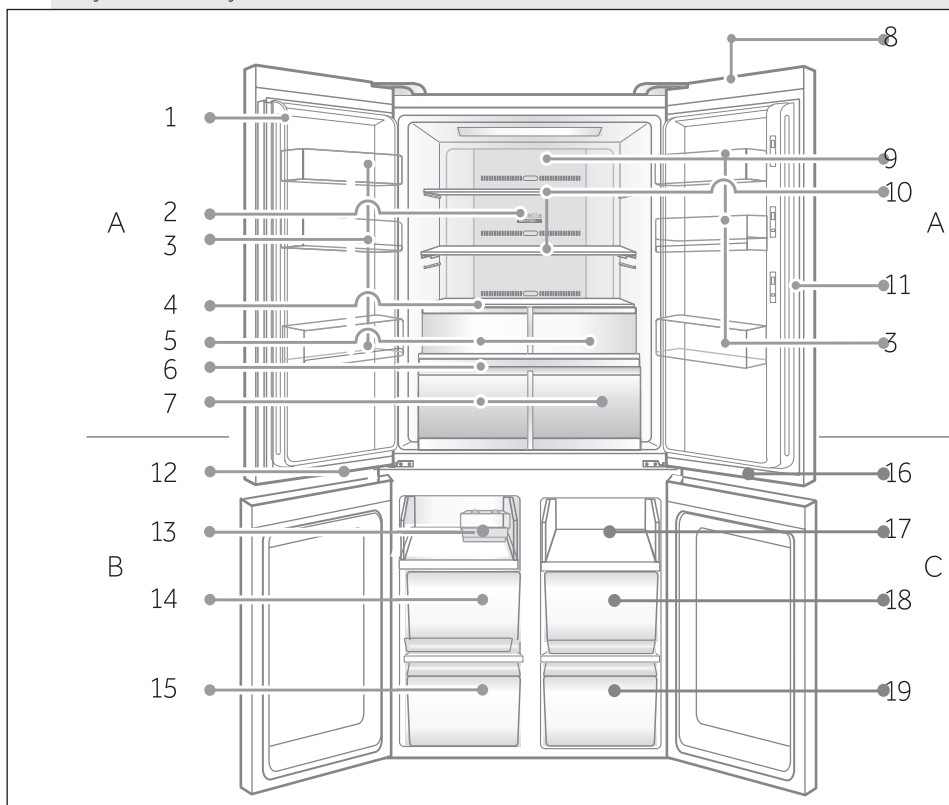

3.

A: Refrigerator compartment

- 1 Vertical beam
- 2 Active Fresher sensors
- 3 Bottle rack
- 4 Dry box cover plate
- 5 Dry box drawer
- 6 Humidity box cover plate
- 7 Humidity box drawer
- 8 TFT display
- 9 T-ABT sterilization module
- 10 Shelf
- 11 In-built camera

B: Freezer compartment

- 12 Freezing compartment lamp
- 13 Tray & Manual Ice Maker
- 14 Freeze box
- 15 Freeze box

C: MyZone compartment

- 16 Convertible Zone Lamp
- 17 Tray
- 18 MyZone drawer
- 19 MyZone drawer

4.1 Download & installation of Haier Smart APP

This binding instruction is subject to IOS and Haier Smart APP. The steps are mentioned below:

- ▶ **Download App**

For IOS and Android, please scan the below QR-code.



- ▶ **Description of startup:**

Please ensure that your refrigerator and mobile phone are connected with the same WIFI Hotpot and the internet works. The refrigerator should get into Settings page during the binding step.

- ▶ **Open up Haier Smart APP**

log into the App and then click the icon at the top of the right side of the home page. To open up the model list, choose the refrigerator item and select your refrigerator model.

- ▶ **Follow up the hints of the page to finish the binding.**




WARNING!


Some functions, names, and pages might change because of the updates of our system, thus, the real condition is subject to the downloaded version.


The setting function helps you to control and operate the refrigerator and most functions of the screen can be adjusted on the setting page.

The setting interface has a total of two sibling pages (Fig 4.1 and 4.2), which can be swiped left and right to implement page viewing. The two pages are as shown below.

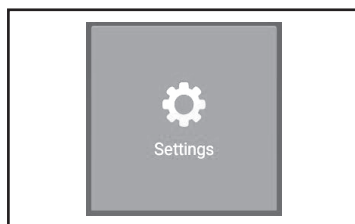


4.1

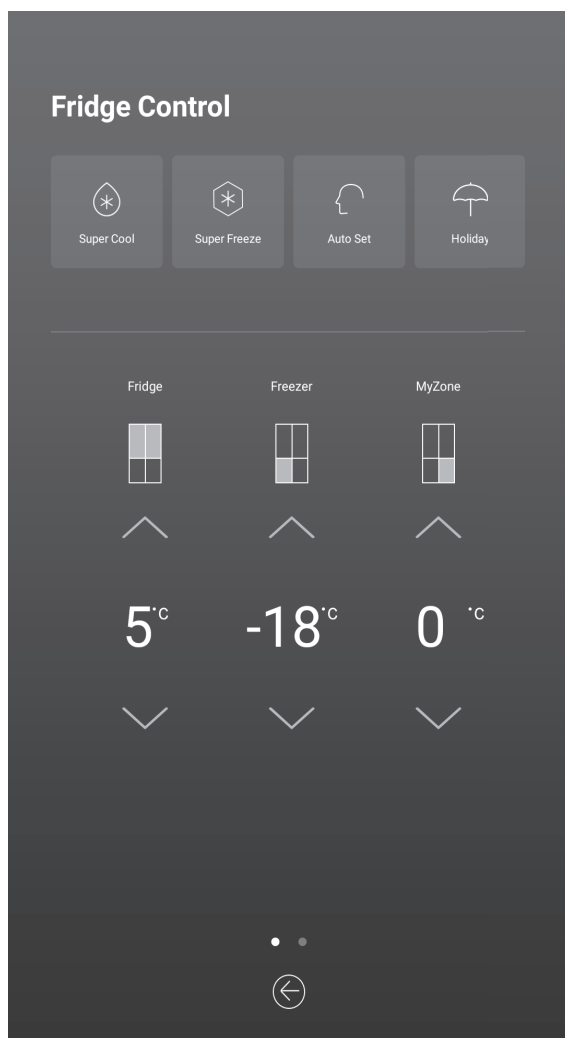

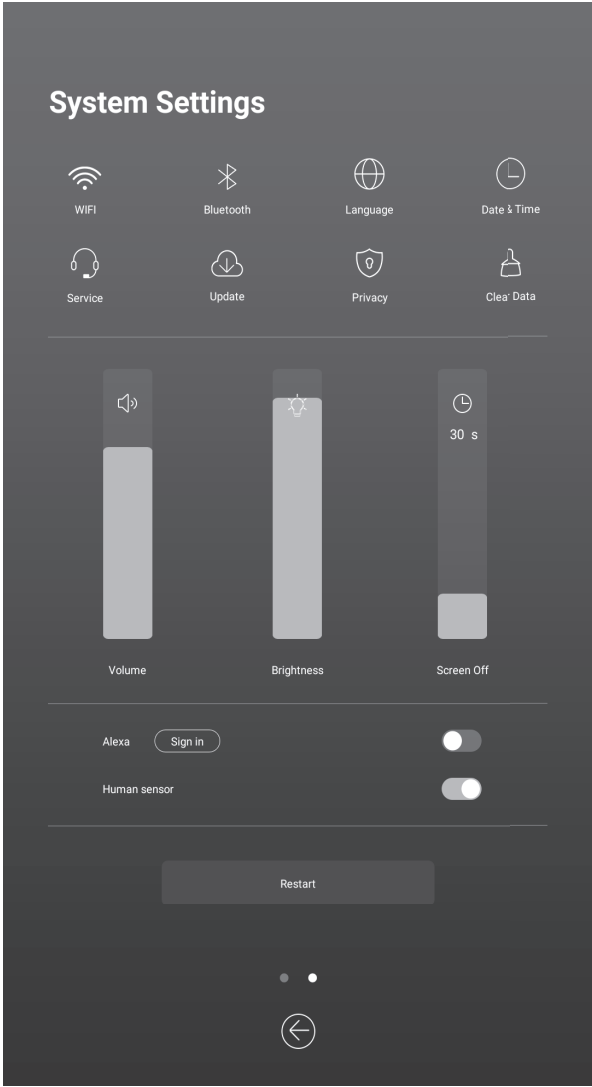

Before first use

- ▶ Remove all packaging materials, including the foamed plastic seats and adhesive tapes for securing accessories. Keep them out of children's reach and dispose them in an environmentally friendly manner.
- ▶ Check the Packing List for all items listed, and contact the Seller if any Inconsistencies.
- ▶ Place the Refrigerator at a location meeting all following conditions:
 - Keep it away from heat source and sunlight and avoid environment that is damp and too cold
 - The refrigerator should be placed on solid ground. When a greater height is required, steady, hard and incombustible cushion block should be selected. If there is a slight sway, the adjustable black footing in the front of the whole refrigerator could be adjusted.
 - Turn clockwise to raise up the Refrigerator.
 - Turn counterclockwise to lower down the Refrigerator.

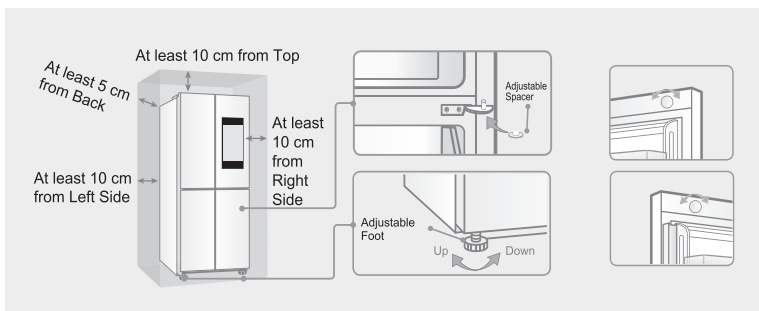

1. When the two doors are uneven, adjustable pad which has been put in the gift bag may be used for fine tuning, finally making the two doors even:
 - Take away the adjustable pad and lift the lower door, stuck the pad on the chain shaft with pliers.
 - If they are still uneven, please don't install it with force to avoid scratch or damage to the decorative bar of the door.
2. When the refrigeration door is uneven front-end, it could be finely tuned by turning the adjustable button on the top of the door

Clean the inside and outside of the appliance with water and a mild detergent before putting any food in it.

- ▶ After the appliance has been levelled and cleaned, wait for at least 2-5 hours before connecting it to the power supply. See Section INSTALLATION.
- ▶ Precool the compartments at high settings before loading with food. The function Power- Freeze helps to cool down the freezer compartment quickly.
- ▶ The refrigerator, freezer and MyZone compartment temperature are automatically set to 5°C, -18°C and -6°C respectively. These are the recommended settings. If desired, you can change these temperatures manually. Please see ADJUST THE TEMPERATURE.

First electrification

When the refrigerator is connected to the power for the first time, the display is lit.

Display blackout/lit

Display blackout: When the door is closed and there is no operation within certain time, the display will switch off automatically.

Display lit: When the display is off, it will be lit by touching any position or walking past or open any door within human sensing range (with human sensing on). When the display is lit, the logo lamp on the top right of refrigeration door will be lit, and vice versa.

5.1 Adjusting temperature in refrigeration compartment (1 to 9°C)

Tap Setting button on a home screen and adjust temperature in refrigeration compartment by adjusting the button from 1 to 9 °C.

5.2 Adjusting temperature in MyZone compartment (-20 to 5°C)

Tap Setting button on a home screen and adjust temperature in MyZone compartment by adjusting the button from -20 to 5 °C.

5.3 Adjusting temperature of freezing compartment (-23 to -15°C)

Tap Setting button on a home screen and adjust temperature in freezing compartment by adjusting the button from -23 to -15 °C.

**WARNING!**

When the temperature is set, the system will automatically confirm and save the set temperature in case that there is no button operation with 5 seconds.

Special function of the refrigerator

The special functions of the refrigerator are divided into four types: Super cool, Super freeze, AutoSet, and Holiday. Tap the function icon to turn on the function (the pop-up window will inform you, that the function is selected, close it by tapping the sign „X“ in upper right corner) tap it again to turn it off. When the functions are mutually exclusive, the original function goes automatically off.

5.4 Super Cool

In Super cool mode, the refrigeration temperature is set to 1 °C. If the Super cool is activated, the refrigerating temperature can not be adjusted, but freezing and MyZone temperature can be adjusted. Super cool function goes off automatically after 3 hours. After this period, the refrigerator will run according to the latest setting before entering the Super cool mode. When the Super Cool is activated, the smart and holiday functions cannot be turned on at the same time.

5.5 Super Freeze

The Super freeze function is designed to maintain the nutritional value of the food in the freezer. It freezes the food in a short time. If you freeze a large amount of food at one time, it is recommended that you set the Super freeze function 24 hours in advance to lower the freezer temperature. When the food is added, the freezing speed of the freezer compartment is increased, and the food can be quickly frozen, thereby effectively locking the nutrition of the food and facilitating storage. Super freeze function goes off automatically after 50 hours. After this period, the freezer will run according to the latest setting before entering the Super freeze mode.

5.6 AutoSet function

In the AutoSet mode, the refrigerating/freezing is set to 5 °C / -18 °C, respectively. In this mode, the temperature of the refrigerating compartment and the freezing compartment cannot be adjusted. If the Super cool, Super freeze or Holiday function is set, the AutoSet function automatically closes and exits.

5.7 Holiday function

The holiday function is designed to facilitate the long-term use of the refrigerating compartment. In the holiday state, the refrigerating temperature is set to 17 °C, so that the refrigerator can not cause odor due to excessive temperature, and energy consumption can be saved. In the holiday state, the temperature of the refrigeration can not be adjusted, but the temperature of MyZone compartment and the freezer compartment can be adjusted.

**WARNING!**

Please clear the refrigeration compartment before entering Holiday function to avoid food deterioration in it. When Holiday function is activated, Auto Set and Super Cool function cannot be activated simultaneously.

5.8 WIFI

Automatically refresh available WIFI by clicking on the refresh icon on the upper right screen. Choose one of the available WiFi networks to connect the product to the internet. If the network requires the password, please, enter the password to connect. If there is no need to enter the password, connection to wifi will run automatically.

5.9 Bluetooth

Tap to enter the Bluetooth connection page. Follow the steps on the screen to complete the required operations.

5.10 Language setting

Tap the language button to show the language setting pop-up window. Choose one of the displayed languages to set the language of the menu. If the corresponding third-party resources support multiple languages, they will switch at the same time. after switching to the selected language.

5.11 Date and time

You can follow the steps to set the date, time and time zone manually.

Clear data

Clear data button performs two functions:

1. You can clear the data you interact with the screen, mainly personal information such as photo album, message board, preference information etc., so it is recommended that you perform this operation with caution;
2. Clear the cache memory.

5.12 Service

Service provides after-sales service. If you find any problems during use, you can apply for repair according to the Service guide page.

5.13 Clear data

The Clear data button performs two functions:

1. Clear your personal information data, mainly photo album, message board, preference information, etc., it is recommended to proceed with caution;
2. Clear the memory.

5.14 Update

You can click this button to upgrade the version. If there is no latest version, the message „Already latest version“ will be displayed. If there is the latest version, you can click the operation step to upgrade. It should be noted that the content of each upgrade is different, and it has a relationship with your network. Therefore, the time required for each upgrade is different. Please be patient.

5.15 Privacy

Privacy provides the switches of Camera, Location, and Microphone. You can manage the appliance permissions and User Agreement in this section. User agreement provides an explanation of some of the problems you may encounter during use, as well as protecting your rights. It is recommended that you read them carefully.

Tips on storing fresh food


Storing into the refrigerator compartment

- ▶ Keep your fridge temperature below 5°C.
- ▶ Hot food must be cooled to room temperature before storing in the appliance.
- ▶ Foods stored in the refrigerator should be washed and dried before storing
- ▶ Food to be stored should be properly sealed to avoid odour or taste alterations.
- ▶ Do not store excessive quantities of food. Leave spaces between foods to allow cold air flowing around them, for a better and more homogeneous cooling.
- ▶ Foods eaten daily should be stored at the front of the shelf.
- ▶ Leave a gap between foods and the inner walls, allowing air flowing. In special way don't store foods against the rear wall: foods could freeze against rear wall. Avoid direct contact of food (especially oily or acidic food) with the inner liner, as oil/acid can erode the inner liner. Clean away oily/acid dirt whenever it is found.
- ▶ Defreeze frozen food in the fridge storage compartment. This way, you can use the frozen food to decrease the temperature in the compartment and save energy.
- ▶ The ageing process of fruit and vegetables such as courgettes, melons, papaya, banana, pineapple, etc. can be accelerated in the refrigerator. Therefore, it is not advisable to store them in the refrigerator. However, the ripening of strongly green fruits can be promoted for a certain period. Onions, garlic, ginger and other root vegetables should also be stored at room temperature.
- ▶ Unpleasant odours inside the fridge are a sign that something has spilled and cleaning is required. See CARE AND CLEANING.
- ▶ Different foods should be placed in different areas according to their properties:



Notice

- ▶ Please keep the distance more than 10 mm between the food placed and air duct or sensors to ensure the cooling effect.

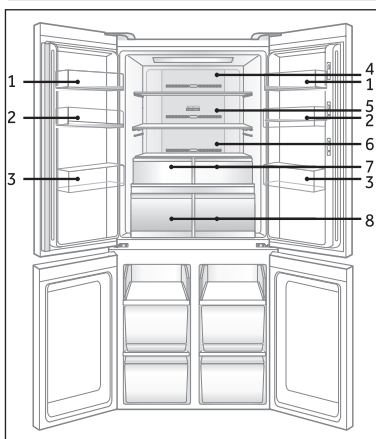

1. Butter, cheese, etc.
2. Eggs, cans, canned food, spices, etc.
3. Drinks and bottled foods.
4. Pickled foods, canned food, etc.
5. Meat products, snack foods, pasta, canned food, milk, tofu, dairy etc.
6. Cooked meat, sausages, etc.
7. Dry box drawer : dry fruits, butter oils, chocolate
8. Humidity box drawer: Fruit, vegetables, salad, etc.

Storage into the freezer compartment

- ▶ Keep the freezer temperature at -18°C.
- ▶ 24 hours before freezing switch on the Power-Freeze function; -for small quantities of food 4-6 hours are sufficient.
- ▶ Hot food must be cooled to room temperature before storing in the freezer compartment.
- ▶ Food cut into small portions will freeze faster and be easier to defrost and cook. The recommended weight for each portion is less than 2.5 kg
- ▶ It is better to pack food before putting it into the freezer. The outside of the packaging must be dry to avoid bags sticking together. Packaging materials should be odour-free, airtight, non-poisonous and nontoxic.
- ▶ In order to avoid expiration of storage periods, please note the freezing date, time limit and name of the food on the packaging according to the storage periods of different foods.
- ▶ **WARNING!:** Acid, alkali and salt etc. could erode the internal surface of the freezer. Do not place the food having these substances (e.g. sea fish) directly on the internal surface. Salt water in the freezer should be cleaned up immediately.
- ▶ Do not exceed the food storage times recommended by the manufacturers. Only take the required amount of food out of the freezer.
- ▶ Consume defrosted food quickly. Defrosted food cannot be re-frozen unless it is first cooked, otherwise it may be inedible.
- ▶ Do not load excessive quantities of fresh food in the freezer compartment. Refer to the freezing capacity of the freezer – See TECHNICAL DATA or data at the type plate.
- ▶ Food can be stored in the freezer at a temperature of at least -18°C for 2 to 12 months, depending on its properties (e.g., meat: 3-12 months, vegetables: 6-12 months)
- ▶ When freezing fresh food, avoid bringing it in contact with already frozen food. Risk of thawing!


When storing commercially frozen foods, please follow these guidelines:

- ▶ Always follow manufacturers' guidelines for the length of time you should store food for. Do not exceed these guidelines!
- ▶ Try to keep the length of time between purchase and storage as short as possible to preserve food quality.
- ▶ Buy frozen foods, which have been stored at a temperature of -18°C or below. Avoid buying food which has ice or frost on the packaging – This indicates that the products might have been partially defrosted and refrozen at some point – temperature rises affect the quality of food.



Notice


- ▶ Please keep the distance more than 10 mm between the food placed and air duct to ensure the cooling effect.

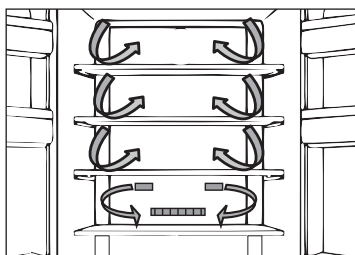

Multi-air-flow

The refrigerator is equipped with a multi-air-flow system, with which cool air flows are located on every shelf

level. This helps to maintain a uniform temperature to ensure that your food is kept fresher for longer.

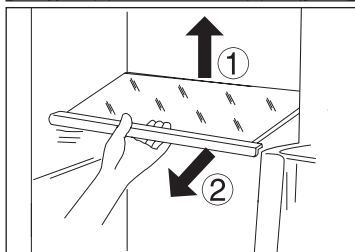

Adjustable shelves


The height of the shelves can be adjusted to fit your storage needs.

1. To relocate a shelf, remove it first by uplifting its hind edge (1) and pulling it out (2).
2. To reinstall it, put it on the lugs on both sides and push it to the most rearward position until the rear of the shelf is fixed inside the slots in the sides



Notice

Ensure that all ends of a shelf are level.

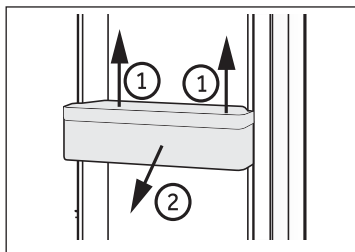

Removable door racks

The door racks can be removed for cleaning:

Place hands on each side of the rack, lift it upwards (1) and pull it out (2).

In order to insert the door rack, the above steps are carried out in reverse order.



Notice

When the appliance is switched on, it may take up to 12 hours for the correct temperatures to be reached.

Humidity box drawer


In this compartment the humidity level is higher than the refrigerator compartment. It is controlled automatically by the system and is suit-able to store fruits,vegetables, salads etc.



Notice

Do not remove the plastic cover inside the two zones. They maintain the humidity.

Cold-sensitive fruits like pineapple, avocado, bananas, grapefruits and vegetables such as potatoes, aubergines, beans, cucumbers, zucchini and tomatoes and cheese should not be stored in these two drawers.

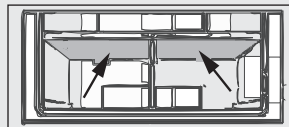



Dry box drawer

In this compartment the humidity level is lower than the refrigerator compartment. This drawer is suitable to store dry fruit and other dry food with low water content like butter, fats and oils or chocolate.

My Zone compartment

The appliance is equipped with a My Zone compartment. Depending on the purpose desired temperature can be chosen. Storage temperature can be adjusted between -18 °C and +5°C:

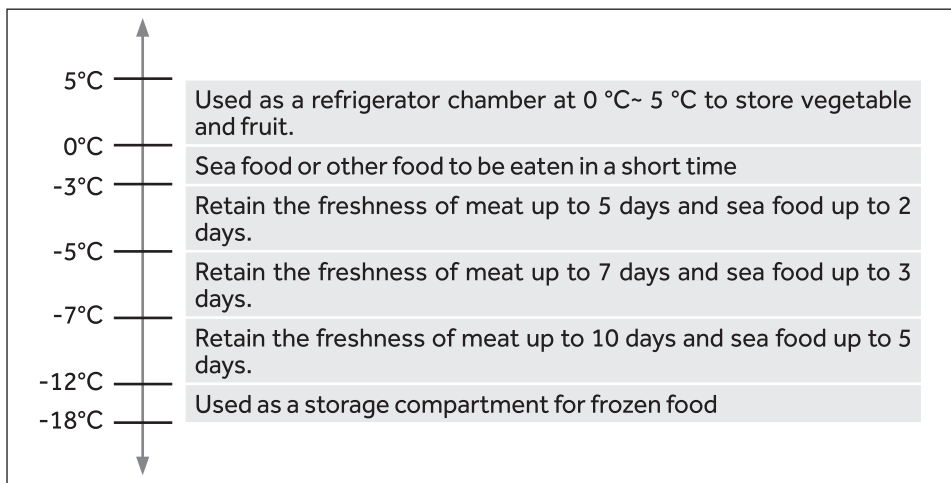


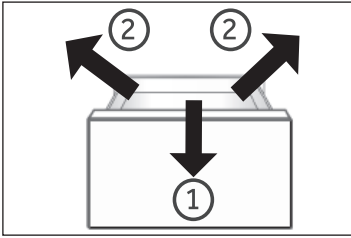

Removable freezer drawer

To remove the drawer out, pull out to the maximum extent (1), lift and remove (2).

In order to insert the drawer, the above steps are carried out in reverse order.

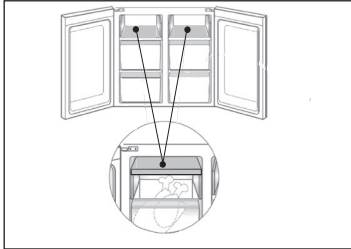

Storing large items

Large items of e.g. frozen food can be stored after:

- ▶ removing and overturning by 180° the upper freezing tray, or
- ▶ after removing both upper freezing trays as well as the middle freezer drawer and storing the food directly on the shelf.

The Light

The LED interior light comes on when the door is opened. The performance of the lights is not affected by any of the appliances other settings.



Energy saving tips

- ▶ Make sure the appliance is properly ventilated (see INSTALLATION).
- ▶ Do not install the appliance in direct sunlight or in the near of heat sources (e.g. stoves, heaters).
- ▶ Avoid unnecessarily low temperature in the appliance. The energy consumption increases the lower the temperature in the appliance is set.
Functions like POWER- FREEZE consume more energy.
- ▶ Allow warm food to cool down before placing it in the appliance.
- ▶ Open the appliance door as little and as briefly as possible.
- ▶ Do not overfill the appliance to avoid obstructing the air flow.
- ▶ Avoid air within the food packaging.
- ▶ Keep door seals clean so that the door always closes correctly.
- ▶ Defreeze frozen food in the fridge storage compartment.



WARNING!

Disconnect the appliance from the power supply before cleaning.

Cleaning


Clean the appliance when only little or no food is stored.

The appliance should be cleaned every four weeks for good maintenance and to prevent bad stored food odors.



WARNING!

- ▶ Do not clean the appliance with hard brushes, wire brushes, detergent powder, petrol, amyl acetate, acetone and similar organic solutions, acid or alkaline solutions. Please clean with special refrigerator detergent to avoid damage.
- ▶ Do not spray or flush the appliance during cleaning.
- ▶ Do not use water spray or steam to clean the appliance.
- ▶ Do not clean the cold glass shelves with hot water. Sudden temperature change may cause the glass to break.
- ▶ Do not touch the inside surface of the freezer storage compartment, especially with wet hands, as your hands may freeze onto the surface.
- ▶ In case of heating check the condition of frozen goods.

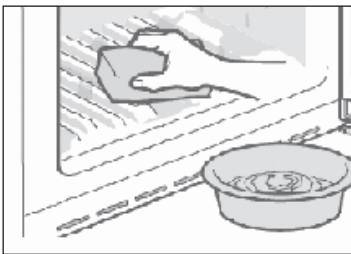

- ▶ Always keep the door gasket clean.
- ▶ Clean the inside and housing of the appliance with a sponge dampened in warm water and neutral detergent.
- ▶ Rinse and dry with soft cloth.
- ▶ Do not clean any of the parts of the appliance in a dishwasher.
- ▶ Allow at least 5 minutes before restarting the appliance as frequent starting may damage the compressor.

Defrosting

The defrosting of the refrigerator and the freezer compartment are done automatically; no manual operation is needed.

Replacing the LED-lamps



WARNING!

Do not replace the LED lamp yourself, it must only be replaced by either the manufacturer or the authorised service agent.

The lamp adopts LED as its light source, featuring low energy consumption and long service life. If there is any abnormality, please contact the customer service. See CUSTOMER SERVICE.

Parameters of the lamp:

Fridge compartment: 12 V max 5 W

Freeze compartment: 12 V max 2 W

Non-use for a longer period

If the appliance is not used for an extended period of time, and you will not use only the Holiday-function or the fridge off function for the refrigerator:

- ▶ Take out the food.
- ▶ Unplug the power cord.
- ▶ Clean the appliance as described above.
- ▶ Keep the doors open to prevent the creation of bad odours inside.



Notice

When the appliance is switched on, it may take up to 12 hours for the correct temperatures to be reached.

Moving the appliance

1. Remove all food and unplug the appliance.
2. Secure shelves and other moveable parts in the fridge and the freezer with adhesive tape.
3. Do not tilt the refrigerator more than 45° to avoid damaging the refrigerating system.



WARNING!

- ▶ Do not lift the appliance by its handles.
- ▶ Never place the appliance horizontally on the ground.

9. Troubleshooting

EN

Many occurring problems could be solved by yourself without specific expertise. In case of a problem please check all shown possibilities and follow below instructions before you contact an after sales service. See CUSTOMER SERVICE.



WARNING!

- ▶ Before maintenance, deactivate the appliance and disconnect the mains plug from the mains socket.
- ▶ Electrical equipment should be serviced only by qualified electrical experts, because improper repairs can cause considerable consequential damages.
- ▶ A damaged supply should only be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Problem	Possible Cause	Possible Solution
The compressor does not work.	<ul style="list-style-type: none">• Mains plug is not connected in the mains socket.• The appliance is in the defrosting cycle	<ul style="list-style-type: none">• Connect the mains plug.• This is normal for an automatic defrosting
The appliance runs frequently or runs for a too long period of time.	<ul style="list-style-type: none">• The indoor or outdoor temperature is too high.• The appliance has been off power for a period of time.• A door/drawer of the appliance is not tightly closed.• The door/drawer has been opened too frequently or for too long.• The temperature setting for the freezer compartment is too low.• The door/drawer gasket is dirty, worn, cracked or mismatched.• The required air circulation is not guaranteed.	<ul style="list-style-type: none">• In this case, it is normal for the appliance to run longer.• Normally, it takes 8 to 12 hours for the appliance to cool down completely.• Close the door/drawer and ensure the appliance is located on a level ground and there is no food or container jarring the door.• Do not open the door/drawer too frequently.• Set the temperature higher until a satisfactory refrigerator temperature is obtained. It takes 24 hours for the refrigerator temperature to become stable.• Clean the door/drawer gasket or replace them by the customer service.• Ensure adequate ventilation.
The inside of the refrigerator is dirty and/or smells.	<ul style="list-style-type: none">• The inside of the refrigerator needs cleaning.• Food of strong odour is stored in the refrigerator.	<ul style="list-style-type: none">• Clean the inside of the refrigerator.• Wrap the food thoroughly..

Problem	Possible Cause	Possible Solution
It is not cold enough inside the appliance.	<ul style="list-style-type: none"> The temperature is set too high. Too warm goods has been stored. Too much food has been stored at one time. The goods are too close to each other. A door/drawer of the appliance is not tightly closed. The door/drawer has been opened too frequently or for too long. 	<ul style="list-style-type: none"> Reset the temperature. Always cool down goods before storing them. Always store small quantities of food. Leave a gap between several foods allowing air flowing. Close the door/drawer. Do not open the door/drawer too frequently.
It is too cold inside the appliance.	<ul style="list-style-type: none"> The temperature is set too low. The Power-Freeze function is activated or is running too long. 	<ul style="list-style-type: none"> Reset the temperature. Switch off the Power- Freeze function
Moisture formation on the inside of the refrigerator compartment.	<ul style="list-style-type: none"> The climate is too warm and too-damp. A door/drawer of the appliance is not tightly closed. The door/drawer has been opened too frequently or for too long. Food containers or liquids are left open. 	<ul style="list-style-type: none"> Increase the temperature. Close the door/drawer. Do not open the door/drawer too frequently. Let hot foods cool to room temperature and cover foods and liquids.
Moisture accumulates on the refrigerator outside surface or between the doors/door and drawer.	<ul style="list-style-type: none"> The climate is too warm and too damp. The door/drawer is not closed tightly. The cold air in the appliance and the warm air outside it condensates. 	<ul style="list-style-type: none"> This is normal in damp climate and will change when the humidity decreases. Ensure that the door/drawer is tightly shut.
Strong ice and frost in the freezer compartment.	<ul style="list-style-type: none"> The goods were not adequately packaged. A door/drawer of the appliance is not tightly closed. The door/drawer has been opened too frequently or for too long. The door/drawer gasket is dirty, worn, cracked or mismatched. Something on the inside prevents the door/drawer to close properly. 	<ul style="list-style-type: none"> Always pack the goods well. Close the door/drawer. Do not open the door/drawer too frequently. Clean the door/drawer gasket or replace them by new ones. Reposition the shelves, door racks, or internal containers to allow the door/drawer to close.
The sides of the cabinet and door strip get warm.	<ul style="list-style-type: none"> - 	<ul style="list-style-type: none"> This is normal.

Problem	Possible Cause	Possible Solution
The appliance makes abnormal sounds.	<ul style="list-style-type: none"> The appliance is not located on level ground. The appliance touches some object around it. 	<ul style="list-style-type: none"> Adjust the feet to level the appliance. Remove objects around the appliance.
A slight sound is to be heard similar to that of flowing water.	<ul style="list-style-type: none"> - 	<ul style="list-style-type: none"> This is normal.
You will hear an alarm beep.	<ul style="list-style-type: none"> The fridge storage compartment door is open. 	<ul style="list-style-type: none"> Close the door or silence the alarm manually.
You will hear a faint hum.	<ul style="list-style-type: none"> The anti-condensation system is working 	<ul style="list-style-type: none"> This prevents condensation and is normal
The interior lighting or cooling system does not work.	<ul style="list-style-type: none"> Mains plug is not connected in the mains socket. The power supply is not intact. The LED-lamp is out of order. 	<ul style="list-style-type: none"> Connect the mains plug. Check the electrical supply to the room. Call the local electricity company! Please call the service for changing the lamp.

Power interruption


In the event of a power cut, food should remain safely cold for about 12 hours. Follow these tips during a prolonged power interruption, especially in summer:

- ▶ Open the door/drawer as few times as possible.
- ▶ Do not put additional food into the appliance during a power interruption.
- ▶ If prior notice of a power interruption is given and the interruption duration is longer than 12 hours, make some ice and put it in a container in the top of the refrigerator compartment.
- ▶ An inspection of the goods is required immediately after the interruption.
- ▶ As temperature in the refrigerator will rise during a power interruption or other failure, the storage period and edible quality of food will be reduced. Any food that defrosts should be either consumed, or cooked and refrozen (where suitable) soon afterwards in order to prevent health risks.

Memory function during power interruption

After restoration of power the appliance continues with the settings that were set before the power failure.

Space requirement

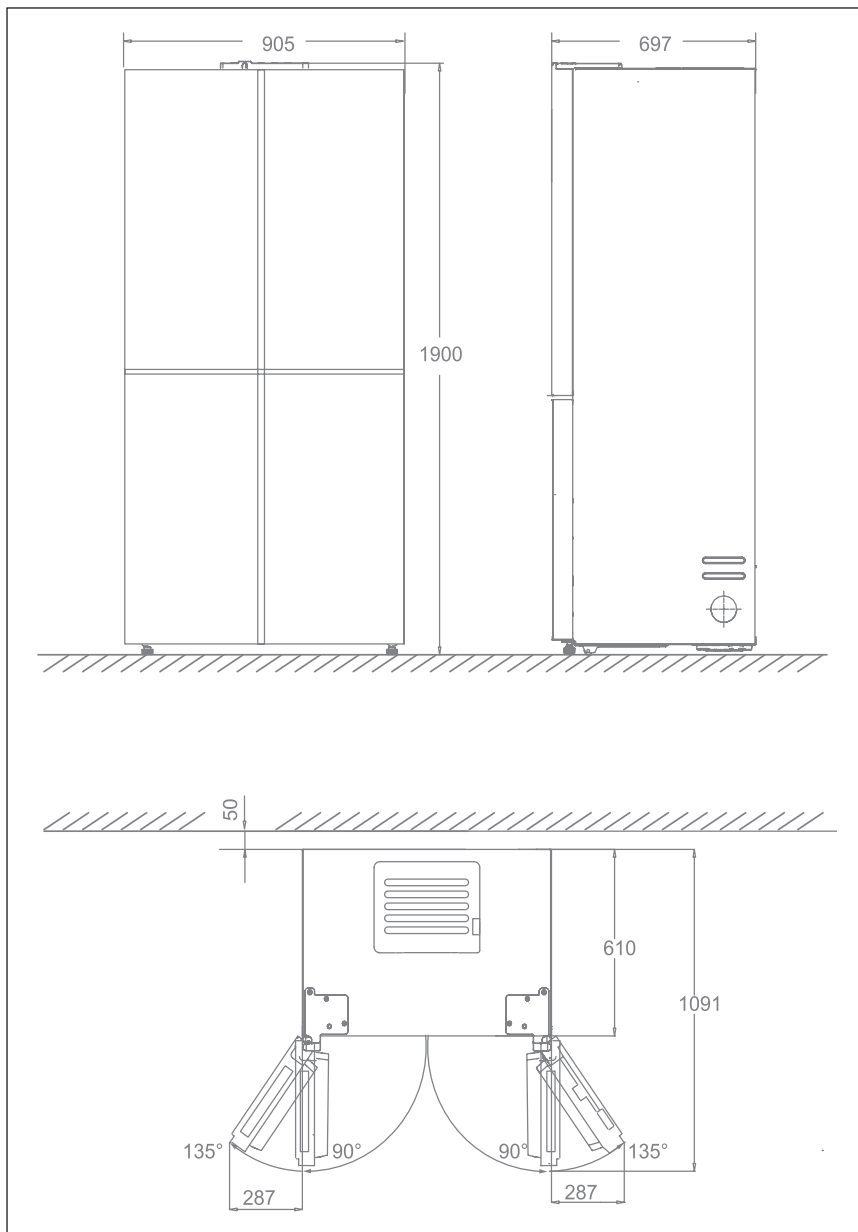

Unpacking




WARNING!

- ▶ The appliance is heavy. Always handle with at least two persons.
 - ▶ Keep all packaging materials out of children's reach and dispose them in an environmentally friendly manner.
-
- ▶ Take the appliance out of the packaging.
 - ▶ Remove all packaging materials.


Environmental conditions

The room temperature should always be between 10° C and 43° C, since it can influence the temperature inside the appliance and its energy consumption. Do not install the appliance near other heat-emitting appliances (ovens, refrigerators) without isolation.

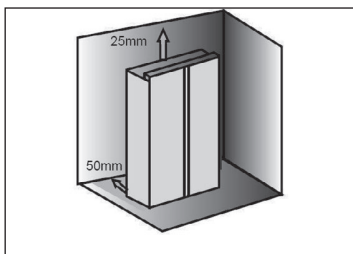

Ventilation cross-section

To achieve sufficient ventilation of the appliance for safety reasons, the information of the required ventilation cross sections must be observed.

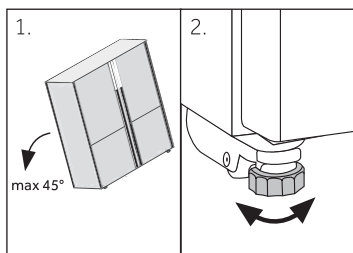

Aligning the appliance

The appliance should be placed on a flat and solid surface.


1. Tilt the appliance slightly backwards.
2. Set the feet to the desired level.

Make sure the distance to the wall on the hinge side is at least 100 mm for the door to open properly.

Aligning the appliance

The appliance should be placed on a flat and solid surface.

1. Tilt the appliance slightly backwards.
2. Set the feet to the desired level.
Make sure the distance to the wall on the hinge side is at least 100 mm for the door to open properly.
3. The stability can be checked by alternately bumping on the diagonals. The slightly swaying should be the same in both directions. Otherwise the frame can warp; possible leaking door seals are the result. A low tendency to the rear facilitates the closing of the door.

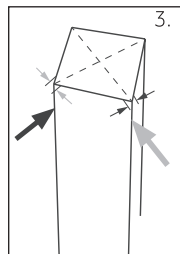


Fine tuning of the doors

If the doors are not in one level, this mismatch can be remedied by following:


A) Using adjustable foot

Rotate the adjustable foot according to the direction of arrow to turn up or down the foot.

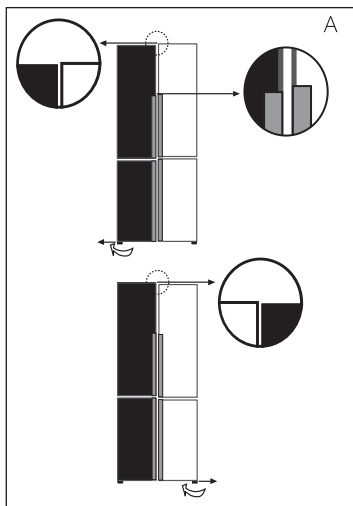


B) Using spacers

- ▶ Open the upper door and lift it.
- ▶ Carefully clip the spacer (enclosed in the accessory bag) in the white plastic ring of the middle hinge by hand or using tools like pliers. Do not scratch or bruise the door.

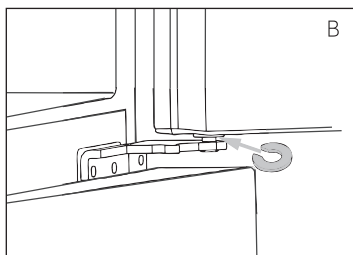

Notice

In the future use of refrigerator, doors uneven phenomenon may occur to the weight of stored food. Then please adjust according to the above methods.

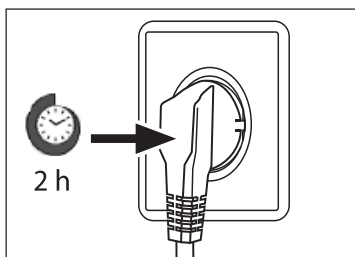

Waiting time

To the maintenance-free lubrication oil is located in the capsule of the compressor. This oil can get through the closed pipe system during slanting transport. Before connecting the appliance to the power supply you have to wait 2-5 hours so that the oil runs back into the capsule.

Electrical connection

Before each connection check if:

- ▶ power supply, socket and fusing are appropriate to the rating plate.
- ▶ the power socket is earthed and no multi-plug or extension.
- ▶ the power plug and socket are strictly according.

Connect the plug to a properly installed household socket.



WARNING!

To avoid risks a damaged power cord must be replaced by the customer service (see warranty card).

Trade mark	Haier
Model identifier	HRB-758SIKGU1 HRF-758SIBGU1
Category of the model	Refrigerator-freezer
Gross Capacity(L)	651
Gross Fridge Capacity(L)	421
Gross Freezer Capacity(L)	115
Gross Convertible Capacity(L)	115
Frostfree system	Yes
Climate class This appliance is intended to be used at an ambient temperature between:	SN-N-ST-T 10°C and 43°C.
Airborne acoustical noise emissions (dB(A) re 1pW)	39
Construction type	Freestanding

¹⁾ based on standard test results for 24 hours. Actual energy consumption will depend on how the appliance is used and where it is located.

Additional technical data

Voltage / Frequency	220-240V ~/ 50Hz
Input current (A)	2
Main fuse (A)	15
Coolant	R600a
Dimensions (H/W/D in mm)	1900 /905/697
RF frequency 2.4G	2.4 GHz ~ 2.4835 GHz
RF frequency 5G	5.15~5.25GHz & 5.725~5.825GHz
Max transmitted power of wireless 2.4G	16 dBm ± 1.5 dB
Max transmitted power of wireless 5G	15 dBm ± 2 dB

12. Customer service

EN

We recommend our Haier Customer Service and the use of original spare parts.
If you have a problem with your appliance, please first check section TROUBLESHOOTING.

If you cannot find a solution there, please contact

- ▶ your local dealer or
- ▶ Check the Warranty Card supplied with the product in case of warranty.

To contact our Service, ensure that you have the following data available.
The information can be found on the rating plate.

Model _____ Serial No. _____

Also check the Warranty Card supplied with the product in case of warranty.

Haier



0060529523