

Wireless Speaker

Reference Guide
Guide de référence
Guia de referência
دليل مرجعى



* 5 0 4 7 0 6 6 9 1 * (1)

SRS-XV800

Model: YY7854E

©2023 Sony Corporation
Printed in China
<https://www.sony.net/>

English Wireless Speaker

Model: YY7854E

The term "product" in this document refers to the unit or its accessories.

Do not expose the unit to naked flame sources (for example, lighted candles).

Do not install the product in a confined space, such as a bookcase or built-in cabinet.

Do not expose the batteries (battery pack or batteries installed) to excessive heat, such as sunshine, fire or the like, for a long time.

Do not subject the batteries to extreme low temperature conditions that may result in overheating and thermal runaway.

Do not dismantle, open, or shred secondary batteries.

In the event of a secondary battery leaking, do not allow the liquid to come in contact with the skin or eyes. If contact has been made, wash the affected area with copious amounts of water and seek medical advice.

Secondary batteries need to be charged before use. Always refer to the manufacturer's instructions or product manual for proper charging instructions.

After extended periods of storage, it may be necessary to charge and discharge the secondary batteries several times to obtain maximum performance.

Dispose of properly.

The unit is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the unit itself has been turned off.

As the power cord is used to disconnect the unit from the mains, connect the unit to an easily accessible AC outlet. Should you notice an abnormality in the unit, disconnect the power cord from the AC outlet immediately.

This product has magnet(s) which may interfere with pacemakers, programmable shunt valves for hydrocephalus treatment, or other medical devices. Do not place this product close to persons who use such medical devices. Consult your doctor before using this product if you use any such medical device.

This unit has been tested and found to comply with the limits set out in the EMC regulation using a connection cable shorter than 3 m.

Inserting the USB plug or AC plug while it is wet may cause a short circuit due to foreign matter or liquid (tap water, seawater, soft drinks, etc.) getting on the main unit or charging cable.

This may cause malfunctions or abnormal overheating.

Never insert the USB plug or AC plug while the main unit or charging cable is wet.

Licenses

This product contains software that Sony uses under a licensing agreement with the owner of its copyright. We are obligated to announce the contents of the agreement to customers under requirement by the owner of copyright for the software. Please access the following URL and read the contents of the license:
<https://rd1.sony.net/help/speaker/sl/23/>



Use of the Made for Apple badge means that an accessory has been designed to connect specifically to the Apple product(s) identified in the badge, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards.

Please note that the use of this accessory with an Apple product may affect wireless performance.

This product is protected by certain intellectual property rights of Microsoft Corporation. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft or an authorized Microsoft subsidiary.

MPEG Layer-3 audio coding technology and patents licensed from Fraunhofer IIS and Thomson.

Disclaimer regarding services offered by third parties

Services offered by third parties may be changed, suspended, or terminated without prior notice.

Sony does not bear any responsibility in these sorts of situations.

Notes on water resistant feature (Read before using the unit)

The supplied accessories are not water resistant.

On water resistant performance of the unit

With the cap securely closed, this unit has a drip-proof performance equivalent to IPX4 (when placed vertically)/IPX2 (when placed horizontally), which are "protection against ingress of water" ratings defined by IEC 60529 "Degrees of protection provided by enclosures (IP Code)" for electrical equipment.

The supplied accessories and the connectors of this unit (AC IN/USB/AUDIO IN/OPTICAL IN/MIC/GUITAR) are neither water resistant nor dustproof. To reduce the risk of fire or electric shocks, do not expose the unit to water or droplets while using any connectors (AC IN/USB/AUDIO IN/OPTICAL IN/MIC/GUITAR).


Note that malfunctions as a result of water immersion or dust intrusion caused by misuse by the customer are not covered by the warranty.

To maintain water resistant performance

Carefully note the precautions below to ensure proper use of the unit.

- This unit does not have a design that is resistant to water pressure. Do not put the unit in the water or directly under the water gushing out of the faucet to avoid a malfunction.
- Do not pour high-temperature water or blow hot air from a hair dryer or any other appliance on the unit directly. Also never use the unit in a place subject to high temperatures, such as in a sauna or near a heat source.

CAUTION : Handle the cap with care. The cap plays a very important role in maintenance of the water resistant performance. When using the unit, make sure that the cap is closed completely. When closing the cap, be careful not to allow foreign objects inside. If the cap is not closed completely the water resistant performance may deteriorate and may cause a malfunction of the unit as a result of water entering the unit.

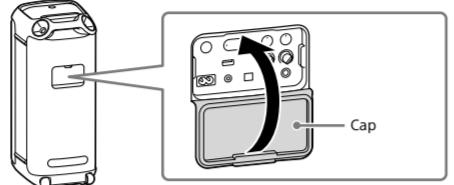

How to care for the unit

You can use the unit more comfortably and for a longer period of time by following the maintenance procedure below.

- If the surface becomes dirty, wipe the surface using a soft, dry cloth or a cloth soaked in water or lukewarm water and wrung well. Depending on the type of dirt, it may not be possible to remove it.
- If the surface of the unit gets dirty, do not use detergent, thinner, benzine, alcohol, etc. to clean the unit because it will affect the water repellent function of the unit.
- Especially in cold regions, be sure to wipe off the moisture after using the unit. Leaving moisture on its surface may cause the unit to freeze and malfunction.

Precautions

About the power cord

If the unit is not used for an extended period, unplug the AC power cord from the AC outlet. When unplugging the unit, be sure to grasp the plug. Never pull on the cord itself.

On placement

- Do not insert foreign objects from the opening of the speaker unit.
- To eliminate the risk of malfunctions, avoid the following locations when placing or leaving this unit.
 - A place subject to high temperatures, such as under direct sunlight or lighting equipment, near a heat source, or in a sauna
 - Inside a vehicle with the windows closed (especially in summertime)
 - A place exposed to hot air, such as from a hair dryer
- Place this unit on a flat, level surface. When placed on a sloped surface, the unit may fall over or fall off the surface due to its own vibration, resulting in injuries, malfunctions, or performance degradation.
- Depending on the conditions where this unit is placed, it may fall over or fall off the surface. Do not leave it near valuables near the unit.
- Thin metal objects (such as pins) Keep objects susceptible to magnetism (recorded tapes, watches, cash cards and credit cards with magnetic coding, etc.) away from the unit. When you carry around the unit, keep this in mind as well.
- If your skin remains in contact with the handle for a long time while the light is turned on, there is a risk of low-temperature burns. To carry a speaker while it is powered on, turn the light (lighting function) off.

Other notes

- Do not use or leave the unit in an extremely cold or hot environment (temperature outside the range of 5°C ~ 35°C). If the unit is used or left in outside the above range, the unit may automatically stop to protect internal circuitry.
- If you use this unit for a long time, the temperature of this unit may rise, but it is not a malfunction.
- At high temperature, the charging may stop or the volume may reduce to protect the battery.
- When the unit's light seems bright or glaring, turn up the room lights or turn off the lighting function.
- Put your fingertip directly onto the touch sensor for operations.
- Do not operate the touch sensor with a wet hand to avoid a malfunction.
- Even if you do not intend to use the unit for a long time, charge the battery to its full capacity once every 6 months to maintain its performance.

Trademarks

- Android and Google Play are trademarks of Google LLC.
- The LDAC™ name is a trademark of Sony Group Corporation or its affiliates.
- Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries.
- The BLUETOOTH® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Sony Group Corporation and its subsidiaries is under license.
- Apple, the Apple logo, iPhone, iPod and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries.
- App Store is a service mark of Apple Inc., registered in the U.S. and other countries and is used under license.
- iOS is a trademark or registered trademark of Cisco in the U.S. and other countries and is used under license.

All other trademarks and registered trademarks are trademarks or registered trademarks of their respective holders. In this manual, ™ and ® marks are not specified.

Specifications

BLUETOOTH®

Frequency band 2.4 GHz band (2.400 0 GHz - 2.483 5 GHz)

General

- Inputs
 - Type A USB port: Supported USB Device (Mass Storage Class)
 - AUDIO IN jack (Φ 3.5 mm)
 - OPTICAL IN connector (PCM)
 - MIC1 jack (Φ 6.3 mm)
 - MIC2/GUITAR jack (Φ 6.3 mm)

DC OUT Type A USB port (for charging the battery of a connected device) (DC 5 V/MAX. 1.5 A)

Power AC 120 V - 240 V, 50/60 Hz or, using built-in lithium-ion battery

Power consumption Approx. 77 W

Standby power consumption

When BLUETOOTH standby mode is set to on: Approx. 2 W

When BLUETOOTH standby mode is set to off: Approx. 0.5 W

Lithium-ion battery life (while Battery Care mode¹ is not activated)

With playback via BLUETOOTH connection

Approx. 25 hours²

- Volume level: 14

- Sound: MEGA BASS on

- Lighting: off

Approx. 15 hours (default)²

- Volume level: 14

- Sound: MEGA BASS on

- Lighting: on

Approx. 5 hours²

- Volume level: 50 (MAX.)

- Sound: MEGA BASS on

- Lighting: off

Approx. 3.5 hours²

(10 minutes of charging provide approximately 3 hours² of music playback.)

- Volume level: 14

- Sound: MEGA BASS on

- Lighting: off

Time required for charging the built-in rechargeable battery (while Battery Care mode¹ is not activated)

Approx. 3 hours³

(10 minutes of charging provide approximately 3 hours² of music playback.)

- Volume level: 14

- Sound: MEGA BASS on

- Lighting: off

Operating temperatures

5°C ~ 35°C

Battery charging temperatures

5°C ~ 35°C

Dimensions (including projecting parts and controls)

Approx. 317 mm × 720 mm × 375 mm (w/h/d)

Mass (including battery)

Approx. 18.5 kg

Included items

Wireless Speaker (1)

AC power cord (main lead) (2)

Optical digital cable (optical rectangular plug ↔ optical rectangular plug) (1)

Documents (1 set)

¹ Mode for prolonging the durability life of the built-in rechargeable battery by limiting the charging capacity up to approximately 90%. The unit in this mode is capable of playing for a shorter period of time than stated.

² The built-in battery life above is measured using our specified music source. Actual performance time may vary from the listed time due to the volume, songs played, surrounding temperature, and usage conditions.

³ Time required for the empty battery to be fully charged (100%) while the unit is powered off.

Design and specifications are subject to change without notice.

Model YY7854E

5-047-066-91(1)

Printed in China

https://www.sony.net/

©2023 Sony Corporation

