

BRAND INTRODUCTION / 01
PRODUCTS / 02

NAME OF PARTS 02
 PACKING LIST 03
 INSTALLATION AND ADJUSTMENT 03
 SPECIFICATION 03
 SAFETY PRECAUTIONS 04
 USAGE OF DRAIN HOSE 06
 PREPARATION BEFORE WASHING 08
 THE MUST IN WASHING 08
 USAGE OF DETERGENT 08
 USAGE OF THE OPERATION BUTTONS 09
 OPERATING PROCEDURE 10
 CLEANING OR MAINTENANCE 13
 TROUBLE SHOOTING 14
 AFTER WASHING 15
 E-WASTE GUIDELINE 16
 WARRANTY CARD 18


Haier Group—
 Established in 1984, Haier Group is a world-leading provider of solutions to beautiful life. Haier has topped Euromonitor's World Home Appliance Brands and its subsidiary Haier Smart Home Co., Ltd. is among the Fortune Global 500 Companies. Thank you for purchasing Haier product.




The drainage shall be smooth with the drain hose.

1. The drain hose should be installed at height less than 10cm for smooth drainage.


2. Do not trample or press the drain hose

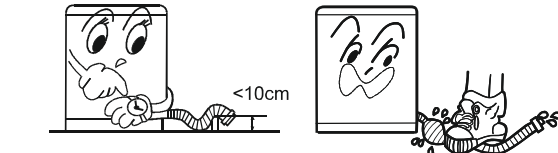

3. If the drain hose is too long, cut it at mid point. To make smooth drainage, cut the front end of the hose slantingly. But the hook of drain pipe can not be installed again.

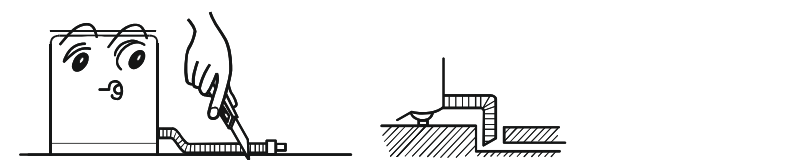



4. If extra drain hose is needed, please make separate purchase. The inner diameter of the extra hose shall not less than 30mm, and the length shall not exceed 1.5m.

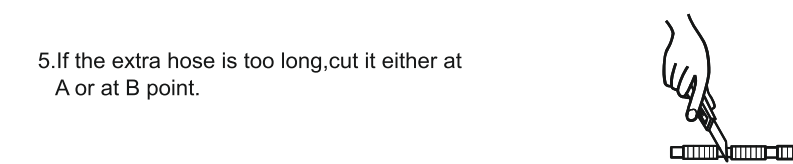

5. If the extra hose is too long, cut it either at A or B point.

Confirm the water faucet

The new hose-sets supplied with the appliance are to be used and that old hose-sets should not be reused

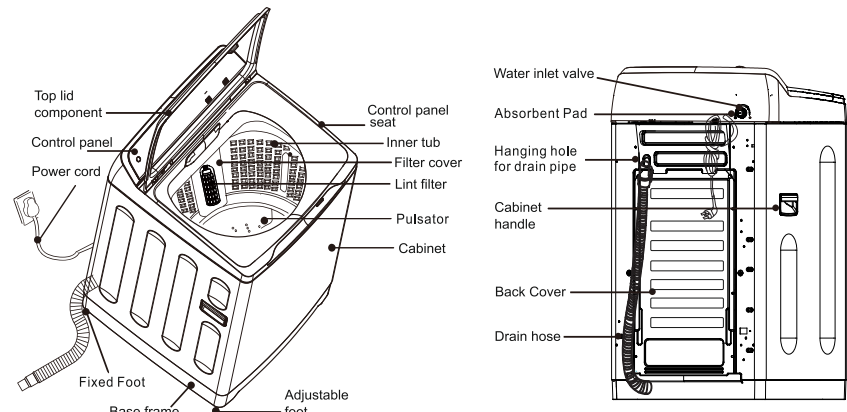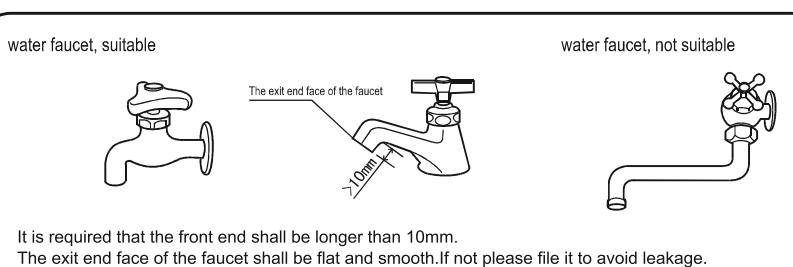

Notes: All illustrations in this manual are given for reference only. Your products and accessories may show differences from these illustrations due to our continuous improvement.

MEANING AND DESCRIPTION OF THE SYMBOLS

	Contents marked with that symbol are related to the safety of the product and the personal safety of the users. Please operate in strict conformity to the contents, otherwise it may cause damage of the machine or endanger the personal safety of the user.
	Contents marked with that symbol are actions forbidden to perform. Performing of those actions may result in damage of the machine or endanger the personal safety of the user.


* Please check if the power receptacle has good earthing condition before using to guarantee your safety.

Name	Quantity	Storage Location
• Automatic washing machine	• One	• Placed inside the Washing machine inner drum.
• Bottom plate	• One	• Inside bag
• User manual	• One	• Inside Accessory bag
• Components of the water inlet hose	• One	• Inside user manual.
• Warranty Card	• One	• Inside user manual.

Please install and adjust the machine according to the requirement of the manual. It is very important for your safety and for operating the machine correctly

INSTALL THE BOTTOM PLATE


- Place the washing machine on the soft laying cloth, the face is towards the upper.
- Insert the bottom cover into the slots of the bottom cover, and then lock in the fitment area
- Install the washing machine on a solid, flat floor without using stand.

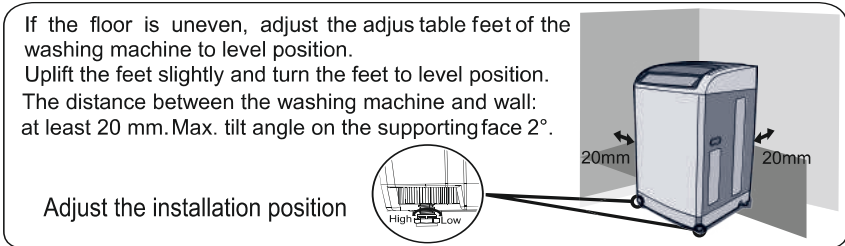

03 SPECIFICATION

Capacity Series	Water Level / Water Quantity	Injection Pressure (MPa)	Rated Voltage / Frequency	Wash & Spin Capacity
HWM75-678 Series	1/20 2/25 3/29 4/34 5/40 6/45 7/52 8/58 9/64 10/70	0.01MPa-1.0MPa	220V-50Hz	7.5 kg
HWM80-678 Series	1/20 2/25 3/29 4/34 5/40 6/45 7/52 8/58 9/64 10/70	0.01MPa-1.0MPa		8.0 kg
HWM90-678 Series	1/20 2/25 3/29 4/34 5/40 6/45 7/52 8/58 9/64 10/70	0.01MPa-1.0MPa		9.0 kg
HSW80-678 Series	1/20 2/25 3/29 4/34 5/40 6/45 7/52 8/58 9/64 10/70	0.01MPa-1.0MPa		8.0 kg
HSW90-678 Series	1/20 2/25 3/29 4/34 5/40 6/45 7/52 8/58 9/64 10/70	0.01MPa-1.0MPa		9.0 kg
HSW90-QM678 Series	Low - 35, Med - 46, High - 58, Max - 68	0.01MPa-1.0MPa		9.0 kg

* Self Clean Technology available on model name starts with "HSW" only, which automatically cleans the residue and dirt between the inner drum & outer tub wall, keeping more hygienic & odour free.

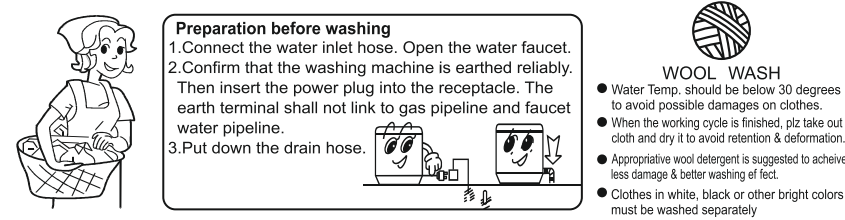

Wool Wash
 • Water Temp. should be below 30 degrees to avoid possible damages on clothes.
 • When the working cycle is finished, please take out cloth and dry it to avoid retention & deformation.
 • Appropriate wool detergent is suggested to achieve less damage & better washing effect.
 • Clothes in white, black or other bright colors must be washed separately.

Pay attention to followings before washing the laundries

Check if the laundries has any special requirement for washing. (fabric should be marked machine wash)	Clear the pocket. Take out the coins, keys hairpins etc.	Tie the long strips; fasten the buttons; close zippers.	The quantity of the laundries shall not be too large. Stretch and loosen the laundries before putting them in the tub.	When the pulsator is running, the buttons of the laundries may cause noise. For the sake of discretion, please wash the laundries with buttons separately (along with laundry washing bag).
--	--	---	--	---

- Check if the laundries are applicable for washing in machine.
- Divide the laundries that are not colorfast from other laundries.
- Put those laundries difficult to absorb water into water with hand.
- For those laundries with heavy soil, please first remove the dirt like mud or dust, for the parts with heavy soil, please apply detergent on them in advance, which can make it easier to remove the soil.
- For those laundries that may get lint ball and those with long fur, turn it over before putting in machine.
- Do not put the laundries polluted by chemicals into the washing machine directly.

- The capacity of washing and spinning of the machine refer to the largest weight of the standard laundries under dry condition that can be washed or spinned in one time.
- One time washing quantity shall be lower than the rated capacity.
- The thickness, size, type of the cloth will influence the actual washing capacity. It is suitable for one time washing to put in reasonable amount of laundries and the laundries can be turned round in washing.
- Do not select the high water level for laundries less than 1.0kg, so as to avoid splashing of water.

- It is suggested to dissolve detergent before adding to the tub, see as below. It is suggested.
 - Prepare warm water (<35°C) in a container.
 - Add washing powder, stirring to dissolve it completely.
 - Add some water (select the "1" water level)
 - Add washing powder. Run for about 30 seconds to fully dissolve the detergent. Then press the "Start/Pause" button to pause the wash cycle.
 - Load laundry. Select suitable water level. Press the "Start/Pause" button again to recommence washing cycle.

Do not stretch hands into the working machine. It is dangerous even if the rotation is slow. Take special care of the children. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.	Do not decompose, repair or alter the machine by yourself.
Do not put any hot or heavy items (such as the kettle with hot water) on the washing machine.	Do not wash laundries with volatile materials (such as thinner, petrol etc.)
The children shall not approach the working washing machine.	Keep the machine away from direct sunlight and heat source like the heater.

The lint filter shall be kept in good condition, and installed to proper position. If the lint filter is lost or damaged, please contact the local after-sales service department of our company.

Please plug in the power cord on special receptacle with rated voltage. Be sure to use single-phase three pins receptacle. The earthing terminal of the receptacle must be earthed reliably. If possible, please adopt electric leakage protector.

The washing machine must be positioned so that the plug is accessible. Be sure to pull the plug off and close the water faucet in following cases: power failure, delivering the machine, setting the machine idle or cleaning the machine.

- Do not plug in or pull out the power plug with wet hand.
- Do not bend, extend, twist, bind by force. Do not press or nip it with weight.
- Keep the pin of the power plug clean, if the power plug is polluted with dust, please wipe with dry cloth carefully.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

*Motor used in machine is having Thermal Overload protection. So, in case of excessive heating, motor might trip and stop for cooling. In such case, it is suggested to wait till the temperature goes down before starting.

- Old or poor quality washing powder may causing caking in tub or detergent dispenser.
 - Clean the detergent box periodically to ensure washing power is evenly distributed and remove any detergent build up.
 - When water pressure is too low, it is possible that washing powder cannot be washed away effectively, and washing would be agglomerated after a period of time.
- Please clean the detergent box in time. It is recommended to pour the washing powder into the basket directly.

HOW TO USE POWDER / LIQUID DETERGENTS

Washing powder/liquid detergent Box

Put the powder/liquid detergent in the detergent box before washing as shown on figure. The usage and dose keep as per requirements. Washing powder with poor quality of long time storage may get caked. Please clean the detergent box duly in usage.

CLOSE THE LID

If you open the lid during spin cycle the machine will stop and audible alarm will sound.

HWM75/80/90-678 Series, HSW80/90-678 Series:

1. Power Button
 2. Start / Pause Button
 3. Program Button
 4. Process Button
 5. DIY Button
 6. Child Lock
 7. LED Display

*Above image is only pictorial view. Actual may vary depending on model/capacity.

HSW90-DM678 Series:

1. Power Button
 2. Start/Pause Button
 3. Program
 4. Progress/Pause Button
 5. Soak Time/Rinse/Spin Time Button
 6. Function Button
 7. Water Level Button
 8. Delay Button
 9. Child Lock
 10. LED Display

*Above image is only pictorial view. Actual may vary depending on model/capacity

Indicator display

- Off
- On: Indicates the program is about to run and indicates the selected cycle and options
- Flashing: Indicates the program is running and indicates the selected cycle and options
- Check Water: After start the washing machine, when the water pressure is too low, the water pressure alarm light will flash; When the water pressure returns to normal, the alarm is released.
- Check Voltage: After starting and running, the computer board detects the voltage. If any abnormal on voltage, the voltage alarm light flashes; When the voltage returns to normal, the alarm is released.

In case the washing machine is installed on ground with carpet, do not block the ventilation hole with carpet. Ensure carpet does not obstruct the opening in the bases.

Do not use water hotter than 50 °C.

Do not put the machine at damp place like the bathroom. Never wash it with water. Do not put wet laundries on the control panel.

Do not wash water-proof laundries like the raincoat, bike covers etc. to avoid abnormal vibrations in spinning. Wash the clothes that can float on the water surface easily, please be careful especially, for fear damage.

Do not let the machine share one receptacle with other electric appliances. If the plugging into the receptacles loose, do not use the plug any more.

Child Lock function

The function is intended for children's safety and preventing children from accidental changes to washing programs.

HWM75/80/90-678 Series, HSW80/90-678 Series:
 Press Power button, set the desired washing program, after setting, press Start/Pause button, then press Process button and DIY button at the same time and hold for 3 seconds. The digitron displays "CL". The child lock light goes on, the child lock will activate. All of the buttons are locked and have no function.

Release the child lock function: In the process of program running, press Process button and DIY button at the same time and hold for more than 3 seconds. After three beep sound, the child lock function is release. The child lock light goes out.

HSW90-DM678 Series:
 Press Power button, set the desired washing program, after setting, press Start/Pause button, then press Progress button and Delay button at the same time and hold for 3 seconds. The digitron displays "CL". The child lock light goes on, the child lock will activate. All of the buttons are locked and have no function.

Release the child lock function: In the process of program running, press Progress button and Delay button at the same time and hold for more than 3 seconds. After three beep sound, the child lock function is release. The child lock light goes out.

NOT: If you open the lid when the "child lock" activate, digital tube display "E2" and beep, you need close the lid and press the "Start/Pause" to cancel, or washing machine will drain after 10 seconds.

Digital tube

- During working, it displays the remained reserve time (minute). In case of trouble, it displays the abnormal symbol (see to page 13-14)

"Power" button

- Press the "Power" button to switch on the power.
- Under power-on mode, press it to switch off the power.
- If the "Start/Pause" button is not pressed, the machine will switch off the power automatically after 10 minutes.

"Start/Pause" button

- After the power is switched on, press it to start the machine.
- During working, press it to pause.
- During pause, press this button to restart and go on working.

"Process" button

- The user can press process button to select "water level", "wash time", "rinse times", "spin time" and "delay", after selection, they can press "DIY" button to adjust chosen process.

"DIY" button

- During operation, the digital tube will display the remaining time. Press the "DIY" button. User can adjust "water level", "wash time", "rinse times", "Spin time".