



Please read this manual carefully before operating your set and retain it for future reference.

MC2146BP

MC2146BL

MC2146BV

MC2146BG



MFL70580101 Rev.04\_18032021

www.lg.com

## Contents / विषय-वस्त

# How the Microwave Function Works / माइक्रोवेव प्रणाली किस तरह कार्य करती है

Microwaves are a form of energy similar to radio, television waves, and ordinary daylight. Normally, microwaves spread outwards as they travel through the atmosphere and disappear without effect.

This oven, however, has a magnetron that is designed to make use of the energy in microwaves. Electricity, supplied to the magnetron tube, is used to create microwave energy.

रेडियो, टेलीविज़न तरंगों और दिन के सामान्य प्रकाश की तरह ही माइक्रोवेव भी ऊर्जा का ही एक रूप है। आमतौर पर माइक्रोवेव की ये ऊर्जा तरंगे बाहर की तरफ ही प्रसारित होती हैं क्योंकि वे वातावरण में चालित होती हैं और अंततः प्रभावहीन हो कर गायब हो जाती हैं। किन्तु फिर भी, इस ओवन में अतिरिक्त रूप से एक मैग्नेट्रॉन होता है जो कि माइक्रोवेव्स में समाहित ऊर्जा को उपयोग में लाने का कार्य करता है। मैग्नेट्रॉन ट्यूब में प्रवाहित विद्युत, माइक्रोवेव ऊर्जा का निर्माण करती है।

These microwaves enter the cooking area through openings inside the oven. A tray is located inside the oven. Microwaves cannot pass through metal walls of the oven, but they can penetrate such materials as glass, porcelain and paper, the materials out of which microwave-safe cooking dishes are constructed.

ये माइक्रोवेक्स ओवन के माध्यम से कुकिंग एरिया में अन्दर की तरफ प्रयोग में लाये जाते हैं। ओवन के मीतर एक ट्रे होती है जो मुख्य उपयोग में आती है। माइक्रोवेक्स ओवन के चारों ओर की धातु से बनी दीवारों को पार नहीं कर पाती हैं परन्तु वे अपने आसपास की वस्तुएं जैसे ग्लास, पोरसलीन और कागज़ सहित सुरक्षा को ध्यान में रख कर बनाये गए अन्य धात के बरतनों में प्रवाहित हो जाती हैं।

Microwaves do not heat cookware, though cooking vessels will eventually get hot from the heat generated by the food.

मूलरूप से माइक्रोवेव्स खाने के बर्तनों को गर्म नहीं करता बल्कि ये बर्तन गर्म हुए भोजन की गरमाहट से आखिरकार गर्म हो ही जाते हैं।

## **Contents**

151 RECIPES LIST	3
IMPORTANT SAFETY INSTRUCTIONS	5
SAFETY PRECAUTIONS	9
BEFORE USE	11
Unpacking & Installing	11
Method To Use Accessories As Per Mode	12
Microwave-Safe Utensils	13
Control Panel	14
Child Lock	16
HOW TO USE	17
Micro Power Cooking	17
Micro Power Level	18
+30 seconds	19
Grill Cooking	20
Grill Combination Cooking	21
Convection Combination Cooking	22
Energy Saving	23
Two Stage Cooking	24
Convection Preheat	25
Convection Cooking	26
Various Cook Functions	27
Indian Cuisine	28
Low Calorie	41
Steam Cook	52
Tandoor Se	54
Kids' Delight	55
Paneer/Curd	59
Tea/Dairy Delight	60
Cooking Aid	61
Steam Clean	62
Usage of Accessories / Utensils	63
List of Ingredients	64
TO CLEAN YOUR OVEN	65
QUESTIONS & ANSWERS	66
Two Recipes for Beginners	67
Disposal of your old appliance	67
(as per e-waste Rules)	

## A very safe appliance / अति-सुरक्षित उपकरण

Your Microwave oven, is one of the safest of all home appliances. When the door is opened, the oven automatically stops producing microwaves. Microwave energy is converted completely to heat when it enters food, leaving no "left over" energy to harm you when you eat your food.

माइक्रोवेव्स आपके सभी घरेलू उपकरणों में से सबसे अधिक सुरक्षित होता है। जब द्वार खुला होता है तब ओवन अपने आप ही माइक्रोवेव्स भेजना बंद कर देता है। जब ये माइक्रोवेव खाने के सामान में प्रवाहित होती हैं तो वे पूरी तरह से ऊष्णता में परिवर्तित हो जाती हैं और इस भोजन को जब आप ग्रहण करते हैं तो ''बाकी बची'' ऊर्जा से आपके स्वास्थ्य पर कोई भी हानिकारक प्रभाव नहीं पड़ता।

#### Disclaimer:

The user should follow the instructions as per the owner's manual to avoid any malfunctioning of the product, accident or damage. The liability of manufacturer is limited only to the extent of repair or replacement of the product as per the terms and condition mentioned herein if product was not misused, altered or modified but shall not include any damage to the property or injury or loss of life on account of breach of warranty conditions/warning or any commercial or economic loss, including any direct, incidental or consequential loss relating thereto. / उपयोगकर्ता को उत्पाद, दुर्घटना या क्षति की किसी भी खराबी से बचने के लिए उपयोगर्ता मैनुअल के अनुसार निर्देशों का पालन करना चाहिए। निर्माता की देयता केवल उत्पाद की मरम्मत या प्रतिस्थापन की सीमत होती हैं और इसमें उप्लिखित शर्ता के अनुसार यदि उत्पाद का दुरुपयोग नहीं किया गया, बदल दिया गया या संशोधित किया गया, लेकिन इसमें सम्पित की क्षति या चोट या जीवन की हानि शामिल नहीं होगी किसी भी प्रत्यक्ष, आकस्मिक या परिणामी हानि से सम्बधित वारंटी शर्ता / चेतावनी या किसी भी वाणिज्यिक या आर्थिक नकसान के उल्लंघन के कारण।

Indian Cuisine (pg. 28~40)								
	Indian Cuisine							
Code	Code No. Recipe Name							
IC1	Mix Veg	28						
IC2	Veg Biryani	28						
IC3	Kadhai Paneer	28						
IC4	Kadhai Chicken	28						
IC5	Dal Tadka	28						
IC6	Butter Chicken	29						
IC7	Dum Aloo	29						
IC8	Baingan ka Bharta	29						
IC9	Gatte ki sabzi	29						
IC10	Beans Porial	30						
IC11	Dalma	30						
IC12	Gosht Dum Biryani	30						
IC13	Chicken Biryani	30						
IC14	Kadhi	31						
IC15	Kofta Curry	31						
IC16	Aloo Gobhi	31						
IC17	Malai Khumb	31						
IC18	Sambhar	32						
IC19	Goan Potato Curry	32						
IC20	Gujarati Tuvar Dal	32						
IC21	Methi Aloo	32						
IC22	Veg. Handva	33						
IC23	Jeera Aloo	33						
IC24	Kaddu Ki Sabzi	33						
IC25	Matar Paneer	33						
IC26	Jhinga Matar Curry	34						
IC27	Egg Curry	34						
IC28	Bhindi fry	34						
IC29	Kashmiri kaju paneer	34						
IC30	Egg Biryani	35						
IC31	Achari Chana Pulao	35						
IC32	Methi Rice	35						
IC33	Coconut Rice	35						
IC34	Curd Rice	36						
	Sweet Corner							
SC1	Besan Ladoo	36						
SC2	Kalakand	36						
SC3	Shahi Tukda	36						
SC4	Kheer	36						
SC5	Suji Halwa	37						
SC6	Payasam	37						
SC7	Sandesh	37						
SC8	Seviyan Zarda	37						
SC9	Phirni Mysers Dak	37						
SC10	Mysore Pak	37						
SC11	Kaddu Kheer	38						
SC12	Rava Ladoo	38						
SC13	Kaju Burfi	38						
SC14	Badam Halwa	38						

	Chatpat Corner								
Code I	No. Recipe Name								
CC1	Apple Tomato Chutney	3							
CC2	Lemon Pickle	3							
CC3	Mix Veg Pickle	3							
CC4	Pizza Sauce	3							
CC5	Tomato Sauce	3							
CC6	Masala Chutney	3							
CC7	Aam Ki Chutney	3							
CC8	Coconut Chutney								
CC9	Gongura chutney	4							
CC10	Til Ki Chutney	4							
	Low Calorie (pg. 41~51)								
	Health Plus								
Code I	No. Recipe Name								
HP1	Kala Chana	4							
HP2	Karela Subzi	4							
HP3	Moong Dal	4							
HP4	Machi Kali Mirch	4							
HP5 HP6	Ghiya Raita Nutrinuggets	4							
HP7	Curd Brinjal	4							
HP8	Bathua Raita	4							
HP9	Healthy Khichdi	4							
HP10	Spinach Dal	4							
HP11	Fish masala	4							
HP12	Soya Idli	4							
HP13	Soyabean Curry	4							
HP14	Fish Bharta								
HP15	Oats Idli	4							
HP16 Lemon chicken 44									
	Soups								
So1	Sweet Corn Soup	4							
So2	Mushroom Soup	4							
So3	Tomato Soup	4							
So4	Chicken Soup	4							
So5	Chicken Tortilla Soup	4							
So6	Rasam	4							
So7 So8	Hot & Sour Soup Palak Makai Shorba	4							
So9	Wonton Soup	4							
So10	Mulligatawny Soup	4							
So11	Rajma Soup	4							
So12	Shahi Shorba	4							
So13	Bombay Curry Soup	4							
So14	Badam Soup	4							
So15	Limbu Dhania Shorba	4							

# 151 Recipes List

Continental										
Code No. Recipe Name										
Co1	Pasta	47								
Co2	Veg Au Gratin									
Co3	Macaroni									
Co4	Baked Mushroom	48								
Co5	Lasaneya	48 48								
Co6 Co7	Chilli Veg Thai Chicken	48								
Co8	Sweet & Sour Veg	49								
Co9	Mediterranean Crostini	49								
Co10	Risotto Rice	50								
Co11	Spaghetti with tomato sauce	50								
Co12	Cottage Cheese Tortellini	50								
Co13	Mexican Corn Rice	51								
	Steam Cook									
	(pg. 52-53)									
	Steam Cook									
Code	No. Recipe Name									
St1	Keema Balls	52								
St2	Gajar ka Halwa	52								
St3 St4	Shakarkandi Methi Muthiva	52 52								
St5	Kothimbir Vadi	52 52								
St6	Sarson Ka Saag	52								
St7	Bhafouri	53								
St8	Steamed Peas 53									
St9	Matar Mushroom 53 Avial 53									
71101										
Tandoor Se (pg. 54)										
(pg. 54) Tandoor Se										
Code										
tS1		54								
tS2	Grill chicken Chicken Lollipops	54   54								
tS3	Chicken Tikka	54								
tS4	Veg Kababs	54								
	Kids' Delight									
	(pg. 55~58)									
	Child's Favourite									
Code	No. Recipe Name									
CF1	Omelette	55								
CF2	Noodles	55								
CF3 CF4	Corn Chaat Pizza	55   55								
CF5	Vermicelli Khichdi	55								
CF6	Chocolate balls	55								
CF7	Veg burger	56								
CF8	Strawberry custard	56								

Code I	No. Recipe Name								
CF9	Garlic Bread	56							
CF10	Choco Bars	56							
CF11	Creamy Mushroom Buns	56							
CF12	Bread Pudding	57 57							
CF13 CF14									
CF 14	Cheesy Nachos	57							
	Cake								
CA1	Walnut Cake	57							
CA2	Swiss Roll	57							
CA3	Carrot Cake	57							
CA4	Chocolate Cake	58							
CA5	Vanilla Cake	58							
	Paneer/Curd								
	(pg. 59)								
	Paneer/Curd								
Code I	No. Recipe Name								
PA1	Paneer	59							
PA2	Masala Paneer	59							
CU1	Curd	59							
CU2	Flavoured Yoghurt	59							
	Tea/Dairy Delight (pg. 60)								
	Tea/Dairy Delight								
Code I	No. Recipe Name								
dd1	Tea	60							
dd2	Lemon tea	60							
dd3	Green tea	60							
dd4	Coffee	60							
	Cooking Aid								
	(pg. 61)								
	Cooking Aid								
Code I	No. Recipe Name								
UC1	Keep Warm	61							
UC2	Garlic Peel	61							
UC3	Defrost Veg.	61							
UC4	Defrost Nonveg	61							
UC5	De-humidification	61							
UC6 UC7	Disinfect Aid Lemon Squeeze	61 61							
	Steam Clean	01							
	(pg. 62)								
	Steam Clean								
Code I									
SL1	Steam Clean	62							
	Cloui. Glouii	υ <u>ν</u>							

# IMPORTANT SAFETY INSTRUCTIONS/READ CAREFULLY AND KEEP FOR FUTURE REFERENCE महत्वपूर्ण सुरक्षा निर्देश/ध्यान से पढ़ें और भविष्य के संदर्भ के लिए स्खें

Read and follow all instructions before using your oven to prevent the risk of fire, electric shock, personal injury, or damage when using the oven. This guide does not cover all possible conditions that may occur. Always contact your service agent or manufacturer about problems that you do not understand.

कृपया आगे के सन्दर्भों पर नजर डालें। ओर्वन का इस्तेमाल करते समय आग लगने या विद्युत का झटका लगने, व्यक्तिगत तौर पर वुर्घटना और क्षति से बचने के लिए उपयोग में लाने के पूर्व सभी निर्देश पढ़ें और उनका पालन करें। यह दिशा—निर्देश सभी संभावित दशाओं का वर्णन नहीं करती जो ओवन पर कार्य करते समय हो सकती हैं। किसी भी ऐसी समस्या के दौरान जब आप स्थिति को समझने में असमर्थ हों. आप सदैव अपने सर्विस एजेंट या निर्माता से संपर्क करें।



### WARNING / चेतावनी

This is the safety alert symbol. This symbol alerts you to potential hazards that can kill or hurt you and others. All safety messages will follow the safety alert symbol and either the word "WARNING" or "CAUTION". These word means: यह सुरक्षा—सचेतक चिन्ह हैं। यह चिन्ह आपको संभावित सभी खतरों के प्रति सचेत करता है जो कि आपकी या दूसरों की जान ले सकते हैं या उनको घायल कर सकते हैं। सभी सुरक्षा संचेतक चिन्हों या "वार्निंग" या "कॉशन" के बाद लिखे हए हैं। इन शब्दों का अर्थ है:



## WARNING / चेतावनी

This symbol will alert you to hazards or unsafe practices which could cause serious bodily harm or death. यह चिन्ह आपको खतरों या असुरक्षित तरीके से कार्य करते समय होने वाली शारीरिक दुर्घटनाओं या मृत्यु आदि की आशंकाओं से सचेत करता है।



### CAUTION / सावधानी

This symbol will alert you to hazards or unsafe practices which could cause bodily injury or property damage. यह चिन्ह आपको खतरों या असुरक्षित तरीके से कार्य करते समय होने वाली शारीरिक दुर्घटनाओं या संपत्ति संबंधी अन्य किसी क्षति की आशंकाओं से सचेत करता है।



#### WARNING / चेतावनी

- 1 Do not attempt to tamper with, or make any adjustments or repairs to the door, door seals, control panel, safety interlock switches or any other part of the oven which would involve the removal of any cover protecting against exposure to microwave energy. Do not operate the oven if the door seals and adjacent parts of the microwave oven are faulty. Repairs should only be undertaken by a qualified service technician.
  - ओवन के द्वार, द्वार की सील, कंट्रोल पैनल, सेपटी इंटरलॉक स्विचेस या उसका कोई अन्य हिस्सा जो कि माइक्रोवेव ऊर्जा को बाहर निकलने से रोककर सुरक्षित करता हो, से छेड़छाड़ न करें न ही किसी प्रकार का जोड़तोड़ या सुधार करें। द्वार या उससे जुड़े किसी हिस्से में कोई खराबी आने की दशा में ओवन का उपयोग न करें। इसकी मरम्मत का काम सिर्फ सर्विस टेक्नीशियन के माध्यम से ही करवाएं।
- Unlike other appliances, the microwave oven is a high-voltage and a high electrical-current piece of equipment. Improper
  use or repair could result in harmful exposure to excessive microwave energy or in electric shock.
  - उपकरणों की तुलना में माइक्रोवेव ओवन एक उच्च क्षमता का उच्च विद्युत तरंग वाला उपकरण है। इसका गलत तरीके से इस्तेमाल या मरम्मत करने से अत्यधिक मात्रा की माइक्रोवेव ऊर्जा का हानिकारक प्रभाव या विद्युत के झटके का ख़तरा हो सकता है।
- 2 Only use Oven for the purpose of dehumidification of Namkin, Biscuits, Bhujia, papad, wafers, etc. Do not operate with wet newspaper, toys, Electric devices, pet or child, etc./केवल नमकीन, बिस्कुट, भुजिया, पापड़, वेफर्स आदि के निरार्द्रीकरण के उदेश्य के लिए ओवन का उपयोग करें। गीले अखबार, खिलौने, इलेक्ट्रिक उपकरण, पालतू जानवर या बच्चें, आदि के साथ काम न करें।
- It can be the cause of serious damage to safety such as a fire, a burn or a sudden death due to an electric shock.
   यह आग, जलना या विद्युत के झटके से होने वाली अकस्मात् मृत्यु जैसी गंभीर सुरक्षा—क्षति का कारण भी बन सकता है।



#### . WARNING / चेतावनी

3 This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not operate or play with the appliance/यह उपकरण कम शारीरिक, संवेदी या मानसिक क्षमताओं, या अनुमव और ज्ञान की कमी के साथ व्यवित्तयों(बच्चों सिहत) के उपयोग के लिए अभिप्रेत नहीं है, जब तक कि उन्हें उनकी सुरक्षा के लिए जिम्मेदार व्यक्ति द्वारा उपकरण के उपयोग के सम्बन्ध में पर्यवेक्षण या निर्देश नहीं दिया गया हो। यह सुनिश्चित करने के लिए बच्चों की निगरानी की जानी चाहिए कि वे उपकरण के साथ काम नहीं करते हैं या खेल नहीं रहे हैं।

- Improper use may cause damage such as a fire, electric shock or burn.
   अनचित उपयोग से क्षति हो सकती है. जैसेकि आग लगना बिजली का झटका लगना या जलना।
- 4 Accessible parts may become hot during use. Young children should be kept away. इसके इस्तेमाल के दौरान स्पर्श में आने लायक इसके सभी हिस्से गर्म हो सकते हैं। छोटे बच्चों को दर रखना आवश्यक है।
- They may get a burn.
   इससे जलने को खतरा है।



### WARNING / चेतावनी

5 Liquids or other foods must not be heated in sealed containers since they are liable to explode. Remove the plastic wrapping from food before cooking or defrosting. Note though that in some cases food should be covered with plastic film, for heating or cooking.

बंद बर्तनों में तरल या अन्य भोजन इसके अन्दर गर्म न किएं जाएं क्योंकि उनमे विस्फोट हो सकता है। खाना बनाते समय या डी–फ्रॉस्ट करते समय बर्तन का मुंह बंद करने वाली प्लास्टिक की झिल्ली आदि अवश्य निकाल लें। कुछ मामलों में गरम करने या बनाने के लिए खाने को प्लास्टिक की झिल्ली से बंद करके इसमें रखा जाना चाहिए।

They could burst.

उसमें विस्फोट हो सकता है।



#### WARNING / चेतावनी

- Do not operate your oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door(bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
  - ओवन यदि क्षतिग्रस्त है तो इसको न चलाएं। यह विशेष रूप से महत्वपूर्ण है कि ओवन के द्वार ठीक से बंद हों और इनमें से कोई (1) द्वार (मुड़ें), (2) कब्जे और चिटकनी (टूटी या ढीली), (3) द्वार सील और सीलिंग तल क्षतिग्रस्त न हो।
- It could result in harmful exposure to excessive microwave energy.
   अधिक समय तक भोजन अन्दर रहने पर उसमे आग भी लग सकती है और ओवन को भी नुकसान पहुंच सकता है।
- 7 Do not use improper accessories. Only use appropriate accessories on each operation mode, refer to the guide on page 12 अनुचित उपकरण का उपयोग न करें। केवल प्रत्येक ऑपरेशन मोड पर उपयुक्त सहायक उपकरण का उपयोग करें, पृष्ठ 12 पर मार्गदर्शिका देखें।
- Improper use could result in damage to your oven and accessories, or could make spark and a fire.
   इसके गलत तरीके से इस्तेमाल से ओवन और आपके उपकरणों का नुकसान या विद्युत स्पार्क या आग लगने का खतरा हो सकता है।
- 8 Do not hang heavy objects and do not allow children to hang with the door & door handle. Children should not be allowed to play with accessories. भारी वस्तुओं को न लटकाएँ और बच्चों को दरवाजे के हैड़ल से लटकने न दें। बच्चों को सामान के साथ खेलने की अनुमति नहीं दी जानी चाहिए।
- They may get hurt.
  - उन्हें चोट लगने का खतरा है।
- 9 Do not carry out any service or repair operation by your own that involves the removal of a cover which gives protection against the exposure to microwave energy. It is hazardous for anyone other than a competent person अपने आप से किसी भी सेवा या मरम्मत कार्य को अंजाम न दें, जिसमें एक कवर को हटाना शामिल है जो माइक्रोवेव उर्जा के सम्पर्क में आने से बचाता है। यह सक्षम और तकनीकी विशेषज्ञ व्यक्ति के अलावा किसी के लिए भी खतरनाक है।
- 10 When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.
  - जब ओवन का कॉम्बिनेशन मोड़ में इस्तेमाल हो रहा हो तो बच्चे सिर्फ बड़ों के निर्देशन कें ही इसका इस्तेमाल करें क्योंकि इस समय अत्यधिक ताप उत्पन्न होता है जो उनके लिए घातक सिद्ध हो सकता है।
- 11 You cannot operate your oven with the door open due to the safety interlocks built into the door mechanism. It is important not to tamper with the safety interlocks.
  - इसके दरवाजों पर लगे सेपटी इंटरलॉक्स के कारण आप इसके द्वार खोल कर इसको नहीं चला सकते। ये बहुत जरूरी है कि सेपटी इंटरलॉक्स के साथ किसी तरह की छेड़छाड़ न की जाए।
- It could result in harmful exposure to excessive microwave energy. (Safety interlocks automatically switch off any cooking activity when the door is opened).
  - इसमें पैदा होने वाली अत्यधिक माइक्रोवेव ऊर्जा के कारण ये खतरे की वजह भी बन सकते हैं। (जब ओवन के द्वार खुले होते हैं तो सेपटी इंटरलॉक्स अपने आप निष्क्रिय हो कर खाना बनाने या गरम करने का कार्य बंद कर देते हैं।)
- 12 Do not place any object (such as kitchen towels, napkins, etc.) between the oven front face and the door or allow food or cleaner residue to accumulate on sealing surfaces.
  - ओवन के द्वार और प्रवेश द्वार के सामने कोई सामान (जैसे किचन टॉवल या नैपकिन इत्यादि) न रखें न ही किसी तरह के खाने या सफाई करने वाले सामान के अवशेष यहां रहने दें।
- It could result in harmful exposure to excessive microwave energy. ऐसा करना अत्यधिक ऊर्जा के प्रवाह से खतरा पैदा कर सकता हैं।

- 13 Do not heat food in disposable containers made of plastic, paper or other combustible materials. They may not be safe for heating food. Use microwave safe utensils only. Do not leave microwave oven unattended while cooking. प्लास्टिक, कागज या अन्य दहनशील सामग्री से बने डिस्पोजेबल कंटेनरों में भोजन को गर्म न करें। वे भोजन को गर्म करने के लिए सुरक्षित नहीं हो सकते हैं। माइक्रोवेव सेफ बर्तनों का ही इस्तेमाल करें खाना बनाते समय माइक्रोवेव ओवन को नजरअंदाज न करें।
- Your food may be poured due to the possibility of container deterioration, which also can cause a fire.
   आपका खाना भी गिर कर फैल सकता है इसके भगोने के टूट जाने से और इससे भी आग लग सकती है।
- 14 The current rating of power socket outlet should be equivalent or higher than the plug current rating. The cross-sectional area of wire used by customer for fixed wiring shall be equivalent or higher than the power cord's cross-sectional area used in microwave oven./ पावर सॉकेट आउटलेट की वर्तमान रेटिंग प्लग वर्तमान रेटिंग के बराबर या उससे अधिक होनी चाहिए। तय वायिरेंग के लिए ग्राहक द्वारा उपयोग किये जाने वाले तार का अनुप्रस्थ काट क्षेत्र माइक्रोवेव ओवन में उपयोग किये जाने वाले पावर कॉर्ड के अनुप्रस्थ काट क्षेत्र के बराबर या अधिक होगा।
- Using improper plug or switch can cause an electric shock or a fire.
   गलत प्लग या स्विच लगाने से विद्यत का झटका या आग लग सकती है।
- 15 If the supply cord is damaged, it must be replaced by the manufacturer or by LG authorized service agent only. यदि पावर कॉर्ड खराब है, तो इसे निर्माता द्वारा या केवल LG अधिकृत सर्विस एंजेट द्वारा प्रतिस्थापित किया जाना चाहिए। It can cause serious damage such as a fire or electric shock. यह आग या बिजली के झटके जैसे गंभीर नृकसान का कारण बन सकता है।
- 16 The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption in order to avoid burns. इसमें रखने से पहले बच्चे के दूध की बोतलें और खाने का जार के अन्दर के सामान को हिला अवश्य लें और इसे खिलाने से पहले इसका तापमान अवश्य देख लें तािक बच्चे का मंह न जले।

## ! CAUTION / सावधानी

- Please ensure cooking times are correctly set, small amounts of food require shorter cooking or heating time. कृकिंग टाइम को निश्चित समय के लिए सही सेट करें। कम मात्रा वाले भोजन को पकाने के लिए कम समय लगता है।
- Over cooking may result in the food catching on fire and subsequent damage to your oven.
   आवश्यकता से अधिक समय तक कुंकिंग से आग लग सकती है और आपके ओवन को क्षति पहुंच सकती है ।
- 2 When heating liquids, e.g. soups, sauces and beverages in your microwave oven,
  - \* Avoid using straight sided containers with narrow necks.
  - \* Do not overheat.
  - \* Stir the liquid before placing the container in the oven and again halfway through the heating time.
  - \* After heating, let it stand in the oven for a short time; stir or shake it again carefully and check the temperature of it before consuming to avoid burns (especially, contents of feeding bottles and baby food jars).
  - स्प, सॉसेज और पेय पदार्थी को जब माइक्रोवेव ओवन में गर्म करने के लिए रखें,
  - \* छोटी गर्दन वाले सीधे खड़ें पात्र इसमें रखने से बचें।
  - आवश्यकता से अधिक समय तक हीटिंग न करें।
  - \* तरल पदार्थ के भगोने को इसमें रखने से पहले हिलाएं और हीटिंग के दौरान आधे समय के बाद फिर से बाहर निकाल कर हिला लें, फिर अन्दर रखें।
  - \* हीटिंग के बाद कुछ समय आप उसे अन्दर ही रहने दें फिर इस भोजन को ग्रहण करने से पहले इसे साक्धानीपूर्वक हिला लें, या चमचे से चला लें ताकि आप इसकी उष्णता का अनुमान कर इसे खा/पी सकें और आपका मुंह जलने से बच सके (विशेष तौर पर बच्चे को खाना खिलाने वाला पात्र या दूध पिलाने वाली बोतल)।
- Be careful when handling the container. Microwave heating of beverages can result in delayed eruptive boiling without evidence of bubbling. This could result in hot liquids suddenly boiling over.
   भगोने को इससे निकालते समय पकड़ने में सावधानी रखें। माइक्रोवेव में जलीय पदार्थों को गर्म होने पर कई बार वे देर से और बिना बुलबुले दिए अचानक उबल जाते हैं। इससे जलने का खतरा पैदा हो सकता है।
- **3** An exhaust outlet is located on the top, bottom, side and back of the oven. Don't block the outlet. इसकी ऊपरी सतह पर, बगल में या ओवन के पीछे एक एग्जॉस्ट द्वार होता है। इस द्वार को सदा खुला रखें।
- It could result in damage to your oven and poor cooking results.
   इससे आपके ओवन को क्षति पहुंच सकती है और खाना भी ठीक से नहीं पकेगा।
- 4 Do not operate the oven when empty. It is best to leave a glass of water in the oven when not in use. The water will safely absorb all microwave energy, if the oven is accidentally started. ओवन खाली होने की दशा में चालू न करें। ये बेहतर होगा कि जब ओवन का इस्तेमाल न हो रहा हो तो एक ग्लास पानी भरकर इसमें रखें। इससे जब भी कभी गलती से ओवन चालू हो जाए तो ये पानी इसकी सारी गर्मी को अपने अन्दर अवशोषित कर लेगा और दुर्घटना का खतरा नहीं रहेगा।
- Improper use could result in damage to your oven.
   गलत तरीके से ओवन का इस्तेमाल करने से ओवन को नुकसान पहुंच सकता है।
- 5 Do not cook food wrapped in paper towels, unless Recipes provided by LG contains instructions for the food you are cooking. and do not use newspaper in place of paper towels for cooking. Do not use aluminium foil in micro mode and avoid using aluminium foil in Convection/Grill mode for long duration at high temperature. / पेपर टॉवल से लिपटा कर खाना न बनाएं न गरम करें जब तक कि LG द्वारा प्रदान की गई रेसिपी में कुछ इस तरह का विशेष निर्देश न दिया गया हो। और इस दशा में भी पेपर टॉवल की जगह घरेलू अखबार इस्तेमाल न करें। माइक्रो मोड में एल्यूमिनियम पन्नी का उपयोग न करें और उच्च तापमान पर लंबी अवधि के लिए कन्वेक्शन/ ग्रिल मोड में एल्यूमिनियम पन्नी के उपयोग से बयें।

- Improper use can cause an explosion or a fire.
   गलत तरीके से ओवन का इस्तेमाल करने से आग लग सकती है।
- 6 Do not use wooden containers and ceramic containers that have metallic (e.g. gold or silver) inlays. Always remove metal twist ties. Check that the utensils are suitable for use in microwave ovens before use. सिरेमिक और लकड़ी के बने भगोने जिनमे अंदरूनी सतह धातु की बनी हो, इसमें न रखें। ये पहले देख लें कि आपके बर्तन इसमें इस्तेमाल हो सकते हैं गा नहीं।
- They may heat-up and char. Metal objects in particular may arc in the oven, which can cause serious damage.
   वे गरम हो सकते हैं और जल भी सकते हैं। खासतौर पर धात के पदार्थों में चिंगारियां आ सकती हैं जिससे गंभीर क्षति हो सकती है।
- **7** Do not use recycled paper products.

रीसायकल पेपर के बने हुए उत्पाद प्रयोग में न लाएं।

- They may contain impurities which may cause sparks and/or fires when used in cooking.
   उनमे अशुद्ध तत्व हो सकते हैं जो कि खाना बनाते समय चिंगारियों या आग लगने की वजह बन सकते हैं।
- 8 Do not rinse the tray or place it in water/cold surface just after cooking. This may cause breakage or damage. खाना पकाने के तुरंत बाद ओवन की ट्रे को न धोएं अथवा इसे पानी / ठंडी सतह पर न रखें क्योंकि इससे प्लेट के दूटने या क्षतिग्रस्त होने का ख़तरा हो सकता है।
- Improper use could result in damage to your oven.
   गलत तरीके से ओवन का इस्तेमाल करने से ओवन को नुकसान पहुंच सकता हैं।
- 9 Be certain to place the oven so the front of the door is 8 cm or more behind the edge of the surface on which it is placed, to avoid accidental tipping of the appliance.
  सुनिश्चित करें कि आप ओवन को हमेशा इस तरह रखेंगे कि इसका सामने का द्वार सतह के किनारों से आठ सेंटीमीटर या अधिक पीछे रहे।
- Improper use could result in bodily injury and oven damage.

गलंत तरीके से इस्तेमाल करने से शारीरिक दुर्घटना और ओवन की टूट-फूट का भी खुतरा हो सकता है।

- 10 Before cooking, pierce the skin of potatoes, apples or any such fruit or vegetables. पकाने से पहले आलु या सेब या इस तरह के अन्य छाल दार फल या सब्जियों में छेद कर लें।
- They could burst.

  वे अन्दर विस्फोट कर सकते हैं।
- 11 Do not cook eggs in their shell. Eggs in their shell and whole hardboiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended.

अंडे को छिलके के साथ इसके भीतर न पकाएं। छिलके सहित अँडा और उबला हुआ पूरा अंडा माइक्रोवेव में गर्म नहीं किया जाना चाहिए, तब भी नहीं जबकि माइक्रोवेव की हीटिंग समाप्त हो गई हो।

- Pressure will build up inside the egg which will burst.
   अंडे के अन्दर दबाव बनेगा और फिर बढ़ते-बढ़ते वो फट जाएगा।
- 12 Do not attempt deep fat frying in your oven. ओवन के अन्दर अधिक तेल में खाद्य पदार्थ तलने की कोशिश कभी न करें।
- This could result in a sudden boil over of the hot liquid.
   ऐसा करने से अन्दर गर्म हुआ तरल पदार्थ उबल कर बाहर फैल सकता है।
- 13 If smoke is observed, switch off or disconnect the oven from the power supply and keep the oven door closed in order to stifle any flames.

अगर धुंआ महसूस हो तो रिवच ऑफ करें या पॉवर सप्लाई बंद कर दें और ओवन के दरवाज़े कुछ देर बंद ही रहने दें ताकि लपटें अन्दर ही शांत हो सकें।

- It can cause serious damage such as a fire or electric shock.
   यह आग लगने या विद्युत के झटके जैसे गंभीर नुकसान पहुंचा सकता है।
- 14 The temperature of accessible surfaces may be high when the appliance is operating. Do not touch the oven door, outer cabinet, rear cabinet, oven cavity, accessories and dishes during grill mode, convection mode and auto cook operations, (whatever applicable) before cleaning make sure they are not hot.

पास की सतह का ताप बहुत अधिक हो सकता है जब बर्तन अन्दर हो। प्रिल मोड, कन्वेक्शन मोड या कुकिंग (जहाँ भी लागू हो) के समय इस्तेमाल हो रहे ओवन का द्वार या बाहरी सतह, पिछली दीवार ओवन कैविटी या इसके उपकरण को न छुएं। इसके बाद अन्दर के बर्तनों को बाहर लाते समय ध्यान रखें कि वे गर्म न हों।

- As they will become hot, there is the danger of a burn unless wearing oven gloves.
   क्योंकि वे गर्म हो जाएंगे, जब तक आप ओवन दस्ताने नहीं पहनते है, तब तक जलने का खतरा हो सकता है।
- 15 The oven should be cleaned regularly and any food deposits should be removed. ओवन को नियमित रूप से साफ करना चाहिए और उनके अन्दर किसी भी तरह के भोजन के अंश न छूटें, इसका ध्यान रखना चाहिए।
- Failure to maintain the oven in a clean condition could lead to deterioration of the surface. This could adversely affect the life of the appliance and possibly result in a hazardous situation.
  - ओवन की सफाई का ध्यान न रखने से इसकी सतह खराब हो सकती है। इससे इस पर रखे जाने वाले बर्तन भी खराब हो सकते हैं और यह खतरनाक भी हो सकता है।
- 16 If there are heating elements, the appliance becomes hot during use. Care should be taken to avoid touching the heating elements inside the oven. अगर ओवन में हीटिंग पदार्थी हों तो गरम करते समय उपकरण भी गर्म हो जाता है। ओवन के अन्दर रखे इस तरह के हीटिंग पदार्थी को छुने से बचना चाहिए।

- There is danger of a burn.
   इसमें जलने का खतरा हो सकता हैं।
- 17 Follow exact directions given by each manufacturer for their popcorn product. Do not leave the oven unattended while the corn is being popped. If corn fails to pop after the suggested times, discontinue cooking. Never use a brown paper bag for popping corn. Never attempt to pop leftover kernels.

पॉपकॉर्न के प्रोडक्ट्स के दिए गए सटीक निर्देशों का पालन करना चाहिए। जब इसके अन्दर पॉपकॉर्न्स बनाए जा रहे हों तो इसकी अनदेखी न करें। अगर तय समय के भीतर भी कॉर्न्स न फूल सकें तो हीटिंग बंद कर इन्हें बाहर निकाल लेना चाहिए। ओवन में कॉर्न्स को फुलाने के लिए कभी भी भूरा कागज का बैग इस्तेमाल में ना लाए। ओवन में बचे हुए कॉर्न्स के टुकडों को दबारा उसमें गर्म न करें।

- Overcooking could result in the corn catching a fire. अधिक पकाने से कॉर्नस में आग लग सकती है।
- **18** Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass. ओवन के दरवाजे के गिलास को साफ करने के लिए कठोर घर्षण क्लीनर या तेज धात का उपयोग न करें।
- They can scratch the surface, which may result in the glass shattering. इससे सतह पर खरोंच लग सकती है, व काँच भी ट्रट सकता है।
- 19 This oven should not be used for commercial catering purposes. यह ओवन व्यावसायिक कैटरिंग के प्रयोग में नहीं लाया जाना चाहिए।
- Improper use could result in damage to your oven. इसके गलत इस्तेमाल से इसमें खराबी आ सकती है।
- 20 The appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are aged from 8 years and above and supervised.

यह उपकरण 8 वर्ष और उससे ऊपर के बच्चे तथा वे सभी लोग जो कम शारीरिक, संवेदन या मानसिक क्षमता के हों, या जिनका अनुभव या ज्ञान कम हों, इस्तेमाल कर सकते हैं यदि ऐसे सभी लोगों को उपकरण के सुरक्षित तरीके से उपयोग के सम्बन्ध में निरीक्षण या निर्देश दिया जाये और होने वाले खतरों को समझाया जाये। उपकरण की सफाई और रख-रखाव बच्चों के द्वारा नहीं की जा सकती जब तक कि वे 8 वर्ष या उससे अधिक के न हो जाएं और देखमाल न की जाये।

- 21 Children should be supervised to ensure that they do not play with the appliance. ओवन के समीप बच्चों के साथ हमेशा कोई बड़ा व्यक्ति हो जो उन्हें इसके साथ खेलने या छेड़छाड़ करने से मना करे।
- 22 <u>Caution, hot surface.</u> सावधान, गर्म सतह है।

When the symbol is used, it means that the surfaces are liable to get hot during use. प्रतीक का उपयोग किया जाता है, तो इसका मतलब है कि उपयोग के दौरान सतह गर्म होने के लिए उत्तरदायी है।

## Safety Precaution / सुरक्षा सावधानियां

- + Microwave oven must not be placed inside a cabinet. The microwave oven shall be used freestanding, माइक्रोवेव ओवन को केबिनेट के अन्दर बिल्कल नहीं रखा जाना चाहिए। माइक्रोवेव ओवन को अलग रख कर इस्तेमाल में लाया जाना चाहिए।
- +
   For Oven with Lamp, Power rating is 35W/25W . / लैम्प के साथ ओवन के लिए पावर रेटिंग 35/25W है।

   For Oven with LED, Power rating of LED is 2.6W . / एलईडी के साथ ओवन के लिए पावर रेटिंग 2.6W है।
- + The appliance is not intended to be operate by means of an external timer or separate remote-control system. उपकरण को किसी भी बाहरी टाईमर व अलग रिमोट कन्ट्रोल सिस्टम से आपरेट करने के लिए नहीं बनाया गया है।
- + Use exclusive 230V socket with earth. अर्थिग के साथ 230 वोल्ट सॉकेट का इस्तेमाल करें।
- + Do not bend power cord forcefully or break. पावर कार्ड को ताकत के साथ न झुकाएं वरना वह टूट सकती है।
- ◆ Do not pull out power cord. पावर कॉर्ड को न खीचें।
- + Do not modify Power Cord as supplied by the manufacturer along with the product. Power Cord is to be used only at power socket outlets and not be used with any extension board or multiple socket. Also, Do not share the same power socket outlet with other appliance.

उत्पाद के साथ निर्माता द्वारा आपूर्ति के रूप में पावर कॉर्ड को संशोधित न करें। पावर कॉर्ड का उपयोग केवल पावर सॉकेट आउटलेट पर किया जाता है और इसका उपयोग किसी भी एक्सटेंशन बोर्ड या मल्टीपल सॉकेट के साथ नहीं किया जाता है। इसके अलावा, अन्य उपकरणों के साथ पावर सॉकेट आउटलेट को साझा न करें।

- + Do not plug in or pull out power cord with wet hand. गीले हाथों से पावर कार्ड को न तो लगाएं न ही हटाएं।
- + Do not spray water inside and outside of microwave oven. माइक्रोवेव ओवन के भीतर और बाहर पानी के छींटें न मारें।

## Safety Precautions / सुरक्षा सावधानियां

- Plug out power cord during cleaning or maintenance of set.
   मरम्मत और सफाई के समय पावर कार्ड निकालना न भूलें।
- + Do not heat up the food more than necessary. खाने को जरुरत से ज्यादा गरम न करें।
- + Do not use microwave oven other than cooking or sterilization such as cloth drying etc. खाना बनाने या गरम करने के सिवा ओवन का कोई और इस्तेमाल न करें जैसे कपड़े सुखाना, आदि।
- + Do not insert pin or steel wire etc. into inside/out side of case. इसके भीतर/बाहर कहीं भी कोई पिन या लोहे का तार आदि न घुसाएं।
- + Please be careful during taking the food since high temp. water or soup may overflow to cause burn. खाने को बाहर निकालते समय कृपया सावधानी बरतें क्योंकि गरम पानी अथवा सूप आदि तरल पदार्थ उबल कर या छलक कर आपको जला सकते हैं।
- + Do not plug in power cord when socket hole is loose or plug is damaged. जब प्लग खराब हो या पावर सॉकेट ढीला हो तो इसे ठीक करने से पहले इसमें पावर कार्ड न लगाएं।
- Do not use oven while some foreign material is attached on the door.
   जब भी ओवन के दरवाजे पर कोई चीज अडी या रखी हो, ओवन को चाल न करें।
- + Do not place the water container on the set. इस पर पानी का भगौना कभी न रखें।
- + Do not place anything on the set & do not cover the set with cloth while using. माइक्रोवेव ओवन के ऊपर कुछ भी न रखें और उपयोग करते समय इसे कपडे से कवर न करें।
- + Do not install the set in the damp space or water sputtering area. गीले या पानी के बहाव वाले क्षेत्र में ओवन को कभी न रखें।
- Do not let children hang onto oven door.
   बच्चों को ओवन के दरवाजों पर लटकने से रोकें।
- + Do not heat the unpeeled fruit or bottle with lid. ढक्कन वाली बोतल और बिना छिला फल कभी इसके अन्दर रख कर गर्म न करें।
- + Do not hold food or accessories as soon as cooking is over. गर्म हो जाने या खाना बन जाने के त्रंत बाद ओवन से खाना या बर्तन बाहर न निकालें।
- + Plug out oven if it is not used for long duration. अगर ओवन को अधिक देर तक इस्तेमाल में न लाना हो तो खाली समय में इसकी पावर कार्ड स्विच से निकाल कर रखें।
- + Install microwave oven in the well ventilated, flat , level surface.
  माइकोवेव ओवन को अच्छी हवादार और संपाद समतल सतह में स्थापित करें।
- There is danger of blast if covered bottle, sealed food, egg, and chestnut etc. are cooked inside oven.
   ओवन के भीतर ढक्कन लगी बोतल, अंडा, सील्ड खाद्य पदार्थ या चेस्टनट रख कर उसे गलाने से विस्फोट हो सकता है।
- Microwave Oven is heavier from right side. Handle with care.
   माइक्रोवेव ओवन दाई ओर से ज्यादा भारी है। ध्यान से संभालें।
- After using grill/convection mode, let the microwave oven cool down before switching it off.
  ग्रिल / कंवेक्शन मोड का उपयोग करने के बाद, माइक्रोवेव ओवन को बंद करने से पहले टंडा होने दें।
- Keep all packaging material (such as plastic bags and Styrofoam) away from children. The packaging material can cause suffocation.

सभी पैकजिंग सामग्री( जैसे- प्लास्टिक बैग और स्टायरोफोम) बच्चों से दूर रखें। पैकेजिंग सामग्री घटन का कारण बन सकती है।

# BEFORE USE / इस्तेमाल के पहले

Unpacking & Installing /इस्तेमाल के पहले

By following the basic steps on these two pages you will be able to quickly check that your oven is operating correctly. Please pay particular attention to the guidance on where to install your oven. When unpacking your oven make sure you remove all accessories and packing. Check to make sure that your oven has not been damaged during delivery.

नीचे दिए हुए दो पन्नों से आप निर्धारित कर सकते हैं कि आपका अवन सही चल रहा है या नहीं। अपना अवन आप कहाँ स्थापित कर रहे हैं इस पर ध्यान दें। अवन को खोलते समय आप सभी एसेसरीज और पैकिंग निकाल दें। आप ये निर्धारित करें कि आपका अवन डिलिवरी के समय क्षतिग्रस्त नहीं हआ है।



Unpack your oven and place it on a flat level surface. अपने अवन को खोलकर एक समतल स्थान पर स्थापित कें।





HIGH RACK / 'हाई' रैक

GLASS TRAY / काँच की टे

ROTATING RING / रोटेटिंग रिंग




Place the oven in the level location of your choice with more than 85cm height but make sure there is at least 30cm of space on the top and 10cm at the rear for proper ventilation. The front of the oven should be at least

8cm from the edge of the surface to prevent tipping.

An exhaust outlet is located on top or side of the oven. Blocking the outlet can damage the oven.

अवन को अपने मनपसन्द स्थान पर 85 सेंमी. की ऊँचाई पर रखें लेकिन यह ध्यान रहे कि कम से कम 30 सेमी. का स्थान ऊपर से 10 सेमी. का स्थान पीछे से छुटना आवश्यक है। अवन का आगे का हिस्सा कम से कम 8 सेमी. समतल के किनारे से दूर होना चाहिए ताकि वह टकराने से बच सके।

एक बाहरी द्वार वाय निकास के लिए अवन के ऊपर या किनारे पर है, बाहरी वाय निकास को रोकना अवन को नष्ट कर सकता है।

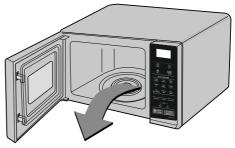



This oven should not be used for commercial catering purposes. यह तंदर व्यवसायिक उददेश्य के लिए नहीं है।

Plug your oven into a standard household socket. Make sure your oven is the only appliance connected to the socket. If your oven does not operate properly, unplug it from the electrical socket and then plug it back in. अपने तंदूर को मानक गृह गति से जोड़ दें। इस बात का ध्यान रखें कि आपका तंदूर ही केवल वह उपकरण है जो गति से जुड़ा हुआ है। अगर आपका तंदूर सही ढंग से काम नहीं कर रहा है तो पहले विद्युत आपूर्ति बन्द करके दोबारा चालू करें।



Open your oven door by pulling the DOOR HANDLE. Place the ROTATING RING inside the oven and place the GLASS TRAY on top.

अपने तंदूर के दरवाजे को दरवाजे पर लगे हुए हत्थे के द्वारा खीचें। घूमने वाले रिंग को तंदूर के भीतर रखें और ग्लास ट्रे को ऊपर रखें।



Fill a microwave safe container with 300 ml of water. Place on the GLASS TRAY and close the oven door.

माइक्रोवेव सेफ कन्टेनर में 300 मिली. पानी भर लें। उसे ग्लास ट्रे के ऊपर रखकर ओवन का दरवाजा बन्द कर दें।



## Before Use / इस्तेमाल के पहले



Press the **START/+30 seconds** button one time to set 30 seconds of cooking time. When you press the button, you will hear a **BEEP** sound and your oven will start automatically. स्टार्ट/+30 सेकेन्ड्स बटन को एक बार दबा दें और 30 सेकेन्ड्स के लिए निर्धारित करें जब आप बटन दबायेंगे तो एक

स्टाट/+30 सकन्द्रस बटन का एक बार दबा द आर 30 सकन्द्रस का लिए निधारित कर जब आप ब आवाज सनेगें और आपका ओवन अपने आप काम करना शुरू कर देगा।





The **DISPLAY** will count down from 30 seconds. When it reaches 0 it will sound BEEPS. Open the oven door and test the temperature of the water. If your oven is operating the water should be warm. Be careful when removing the container it may be hot.

प्रदर्शन में 30 सेकेन्ड्स गिनने शुरू हो जायेंगे। जब यह 0 तक पहुँचेगा जो एक ध्वनि आयेगी। तंदूर का दरवाजा खोलें और पानी का तापमान जाँच लें। अगर आपका तंदूर काम कर रहा है तो पानी गर्म हो जायेगा। पात्र को हटाते समय सावधानी बरतें, वह शायद गर्म हो सकता है।



If oven gets overheated the oven and its display will be turned off for safety purpose, give it some time to cool and then operate. यदि ओवन ज्यादा गरम हो जाता है, तो ओवन और उसका हिस्प्ले सुरक्षा उदेश्य के लिए बंद हो जाता है, इसे ढंडा करने के लिए कछ समय दें और फिर काम करें।



YOUR OVEN IS NOW INSTALLED आपका तंदूर अब स्थापित हो गया है।

## Method To Use Accessories As Per Mode /

# मोड के अनुसार एक्सेसरीज़ प्रयोग करने कि विधि

	Microwave	icrowave Grill Convection		Grill combi	Conv combi	
High rack	×	✓	✓	<b>√</b>	✓	
Low rack	×	<b>√</b>	<b>√</b>	<b>√</b>	<b>√</b>	
Glass tray	<b>√</b>	<b>√</b>	✓	<b>√</b>	<b>√</b>	

✓ Acceptable

**X** Not Acceptable

**√** स्वीकार्य

**X** अस्वीकार्य

#### Note:

- \* In case of Auto Cook / Manual Cook results may vary according to ingredients, ambient temp., Customer Know-how & major electric supply condition.
  - ऑटो कुक / मैनुअल कुंक के परिणाम सामग्री, व्यापक तापमान, ग्राहक की सूझ–बूझ और प्रमुख बिजली की आपूर्ति के अनुसार भिन्न हो सकते हैं।
- \* Please prefer Auto Cook menu as recommended to get better results. बेहतर परिणाम प्राप्त करने के लिए सिफारिश के अनुसार ऑटो कुक मेन्यु को प्राथमिकता दें।

## Microwave-Safe Utensils / माइक्रोवेव सुरक्षित बर्तन

# Never use metal or metal trimmed utensils in using microwave function / धात् या धात् के छीट लगे हुए बर्तन इसमें इस्तेमाल न करें।

Microwaves cannot penetrate metal. They will bounce off any metal object in the oven and cause arcing, an alarming phenomenon that resembles lightning. Most heat resistant non metallic cooking utensils are safe for use in your oven. However, some may contain materials that render them unsuitable as microwave cookware. If you have any doubts about a particular utensil, there's a simple way to find out if it can be used in the microwave.

Place the utensil in question next to a glass bowl filled with water in using microwave function. Microwave at power HIGH for 1 minute. If the water heats up but the utensil remains cool to the touch, the utensil is microwave-safe. However, if the water does not change temperature but the utensil becomes warm, microwaves are being absorbed by the utensil and it is not safe for use in using microwave function. You probably have many items on hand in your kitchen right now that can be used as cooking equipment in the microwave. Just read through the following checklist.

माइक्रीबेक्स धातु के भीतर नहीं जा पातीं। वे उसके भीतर रखे किसी भी धातु की वस्तु को उड़ा सकती हैं और विंगारियां पैदा कर सकती हैं और यह रिश्वति बिजली कंडकने जैसी एक बेतावनी का दृश्य उपस्थित कर सकती है। ज्यादातर उष्णता—सद्दा आधात्विक बर्तन ही ओवन में इस्तेमाल करना सुरक्षित होता है। लेकिन कुछ माइक्रोवेव कुकवेयर जैसे बर्तनों में कुछ ऐसे तत्व हो सकते हैं जो ओवन में इस्तेमाल के लिए उचित न हों। अगर कभी आपको किसी एक बर्तन के विषय में किसी प्रकार का संदेह हो तो एक सीघा सादा तरीका है इस बात को चेक करने का कि इस बर्तन को आप ओवन में प्रयोग कर सकते हैं या नहीं।

ओवन के भीतर संदेहास्पद बर्तन को पानी से भरे एक कांच के कटोरे के बगल में रख कर ओवन चलाएं। माइक्रोवेव को हाई पर रखकर एक मिनट तक चलने दें। यदि पानी गर्म हो जाए और छूने पर बर्तन ठंडा लगे तो समझ लें कि यह बर्तन ओवन के लिए सुरक्षित है। लेकिन यदि उल्टा हो यानी पानी ठंडा रहे और बर्तन गर्म हो जाए तो यह बर्तन ओवन के लायक नहीं है। हो सकता है ऐसी कई चीजें आपकी रसोई में हों जो कि खाना बनाने के काम में ओवन के मीतर रखे जाने को बिलकुल तैयार ही हों, ऐसी हालत में सुरक्षा को दृष्टि में रख कर इस चेकलिस्ट को पढ़ें

#### Dinner plates/ ਤਿਕਟ ਪ੍ਲੇਟ

Many kinds of dinnerware are microwave-safe. If in doubt consult the manufacturer's literature or perform the microwave test.

कई तरह के खाना खाने के बर्तन माइक्रोवेव—सुरक्षित होते हैं। अगर किसी बर्तन को लेकर आपके मन में कोई संदेह ही तो या तो निर्माता की गाइड चेक कर लें या उपरोक्त माइक्रोवेव टेस्ट करके जांच लें।

### Glassware / कांच के बर्तन

Glassware that is heat-resistant is microwave-safe. This would include all brands of oven tempered glass cookware. However, do not use delicate glassware, such as tumblers or wine glasses, as these might shatter as the food warms.

जो भी कांच के बर्तन गर्मी सहने वाले होते हैं, माइक्रोवेव में सुरक्षित होते हैं। इसमें सभी तरह के ओवन के योग्य कांच के खाना बनाने वाले बर्तन हो सकते हैं। फिर भी कांच के नाजक बर्तन जैसे टम्बलर, या वाइन ग्लासेस अधिक गर्मी को न सह पाने के कारण टट भी सकते हैं।

#### Plastic storage containers / स्टोर करने के लिए प्लास्टिक के भगोने

These can be used to hold foods that are to be quickly reheated. However, they should not be used to hold foods that will need considerable time in the oven as hot foods will eventually wrap or melt plastic containers.

इनको खाना भरके रखने के काम में लाया जा सकता है क्योंकि ये शीघता से दुबारा भी गर्म किऐ जा सकते हैं। फिर भी इनमे वो खाना नहीं रखा जा सकता जिनको कि ओवन में पर्याप्त समय तक रखना जरुरी हो क्योंकि गर्म खाना आखिर में प्लास्टिक के भगोनों को पिघला या टेढा—मेढ़ा कर सकता है।

#### Paper / कागज

Paper plates and containers are convenient and safe to use in using microwave function, provided that the cooking time is less than one minute and foods to be cooked are low in fat and moisture. Paper towels are also very useful for wrapping foods and for lining baking trays in which greasy foods such as bacon are cooked. In general, avoid coloured paper products as the colour may run. Some recycled paper products may contain impurities which could cause arcing or fires when used in the microwave.

कागज के बने प्लेटें और भगोने माइक्रोवेव ओवन के लिए आसान भी और सुरक्षित भी होते हैं लेकिन इसके लिए बस यही शर्त है कि कुकिंग का समय एक मिनट से कम हो और खाना कम वसा और कम नमी वाला हो। खाने को लपेटने और पैक करने के और बैकन जैसे विकने भोजन को रखने वाली बैकिंग ट्रे को जमाने के लिए पेपर टोवेल्स बहुत उपयोगी होती हैं। सामान्य तौर पर रंगीन कागज़ की बनी वस्तुएं न रखें क्योंकि रंग निकल सकता है। कई रिसाइकिल हुए रंगीन कागज़ के बने पात्रों में अशुद्धता हो सकती है जो ओवन की भीतर विगारियों या आग पैदा कर सकते हैं।

### Plastic cooking bags / प्लास्टिक के कुकिंग-बैग

Provided they are made specially for cooking, cooking bags are microwave safe. However, be sure to make a slit in the bag so that steam can scape. Never use ordinary plastic bags for cooking in using microwave function, as they will melt and rupture.

कुकिंग बैग्स माइक्रोवेव के लिए सुरक्षित होती हैं बशर्ते ये बर्तन कुकिंग के उद्दश्यों से ही बनाए गए हों। फिर भी ये सुरक्षा तय करने के लिए इनमे हमेशा एक छेद कर ही देना चाहिए ताकि भाप बाहर निकल सके। साधारण प्लास्टिक बैग किकंग के लिए ओवन में इस्तेमाल नहीं किये जाने चाहिए क्योंकि वे फट भी सकते हैं और पिघल भी सकते हैं।

### Plastic microwave cookware / प्लास्टिक के बने माइक्रोवेव-पात्र

A variety of shapes and sized of microwave cookware are available. For the most part, you can probably use item you already have on hand rather than investing in new kitchen equipment.

विविध आकार प्रकार के माइक्रोवेव हेतु प्लास्टिक—बर्तन उपलब्ध हैं। फिर भी अधिक प्रयास यही होना चाहिए कि आप के पास उपलब्ध बर्तनों को ही आप इस्तेमाल करें बजाय इसके कि आप नए बर्तनों में खर्चा करें।


#### Pottery, stoneware and ceramic / मिटटी, पत्थर और सिरेमिक के बर्तन

Containers made of these materials are usually fine for use in using microwave function, but they should be tested to be sure. इस तरह के बर्तन आम तौर पर माइक्रोवेव में इस्तेमाल के लिए अच्छे होते हैं फिर भी **सुनिश्चित करने के लिए** इनका परिक्षण कर लेना चाहिए।

## ्री CAUTION / सावधानी

- Some items with high lead or iron content are not suitable as cooking utensils.
- · Utensils should be checked to ensure that they are suitable for use in the microwave.
- सीसा या धातु मिले पात्र ओवन में खाना बनाने के लिए उपयुक्त नहीं हैं।
- ओवन में इस्तेमाल करने से पहले "सदैव" बर्तनों का उचित परिक्षण कर लें।

## Control Panel

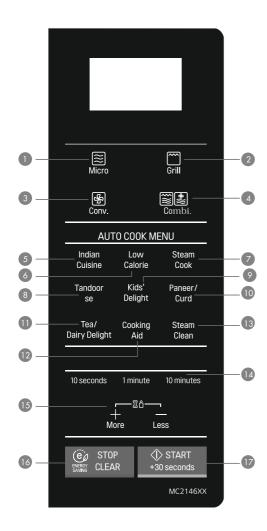

#### Disclaimer:

The control panel printing may differ from actual product.

#### Part

Micro

Use to select the power level for microwave cooking

Gril

Use to select Grill or Combination cooking

Conv.

Use to select Convection cooking

Combi

Use to select combination cooking.

Indian Cuisine

Cook your favourite recipes using this function

6 Low Calorie

Cook your favourite recipes using this function

Steam Cook

Cook your favourite recipes using this function

Tandoor se

Cook your favourite recipes using this function

Kids' Delight

Cook your favourite recipes using this function

Paneer/Curd

Cook your favourite recipes using this function

Tea/Dairy Delight

Cook your favourite recipes using this function

Cooking Aid

Cook your favourite recipes using this function

Steam Clean

Use this feature to aid in cavity cleaning.


- Used to select cooking time of a recipe
- More/Less Used to increase/decrease the cooking time.
- STOP/CLEAR (ENERGY SAVING)

Used to stop oven and clear all entries. For setting energy saving feature.

START/+30 seconds

To quickly set the cooking time directly. The +30 seconds feature allow you to set 30 seconds intervals of HIGH power cooking with a single touch

## कन्ट्रोल पैनल

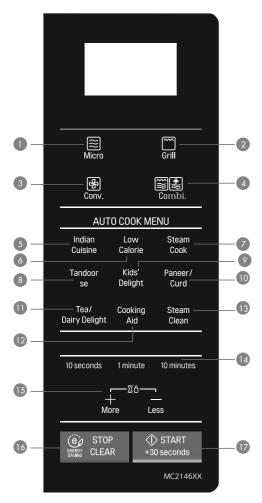

#### डिस्क्लेमरः

कन्ट्रोल पैनल की प्रिन्टिंग वास्तविक उत्पाद से भिन्न हो सकती है।

#### पार्ट

- माइक्रो
   माइक्रोवेव कुकिंग के पावर लेवल को स्लेक्ट करने के
   लिए
- **2** ग्रिल ग्रिल कुकिंग को स्लेक्ट करने के लिए
- **3 कन्वैक्शन** कन्वैक्शन कृकिंग को स्लेक्ट करने के लिए
- **(4) कॉम्बी** कॉम्बी कुकिंग को स्लेक्ट करने के लिए
- इंडियन क्युज़ीन इस फंक्शन का उपयोग कर अपने पसंदीदा व्यंजन पकायें।
- लो कैलॉरी
   इस फंक्शन का उपयोग कर अपने पसंदीदा व्यंजन पकायें।
- स्टीम कुक इस फंक्शन का उपयोग कर अपने पसंदीदा व्यंजन पकायें।
- हस फंक्शन का उपयोग कर अपने पसंदीदा व्यंजन पकायें।
- ि किड्स डिलाइट इस फंक्शन का उपयोग कर अपने पसंदीदा व्यंजन पकायें।
- ण पनीर / कर्ड इस फंक्शन का उपयोग कर अपने पसंदीदा व्यंजन पकायें।
- 1) टी/डेरी डिलाइट इस फंक्शन का उपयोग कर अपने पसंदीदा व्यंजन पकायें।
- (2) कुकिंग एड इस फंक्शन का उपयोग कर अपने पसंदीदा व्यंजन पकायें।
- स्टीम क्लीन कैविटी सफाई में सहायता के लिए इस सुविधा का उपयोग करे।
- एक व्यंजन के खाना पकाने के समय का चयन करने के लिए
- **ा** अधिक ∕ कम खाना पकाने में प्रयुक्त समय को अधिय ∕ कम करने के लिए
- स्टॉप/क्लीयर (एनर्जी सेविंग) ओवन को रोकने और सभी एन्ट्रीज़ को हटाने के लिए। एनर्जी सेविंग फीचर सैट करने के लिए
- स्टार्ट / +30 सेकेंड्स
  - कुर्किंग को शुरू करने के लिए दबाए जाने वाले अपने बटन को आप एक ही बार दबाएं।
  - +30 सेकेंड्स वाले फीचर को इस्तेमाल करके आप फटाफ़ट तीस सेकंड्स की हाई पावर कुकिंग कर सकते हैं।

## Before Use / इस्तेमाल के पहले

# Child Lock चाइल्ड लॉक



Your oven has a safety future that prevents accidental running of the oven. Once the child lock is set, you will be unable to use any functions and no cooking can take place.

आपके अवन में सुरक्षा के उपाय हैं जो कि अनावश्यक उपयोग से अवन को रोकते हैं। एक बार चाईल्ड लॉक निर्धारित करने से आप कोई कार्य नहीं कर सकते हैं और कोई पकाने की क्रिया भी नहीं होगी।

However your child can still open the oven door.

जबिक आपका बच्चा अवन का दरवाजा फिर भी खोल सकता है।

#### Press STOP/CLEAR

स्टॉप / क्लिअर दबायें



Press and hold STOP/CLEAR until"L" appears on the display and BEEP sounds.

जबतक "L" प्रदर्शक पर न आये और ध्वनि न आये तब तक स्टॉप / क्लिअर दबाकर रुक जाईये



The CHILD LOCK is now set. चाईल्ड लॉक निर्धारित हो गया है।

"L" remains on the display to let you know that CHILD LOCK is set (If you press any button).

"L" प्रदर्शक पर आता रहेगा इससे आप जान जायेंगे कि चाईल्ड लॉक निर्धारित है। (आप चाहे कोई भी बटन दबाएं)



To cancel CHILD LOCK press and hold STOP/CLEAR until "L" disappears. You will hear BEEP when it's released.

चाईल्ड लॉक हटाने के लिए स्टॉप / क्लिअर दबाकर रुक जाईये जबतक "L" गायब न हो जाये। आप ध्वनि सुनेंगे जब यह हट जायेगा।



# Micro Power Cooking माइक्रो पावर में पकाना



In the following example I will show you how to cook some food on 80% power for 5 minutes and 30 seconds.

इन दिये गये उदाहरणों में मैं आपको कुछ आहार 80% क्षमता पर 5 मिनट 30 सेकण्ड्स के लिए पकाना बताऊँगा।

Your oven has five microwave Power settings.

आपके ओवन में पाँच सूक्ष्म तरंग क्षमता निर्धारण है।

After cooking is over, End

Reminder Beep Sound per 1 minute for 5 minutes until the oven door is opened.

जब पकाना पूरा हो जायेगा तो अन्त का ध्यान दिलाने वाली ध्वनि सुनाई देगी। यह ध्वनि 1 मिनट पर 5 मिनट के लिए सुनाई देगी जब तक अवन का दरवाजा नहीं खुलेगा।

Power/क्षमता		wer Output ता प्राप्त
HIGH (MAX) उच्च (अधिक)	100%	800W
MEDIUM HIGH मध्यम उच्च	80%	640W
MEDIUM/ मध्यम	60%	480W
DEFROST ( 🕇 ) MEDIUM LOW नम मध्यम निम्न	40%	320W
LOW/निम्न	20%	160W

Make sure that you have correctly installed you oven as described earlier in this book

इस बात पर ध्यान दें कि आपका अवन स्थापित कर दिया गया है जैसा कि इस किताब में पहले दिखा दिया गया है।

Press STOP.

स्टॉप दबायें।



Press Micro Twice to select 80% power. 80% पावर को चुनने के लिये माइक्रो को दो बार दबाए। "640" apperar on the display.

"640"प्रदर्शक पर दिखेगा।



Press '1 minute' five times.

'1 minute' पाँच बार दबाइए।

Press '10 seconds' three times.

'10 seconds' तीन बार दबाइए।

10 seconds 1 minute 10 minutes

Press START. स्टार्ट दबायें



# Micro Power Level माइक्रो पावर लेवल



Your microwave oven is equipped with 5 power levels to give you maximum flexibility of and control over cooking. The table below shows the examples of food and their recommended cooking power levels for use with this microwave oven. आपका सूक्ष्म तरंग अवन 5 क्षमता से संवरा हुआ है। आपको अधिक मनमाफिक और अधिकार देने के लिए नीचे दी गई सूची में उदाहरणों के आहार और उनको पकाने के लिए जो क्षमता निर्धारित की गयी है इस अवन के उपयोग के लिए बताई गयी है।

POWER LEVEL क्षमता स्तर	OUTPUT क्षमता प्राप्त	USE उपयोग		
HIGH उच्च (अधिक)	100% (800W)	* Boil Water / बॉईल वॉटर * Brown minced meat / ब्राऊन मिंस्ड मीट * Cook poultry pieces, fish, vegetables / पोल्ट्री, मच्छी, व्हेचिटेबल पकाना * Cook tender cuts of meat / मांस के टुकड़े पकाना		
MEDIUM HIGH मध्यम उच्च	80% (640W)	* All reheating / भोजन दोबारा गर्म करना * Cook mushrooms and shellfish / मशरूम व खोल वाली मछली पकाना * Cook foods containing cheese and eggs / भोजन, जिसमें अण् व चीज डाली गई हो।		
<b>MEDIUM</b> मध्यम	60% (480W)	* Bake cakes and scones / केंक व 'स्कोन' बेंक करना * Prepare eggs / अण्डे पकाना * Cook custard / कस्टड पकाना * Prepare rice, soup / चावल, सूप पकाना		
DEFROST/ MEDIUM LOW (०००) नम मध्यम निम्न	40% (320W)	* All thawing / सभी प्रकार के खाद्य पदार्थ को सामान्य तापमान पर् रखना * Melt butter and chocolate / चॉकलेट व मक्खन पकाना * Cook less tender cuts of meat / मॉस के कम नरम टुकड़े		
LOW निम्न	20% (160W)	* Soften butter & cheese / मक्खन और चीज को नरम करना * Soften ice cream / आईस्क्रीम को नरम करना * Raise yeast dough / आटे मे खमीर उठाना		

# +30 Seconds

# +30 सेकेन्ड्स



In the following example I will show you how to set 2 minutes of cooking on high power.

निम्नलिखित उदाहरण में दर्शाया गया है कि उच्च पावर स्तर पर खाना बनाने के लिए 2 मिनट कैसे सैट करते हैं।

The +30 seconds feature allow you to set 30 seconds intervals of HIGH power cooking with a touch of the START button.

+30 सेकेण्ड्स आपको यह आराम देता है कि आप स्टार्ट बटन दबाकर 30 सेकन्ड्स के अन्तराल में उच्च क्षमता में भोजन पका सकते है।

Press STOP/CLEAR. स्टॉप / क्लिअर दबायें।



Press START four times to select 2 minutes on HIGH power. Your oven will start before you have finished the fourth press. उच्च क्षमता के लिए स्टार्ट बटन को चार बार दबाए और 2 मिनट का का चयन करें। आपका ओवन काम करना शुरू कर देगा, पहले ही जब आप चौथी बार दबा रहे होगें।



During +30 seconds cooking, you can extend the cooking by repeatedly pressing the START button.

+30 सेकेण्ड्स खाना पकाने के दौरान आप बार—बार स्टार्ट बटन दबाकर खाना पकाने का विस्तार कर सकते है।

# Grill Cooking ग्रिल कुकिंग



In the following example I will show you how to use the grill to cook some food for 12 minutes and 30 seconds. निम्नलिखित उदाहरण में दर्शाया गया है कि 12 मिनट और 30 सेकेण्ड्स के

निम्नलिखित उदाहरण में दर्शाया गया है कि 12 मिनट और 30 सेकेण्ड्स के लिए खाना पकाने में ग्रिल का इस्तेमाल कैसे किया जाता है।



This model is fitted with a QUARTZ HEATER, so preheating is not needed. This feature will allow you to brown and crisp food quickly. ये मॉडल क्वार्ट्ज के साथ है इसलिए उसको प्रीहीटिंग जरुरी नहीं है। इससे आपको जल्द ब्राऊन और क्रिस्पी पदार्थ मिल सकते हैं।

Press STOP स्टॉप दबायें।



Press Grill. Grill दबाऐं।




Set the cooking time. कुकिंग टाईम सेट करें।

Press '10 minutes' once. / '10 minutes' एक बार दबाइए।

Press '1 minute' twice. / '1 minute' दो बार दबाइए।

Press '10 seconds' three times. / '10 seconds' तीन बार दबाइए।

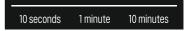

Press START. स्टार्ट दबायें



# Grill Combination Cooking ग्रिल कॉम्बीनेशन कुकिंग

In the following example I will show you how to programme your oven with micro power 160W and combi for a cooking time of 25 minutes.

निम्नलिखित उदाहरण में दर्शाया गया है कि 25 मिनट के लिए खाना पकाने में माइक्रो पावर 160 और कॉम्बी से अपने ओवन को कैसे सैट करें।

Your oven has a combination cooking feature which allows you to cook food with **heater** and **microwave** at the same time or alternately. This generally means it takes less time to cook your food. There are 3 kinds of power in combi mode (160W, 320W, 480W). सुविधा इस लिये प्रदान की गई है ताकि आप इसके प्रयोग से भोजन को हीटर व माइक्रोवेव द्वारा ए

आपके अवन में यह सुविधा इस लिये प्रदान की गई है ताकि आप इसके प्रयोग से भोजन को हीटर व माइक्रोवेव द्वारा एक ही समय में बारी बारी से पका सकें। सामान्यतः इसका अर्थ होता है कि भोजन पकने में लगने वाले समय की बचत। कॉम्बी मोड में (160W, 320W, 480W) तीन प्रकार की क्षमतांएं हैं।

Press STOP/CLEAR. स्टॉप / क्लिअर दबायें।



Press Combi. Combi बटन दबाऐं।



Press Grill. Grill बटन दबाएँ। Press Micro (160W is set). Micro बटन दबा कर (160W) सेट करें।





Press '10 minutes' 2 times/ '10 minutes' 2 बार दबाएं। Press '1 minute' 5 times/ '1 minute' 5 बार दबाएं।



Press START. स्टार्ट दबायें

Be careful when removing your food because the container will be hot!

भोजन को निकालते समय सावधानी बरतें, क्योंकि पात्र गर्म हो सकता है।



# Convection Combination Cooking कन्वैक्शन कॉम्बीनेशन कुकिंग



In the following example I will show you how to programme your oven with micro power 160W and at a convection temperature 180°C for a cooking time of 25 minutes

निम्नलिखित उदाहरण में दर्शाया गया है कि ओवन को 25 मिनट के कुकिंग समय के लिए माइक्रो पावर 160W और कन्वैक्शन तापमान 180°C के साथ कैसे सैट करें।

The oven has a temperature range of  $100^{\circ}\text{C} \sim 220^{\circ}\text{C}$ . ( $180^{\circ}\text{C}$  is automatically available when convection combination mode is selected.) There are 3 kinds of power in combi mode (160W, 320W, 480W)

ओवन में 100°C ~ 220°C तक तापमान सीमा होती हैं। कन्वैक्शन कॉम्बिनेशन मोड चुनने पर 180°C तापमान स्वतः ही उपलब्ध हो जाता है। कॉम्बी मोड में (160W, 320W, 480W) तीन प्रकार की क्षमतांएँ हैं।

Press STOP/CLEAR. / STOP/CLEAR दबाएं।



Press Combi. / Combi दबाएं।




Press Conv. / Conv दबाएं।



Press Micro. / Micro दबाएं।



Press '10 minutes' two times / '10 minutes' दो बार दबाएं। Press '1 minute' five times / '1 minute' पाँच बार दबाएं।

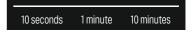

Press START. / START दबाएं।

Be careful when removing your food because the container will be hot. खाना निकालते समय सावधानी बरतें क्योंकि बर्तन उस समय गर्म होगा।



# Energy Saving ऊर्जा की बचत



The microwave oven allows you to save energy by display off when not cooking in oven.

जब आप खाना नहीं पका रहे हों तब डिस्प्ले ऑफ होने पर माइकोवेव ओवन ऊर्जा बचाता है।

### When door open condition (Lamp/LED on & display on): डोर की खुली अवस्था में (लैम्प/एलईडी और डिस्प्ले चालू रहते हैं)

Press STOP/CLEAR one time STOP/CLEAR एक बार दबाएं।

Lamp/LED off & display off (Both together) लैम्प / एलईडी और डिस्प्ले बन्द हो जाएंगे (दोनों एक साथ)

Press any key on keypad, display shows that key related display Lamp/LED remains turned on. कीपैड पर कोई भी की दबाएं, डिस्प्ले दर्शाता है कि उस की से संबंधित डिस्प्ले और लैम्प/एलईडी चाल हैं।



### When door close condition (Lamp/LED off & display on): डोर की बन्द अवस्था में (लैम्प/एलईडी बन्द और डिस्प्ले चालू रहता है)

Press STOP/CLEAR one time STOP/CLEAR एक बार दबाएं।

Lamp/LED off & display off (both together) लैम्प/एलईडी और डिस्प्ले बन्द हो जाएंगे (दोनों एक साथ)

Press any key on keypad, display shows that key related display & Lamp/LED is turned off. कीपैड पर कोई भी की दबाएं, डिस्प्ले दर्शाता है कि उस की से संबंधित डिस्प्ले और लैम्प / एलईडी बन्द हो गये हैं।



### When door is Open(Lamp/LED & display on) डोर की खुली अवस्था में (लैम्प/एलईडी और डिस्प्ले चाल रहते हैं)

Door is open for 5 minutes, Lamp/LED & display are auto cut off. डोर के 5 मिनट तक खुला रहने पर लैम्प/ एलईडी स्वतः बन्द हो जाएंगे।

- a) When any key is pressed, Lamp/LED and display are turned on. जब आप कोई भी की दबायेंगे तो लैम्प/एलईडी और डिस्प्ले फिर से चालू हो जाएंगे।
- b) If door is closed, after 5 minutes display is turned off. अगर डोर बन्द है तो 5 मिनट के बाद डिस्प्ले बन्द हो जायेगा।

# Two Stage Cooking टू स्टेज कुकिंग



In the following example I will show you how to cook food in two stages by taking example of combination cooking.

निम्नलिखित उदाहरण में मैं आपको दिखाऊँगा कि दो स्टेज में कॉम्बीनेशन कुकिंग का उदाहरण लेकर खाना कैसे पकाया जाता है।


Press STOP/CLEAR. STOP/CLEAR दबाएं।




### STAGE 1 setting

स्टेज 1 सैटिंग

- 1) Press Combi.
- 1) कॉम्बी दबाऐं।
- 2) Select desired Combi mode (Grill Combi/Conv. Combi)\*
- 2) मनपसन्द मोड चुनें (ग्रिल कॉम्बी/कनवैक्शन कॉम्बी)\*

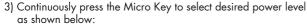

 $160 \longrightarrow 320 \longrightarrow 480$ 

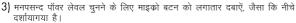

 $160 \longrightarrow 320 \longrightarrow 480$ 

- 4) Set time (10 seconds / 1 minute / 10 minutes)
- 4) समय निर्धारित करे (10 सेकेंड्स / 1 मिनट / 10 मिनट)







10 seconds 1 minute 10 minutes

### STAGE 2 setting

स्टेज 2 सैटिंग

- 1) Press Combi.
- 1) कॉम्बी दबाएं।
- 2) Select desired Combi mode (Grill Combi/Conv. Combi)\*
- 2) मनपसन्द मोड चुनें (ग्रिल कॉम्बी / कनवैक्शन कॉम्बी)\*



 $320 \longrightarrow 480 \longrightarrow 160$ 

3) मनपसन्द पॉवर लेवल चुनने के लिए माइको बटन को लगातार दबाएँ, जैसा कि नीचे दर्शायागया है।

 $320 \longrightarrow 480 \longrightarrow 160$ 



**4)** समय निर्धारित करे (10 सेकेंड्स / 1 मिनट / 10 मिनट)









5) Press START/+30 seconds.

5) START/+30 seconds. दबाएें।



# Convection Preheat कन्वैक्शन प्रीहीट



In the following example I will show you how to preheat the oven at a temperture of  $190^{\circ}\text{C}$ 

निम्नलिखित उदाहरण में दर्शाया गया है कि ओवन को 190°C के तापमान पर कैसे प्रीहीट करें।

The convection oven has a temperature range of  $40^{\circ}$ C and  $100^{\circ}$ C~220°C ( $180^{\circ}$ C is automatically available when convection mode is selected). ओवन में  $40^{\circ}$ C और  $100^{\circ}$ C ~  $220^{\circ}$ C तक तापमान सीमा होती है। कन्वैक्शन मोड चुनने पर

आवन मं 40°C आर 100°C ~ 220°C तक तापमान सीमा होती है। कन्वक्शन मांड चुनन फ 180°C तापमान स्वतः ही उपलब्ध हो जाता है।

Your oven will take a few minutes to reach the selected temperature. आपका ओवन चुने हुए तापमान तक पहुँचने में कुछ मिनटों का समय लेगा।

Once it has reached correct temperature, your oven will BEEP to let you know that it has reached the correct temperature. Then place your food in your oven: then tell your oven to start cooking. एक बार सही तापमान पर पहुँचने पर आपका ओवन यह बताने के लिए 'बीप' करेगा कि ओवन सही तापमान पर पहुँच गया है। तब आप ओवन में अपना खाना रखें और पकाने के लिए स्टार्ट दबाएं।

Press STOP/CLEAR. / STOP/CLEAR दबाएं।



Press Conv. one time / Conv. एक बार दबाएं।



Press "+" one time / "+" एक बार दबाएं।



Press START two time / START दो बार दबाएं।

Preheat will be started with displaying "Pr-H". "Pr-H" दर्शान पर प्रीहीटिंग आरम्भ हो जायेगी।



# Convection Cooking कन्वैक्शन कुकिंग



In the following example I will show you how to cook some food at a temperature of 190°C for 30 minutes.

निम्नलिखित उदाहरण में दर्शाया गया है कि 30 मिनट के लिए 190°C तापमान पर कुछ खाना कैसे पकाएं।

The convection oven has a temperature range of  $40^{\circ}$ C and  $100^{\circ}$ C ~  $220^{\circ}$ C ( $180^{\circ}$ C is automatically available when convection mode is selected).

ओवन में 40°C और 100°C ~ 220°C तक तापमान सीमा होती है। कन्वैक्शन मोड चुनने पर 180°C तापमान स्वतः ही उपलब्ध हो जाता है।

If you do not set a temperature your oven will automatically select 180°C, the cooking temperature can be changed by pressing "+/-".

यदि आप तापमान सैट नहीं करते हैं तो आपका ओवन स्वतः ही 180°C चुन लेगा, कुकिंग तापमान "+/-" दबाकर बदला जा सकता है।

The rack must be used during convection cooking. कन्वैक्शन कृकिंग के दौरान रैक का प्रयोग अवश्य करना चाहिए।

Press STOP/CLEAR. / STOP/CLEAR दबाएं।



Press Conv. one time / Conv. एक बार दबाएं।



Press "+" one time till 190°C is displayed. 190°C दर्शाने तक "+" एक बार दबाएं।



Press '10 minutes' Three times / '10 minutes' तीन बार दबाएं।



Press START. / START दबाएं।



## Various Cook Functions / विभिन्न कुक कार्यप्रणालियाँ

Please follow the given steps to operate cook functions (Indian Cuisine, Low Calorie, Steam Cook, Tandoor Se, Kids' Delight, Paneer/Curd, Tea/Dair Delight, Cooking Aid, Steam Clean) in your Microwave.

COOK	Indian Cuisine [IC, SC, CC], Low Calorie (HP, So, Co], Steam Cook [St], Tandoor Se [tS], Kids Delight [CF, CA], Paneer/Curd [PA, CU], Tea/Dairy Delight [dd]	Cooking Aid [UC] Steam Clean [SL]
STEP-1	Press Stop/Clear	Press Stop/Clear
STEP-2	Press IC (1-34), SC (1-14), CC(1-10), HP (1-16), So (1-15), Co (1-13), St (1-10), tS (1-4), CF (1-14), CA(1-5), PA (1-2), CU (1-2), dd (1-4) to select menu.	Press UC (1-7) and SL (1) to select menu.
STEP-3	Press "+" / "-" to set weight (If required)	Press "+" / "-" to set weight (If required)
STEP-4	Press Start /+30 seconds	Press Start /+30 seconds

कृपया अपने माइक्रोवेव की विभिन्न कार्यप्रणालियां (Indian Cuisine, Low Calorie, Steam Cook, Tandoor Se, Kids' Delight, Paneer/Curd, Tea/Dair Delight, Cooking Aid, Steam Clean) को चलाने के लिए नीचे दिये गये चरणों का अनुसरण करें।

कुक फंक्शंस	इंडियन क्युज़ीन [IC, SC, CC] लो कैलोरी (HP, So, Co], स्टीम कुक [St], तंदूर से [tS], किड्स डिलाइट [CF, CA] पनीर / कर्ड [PA, CU], टी / डेरी डिलाइट[dd],	कुकिंग ऐड (UC) स्टीम क्लीन (SL)
स्टैप 1	स्टॉप / क्लीयर दबाएं।	स्टॉप / क्लीयर दबाएं
स्टैप 2	मेन्यू चुनने के लिए IC (1-34), SC (1-14), CC(1-10), HP (1-16), So (1-15), Co (1-13), St (1-10), tS (1-4), CF (1-14), CA(1-5), PA (1-2), CU (1-2), dd (1-4) दबाएँ।	मेन्यू चुनने के लिए UC (1-7) एवं SL (1) दबाऐं।
स्टैप 3	"+" / "–" वर्ग चुनने के लिए दबायें (जरुरत पड़ने पर)	वर्ग चुनने के लिए "+" / "-" दबाएँ। (जरुरत पड़ने पर)
स्टैप 4	Start/+30 seconds स्टार्ट दबाएं।	Start/+30 seconds स्टार्ट दबाएँ।

#### Note / टिप्पणी :

While cooking you can extend the cooking time at any point by pressing increase/decrease button. There is no need to stop the cooking process.

जब आप भोजन पका रहे हों, तो केवल increase/decrease बटन दबा कर ही समय में परिवर्तन किया जा सकता है। भोजन पकाने की प्रक्रिया को रोकने की कोई आवश्यकता नहीं है।

#### Disclaimer.

\*All brands mentioned here in are property of their respective brand owners. All company or brand or product names used herein are only for showing compatibility with recipes prepared on LG products and for identification purposes only. Use of these names, logos, and brands does not imply any affiliation or endorsement.

#### डिस्क्लेमर:

\*यहाँ वर्णित सभी ब्राण्ड उनके सम्बधित ब्राण्ड मालिकों की सम्पति है। यहाँ उपयोग किये गये सभी कम्पनी या ब्राण्ड या उत्पाद नाम केवल हैं LG उत्पादों पर तैयार व्यंजनों के साथ संगतता दिखाने के लिए और केवल पहचान उदेश्यों के लिए, इन नामों,का उपयोग लोगो और ब्राण्ड कोई भी संबद्धता या समर्थन नहीं देते है।

<sup>\*</sup>Recipes are based on best efforts but results may vary according to Temperature, quality, Ingredients, weight, etc.

<sup>\*</sup>Images given here are only for representation purposes.

<sup>\*</sup>Recipes are neither a substitute for, nor do they replace professional medical advice.

<sup>\*</sup>व्यजन सर्वोत्तम प्रयासों पर आधारित है, लेकिन परिणाम तापमान,गुणवता,सामग्री,वजन के अनुसार भिन्न हो सकते है।

<sup>\*</sup>यदि दी गयी छवियां केवल प्रतिनिधित्व उदेश्यों के लिए है।

Menu	IC1				Mi	x Veg		Weight Limit 0.1~0.5 kg		
Utensil: Microwave safe (MWS) bowl										
	lı	nstructio	ns					Method:		
For		0.1 kg	0.2 kg	0.3 kg	0.4 kg	0.5 kg	1	In a MWS bowl add oil, onion, tomato & all spices. Mix well, select		
Mix Veg. (Ca peas, beans	arrot, Cauliflower, , tomato)	100 g (Total)	200 g (Total)	300 g (Total)	400 g (Total)	500 g (Total)	category & weight and press start.	category & weight and press start.  2. When beeps, remove & mix well. Add vegetable & press start.  3. When beeps, mix well. Cover & press start. Garr		
Oil		1/4 tbsp	½ tbsp	1 tbsp	1½ tbsp	2 tbsp	3. When beeps, mix well. Cover & press start. Garnish with			
Onion (chop	ped)	½ cup	1 cup	1½ cup	2 cup	2 cup			When beeps, mix well. Cover & press start. Garnish with coriander leaves.	
Tomato (cho	pped)	1/4 tbsp	1 cup	1½ cup	1½ cup	1½ cup		leaves.		
	owder, Garam, Chilli powder,		A	s per tast	te					

Menu	IC2	Veg Biryani			Veg B	iryani	Weight Limit 0.1~0.5 kg
Utensil: Mic	crowave safe (MWS)	bowl					
	Ir	structio	ons				Method:
For		0.1 kg	0.2 kg	0.3 kg	0.4 kg	0.5 kg	In Microwave Safe Bowl put oil add laung, Dlachini, Elaichi, Tej patta
Basmati Rice	e (soaked for 1 hour)	100 g	200 g	300 g	400 g	500 g	and Kali Mirch, add mix vegetables, select category & weight and press
Water		200 ml	400 ml	500 ml	550 ml	650 ml	Start.
Oil		1 tbsp	2 tbsp	3 tbsp	3½ tbsp	4 tbsp	2. When beeps, add rice, water, salt & all spices. Mix well, cover it & press
Pepper, Tej	chi, Dalchini, Black Patta, Salt, garam d chilli powder			To taste			start. Stand in 5 minutes after cook ends. Serve hot with raita & salad.
	oles - (Gobhi, Mutter, ch Beans etc.)	½ cup	1 cup	1½ cup	2 cup	2½ cup	

Menu IC3			Ka	idhai P	aneer	Weight Limit 0.1~0.5 kg
Utensil: Microwave safe (MWS	) bowl					
	nstructio	ns		Method:		
Paneer 0.1 kg 0.2		0.2 kg	0.3 kg	0.4 kg	0.5 kg	In MWS bowl, add oil, onion paste, ginger-garlic paste, sliced
Capsicum & Onion (sliced)	½ cup	1 cup	1½ cup	2 cup	21/2 cup	capsicum, tomato & onion, Mix well, cover, Select category & weight
Sliced tomato	½ no.	1 no.	1½ no.	2 no.	2½ no.	and press start.
Onion Paste	3 tbsp	4 tbsp	5 tbsp	6 tbsp	6½ tbsp	When beep, add tomato puree, butter, fresh cream, haldi, red chilli
Tomato Puree	2 tbsp	3 tbsp	4 tbsp	4½ tbsp	5 tbsp	powder, garam masala, kasuri methi, salt and paneer cubes, mix well and press start. garnish with hara dhania and serve hot.
Ginger-Garlic Paste, Salt	To taste					and press start, garnish with hara driama and serve not.
Red Chilli Powder, Haldi, Kasur Methi, Garam Masala			To taste			
Butter 1½ tbs		2 tbsp	3 tbsp	3½ tbsp	4 tbsp	
Fresh Cream	1 tbsp	2 tbsp	3 tbsp	4 tbsp	5 tbsp	
Oil	½ tbsp	1 tbsp	2 tbsp	2½ tbsp	3 tbsp	

Menu	IC4	Kadhai Chicken					Weight Limit 0.1 ~ 0.5 kg
Utensil: Mid	crowave safe (MWS)	bowl					
	Instructions						Method:
For		0.1 kg	0.2 kg	0.3 kg	0.4 kg	0.5 kg	In Microwave Safe Bowl add oil, methidana, onion slices, garlic, dhania
		powder, red chilli powder, chicken & salt. Cover. Select category &					
Oil		1 tbsp	2 tbsp	3 tbsp	3 tbsp	3½ tbsp	weight and press start.
Methidana		1/4 tsp	1/4 tsp	1 tsp	1 tsp	1 tsp	2. When beeps, mix well & add tomato puree, hara dhana, capsicum &
Onion slices		1 no.	2 nos.	3 nos.	3 nos.	3½ nos.	ginger. Mix well & cover and press start. Stand for 3 minutes.  3. Add cream. Mix well. Serve hot.
Chopped ga	arlic	1 tsp	2 tsp	3 tsp	4 tsp	5 tsp	3. Add cream, wix well. Serve not.
Dhania pow salt	der, red chilli powder		A	s per taste			
Tomato pure	ee	1/4 cup	½ cup	1 cup	1½ cup	1½ cup	
Hara dhania	Hara dhania		F	A few sprigs			
Capsicum	Capsicum 1 no. 2 no. 2 no. 2 no. 2 n		2 no.				
Ginger (fine	Ginger (finely sliced) 1 tbsp 2 tbsp 3 tbsp 4 tbsp 4½ tbsp						
Cream			Fo	r garnishi	ng		

Menu	IC5		Dal Tadka	Weight Limit	0.2 kg					
Utensil: Mid	Utensil: Microwave safe (MWS) bowl									
	li	nstructions		Method:						
For		0.2 kg		Take 200 gms dal in Microwave Safe bowl,	add Water Haldi & Hing					
Dal (soaked for 2 hours)		200 g		Select category press start to cook.						
Water		400 ml	When beeps, take another bowl add oil, roasted ji curry leaves, add dal, salt, dhania jeera powder, h							
Oil		2 tbsp		curry leaves, add dal, salt, dhania jeera powder, hara dhan						
	l Jeera, Kasuri Dhania, Hing, Chilli	To taste		methi (optional), water (if required). Press start.  4. When beeps, mix well & again press start.						
Salt		To taste								

Menu IC6			Butte	r Chicken	Weight Limit 0.3~0.5 I	kg	
Utensil: Microwave s	afe (MWS)	bowl				П	
	Ir	structions			Method:		
For Chicken (boneless)		0.3 kg	0.4 kg	0.5 kg	In a MWS bowl add oil, ginger garlic paste, chopped onions, gara	2m	
		300 g	400 g	500 g	masala, dhania powder, jeera powder, salt. Mix well. Select category		
Ginger garlic paste		2 tbsp	2½ tbsp	3 tbsp	weight & press start.	´	
Tomato puree		½ cup	1 cup	1 cup	2. When beeps, mix well, add tomato puree, red chilli powde	uri	
Chopped onions		1 no.	1 no.	2 nos.	methi, chicken pieces. Mix well & cover. Press start.  3. When beeps, mix well, add kaju paste, cream & butter. Mix well & cov		
Garam masala, dhani jeera powder, kasuri r chilli powder, salt			As per taste		Writer beeps, mix well, add kaju paste, cream & butter. Mix well & cov     Press start.     Garnish with slit chillies.	er.	
Kaju paste		2 tbsp	2½ tbsp	3 tbsp		- 1	
Fresh cream		1 cup	1½ cup	1½ cup			
Butter 2 tbsp		3 tbsp 3½ tbsp			- 1		
Oil	Oil 2 tbsp 2½ tbsp 2½ tbsp		2½ tbsp				
Slit green chillies		3 nos.	4 nos.	5 nos.			

Menu	IC7			Dum Aloo	Weight Limit 0.1~0.3 kg
Utensil: Mi	crowave safe (MWS)	bowl			
	Ir	structions			Method:
For		0.1 kg	0.2 kg	0.3 kg	In a MWS bowl add oil, jeera, pepper seeds, cloves, hing, onion paste,
Boiled Aloo	iled Aloo (small) 100 g 200 g 2 tbsp 3 tbsp		200 g	300 g	ginger garlic paste. Mix well.
Oil			3 tbsp	3 tbsp	Select category & weight and press start.
Jeera, peppe	er seeds, cloves, hing		As required	•	3. When beeps, mix well & add tomato puree & boiled potatoes. Mix well &
Onion paste		2 tsp	3 tsp	4 tsp	cover. Press start.  4. When beeps, mix well & add curd & all spices. Cover & press start.
Ginger & ga	rlic paste	1 tsp	1½ tsp	1½ tsp	Wrien beeps, mix well & add curd & all spices. Cover & press start.      Allow to stand for 3 minutes.
Tomato pure	e	1 tbsp	2 tbsp	3 tbsp	o. 7 mon to stand for ominatos.
Curd		½ cup	1 cup	1 cup	
powder, deg	wder, red chilli, hi mirch, salt, ala, saunf powder		As per taste		

Menu IC8		Baigan K	a Bhartha	Weight Limit 0.3~0.5 kg
Utensil: Microwave safe (MWS)	) bowl			
lı .	nstructions		Method:	
For	0.3 kg	0.4 kg	0.5 kg	In a MWS bowl add peeled & chopped baigan. Sprinkle some water.
Baingan (Chopped in big pieces)	300 g	400 g	500 g	Cover. Select category & weight and press start.
Oil         1 tbsp           Chopped onions         1 cup		1½ tbsp	2 cup	<ol><li>When beeps, remove &amp; mash the baigan well.</li></ol>
		1½ cup 500 g		3. In another MWS bowl add oil, chopped onion, green chillies, gir
Chopped green chillies	3 nos.	4 nos.	5 nos.	tomato, tomato puree, salt, dhania powder, garam masala, red chilli powder, haldi. Mix well. Cover & press start.
Chopped ginger	1 tbsp	1½ tbsp	2 tbsp	4. When beeps, mix well, Add the mashed baingan & mix well, Press start.
Chopped tomato	2 nos.	3 nos.	4 nos.	Allow to stand for 3 minutes. Garnish with coriander leaves.
Tomato puree	4 tbsp	5 tbsp	6 tbsp	
Salt, dhania powder, garam masala, red chilli powder, haldi		As per taste		
Chopped coriander leaves		A few sprigs		

Menu	IC9	Gatte Ki Subzi	Weight Limit 0.3 kg
Utensil: N	licrowave safe (MWS)	bowl	
	Ir	structions	Method:
For making	n nattas	0.3 kg	1. In a bowl mix besan, red chilli powder, haldi, dhania powder, salt. Add water, little oil and make it like a chapati dough.
Besan	oowder, haldi, dhania	100 g As per taste	Adter making the dough break the dough into different pieces and make the rolls out of those pieces.     In a MWS bowl add the rolls & water (to cover the rolls completely).
Water For Subzi		As required	Cover.  4. Select category and press start. 5. When beeps, remove. Take out the gattas, allow to cool. Cut them into
Oil		1 tbsp	slices.
Rai, jeera		2 tsp	6. In a MWS bowl add oil, rai, jeera, curry leaves, tomato puree, red chilli
Curry leave	es	A few	powder, dhaniya powder, haldi, salt. Cover & press start. 7. When beeps, add beaten curd, gattas & haldi. Mix well & press start.
Sour curd		1 cup	7. When beeps, and beaten curd, gattas & haidi. Mix well & press start.
Red chilli p powder, sa	oowder, haldi, dhaniya alt	As per taste	
Tomato pu	ree	½ cun	

Menu	IC10		Be	ans Porial	Weight Limit 0.1~0.3 kg
Utensil: Mid	crowave safe (MWS	S) bowl			
		Instructions			Method:
For		0.1 kg	0.2 kg	0.3 kg	In a MWS bowl add oil, mustard seeds & urad dhal. Select category &
French beans (cut evenly)		100 g	200 g	300 g	weight & press start.
Oil		1 tsp	1 tsp	2 tsp	<ol><li>When beeps, add beans, sprinkle little water &amp; cover. Press start.</li></ol>
Mustard se	eeds	1/4 tsp	½ tsp	½ tsp	3. When beeps, mix well & add grated coconut, green chillies & salt. Cover
Urad dhal		1/4 tsp	½ tsp	½ tsp	& press start. Allow to standfor 3 minutes.
Grated cod	conut	2 tbsp	3 tbsp	4 tbsp	
Green chill	ies	1 no.	2 nos.	3 nos.	
Salt			As per taste		

Menu	IC11	Da	lma	Weight Limit 0.3 k
Utensil: Mi	crowave safe (MWS)	bowl		
	In	structions		Method:
For		0.3 kg		In a MWS bowl add soaked moong dal, chopped vegetables & water
Moong dal (	soaked for 2 hours)	300 g		Mix well. Select category & press start.
Water		600 ml		2. When beeps, in another MWS bowl add oil, bay leafs, jeera, dry chillie
potato, raw l	Chopped vegetables (drumsticks, 2 cups potato, raw banana,pumpkin, brinjal, tomato)		:	salt, haldi, grated coconut & chopped onion. Mix well & press start. 3. When beeps, mix well add the tadka ingredients to the dal. Mix well press start.
For tadka				
Oil		2 tbsp		
Bay leafs, je salt, haldi	eera, dry chillies,	As per taste		
Grated cocc	nut	4 tbsp		
Chopped on	nion	1 no.		

Menu IC1	12		(	Gosht	Dum B	iryani	Weight Limit 0.1~0.	5 kg
Utensil: Microway	ve safe (MWS)	bowl						
	Ir	structio	ons				Method:	
For		0.1 kg	0.2 kg	0.3 kg	0.4 kg	0.5 kg	In a MWS bowl add oil, jeera, laung, tej patta onion, ginger garlic;	naeto
Basmati rice (soaked for 1 hour		100 g	200 g	300 g	400 g	500 g	mutton & cover. Select category & weight and press start.	
Boneless mutton		100 g	200 g	300 g	400 g	500 g	2. When beeps, mix well, add rice, water, salt, red chilli powder, g	jaram
Oil		1 tbsp	1½ tbsp	2 tbsp	2½ tbsp	3 tbsp	masala & cover. Press start. Stand for 5 minutes. Serve hot.	
Chopped onion		½ cup	1 cup	1 cup	1½ cup	1½ cup		
Ginger garlic past	te	1 tbsp	1½ tbsp	1½ tbsp	2 tbsp	2 tbsp		
Jeera, laung, tej patta, salt, red As per taste chilli powder, garam masala				s per tast	e			
Water		200 ml	400 ml	600 ml	650 ml	750 ml		

Menu	IC13			Chi	cken B	iryani	Weight Limit 0.1~0.5 kg
Utensil: Mi	crowave safe (MWS)	) bowl					
	lı	nstructio	ons				Method:
For		0.1 kg	0.2 kg	0.3 kg	0.4 kg	0.5 kg	Marinade the chicken & keep it in refrigerator for 1 hour.
Basmati rice	(soaked for 1 hour)	100 g	200 g	300 g	400 g	500 g	In a MWS bowl add oil, chopped onions & marinated chicken & cover.
Boneless ch	icken	100 g	200 g	300 g	400 g	500 g	Select category & weight & press start.
For Marinade			•				3. When beeps, mix well, add rice, salt (if required), coriander leaves,
Hung curd		1/2 cup	1 cup	1½ cup	2 cup	2½ cup	water. Cover & press start. Stand for 5 minutes. Serve hot.
Tomato pure	e	2 tbsp	3 tbsp	4 tbsp	5 tbsp	6 tbsp	
Ginger garlie	c paste	1 tbsp	1½ tbsp	1½ tbsp	2 tbsp	2 tbsp	
	masala, coriander chilli powder, vder		F	As per tast	е		
Oil		1 tbsp	1½ tbsp	2 tbsp	2½ tbsp	3 tbsp	
Onion		1/2 cup	1 cup	1 cup	1½ cup	1½ cup	
Salt				If required			
Coriander le	aves		A	few spring	gs	,	
Water		200 ml	400 ml	500 ml	550 ml	650 ml	

Menu	IC14			Kadhi	Weight Limit	0.3~0.5 kg
Utensil: Mi	crowave safe (MWS	S) bowl				
		Instructions			Method:	
For		0.3 kg	0.4 kg	0.5 kg	In a MWS bowl add oil, rai, jeera, chopped or	nion. Select category
Besan Curd / matha		25 g	50 g	75 g	& weight & press start.	mon. Select category
		1/2 cup 1 cup		1½ cup	When beeps, mix & add besan, curd/matha, salt, red chilli power	salt, red chilli powder,
Oil		1 tbsp	1½ tbsp	2 tbsp	haldi, coriander powder, amchur powder, water (1/2	ter (1/2 the amount
Rai, cumin :	seeds		As per taste		mentioned per weight). Mix & press start.	
Chopped or	nions	1 cup	1½ cup	1½ cup	<ol><li>When beeps, mix &amp; add remaining water &amp; p tempering &amp; serve.</li></ol>	ress start. Pour
Salt, red chilli powder, haldi, coriander powder, amchur			As per taste		tempering & serve.	
Water		2 cups	3 cups	4 cups		

Menu	IC15		K	Cofta Curry	Weight Limit 0.1~0.3 kg
Utensil: M	icrowave safe (MWS)	flat glass dish &	& Microwave saf	e (MWS) bowl	
	Ir	nstructions			Method:
For		0.1 Kg	0.2 Kg	0.3 Kg	In a bowl mix grated lauki, besan, salt & haldi together. Mix well &
Grated Lau	ıki	100 g	200 g	300 g	prepare balls of medium size out of the mixture.
Besan		1 tbsp	2 tbsp	3 tbsp	2. Grease a MWS flat glass dish & keep the koftas on it select category &
Chopped Onion		½ cup 1	1 cup	1 cup	weight & press start.
Tomato pur			3. When beeps, remove in a MWS bowl add oil, jeera, onion, garlic &		
Chopped g	arlic	1 tsp	1½ tsp	2 tsp	ginger & press start.  4. When beeps, mix well, add tomato puree, coriander power, garam
Chopped G	Singer	1 tsp	1½ tsp	2 tsp	masala, red chilli powder, salt, water. Add koftas & press start. Stand for
Coriander power, haldi, garam As per taste masala, red chilli powder, jeera, salt		5 minutes. Squeeze lemon juice & serve.			
Oil		½ tbsp	1 tbsp	1½ tbsp	
Water		½ cup	1 cup	1 cup	
Lemon juic	e		As per taste	•	

Menu	IC16			Aloo Gobhi	Weight Limit	0.3-0.5 kg
Utensil: Mi	icrowave safe (MW	S) bowl				
		Instructions			Method:	
For		0.3 kg	0.4 kg	0.5 kg	In a MWS bowl add oil, jeera, chopped onion, gre	on chillion miv well
Potatoes (c	cut into pieces)	150 g	200 g	250 g	Select Category & weight & press start.	i, green chilles, mix well.
Cauliflower florets Oil		150 g	150 g 200 g	250 g	When beeps, mix well and add potatoes (chopped in n cauliflower florets, coriander powder, red chilli powder	ed in medium sizes),
		1 tbsp	2 tbsp	3 tbsp		
Jeera		1 tbsp	1 tbsp	1 tbsp	garam masala & mix well. Add some water Cover. F	coriander leaves and cover. Press start.
Chopped or	nion	½ cup	½ cup	1 cup	When beeps, mix well & add corrander leaves ar     Allow to stand for 15 minutes with cover inside the	
Chopped gi	reen chillies	1 no	2 nos.	3 nos.	with coriander leaves & serve.	microwave. Camisii
Coriander p	oowder, red chilli \		As per taste	•		
powder, hal masala	ldi, salt, garam					
Coriander le	eaves		A few sprigs			

Menu	IC17		Ma	lai Khumb	Weight Limit	0.1 ~ 0.3 kg
Utensil: Hig	gh rack					
		Instructions			Method:	
For		0.1 kg	0.2 kg	0.3 kg	Mix all the other ingredients of the marinade. N	Marinate the muchroome
Mushrooms	Mushrooms (Big size)		200 g	300 g	in this mixture.	namate the mushrooms
For marinade					Place the marinated mushrooms on high rack.	
Hung curd		1/4 cup	1/4 cup 1/2 cup		Select category & weight & press start.	
Thick crean	า	1 tbsp	2 tbsp	3 tbsp	4. When beeps, turn over the mushrooms. Press s	start.
Grated chee	ese	1 tbsp	2 tbsp	3 tbsp		
Cornflour		1 tbsp	1½ tbsp	2 tbsp		
Ginger past	Ginger paste ½ tsp 1 tsp 1½ tsp		1½ tsp			
Salt, garam	masala		As per taste			
Chopped co	oriander	1 tbsp	2 tbsp	3 tbsp		
Oil		½ tbsp	½ tbsp	½ tbsp		

Menu	IC18	S	ambhar	Weight Limit 0.2 kg		
Utensil: Mi	crowave safe (MWS)	bowl				
	Ir	structions		Method:		
For		0.2 kg		Soak dal for 2 hours, In MWS bowl take dal, turmeric, onion, green chilli,		
Arhar Dal (S	Soaked for 2 hrs)	200 g		tomato, mix vegetables and boiled water. Select menu and press start.		
Oil		2 tbsp		2. When beeps, in another MWS bowl take oil, rai, asafoetida, curry		
Onion chopped 1 r		1 medium	leaves, coriander powder, red chilli powder. Press star			
Tomato chopped 1 m		1 medium		3. When beeps, mash dal very well and add to tadka. Add tamarind		
Mixed Vegetables chopped - Drumsticks, ghiya, Brinjals, Red Pumpkin		1 cup		sambhar masala, jaggery and some water (if required). Press start. Stand for 5 minutes. Garnish with coconut and coriander leaves and serve with Idli.		
Boiled Wate	er	400 mL				
Sambhar M Rai, Asafoe	ulp, Green Chilli, lasala, Salt, Jaggery, tida Curry leaves, owder, Turmeric, owder	As per taste				

Menu IC19		Gaon Po	tato Curry	Weight Limit 0.3 ~ 0.5 kg
Utensil: Microwave safe	e (MWS) bowl			
	Instructions			Method:
For	0.3 kg	0.4 kg	0.5 kg	In a MWS bowl add oil, mustard seeds & chopped onion. Select menu &
Boiled potato	300 g	400 g	500 g	press start.
Boiled mix veg (capsicur cauliflower, carrot, peas)		150 g	200 g	When beeps, add grated coconut, coconut milk, tomato puree, kaju powder, salt, red chilli powder & press start.
Chopped onion	1 no.	2 nos.	3 nos.	3. When beeps, mix well & add boiled potato & mix vegetables & fresh
Oil	1½ tbsp	2 tbsp	2 tbsp	cream. Press start. Give standing time of 3 minutes.  4. Garnish with chopped coriander leaves & serve.
Mustard seeds	1 tsp	1½ tsp	2 tsp	4. Carrish with chopped contained leaves & serve.
Grated coconut	2 tbsp	2½ tbsp	3 tbsp	
Coconut milk	1 cup	1½ cup	1½ cup	
Tomato puree	½ cup	1 cup	1 cup	
Kaju powder	1 tbsp	2 tbsp	3 tbsp	
Salt, red chilli powder		As per taste	•	
Fresh cream	2 tbsp	3 tbsp	4 tbsp	
Coriander		A few sprigs		

Menu IC	20	Gujarati Tuvar Dal	Weight Limit 0.3 kg
Utensil: Microv	vave safe (MWS) bowl		
	Instruct	ions	Method:
For Tuvar dal / Arha for 2 hours) Water Oil Mustard seeds Jeera Finely chopped Slit green chillie Curry leaves	ginger	0.3 kg 300 g  600 ml 1 tbsp ½ tsp ½ tsp 1 tbsp 3 nos. A few	In a MWS bowl add tuvar dal, salt, hing, turmeric powder, water. Mix well. Select category & press start.     When beeps, remove the dal.     In another MWS bowl add oil, mustard seeds, jeera, finely chopped ginger, slit green chillies, curry leaves, chopped onions, red chilli powder. Mix well & press start.     When beeps, remove the bowl & add these ingredients to the dal. Add tomato, jaggery & mix well. Press start. Squeeze lemon juice & serve.
Chopped tomat Chopped onion		2 nos. 1 no.	
Hing		A pinch	
Salt, turmeric po powder	owder, red chilli	As per taste	
Jaggery (Gud)		As per taste	

Menu IC21				Methi aloo	Weight Limit 0.2 ~ 0.4 kg
Utensil: Microwave saf	e (MWS	) bowl			
	l.	nstructions			Method:
For		0.2 kg	0.3 kg	0.4 kg	In a MWS bowl take oil, chopped green chilli, & chopped tomato. Mix
Methi leaves (chopped)		2 cups	3 cups	4 cups	well. Select menu & weight and press start.
Big size potato (cut in p	ieces)	1 no.	2 nos.	3 nos.	2. When beeps, mix & add cut potatoes. sprinkle little water on top. Cover
Tomato		1 no.	2 nos.	3 nos.	& press start.
the state of the s		1 tbsp	1½ tbsp	2 tbsp	<ol><li>When beeps, remove cover. Add chopped methi leaves &amp; all the spices. Mix well &amp; cover. Press start. Give standing time for 5 minutes. Serve hot</li></ol>
		0.4 kg	0.5 kg	with chappati or parantha.	

Menu IC22	Veg Handva <sup>®</sup>	Weight Limit 0.3 kg			
Utensil: Microwave safe (MWS	) flat glass dish & Low rack* & High rack*				
I	nstructions	Method:			
For	0.3 kg	Clean, wash & soak the rice & dal together in enough water for at least 4			
Rice	200 g (1 cup)	to 5 hours. Drain & keep aside.			
Urad Dal (Dehusked)	½ cup	2. Blend in a mixer till smooth, add the curds & mix well. Cover & keep			
Boiled vegetables (Potato, 2 cups Carrots, Peas, Palak)		<ul> <li>aside to ferment overnight.</li> <li>3. After fermentation, add salt, chilli powder, turmeric powder, Baking soc carb, ginger &amp; green chilli paste. Mix well.</li> </ul>			
Oil	1 tsp	4. In a MWS bowl, add oil, mustard seeds & curry leaves & microwave for 2			
Lemon juice	2 tsp	minutes and keep aside.			
Baking soda	A pinch	<ol><li>Add the boiled vegetables to the fermented batter, add the tadka prepared &amp; lemon juice &amp; hing. Mix well all the ingredients.</li></ol>			
Chilli powder, turmeric powder,	As per taste	6. Pour the batter in MWS flat glass dish.			
salt		7. Select category & weight and press start.			
Ginger & chilli paste	1 tsp	8. When beeps, keep the MWS flat glass dish on low rack & press start.			
Mustard seeds	1 tsp	9. When beeps, transfer the MWS flat glass dish to high rack & press start.			
Curry leaves	A few sprigs				
Hing	1/4 tsp				

Menu	IC23	Jeera aloo					Weight Limit 0.1 ~ 0.5 kg
Utensil: Mi	crowave safe (MWS)	) bowl					
Instructions					Method:		
For		0.1 kg	0.2 kg	0.3 kg	0.4 kg	0.5 kg	In a MWS bowl take oil, jeera, chopped green chilli, & chopped tomato.
Jeera			Mix well. Select menu & weight and press start.				
Big size pot	ato (cut in pieces)	1 no.	1½ nos.	2 nos.	2½ nos.	3 nos.	2. When beeps, mix & add cut potatoes. sprinkle little water on top. Cover
Tomato		1 no.	1 no.	2 nos.	3 nos.	3 nos.	& press start.
Green chilli (chopped)		½ tbsp	1 tbsp	1½ tbsp	2 tbsp	2½ tbsp	3. Give standing time for 5 minutes. Serve hot with chappati or parantha.
Salt, red chilli powder, haldi, As per ta garam masala		As per tast	e				

Menu	IC24			Kaddu I	ki Subzi	Weight Limit 0.2 ~ 0.5 kg
Utensil: Mi	crowave safe (MWS	) bowl				
	ı	nstruction	s			Method:
For		0.2 kg	0.3 kg	0.4 kg	0.5 kg	In a MWS bowl take kaddu pieces, sprinkle some water & cover. Select
Kaddu (cut	Kaddu (cut into pieces) 200 g		300 g	400 g	500 g	category & weight and press start.
Chopped to	Chopped tomato 1 no.		2 nos.	3 nos.	4 nos.	2. When beeps, remove kaddu & keep aside. In another MWS bowl put oil,
Chopped gr	een chilli	1 no.	2 nos.	3 nos.	4 nos.	chopped ginger, green chilli, coriander leaves & chopped tomatoes. Mix
Finely chop	ped ginger	½ tsp	½ tsp	1 tsp	1 tsp	well & press start.
Chopped co	riander leaves	1 tbsp	2 tbsp	3 tbsp	4 tbsp	<ol> <li>When beeps, remove &amp; mix well. Add cooked kaddu &amp; all the spices.</li> <li>Mash with the back of laddle / spoon. Press start. Serve hot.</li> </ol>
Oil	Oil 1 tbsp 11/2		1½ tbsp	2 tbsp	2½ tbsp	Mash with the back of laddic/ spoon. I ress start. Gerve not.
	Salt, red chilli power, garam As pe masala, amchoor, turmeric		er taste			

Menu	IC25		Mat	ar Paneer	Weight Limit	0.2 ~ 0.4 kg
Utensil: Mi	crowave safe (MWS)	) bowl				
	lı	nstructions			Method:	
For		0.2 kg	0.3 kg	0.4 kg	In a MWS bowl add oil, chopped ginger, g	arlic onion Mix well select
Matar		100 g	150 g	200 g	category & weight & press start.	ariic, oriiori. Wiix weli select
Paneer Cub	oes	100 g	150 g	200 g	2. When beeps, mix well, add paneer cubes,	peas, tomato puree, jeera,
Oil		1 tbsp	1½tbsp	2 tbsp	powder, salt, haldi, red chilli powder, garam masala. Mix w	
Tomato pur	ee	1/4 cup	½ cup	1 cup	Press Start.	I
Chopped O	nion	1 tbsp	1½ tbsp	2 tbsp	<ol><li>When beeps, mix well, add water, coriander Stand for 5 minutes.</li></ol>	leaves & cover. Press start.
Chopped G	inger	1 tsp	1½ tsp	2 tsp	Citation of minutes.	
Chopped ga	arlic	1 tsp	1½ tsp	2 tsp		
Jeera powder, salt, haldi, red chilli powder, garam masala						
Coriander le	eaves		A few sprigs			
Water		1/4 cup	½ cup	1 cup		

 $<sup>^{\</sup>circledR}$  Do not put anything in the oven during Pre-heat mode. \*Refer page 63, fig -3  $^{\sharp}$  Refer page 63, fig -4

Menu	IC26	Jhinga Matar Curry			Weight Limit 0.2 ~ 0.4 kg
Utensil: Mi	crowave safe (MWS)	) bowl			
	lı	nstructions			Method:
For		0.2 kg	0.3 kg	0.4 kg	Grind all together onions, green chilli, ginger, coriander powder &
Prawns (de	viened & cleaned)	50 g	100 g	150 g	turmeric powder without adding any water & make a paste.
		½ cup	1 cup	1 cup	2. In a MWS bowl take oil & paste. Mix well. Select category & weight and
		1/4 cup	½ cup	1 cup	press start.
Salt, red chilli power, garam masala			As per taste		When beeps, mix & add shelled peas, prawns, all other spices & water.     Mix well & cover and press start.     When beeps, remove lid & stir well. Press start. Serve hot with steamed.
Oil		1 tbsp	1½ tbsp	2 tbsp	rice.
For Paste					
Onions		1 no.	2 nos.	2½ nos.	
Green chilli 1 no.		1 no.	2 nos.	2 nos.	
Coriander p powder	oowder, turmeric		As per taste		
Ginger (cho	pped)	1 tsp	1½ tsp	2 tsp	

Menu	IC27			Egg Curry	Weight Limit	0.1 ~ 0.3 kg
Utensil: Mi	crowave safe (MWS	) bowl				
	lı	nstructions			Method:	
For		0.1 kg	0.2 kg	0.3 kg	Put chopped onions, green chilli, garlic, ginge	r in a enice blander &
Boiled eggs	3	2 nos.	4 nos.	6 nos.	make paste adding 1 tbsp water.	i iii a spice bieridei d
Onions (cho	opped)	2 nos.	3 nos.	4 nos.	2. In a MWS bowl take oil & add the paste. Mix	well. Select category &
Green chilli		1 no.	2 nos.	3 nos.	weight and press start.	
Garlic (pod:	Garlic (pods) 6-7		8-10 nos.	10-12 nos.	os. 3. When beeps, stir & add tomato puree, peas, water & all	
Ginger (cho	ppped)	1 tbsp	1½ tbsp	2 tbsp	Mix well & press start.  4. When beeps, stir & add boiled eggs (each cut into 2), add s required. Mix well & press start. Garnish with fresh corian	into 2) add some water if
Tomato pur	ee	3 tbsp	5 tbsp	6 tbsp		
Water		½ cup	1 cup	1½ cup	serve hot.	
Green peas	s (shelled)	1/4 cup	½ cup	1 cup		
Salt, red chilli powder, garam masala, turmeric powder, dhania powder		As per taste				
Oil		2 tbsp	3 tbsp	3 tbsp		
Coriander le	eaves		A few sprigs	*		

Menu	IC28			Bh	indi Fry	Weight Limit 0.1 ~ 0.4 k		
Utensil: Microwave safe (MWS) glassbowl & Microwave safe (MWS) Flat glass dish								
	lı	nstruction	s		Method:			
For		0.1 kg	0.2 kg	0.3 kg	0.4 kg	In a MWS glass bowl add oil, ajwain & chopped onion & mix well.		
Bhindi (cut I	engthwise)	100 g	200 g	300 g	400 g	Select category & weight and press start.		
Ajwain		As per taste				2. When beeps, add bhindi, salt, red chilli powder, dhania powder,		
Oil		1 tbsp	1 tbsp	1½ tbsp	2 tbsp	garam masala & haldi. Cover & press start.		
Chopped onion		½ cup	½ cup 1 cup		1 cup	When beeps, transfer to flat glass dish & cover. Press start. Allow to stand for 3 minutes.		
Salt, red chilli powder, dhania powder, garam masala, haldi			As pe	r taste		Static for 5 minutes.		

Menu	IC29		Kas	shmiri	Kaju P	aneer	Weight Limit 0.1 ~ 0.5 kg				
Utensil: Mi	Itensil: Microwave safe (MWS) bowl										
		Instruction	ons				Method:				
For Paneer pieces Kaju Sliced onions		0.1 kg	0.2 kg	0.3 kg	0.4 kg	0.5 kg	In a MWS bowl add oil, onion slices, chopped ginger & garlic. Select				
		100 g	200 g	300 g	400 g	500 g	category & weight and press start.				
		2 tsp	3 tsp	4 tsp	5 tsp	6 tsp	2. When beeps, mix well, add khus paste, kaju paste, tomato puree, chilli				
		½ no.	1 nos.	1½ nos.	1½ nos.	1½ nos.	powder, garam masala & salt and press start.				
Chopped gi	nger	1 tsp	2 tsp	3 tsp	4 tsp	5 tsp	When beeps, mix well, add paneer pieces and milk. Press start. Stand for 3 minutes.				
Chopped ga	arlic	1 tsp	2 tsp	3 tsp	4 tsp	5 tsp	Tor 3 minutes.				
Chilli powde	er		-	As per tast	e						
Khus Khus	paste	1 tsp	2 tsp	3 tsp	4 tsp	5 tsp					
Tomato pur	ее	½ cup	1 cup	1½ cup	2 cup	2 cup					
Milk		1/4 cup	½ cup	1 cup	1½ cup	1½ cup					
Garam mas	ala & salt		-	As per tast	e						

Menu	IC30		E	gg Biryani	Weight Limit 0.1 ~ 0.3kg
Utensil: Mid	rowave safe (MWS)	) bowl			
	lı	nstructions			Method:
For Boiled eggs Rice (soaked for 1 hour)		0.1 kg	0.2 kg	0.3 kg	In a MWS bowl take soaked rice, water, Select category & weight and
		2 nos.	3 nos.	4 nos.	press start.
		100 g	200 g	300 g	2. When beeps, take out the cooked rice & keep aside. In another MWS
Water	Water		350 ml	500 ml	bowl take oil, chopped coriander leaves, sliced onions, biryani masala,
Onions (Big	sized sliced)	1 no.	2 nos.	2 nos.	ginger-garlic paste, slit green chillies & all the spices. Mix very well & press start.
Coriander le	aves (chopped)	1 tbsp	2 tbsp	3 tbsp	When beeps, add boiled eggs (cut into 2) & boiled rice to the sliced
Ginger-garli	c paste	½ tsp	1 tsp	1 tsp	onions. Mix well without breaking the eggs. Press start.
Salt, red chilli powder, garam masala, dhania powder, turmeric powder			As per taste		Serve egg biryani hot with plain curd or raita.
Biryani masa	ala	½ tsp	1 tsp	1 tsp	
Slit green ch	illies	1 no.	2 nos.	2 nos.	

Menu	IC31		Achari Ch	ana Pulao	Weight Limit 0.1 ~ 0.3kg
Utensil: Mi	crowave safe (MWS)	) bowl			
	lı	nstructions			Method:
For		0.1 kg	0.2 kg	0.3 kg	In a MWS bowl take soaked rice & water. Select category & weight and
Soaked rice Soaked & boiled kabuli chana Sliced onions		100 g	200 g	300 g	press start.
		½ cup	1 cup	1½ cup	2. When beeps, remove the rice & keep aside. In another MWS bowl take
		½ cup	1 cup	1½ cup	desi ghee, jeera, saunf, laung, chhoti elaichi, badi elaichi, ginger-garlic
Water	Water		350 ml	500 ml	paste, sliced onions & slit green chillies. Mix very well & press start.  3. When beeps, add onion-mixture to the cooked rice, also add mango
Ginger-garli	ic paste	½ tsp	1 tsp	1½ tsp	pickle paste & all the spices. Mix very well & press start.
Desi ghee		1 tbsp	1½ tbsp	2 tbsp	Serve achari chana pulao hot with fresh curd.
	Laung, chhoti elaichi, badi elaichi, saunf, jeera		s per requireme	nt	
Salt, red chilli powder, garam masala, haldi			As per taste		
Mango pick	le paste	1 tbsp	1½ tbsp	2 tbsp	
Slit green cl	hilli	1 no.	2 nos.	2 nos.	

Menu	IC32			Methi Rice	Weight Limit 0.1 ~ 0.3kg
Utensil: Mid	crowave safe (MWS	) bowl			
	lı	nstructions			Method:
For		0.1 Kg	0.2 Kg	0.3 Kg	In a MWS bowl take soaked rice & water. Select category & weight and
Methi leaves	Methi leaves (chopped)		1½ cup	2 cup	press start.
Soaked rice		100 g	200 g	300 g	2. When beeps, remove the rice & keep aside. In another MWS bowl take
Water		200 ml	350 ml	500 ml	oil / ghee, chopped methi leaves, sliced onions, ginger-garlic paste. Mix
Onions (slic	ed)	1 no.	2 nos.	3 nos.	well & press start.
Ginger-garli	Ginger-garlic paste		1 tsp	1½ tsp	When beeps, add methi leaves to cooked rice, add all the spices. Mix very well. Press start. Serve rice hot with curd or raita.
Salt, red chilli powder, garam masala			As per taste		To y nomin roccodana con romano no mano a con rana.
Oil / ghee		1½ tbsp	2 tbsp	2½ tbsp	

Menu IC3	3		Coc	conut Rice	Weight Limit 0.1 ~ 0.3k						
Utensil: Microwav	Itensil: Microwave safe (MWS) bowl										
	lr	nstructions		Method:							
For		0.1 Kg	0.2 Kg	0.3 Kg	In a MWS bowl take soaked rice coconut milk & water. Select category						
Rice (soaked for 1 hour)		100 g	200 g	1 cup	weight and press start.						
Coconut (grated)		1/4 cup	½ cup	0.3 Kg	2. When beeps, remove the rice & separate rice grains using a fork & keeps						
Coconut milk		100 ml	200 ml	300 ml	aside. In another MWS bowl take oil, mustard seeds, chopped						
Water		100 ml	150 ml	200 ml	cashewnuts, curry leaves, chopped ginger, chopped green chilli. N						
Oil		1 tbsp	2 tbsp	2 tbsp	well & press start.  3. When beeps, add cooked rice to the tadka. Add beaten curd, grate						
Chopped cashewn	nuts	1 tbsp	2 tbsp	3 tbsp	coconut, salt & pepper. Mix very well & press start. Serve coconut ri						
Mustard seeds		½ tsp	1 tsp	1 tsp	hot with sambhar.						
Curry leaves		10 nos.	15 nos.	20 nos.							
Chopped green ch	illi	2 nos.	3 nos.	3 nos.							
Salt & pepper			As per taste	•	1						
Finely chopped gir	nger	1 tsp	1½ tsp	2 tsp	]						
Beaten curd		1 tbsp	2 tbsp	3 tbsp							

Menu	IC34				Curc	d Rice	Weight Limit 0.1 ~ 0.5 kg
Utensil: Mid	crowave safe (MWS	) glass bo	wl				
Instructions							Method:
For Basmati Rice (Soaked) Water Oil		0.1 kg	0.2 kg	0.3 kg	0.4 kg	0.5 kg	In a MWS glass bowl add oil, mustard seeds, urad dal, chana dal.
		100 g	200 g	300 g	400 g	500 g	Select category & weight and press start.
		200 ml	400 ml	600 ml	650 ml	750 ml	When beeps, mix well & add curry leaves, green chillies, grated ginger.
		1 tbsp	1½ tbsp	2 tbsp	2½ tbsp	3 tbsp	Mix well & press start.
Mustard see	Mustard seeds		½ tsp	1 tsp	1 tsp	1½ tsp	3. When beeps, remove the bowl.
Urad dal		½ tsp	½ tsp	1 tsp	1 tsp	1½ tsp	4. Now in another MWS glass bowl, add rice & water. Press start. Stand for 5 minutes.
Chana dal		½ tsp	½ tsp	1 tsp	1 tsp	1½ tsp	5. Add cooked rice, curd, milk, chopped coriander leaves to the first MWS
Curry leaves	S		Α	few leave	es		glass bowl. Mix well &serve.
Green chillie	es (chopped)	2 nos.	2 nos.	3 nos.	3 nos.	3 nos.	
Grated ging	er	½ tsp	½ tsp	1 tsp	1 tsp	1½ tsp	
Curd		½ cup	½ cup	1cup	1 cup	1½ cup	
Milk		1/4 cup	1/4 cup	½ cup	½ cup	1 cup	
Coriander le	eaves (chopped)		A	few sprig	ıs		

## Indian Cuisine

Sweet Corner

Menu	SC1		Bes	san Ladoo	Weight Limit 0.1 ~ 0.3kg	
Utensil: Mi	crowave safe (MWS	6) flat glass dish				
		Instructions			Method:	
Besan		0.1 kg	0.2 kg	0.3 Kg	In Microwave safe flat glass dish take besan and ghee. Select menu and	
Ghee (melte	Ghee (melted)		5 tbsp	7 tbsp	press start.	
Powder Sug	ar	50 g	100 g	150 g	<ol><li>When beeps, stir it &amp; press start.</li></ol>	
Elaichi Pow	Elaichi Powder 1/2 tsp		1 tsp	1 tsp	When beeps, stir it & press start.	
					4. Allow to cool. Sieve the mixture. Add powdered sugar and elaichi powder. Mix it well and make a ladoo of same size. Note: For binding the ladoo use ghee.	

Menu	SC2 Kalaka				Weight Limit 0.1 ~ 0.	3kg
Utensil: Mic	rowave safe(MWS	S) bowl				
		Instructions			Method:	
Grated Pane	Grated Paneer 0.1 kg 0.2 kg		0.2 kg	0.3 kg	In Microwave Safe Bowl take grated paneer, Condensed	
Condensed I	Milk (Milkmaid)	50 ml	100 ml	200 ml	(Milkmaid), milk powder, cornflour, Elaichi powder. Mix well, s	
Milk Powder		2 tbsp	3 tbsp	4 tbsp	menu and press start.	
Cornflour 1/2 tsp		1/2 tsp	1 tsp	1 tsp	<ol><li>When beeps, mix it again and press start.</li></ol>	
Elaichi Powo	ler	1/2 tsp	1 tsp	1 tsp		

Menu	SC3		Sł	nahi Tukda	Weight Limit 0.1 ~ 0.3kg					
Utensil: Mi	Itensil: Microwave safe (MWS) flat glass dish &High Rack*									
		Instructions			Method:					
For		0.1 kg	0.2 kg	0.3 kg	Arrange bread slices on high rack. Select category & weight & press					
Bread Slices		1 slice	2 slices	3 slices	start.					
Condensed	Milk (Milkmaid)	50 ml	100 ml	150 ml	When beeps, turn slices press start.					
Milk		50 ml	100 ml	125 ml	3. When beeps, mix Condensed Milk (Milkmaid), milk, sugar, dry fruits and					
Sugar	Sugar		2 tbsp	3 tbsp	kesar elaichi powder in Microwave Safe Flat Glass Dish. Pour the					
Badam, Pista Pieces		2 tbsp	3 tbsp	4 tbsp	mixture on slices and press start. Serve hot.					
Kesar-Elaichi Powder As per your		As per your taste	9							

Menu	SC4			Kheer	Weight Limit	0.1 ~ 0.3kg
Utensil: Mi	crowave safe (MWS	S) glass bowl				
		Instructions			Method:	
For		0.1 kg	0.2 kg	0.3 kg	In Microwave Safe Glass Bowl add milk, C	andoneed Milk (Milkmeid)
Milk		100 ml	100 ml 200 ml	300 ml	& mix well. Select category & weight, press start.	
Condensed	Milk (Milkmaid)	150 ml	200 ml	300 ml	When beeps, add Badam Pista pieces, Kesar Ela	
Seviyaan (re	oasted)	20 gm	40 gm	60 gm	Seviyaan. Mix well and press start.	
Badam, Pista Pieces Kesar & Elaichi Powder		2 tbsp	3 tbsp	4 tbsp	When beeps, mix it well. Add more milk (if required) & press start.     Stand for 5 minutes. Serve hot or chilled.     Note: The bowl should be filled at 1/4 level of the total volume.	
			As per your taste	9		

Menu	nu SC5 Suji Halwa			Weight Limit 0.1 ~ 0.3k	
Utensil: Mid	Utensil: Microwave safe (MWS) glass bowl				
	Ir	structions			Method:
Suji		0.1 kg	0.2 kg	0.3 kg	In MWS glass bowl take Suji, add ghee, mix it together. Select
Ghee (melte	Ghee (melted)		3 tbsp	4 tbsp	category & weight press start.
Water		300 ml	600 ml	900 ml	2 When beeps, stir it. Allow to cool. Add sugar & 1/2 qty. of water (For
Sugar		100 g	200 g	300 g	0.1Kg add 150 ml). Mix well & press start.
Cashewnuts, Kishmish, Kesar\ Elaichi Powder			As per your taste	9	<ol><li>When beeps, add remaining ½ water, sugar, cashewnuts, kishmish, kesar, Elaichi powder, mix it well and press start. Serve hot.</li></ol>

Menu	SC6			Payasam	Weight Limit 0.1 ~ 0.3kg
Utensil: Mi	icrowave safe(MWS)	bowl			
	lı	nstructions			Method:
For		0.1 kg	0.2 kg	0.3 kg	In a MWS bowl take ghee, soaked rice, milk & water & cover it.
Broken Ric	e (soaked for 2 hour)	100 g	200 g	300 g	Select category & weight & press start.
Milk + Wate	er	300 ml	500 ml	700 ml	3. When beeps, add more milk, dry fruits, kesar, elaichi powder. Mix well &
Sugar 75 g 150 g		200 g	press start. Stand for 5 minutes. Sprinkle kewada jal on it. Serve hot or		
Kesar, elaichi powder dry fruits As per taste			chilled.		
Ghee		1 tbsp	1½ tbsp	2 tbsp	

Menu	SC7			Sandesh	Weight Limit 0.2 ~ 0.4 kg
Utensil: Mi	crowave safe (MWS	) bowl			
	I	nstructions			Method:
For		0.2 kg	0.3 kg	0.4 kg	In a MWS bowl add grated paneer, khoa & Condensed Milk (Milkmaid).
Paneer (gra	ted)	200 g	300 g	400 g	Mix well.
Condensed	Milk (Milkmaid)	50 g	75 g	100 g	Select category & weight & press start.
Rose water		1 tbsp	1½ tbsp	2 tbsp	When beeps, stir well & press start.
Elaichi seed	ls	½ tsp	1 tsp	1½ tsp	<ol> <li>Allow to cool. Hang in Muslin cloth for 20 minutes if it too wet. Make balls out of the mixture &amp; roll them in elaichi powder &amp; chopped pista.</li> </ol>
Chopped pista A few			out of the mixture of foil them in elateril powder of chopped pista.		
Khoa (mash	ned)	100 gm	150 gm	200 gm	

Menu	SC8	Seviyan Zarda	Weight Limit 0.2 kg
Utensil: Mi	icrowave safe (MWS)	glass bowl	
	Ir	structions	Method:
Roasted Se	eviyan	200g	In a MWS glass bowl add sugar & water. Select category & press start.
Sugar		5 tbsp	2. When beeps, add rose essence, cardamom powder, seviyan to the bowl.
Water		2 cups	Press start. Give standing time of 3 minutes. Garnish with almonds &
Rose esser	nce	A few drops	pista & serve.
Almonds		A few	
Chopped pi	ista	A few	
Elaichi pow	/der	½ tsp	
Ghee		1 ½ tbsp	

Menu	SC9			Phirni	Weight Limit	0.3~0.5kg
Utensil: Mi	crowave safe (MW	S) bowl				
		Instructions			Method:	
For		0.3 kg	0.4 kg	0.5 kg	1. Grind the soaked rice to a paste with little water.     2. In a MWS glass bowl add milk. Select category and press start.     3. When beeps, add rice paste & sugar to it. Press start.	
Milk		350 ml	500 ml	650 ml		
Rice (Soake	ed)	50 g	75 g	100 g		
Sugar		100 g	150 g	200 g	4. When beeps, add cream & press start.	
Elaichi pow	der	1 tsp	1 tsp	1½ tsp	<ol><li>Mix well, add cardamom powder &amp; dry fruits &amp; kee chill. Garnish with kesar &amp; serve.</li></ol>	p in the refrigerator to
Cream (whi	pped)	2 tbsp	3 tbsp	4 tbsp	chill. Garnish with kesar & serve.	
Dry fruits ( almonds, As required cashewnuts, raisins)		As required				
Kesar			A few			

Menu	SC10	Mysore Pak	Weight Limit 0.1kg				
Utensil: Mid	Jtensil: Microwave safe (MWS) glass bowl						
	Ir	structions	Method:				
For		0.1kg	n a MWS glass bowl add milk & Condensed Milk (Milkmaid), grated				
Besan		100 g	kaddu. Select category & press start.				
Melted ghee	)	100 ml	When beeps, mix well. Press start.				
Powdered S	Sugar	100 g	<ol><li>When beeps, mix well &amp; add dry fruits. Press start. Serve it chilled or hot.</li></ol>				
Milk		1/4 cup					

Indian Cuisine Sweet Corner

Menu	Menu SC11 Kaddu Kheer		Weight Limit 0.5 kg					
Utensil: Mid	Utensil: Microwave safe (MWS) flat glass dish							
Instructions			Method:					
For		0.5 kg	In a MWS flat glass dish add besan. Select Category & press start.					
Milk		300 ml	When beeps, mix well & add melted ghee, powdered sugar. Mix very					
Grated kadd	du	200 g	well while adding. Press start.					
Condensed Milk (Milkmaid) 150 g		150 g	3. When beeps, mix well & add milk. Press start. Allow to cool & cut into					
Dry fruits (K	Dry fruits (Kaju, kishmish, pista)  As required		pieces & serve.					

Menu	SC12	Rava La	idoo V	/eight Limit	0.5 kg		
Utensil: Mi	crowave safe (MW	S) glass bowl					
		Instructions	M	Method:			
For		0.5 kg	1	n a MWS glass bowl take sugar & milk. Mix & select o	ategory and proce		
Roasted rava/sooji Grated khoya		1 cup		start.  2. When beeps, add roasted rava/sooji, kishmish & chop	alegory and press		
		1½ cup			hopped almonds.		
Sugar		½ cup		Sprinkle elaichi powder & mix very well. Press start.  3. When beeps, mix well & add grated khoya. Mix well & again  4. Make equal sized ladoos from the mixture, when it is still war	• •		
Milk		½ cup					
Kishmish		2 tbsp	4.		till warm.		
Chopped a	lmonds	2 tbsp					
Desi ghee		1 tbsp					
Elaichi pow	der (optional)	½ tsp		1			

Menu	SC13	Kaju Burfi	Weight Limit 0.4 kg
Utensil: M	icrowave safe (MWS) glass bowl		
	Instructions		Method:
For	0.4 kg		Take kaju in a spice-grinder & make a fine powder and keep aside.
Kaju	2 cups		In a MWS glass bowl take powdered sugar & water. Stir very well. Select
Powdered	bwdered sugar         1½ cup         category & press star           fater         ½ cup         3. When beeps, stir ver		category & press start.
Water			3. When beeps, stir very well & dissolve all the sugar. Add kaju powder &
7.00			stir till all the lumps are removed. Keep stirring till the paste becomes like a dough (ball formation stage).  4. Grease the kitchen-slab (marble top) a little with ghee. Take the dough & roll out to 25 mm thickness carefully. Cut the kaju burfi in desired square or diamond shape & decorate with vark and serve.

Menu	SC14	Badam Halwa		lam Halwa	Weight Limit	0.1 ~ 0.3 kg		
Utensil: Mi	Jtensil: Microwave safe (MWS) glass bowl							
	lı	nstructions			Method:			
For		0.1 kg	0.2 kg	0.3 kg	1. Romovo the skip from hadom 8 grind the	m to a fine paste adding milk		
Badam (soa	Badam (soaked in hot water for 1/2		1 cup	1½ cup	<ol> <li>Remove the skin from badam &amp; grind them to a fine paste Take out this paste in a MWS glass bowl.</li> </ol>	en to a line paste adding mik.		
1 hour)			•	•	Add desi ghee to the paste & mix well. Select category & weight ar press start.     When beeps, stir very well & again press start.	Select category & weight and		
Milk (for ma	king paste)	½ cup	1 cup	1 cup				
Milk (for co	oking)	½ cup	3/4 cup	1 cup				
Sugar 3 tbsp Desi ghee 2 tbsp		3 tbsp	5 tbsp	7 tbsp	4. When beeps, stir very well. Add sugar & milk (for			
		3 tbsp	4 tbsp	well & press start. Give standing time of 5-6 minutes & m with slivered almonds & serve badam halwa hot.				
Slivered alm	nonds (for garnishing)		A few		with Silvered dimonds & serve badainnai	wa not.		

# Indian Cuisine

# Chatpat Corner

Menu	lenu CC1 Apple Tomato Chutney		Weight Limit 0.3 kg		
Utensil: Mi	crowave Safe (MW	S) Glass Bowl			
		Instructions	Method:		
Apple pieces		200 gms	In a MWS glass bowl put apple, tomato, salt, sugar & green chillies		
Tomato pieces		100 gms	keep it in Microwave. Select category and press start to cook. When it		
Green chilli	es, Salt, Sugar	As per your taste	gives a beep, remove and grind it in a mixer. In another MWS glass b		
Oil		2 tbsp	add oil and tempering and press start. add ground mixture and mix well.		
For Tempering : Rai, Jeera,			Garnish with chopped coriander.		
Hing etc.					

Menu	CC2	Lemon Pickle	Weight Limit 0.3 kg		
Utensil: Mid	crowave Safe (MWS				
Instructions			Method:		
Lemon pieces		300 gms	Cut lemon and remove seeds. In MWS glass bowl add lemon pieces		
Sugar		150 gms	sugar, salt and chilli powder. Select category and press start. Store it in a		
Chilli powder, Salt		As per your taste	bottle after it cools.		
For Temperi Hing etc.	ing : Rai, Jeera,				

Menu	CC3	Mix Veg. Pickle	Weight Limit 0.3 kg			
Utensil: Mi	crowave Safe (MWS	) Glass Bowl				
	Ir	structions	Method:			
Mix Vegetable (Cauliflower, Carrot, Radish, Shalgam, Green peas) Lemon juice Salt, Chilli powder, Sugar, Pickle Masala		300 gms	In a MWS glass bowl put vegetables cut in long strips. Cover and ket in Microwave. Select category and press start to cook. When it give beep, remove. In another glass bowl add oil, tempering, chilli pow.			
		2 tbsp	and press start. When it gives a beep add masala, sugar, salt.			
		As per your taste	vegetables to this when it cools. Mix well and store it in a fridge.			
Oil		2 tbsp				
For temperi Hing etc.	ng : Rai, Jeera,					

Menu	CC4	Pizza Sauce	Weight Limit 0.3 kg
Utensil: Mid	crowave Safe (MWS	) Glass Bowl	
	lı	nstructions	Method:
Tomato		200 gms	1. In a MWS bowl put oil, tomato, onion, garlic pods and keep it in
Onions		1 No.	Microwave. Select category & press start to cook. When it gives a beep,
Salt, Sugar, Basil leaves	Ajwain, Oregano,	As per your taste	remove and grind it in a mixer. Now add salt, sugar, ajwain, oregano, basil leaves. Keep it in Microwave and press start.
Garlic pods		7-8	
Oil		2 tbsp	

CC5	Tomato Sauce	Weight Limit 0.5 kg		
rowave Safe (MWS	S) Glass Bowl			
I)	nstructions	Method:		
	500 gm	In a MWS bowl put tomato pieces, add some water, cover and keep it in		
	1 No.	a Microwave. Select category & press start to cook. When it give		
r, Salt, Sugar	As per your taste	beep, remove and grind it in a mixer. Strain it. Add salt, sugar, garam		
nger and garlic	2 tbsp	masala to the mixture and mix well & press start.		
ala	1 tsp			
	crowave Safe (MWS	Instructions		

Menu	CC6	Masala Chutney	Weight Limit 0.3 kg
Utensil: Mid	crowave Safe (MWS)	Glass Bowl	
	In	structions	Method:
Chana Daal	, Urad Daal	150 g each	1. In a MWS glass bowl put daals and keep it in Microwave. Select
Grated dry	coconut	100 g	category & press start to cook. When it gives a beep, remove. Add the
	lt, Sugar, Turmeric,	As per your taste	rest of the ingredients and keep it in Microwave and press start.
	vder, Jeera powder,		Remove, cool it and grind it in a mixer. This chutney can be served with
Curry leaves, Methi seeds			Idly, Paratha or Rice.
Oil		1 tsp	

Menu	CC7	Aam Ki Chutney	Weight Limit 0.3 kg
Utensil: Mi	crowave Safe (MWS	) Bowl	
	lı	nstructions	Method:
For		0.3 kg	In a MWS bowl mix all the ingredients. Cover. Select category & weight
Aam (peele	d & chopped)	300 g	& press start.
Kishmish (s	eedless & chopped)	25 g	
Chopped gi	nger & garlic	2 tsp	
Tamarind p	ulp	1 tbsp	
Salt & suga	г	As per taste	

Menu	lenu CC8 Coconut Chutney		Weight Limit 0.3 kg
Utensil: Mi	crowave Safe (MWS	) Glass Bowl	
	Ir	structions	Method:
For		0.3 kg	Grind grated coconut, chopped green chillies, ginger, roasted split gram
Fresh grated coconut		300 g	dhal, salt together in a blender.
Chopped green chillies		2 nos.	In a MWS glass bowl add oil, mustard seeds, broken dry red chillies,
Chopped ginger		1 tbsp	curry leaves. Select category & press start.
Roasted spl	it gram dal (optional)	1 tbsp	Pour the tempering over the chutney & serve.
Salt		As per taste	
For temperi	ng		
Oil		1 tsp	
Mustard seeds		½ tsp	
Broken dry	red chillies	1 no.	
Curry leave	s	A few	

Menu	CC9	Gongura Chutne	y Weight Limit 0.3 kg
Utensil: Mi	crowave Safe (MWS	) Glass Bowl	•
	lı	nstructions	Method:
Gongura		300 g	Grind all the ingredients together except mustard seeds & oil.
Chopped or	nion	1 no.	In a MWS glass bowl add oil & mustard seeds. Select category & press
Chopped gr	een chillies	5 nos.	start.
Mustard see	eds	1 tbsp	<ol><li>Mix the grind ingredients with the mustard seeds &amp; serve.</li></ol>
Oil		1 tbsp	
Salt & red c	hilli powder	As per taste	

Menu	CC10	Til Ki Chutney	Weight Limit 0.2 kg		
Utensil: Mi	crowave Safe (MWS	) Glass Bowl			
	Ir	structions	Method:		
For		0.2 kg	Grind together roasted til, tamarind paste, green chilli, coriander		
Roasted til		½ cup	leaves, mint leaves, garlic pods, salt & water in spice grinder. Make a		
Tamarind pa	aste	2 tbsp	rough paste.		
Green chilli		4-5 nos.	In a MWS glass bowl take oil, cumin seeds, curry leaves & dried red		
Coriander le	eaves	2 tbsp	chilli. Mix well. Select category & press start.		
Mint leaves		1 tbsp	When beeps, add the grounded paste to the tempering & mix well.		
Water		½ cup			
Garlic pods	1	2-3 nos.			
Salt		As per taste			
For Temper	ring				
Oil 1 tb		1 tbsp			
Cumin seeds 1 tsp		1 tsp			
Curry leave	IS .	6-7 nos.			
Red chilli (d	iry)	2 nos.			

Menu	HP1	Kala Cha				Chana	Weight Limit 0.1 ~ 0.5 kg
Utensil: Mid	crowave safe (MWS	) bowl					•
	I	nstructio	ons				Method:
Soaked Kala overnight)	a Chana (soaked	0.1 kg	0.2 kg	0.3 kg	0.4 kg	0.5 kg	Soak Chana overnight, in a MWS bowl take soaked chana with water, cover it.
Water		200 ml	400 ml	600 ml	800 ml	1000 ml	
Oil		1 tbsp	2 tbsp	3 tbsp	3½ tbsp	4 tbsp	3. When beeps, strain the water from it. In a MWS bowl, add oil, Chopped
Onion Chop	ped	1/2 cup	1 cup	1½ cup	2 cup	2½ cup	onion, Chaat masala, Red Chilli Powder, Hara Dhania and press start.  4. When beeps, add boiled chana, mix well & press start.
Salt, Chat Masala, Red Chilli Powder, Hara Dhania			As per your taste		aste	•	4. When beeps, and boiled chana, mix well & press start.

Menu	HP2		Ka	rela Subzi	Weight Limit 0.1 ~ 0.3 kg
Utensil: M\	VS glass bowl + high	n rack			
	Ir	nstructions			Method:
Chopped Karela		0.1 kg	0.2 kg 0.3 kg		In a MWS glass bowl take Oil add Rai, Jeera, Hing & Haldi, chopped
Oil		1 tbsp	1 tbsp 1 tbsp	2 tbsp	onions, select category and press start.
Chopped or	nions	1/4 cup	½ cup	1 cup	When beep add Chopped Karela some water, salt, sugar, masala,
Water		As required			dhania-jeera powder. Press start.
Rai, Jeera,	Hing & Haldi		For tempering		<ol><li>When beeps, remove MWS glass bowl from microwave oven and transfer the subzi to high rack and press start.</li></ol>
Salt, Sugar, Garam Masala, Dhania, Jeera Powder		As per your taste			4. Garnish with Coconut & Dhania, Serve Hot.
Grated Coc	onut & Hara Dhania		For garnishing		

Menu	HP3	Moong Dal	Weight Limit 0.2 kg
Utensil: Mi	crowave safe (MWS	) bowl	
	I	nstructions	Method:
Moong Dal s (for 2 hours)	soaked in water )	0.2 kg	Take 200 gms dal in Microwave Safe bowl, add Water, Haldi & Hing.     Select category & press start to cook.
Water		400 ml	When beeps, take another bowl add oil, jeera, hari mirch, curry leaves &
Oil		2 tbsp	chopped onion & press start.
Jeera		1 tsp	4. When beeps, add dal, salt, dhania jeera powder, hara dhania, kasuri
Hari Mirch,	Onion chopped	2-3 nos., 1 medium sized	methi (optional) lemon juice & press start to cook.
Curry leaves	s	5-6 nos.	
Haldi, Hing,	a-Jeera Powder, Kasuri Methi, e, Hara Dhania	As per your taste	

Menu	HP4	Machi Kali Mirch					١	Veight Limit	0.1 ~ 0.5 kg
Utensil: Mi	crowave safe (MWS)	) bowl							
	lı	nstructio	ons				٨	lethod:	
	Salt, Lemon Juice & Kali Mirch To marinate as per your taste				0.5 kg	11.	Take Pomfret Slices as per weight either of (0.1 Kg/ 0.2 Kg/ 0.3Kg) marinate with salt, lemon juice, and kali mirch powder (as per taste one hour.		
	owder  iii, Chopped Onion, Chopped  omatoes, Chopped Gartic  As required					3. 4.	In Microwave Safe bowl put oil, choppe chopped garlic. Select category & weight: When beeps, open door and add marinat water. Cover & press start. When beeps, mix well & press start. Give standing time for 5 minutes.	and press start.	

Menu	HP5		(	Shiya Raita	Weight Limit	0.1 ~ 0.3 kg
Utensil: Mid	crowave safe (MWS)	) bowl				
	Ir	nstructions			Method:	
For		0.1 kg	0.2 kg	0.3 kg	In a MWS bowl add grated ghiya, sprin	kle water and salt Select
Grated Ghiy			category and weight & press start to cook.			
Water		50 ml	75 ml	100 ml	2. Strain ghiya and take it in MWS bowl ar	nd add curd, taste. Served
Salt			To taste	•	chilled.	
Curd		3 tbsp	4 tbsp	5 tbsp		
Salt, Sugar, Green Chilli	Mustard Powder &		As per your tast	te		

Menu	HP6		Nut	trinuggets	Weight Limit 0.1 ~ 0.3 kg
Utensil: Mid	crowave safe (MWS)	bowl			
	In	structions			Method:
For Soaked and boiled nutrinuggets Potato		0.1 kg	0.2 kg	0.3 kg	In a MWS bowl add oil, jeera, onion. Select category and weight and
		50 g	100 g	150 g	press start. Mix well.
		50 g	100 g	150 g 2 tbsp	2. When beeps, add tomato puree, nutrinuggets, potato, salt, red chilli
		1 tbsp	1½ tbsp		powder, haldi, dhania powder and add ½ the amount of v
Jeera			As per taste		mentioned per weight (For eg. For 100g, add 1 cup of water). Cover an
Chopped or	ion	½ cup	1 cup	1½ cup	press start. Mix well. 3. When beeps, add the remaining amount of water and press start. Mix
Tomato pure	ee	2 tbsp	3 tbsp	4 tbsp	well. Allow to stand for 3 minutes. Garnish with coriander leaves & serve
Salt, garam masala, red chilli powder, haldi, dhania powder			As per taste		hot with roti.
Water		1½ cup	2 cup	2½ cup	
Chopped co	riander leaves		For garnishing		

Menu	HP7				Curd E	3rinjal	Weight Limit 0.1 ~ 0.5 kg
Utensil: Microwave safe (MWS) bowl							
		Instruction	ons				Method:
For		0.1 kg	0.2 kg	0.3 kg	0.4 kg	0.5 kg	1. In a MWS bowl add oil & brinjal. Cover. Select category & weight & press
Brinjal (cut	into pieces)	100 g	200 g	300 g	400 g	500 g	start.
Curd	Curd 100 g 200		200 g	300 g	400 g	500 g	2. When beeps, remove & in another MWS bowl add oil, mustard & cumin
Oil		1 tbsp	2 tbsp	3 tbsp	4 tbsp	5 tbsp	seeds, curry leaves & chopped ginger. Press start.
Curry leave	es		A few sprigs				3. When beeps, add brinjal, curd & salt. Mix well & press start.
Mustard &	cumin seeds	1 tsp	2 tsp	3 tsp	3 tsp	4 tsp	
Salt			P	s per tast	e		
Chopped g	inger	1 tsp	2 tsp	3 tsp	3 tsp	4 tsp	

Menu	HP8		Ba	thua Raita	Weight Limit 0.1 ~ 0.3 kg
Utensil: Mi	crowave safe (MWS	) bowl			
	lı	nstructions			Method:
For		0.1 kg	0.2 kg	0.3 kg	In a MWS bowl add chopped bathua leaves. Sprinkle some water &
Chopped ba	athua	25 g	25 g 50 g		cover. Select category & weight & press start.
Water		50 ml	75 ml	100 ml	When beeps, remove.
Beaten curd 3 tt Salt, roasted cumin seed powder		3 tbsp	4 tbsp	5 tbsp	3. In a bowl add water, beaten curd, bathua leaves & mix well. Add salt &
			As per taste		roasted cumin seed powder.  4. Mix well & refrigerate it for some time & serve.

Menu	HP9		Health	ny Khichdi	Weight Limit	0.1 ~ 0.3 kg
Utensil: Mi	crowave safe (MWS	) bowl				
	I	nstructions			Method:	
For		0.1 kg	0.2 kg	0.3 kg	1. In a MWS bowl take soaked dal, rice & ghe	e Also add grated carrot
Rice (soaked)		75 g 150 g		225 g	soaked & drained sova granules & peas. Mix well. Select cated	
Moong dal / Green gram, (dehusked), washed (soaked)		25 g	50 g	75 g	weight and press start.  2. When beeps, mix, add water & salt. Mix aga	
Desi ghee		½ tbsp	1 tbsp	1½ tbsp	<ol> <li>When beeps, stir &amp; mash well. Add pepper powder &amp; ½ c Mix &amp; cover and press start.</li> <li>Serve hot with fresh curds.</li> </ol>	powder & ½ cup water.
Peas		1/4 cup	½ cup	1 cup		
Carrot (grat	ed finely)	1 no.	2 nos.	2 nos.		
Soya granu	les (soaked)	2 tbsp	3 tbsp	4 tbsp		
Salt & pepp	er		As per taste			
Water		300 ml	500 ml	750 ml		

Menu   HP10		S	weight Limit 0.1 ~ 0.3 kg			
Utensil: Microwave safe (MWS	S) bowl					
	Instructions			Method:		
For	0.1 kg	0.2 kg	0.3 kg	1. In a MWS bowl put soaked dal (lentils), water, turmeric powder & salt.		
Dehusked soaked lentils (at least for 2 hours)	100 g	200 g	300 g	Select category & weight and press start.  2. When beeps, in another MWS bowl put oil, chopped onions, cumin		
Onions chopped	½ cup 1 cup 1 cup 1½ cup		1 cup	seeds, chopped ginger & green chillies, chopped spinach. Mix well and		
Spinach chopped			2 cup	press start. 3. When beeps, mix well & add boiled lentils, Mix again & press start.		
Oil	1 tbsp	2 tbsp	2 tbsp	4. Garnish with coriander leaves & serve hot.		
Cumin seeds	1 tsp	1 tsp	1½ tsp			
Ginger & green chillies (chopped)	1 tbsp	2 tbsp	3 tbsp			
Water	300 ml	500 ml	700 ml			
Turmeric, salt		As per taste				
Lemon juice	1 tsp	2 tsp	3 tsp			
Coriander leaves	2 tbsp	3 tbsp	4 tbsp			

Menu	HP11		F	ish Masala	Weight Limit	0.1 ~ 0.3 kg
Utensil: Mi	crowave safe (MWS)	bowl				
	Ir	nstructions			Method:	
For	For 0.1 kg 0.2		0.2 kg	0.3 kg	In MWS bowl take oil and chopped onion. Se	last many and procestart
Pomphret pieces 100		100 g	200 g	300 g	When beeps, remove and add pomphret	
Onions 1 n		1 no.	2 nos.	2 nos.	start.	
Tomato		1 no.	1 no.	1 no.	3. When beeps, add all the other ingredients and 1 cup water an	
Oil		1 tbsp	2 tbsp	2 tbsp	Press start. When beeps, remove and garnis	h with coriander leaves.
	er, Turmeric, Ginger , Salt, Saunf powder		As per taste			
Garam mas	ala	1 tsp	1 tsp	1 tsp		
Dhania, jee	ra powder	2 tsp	2 tsp	2 tsp		
Coriander le	eaves	2 tbsp	2 tbsp	2 tbsp		

Menu	HP12		Soya Idli	Weight Limit	4pc,8pc (40-50g) each	
Utensil: Mi	crowave safe (MWS) bowl & N	ficrowave safe (MWS) ic	dli stand*			
	Instruction	ons		Method:		
Rice		100 g		Wash & soak rice, urad dal & s	covebagge granules for 4 hours	
Urad		4 tbsp			3 to 10 hours. Grind the mixture to paste	
Soyabean		4 tbsp		consistency.		
Water		As required		<ol> <li>Grease Idli Stand with Oil. Put Idli batter in it. Add ½ cup wa</li> </ol>		
Salt	Salt As per taste			MWS bowl. Keep the idli star press start to cook. Allow to st	nd & cover. Select category & number and	
	·				ter, you can use it for making category 4 or	

Menu	HP13	Soyabeen curry	Weight Limit 0.2 kg				
Utensil: Mi	crowave safe (MWS)	bowl					
	Ir	structions	Method:				
For		0.2 kg	In a MWS bowl add oil, chopped onions. Select menu and press start.				
Soyabean (soaked overnight) Oil		200 g	Mix well.      When beeps, in another MWS bowl add tomato puree and haldi are				
		1½ tbsp					
Chopped or	nions	1 cup	press start. Mix well.				
Tomato pur	ee	½ cup	3. WHen beeps, add chopped green chillies, red chilli powder, garam				
Chopped gr	reen chillies	1 tbsp	masala, coriander powder, salt, soyabean and water. Press start.  4. Garnish with coriander leaves and serve hot.				
Red chilli powder, Garam masala Coriander powder, Salt		As per taste					
Water		200 L					
Coriander le	eaves	For garnishing					

Menu	HP14	Fish Bharta				3harta	Weight Limit 0.1 ~ 0.5 kg
Utensil: Microwave safe (MWS) bowl + Microwave safe (MWS) flat glass dish							
	I,	nstructio	ons				Method:
For		0.1 kg	0.2 kg	0.3 kg	0.4 kg	0.5 kg	1. In a MWS bowl add ½ cup water. Place the fish pieces on the MWS flat
Fish (Fillet)		100 g	200 g	300 g	400 g	500 g	glass dish. Keep the dish in MWS bowl. Cover. Select menu and press
Mustard oil		1 tbsp	1 tbsp	1 tbsp	1½ tbsp	2 tbsp	start.
Mustard see	eds	½ tsp	½ tsp	1 tsp	1 tsp	1 tsp	2. When beeps, remove & mash the fish. In a MWS bowl, add oil, chopped
Chopped or	nion	½ cup	½ cup	1 cup	1 cup	1 cup	onions, red chilli powder, garam masala, haldi, salt. Cover and press
Red chilli po masala. Sal	owder, Haldi Garam t		P	As per tast	te		3. When beeps, add mashed fish & press start. Mixwell & serve.

Menu	HP15	Oats id	lli	Weight Limit	4pc,8pc (40-50g) each
Utensil: N	Microwave safe (MWS) I	bowl & Microwave safe (MWS) idli stand*			
	Ins	structions		Method:	
For idli ba	atter			1 Mix all the ingredients of batts	r in a bowl. Allow to stand for 10 minutes.
Roasted &	powdered oats	1 cup			r the batter (depending on the number you
Semolina		½ cup		want to cook)	tale batter (deponding on the name of year
Curd		½ cup		3. Add ½ cup water to MWS bowl. Keep the idli stand inside the bowl.	owl. Keep the idli stand inside the bowl.
Water		¾ cup		Cover.	
Salt		As per taste		<ol> <li>Select the menu &amp; bumber an</li> <li>When beeps, remove the idlif</li> </ol>	
Baking so	da	1/4 tsp			oil, mustard seeds, curry leaves & dry red
Grated car	rrot	1/4 cup			dli & serve. Add lemon juice(optional).
Chopped 9	green chillies	2 nos.			
Oil		For greasing			
For Temp	ering				
Mustard se	eeds	½ tsp			
Curry leav	es	A few			
Dry red ch	illies	A few			
Oil		½ tbsp			

<sup>\*</sup> Not Provided with LG standard accessories.

Low Calorie Health Plus

Menu	HP16 Lemon Chicken						Weight Limit 0.1 ~ 0.5 kg
Utensil: Mid	rowave safe (MWS	) bowl					
Instructions						Method:	
For		0.1 kg	0.2 kg	0.3 kg	0.4 kg	0.5 kg	Mix boneless chicken, soysauce, salt & pepper, garlic paste & lemon
Boneless ch	icken	100 g	200 g	300 g	400 g	500 g	juice in a bowl. Refrigerate for ½ hour.
Soya sauce		½ tbsp	1 tbsp	1½ tbsp	2 tbsp	2½ tbsp	2. In a MWS bowl add oil, marinated chicken pieces, sugar, corn flour
Corn flour		½ tbsp	1 tbsp	1½ tbsp	2 tbsp	2½ tbsp	mixed with water. Cover. Select category & weight & press start.
Water		½ cup	1 cup	1½ cup	2 cup	2½ cup	3. When beeps, mix well. Cover & press start. Allow to stand for 3 minutes.
Salt Pepper	& Sugar		P	s per tast	е		
Garlic paste		1 tbsp	1½ tbsp	2 tbsp	2½ tbsp	3 tbsp	
Lemon juice		2 tsp	3 tsp	4 tsp	4 tsp	5 tsp	
Oil		½ tbsp	1 tbsp	1½ tbsp	2 tbsp	2½ tbsp	

Low Calorie Soup

Menu	So1	Sweet Corn Soup	Weight Limit 0.6kg
Utensil: Mi	crowave safe (MWS)	glass bowl	
	Ir	structions	Method:
For		0.6 kg	1. Grind sweet corn with water and put in MWS Glass Bowl. Select
Sweet Corn	1	200 g	category & press start.
Water		600ml(3 cups)	When beeps, remove, in another bowl put oil, green chilli & press start.
Oil		1 tsp	3. When beeps, add corn mixture in it. Mix cornflour with ½ cup water and
Cornflour		2 tbsp + ½ cup water	mix with it. Add salt, sugar, kali mirch and press start.
Salt, Sugar Green Chilli	and Kali Mirch and i	As per your taste	

Menu	So2	Mushroom Soup	Weight Limit 0.6kg
Utensil: Mid	crowave safe (MWS	) glass bowl	
	lı	nstructions	Method:
For		0.6 kg	In MWS glass bowl add potato in small pieces, chopped cabbage, onion
Mushroom		120 g	& mushrooms with water. Select category & press start.
Potato		1 No.	2. When beeps, remove the bowl. Allow to cool & separate the mushrooms
Cabbage	Cabbage 50 g & grind the remaining stock & strain it		
Onion		1 small	3. In a MWS glass bowl, add oil, mushrooms, salt & pepper. Mix & press
Water		600ml(3 cups)	start. When beeps, add the stock & press start. Garnish with grated cheese & serve.
Salt, Black F	Pepper	As per your taste	Chicago d Scive.
Oil		1 tsp	
Grated chee	ese	As per requirement	

Menu	So3	Tomato Soup	Weight Limit 0.6kg
Utensil: Mi	crowave safe (MWS	) glass bowl	
	I	nstructions	Method:
For		0.6 kg	In a MWS glass bowl add chopped tomato, chopped onion, chopped
Chopped To	omato	100 g	carrot, chopped ginger-garlic along with water. Keep in Microwave.
Chopped C	arrot	25 g	Select category & weight and press start.
Chopped O	nion	1 small	When beeps, grind and strain it.
Chopped G	inger, Garlic	1 tsp	In another MWS glass bowl add oil/butter and stock and then put the bowl in Microwave and press start. When beep, add sugar, salt, black
Salt, Sugar,	Pepper	As per your taste	pepper as per your taste and cornflour paste which is made up by mixing
Cornflour &	Oil / Butter	2 tbsp / 1 tsp	the half cup of cold water. Stir well & press start.
Water		600 ml (3 cups)	Garnish with bread croutons, coriander (green dhania) and fresh cream and serve hot.

Menu	So4	Chicken Soup	Weight Limit 0.6kg			
Utensil: Mid	Itensil: Microwave safe (MWS) glass bowl					
	lı	nstructions	Method:			
For		0.6 kg	In MWS glass bowl put water & add chicken pieces. Select category &			
Boneless Ch	hicken	300 gms	press start.			
Ginger Past	е	1 tsp	When beeps, remove the bowl.			
Garlic Paste	)	1 tsp	3. In another MWS glass bowl add oil, ginger-garlic paste, chicken stock,			
Salt & Pepp	er Powder	As per your taste	salt, pepper, cornflour paste, green chillies. Press start.			
Cornflour Paste		2 tbsp (mixed with1/2 cup of water)				
Oil		1 tbsp				
Water		600 ml / 3 cups				

Menu	So5	Chicken Tortilla Soup	Weight Limit 0.6kg
Utensil: Mi	crowave safe (MWS)	bowl	
	In	structions	Method:
For		0.6 kg	In MWS bowl put water and chicken pieces. Keep it in Microwave.
Chicken pie	ces (Boneless)	250 g	Select category and press start to cook.
Ginger Garl	ic paste	2 tsp	2. When it gives a beep, remove. In another bowl add oil and ginger garlic
Water		600ml(3 cups)	paste, salt, pepper powder, green chilli & chicken stock. Mix well & press start.
Salt, Pepper	Powder, Green Chillies	As per your taste	3. Serve with tortilla pieces.
Oil		1 tsp	o. Corro mantorana piococo.
Tortilla piece	es	10-15 Nos.	

Menu	So6	Rasa	am	Weight Limit	0.6kg
Utensil: M	icrowave safe (MWS)	bowl			
	Ir	structions		Method:	
For		0.3 kg		In a MWS bowl add chopped tomato & water. Select category	y P proce
Tomato		300 g		start.	y & press
Tamarind p	ulp	50 g		<ol><li>When beeps, remove &amp; cool. Grind &amp; strain it.</li></ol>	strained tomato stock.
Salt & Jago	gery	As per taste		3. In a MWS bowl add oil, coriander seeds, cumin seeds, cinnam	
Green chilli	ies	2 nos.		chopped garlic, green chillies, salt & jaggery & strained toma Press start.	
Coriander 8	& curry leaves	For garnishing		4. When beeps, strain it again & add more water (if required),	
Chopped g	arlic	2-3 flakes		pulp. Press start.	
Coriander s cinnamon,	seeds, cumin seeds, hing	As per taste		5. Garnish with coriander & curry leaves & serve.	
Water		600 ml (3 cup)			
Oil		1 tbsp			

Menu	So7	Hot & Sour Soup	Weight Limit 0.6kg
Utensil: Mi	icrowave safe (MWS)	glass bowl	
	In	structions	Method:
For		0.6 kg	1. In a MWS glass bowl add water, chili sauce, soya sauce, vinegar, salt,
Water		600 ml (3 cups)	salt & pepper powder . Select category & press start.
Chilli sauce	Э	1 tbsp	2. When beeps, stir well & add all the chopped vegetables, except paneer.
Soya sauce	е	2 tbsp	Press start.
Vinegar		2 cups	When beeps, stir well & add corn flour, tomato sauce, paneer pieces & press start.
	egetables (capsicum, ns, carrots, cabbage)	100 g	procesula
Tomato sau	uce	2 tbsp	
Cornflour		2 tbsp + ½ cup water	
Salt, peppe	er	As per taste	
Paneer		50 g	

Menu	So8	Palak Makai Shorba	Weight Limit 0.3kg				
Utensil: Mid	Jtensil: Microwave safe (MWS) glass bowl						
		Instructions	Method:				
For		0.3kg	In a MWS glass bowl add chopped palak & little water. Select category &				
Palak (chop	ped)	200 g	press start.				
Water		300ml (1 ½ cups)	When beeps, grind the palak,				
Maggie tast	emaker	1 cube	In another MWS glass bowl add butter, jeera, chopped onions. Press				
Corn Niblets	3	½ cup	start. 4. When beeps, remove & add palak & water, milk, corn niblets & Maggie				
Chopped or	nion	½ cup	tastemaker. Press start.				
Jeera		1 tsp					
Butter		1 tbsp					
Milk		1/4 cup					

Menu	So9	Wonton Soup	Weight Limit 0.3kg
Utensil: M	icrowave safe (MW	S) glass bowl	
		Instructions	Method:
	abbage, carrot, french beans	0.3 kg 200 g (Total)	In MWS glass bowl add oil and vegetables, ginger-garlic paste. Select category & press start.     When beeps, add salt, pepper, water & palak (in pieces). Mix well & put
Ginger past		2 tsp 2 tsp	in microwave & press start.  3. When beeps, mix well & press start. Add wonton & serve.
Spinach in Oil		10 leaves 1 tsp	How to make Wonton:  Maida -1 cup, Salt -1 pinch, Oil -1 tsp  Method: Mix all the ingredients in the bowl and make dough with too warm.
Salt, peppe Water	r powder	As per taste 300ml (1 ½ cups)	water. After that cover the bowl and leave the mixture for 10-15 minutes.  For Stuffing:
Ready won	ton	6-7 pieces	Cabbage, carrot, capsicum which is cut in long pieces  Method: Mix all the ingredients for stuffing. Make a small puree of wonton and put the small quantity of stuffing in between them and then cover the puree and press it.

Menu	So10	Mulligtawny Soup	Weight Limit 0.6kg
Utensil: Mi	crowave safe (MWS	) glass bowl	
	I	nstructions	Method:
For		0.6 kg	In MWS glass bowl add butter, carrot, onion & apples. Mix well. Select
Cooked rice	9	50 g	category & weight and press start.
Dehusked le	entil	30 g	When, beep, mix well, add cooked rice, lentils & water and press start.
Apples (pea	aled & sliced)	½ no.	3. When, beep, mix well, allow to cool. Blend & strain. In the same MWS
Carrot		50 g	glass bowl add the strained stock, salt, pepper, curry powder & lemon
Onion		50 g	juice. Press start.
Veg stock/w	vater	600 ml (3 cups)	
Salt & pepp	er	To taste	
Butter		1 tsp	
Curry powd	er	1 tsp	
Lemon juice	9	1 tsp	

Menu So11	Rajma Soup	Weight Limit 0.6kg
Utensil: Microwave safe (MWS	) glass bowl	
II.	nstructions	Method:
For	0.6 kg	Grind the boiled rajma. Add water & strain it.
Water	600 ml	2. In a MWS glass bowl add oil, garlic, onion, tomato. Mix well. Select
Rajma (boiled)	1 cup (170 g)	category & press start.
Oil	½ tbsp	3. When beeps, mix well & add salt, pepper, red chilli powder & rajma
Garlic cloves (chopped)	2 nos.	stock. Mix well & press start.
Onion (chopped)	½ cup	Add lemon juice & garnish with coriander leaves & serve hot.
Tomato (chopped)	½ cup	
Coriander (chopped)	1/4 cup	
Salt, pepper, red chilli powder	As per taste	
Lemon juice	1 tbsp	

Menu	So12	Shahi Shorba	Weight Limit 0.6kg
Utensil: M	icrowave safe (MWS	s) glass bowl	
	1	nstructions	Method:
For		0.6 kg	In a MWS glass bowl take butter & chopped onion. Mix well. Select
Onions (fin	ely chopped)	2 nos.	category & press start.
Walnuts (co	parsely chopped)	1/4 cup	2. When beeps, stir well. Add whole wheat flour, mint paste, coarsely
Mint paste		1 tbsp	chopped walnuts & mix well. Press start.
Whole whe	at flour	2 tbsp	3. When beeps, mix and add water. Mix well so that no lumps are formed.
Butter		2 tbsp	Add seasoning. Press start. Serve hot.
Salt, black garam mas	pepper powder, ala	As per taste	

Menu	So13	Bombay Curry Soup	Weight Limit 0.6kg
Utensil: M	Microwave safe (MWS)	glass bowl	
	ln	structions	Method:
For		0.6 kg	In a MWS glass bowl add soaked masoor dal, tomato & water. Select
Water		500 ml (2½ cups)	category & press start.
Soaked ma	asoor dal (dehusked)	200 g	When beeps, remove & allow the dal to cool. Grind it in a mixer & strain.
Chopped t	tomato	2 nos.	3. In another MWS glass bowl, add oil, crushed garlic, chopped onion.
Chopped of	onions	1 no.	Press start.
Crushed g	arlic	3-4 cloves	<ol><li>when beeps, mix &amp; add strained dal stock, salt, chilli powder, curry powder &amp; add 150 ml of water. Mix well &amp; press start. Garnish with</li></ol>
Oil		1 tbsp	coriander leaves & serve hot.
Curry powder		As per taste	
Salt, red chilli powder		As per taste	
Coriander	leaves	For garnishing	

Menu	So14	Badam Soup	Weight Limit 0.6kg
Utensil: Mi	icrowave safe (MWS	) glass bowl	
	I	nstructions	Method:
For		0.6 kg	1. Grind soaked & blanched badam & basil leaves to a fine paste, adding 1/2
Badam (so	aked & blanched)	50 g	cup water. Take out in a MWS glass bowl. Add 3 cups water & stir well.
Fresh basil	leaves (Tulsi)	8-10 nos.	Add cinnamon, elaichi & cloves.
Water		3 cups (600 ml)	Select category & press start.
Cinnamon		25 mm stick	3. When beeps, stir & strain the soup &sieve. Take the strained soup in a
Elaichi (gre	en)	2-3 nos.	MWS glass bowl. Add salt & peppers & cornflour (mixed with ½ cup water) & press start. Serve hot.
Cloves		2-3 nos.	water / at press start. Serve not.
Sugar		½ tsp	
Cornflour	Cornflour ½ tbsp		
Salt & pepp	oer powder	As per taste	

Menu So15	Limbu Dhania Shorba	Weight Limit 0.6kg
Utensil: Microwave safe (MW	S) glass bowl	
	Instructions	Method:
For	0.6 kg	In a MWS glass bowl add oil, cabbage, carrot, celery, spring onions,
Water	600 ml	ginger, garlic, bayleaves, cloves, peppercorns. Mix well. Select
Oil	½ tbsp	category & press start.
Shredded cabbage	1 cup	2. When beeps, mix well & add water & press start. When beeps, add
Chopped carrot	½ cup	besan paste, lemon juice, coriander leaves, salt. Mix well & press start.
Celery	½ cup	Garnish with coriander leaves & serve hot.
Spring onions	½ cup	
Ginger (grated)	1 tsp	
Chopped garlic	3 nos.	
Bayleaf	2 nos.	
Cloves	2 nos.	
Pepper corns	3 nos.	
Besan	2 tbsp (dissolved in 1/4 cup water)	
Lemon juice	2 tbsp	
Coriander leaves (chopped)	½ cup	
Salt	As per taste	

Continental Low Calorie

Menu	Co1			Pasta <sup>®</sup>	Weight Limit 0.1 ~ 0.3 kg			
Utensil: Mi	Jtensil: Microwave safe (MWS) glass bowl & Microwave safe (MWS) flat glass dish & High rack*							
	I	nstructions			Method:			
For		0.1 kg	0.2 kg	0.3 kg	In a MWS glass bowl take pasta, add water (sufficient to boil the pasta)			
Penne past	a	100 g	200 g	300 g	& few drops of oil. Select category and weight and press start.			
Butter		1 tbsp	2 tbsp	3 tbsp	2. When beeps, drain water from the pasta, wash & separate under			
Chopped or	nion	1/2 cup	1 cup	1½ cup	running water. In a MWS flat glass dish add butter, onion, garlic and			
Chopped ga	arlic	1 tbsp	1½ tbsp	2 tbsp	palak. Mix well and press start.  3. When beeps, add cream, nutmeg powder, oregano, salt, pepper, boiled			
Chopped pa	alak leaves	50 g	75 g	100 g	pasta. Mix well and sprinkle grated cheese. Keep the dish on high rack			
Water		400 ml	800 ml	1200 ml	and press start.			
Cream		1/4 cup	1 cup	1½ cup	· ·			
Grated che	ese	2 tbsp	3 tbsp	4 tbsp				
Nutmeg por salt & pepp	wder, oregano, er		As per taste					

 $<sup>^{\</sup>tiny{\circledR}}$  Do not put anything in the oven during Pre-heat mode. \*Refer page 63, fig -3

Menu	Co2	Veg Au Gratin <sup>®</sup>	Weight Limit 0.2 kg			
Utensil: Mi	crowave safe (MWS	S) glass bowl & Microwave safe (MWS) flat glass d	ish & High rack*			
		Instructions	Method:			
For		0.2 kg	1. In a MWS glass bowl take vegetables & add 400ml water. Select			
Mix vegetables (cut gajar, gobhi, french beans, sweet corns, peas etc.)		200 g	category & press start.  2. When beeps, remove MWS glass bowl & transfer boiled Vegetables to MWS flat glass dish add milk, Maida, salt & pepper. Mix well. Cover &			
Maida		2 tbsp	press start.			
Butter		2 tsp	<ol> <li>When beeps, mix well and spread grated cheese on it, place the dish high rack &amp; press start.</li> </ol>			
Milk		½ cup	- High rack & press start.			
Grated cheese		5 tbsp				
Salt, pepper	r	As per taste				

Menu	Co3			Macaroni	Weight Limit 0.1 ~ 0.3 kg
Utensil: Mid	crowave safe (MWS)	) bowl			
	lı	nstructions			Method:
For		0.1 kg	0.2 kg	0.3 kg	In MWS bowl take Macaroni with water. Select category & weight &
Macaroni		100 g	200 g	300 g	press start.
Water		400 ml	800 ml	1200 ml	When beeps, drain water from it. In MWS bowl add all the ingredients
Butter		1 tbsp	2 tbsp	3 tbsp	with boiled Macaroni, mix well and press start.
Spring onion	n chopped	1 tbsp	2 tbsp	3 tbsp	
Garlic chopp	oed	1 tsp	2 tsp	3 tsp	
Mushroom o	chopped	3 nos.	4 nos.	5 nos.	
Tomato sau	ce	1 tbsp	2 tbsp	3 tbsp	
Chilli sauce		1 tsp	2 tsp	3 tsp	
Salt, sugar,	pepper & oregano		As per taste		

Menu C	o4	Baked Mushroom <sup>®</sup>			Weight Limit	0.1 ~ 0.3 kg
Utensil: Microv	Utensil: Microwave safe (MWS) flat glass dish & High rack*					
Instructions				Method:		
For		0.1 kg	0.2 kg	0.3 kg	In MWS flat glass dish put all the ingredients except cheese, r	
Mushrooms		50 g	100 g	150 g	2. Select category & weight and press start	t '
White sauce 50 g 100 g 150 g			<ol><li>When beeps, keep on high rack. Spread grated cheese on the top of t</li></ol>			
Cheese (grated	d), salt, pepper		As per taste		mixture and press start.	

Menu	Co5	Las	aneya	Weight Limit 0	).3 kg	
Utensil: Mi	crowave safe (MWS)	flat glass dish & High rack*				
	Ir	structions		Method:		
For		0.3 kg		Except lasagne and cheese add all the ingredients in MWS fla	/S flat glass	
Lasagne sh	eets (cooked)	150 g		dish. Select category and press start.		
White sauce	9	1 cup 1/2 cup		<ol><li>When beeps, in same dish arrange lasagne sheets in the bottom spread vegetable mixture on it and make layers of sheets and veg mixture. Press start.</li></ol>		
Pizza sauce	)					
	iled) - Egg plant, occoli, mushrooms,	2 cups		When beeps, spread the grated cheese & keep the glass dis rack and press start.	ish on high	
Oil	Oil 2 tbsp					
Oregano, sa	Oregano, salt & pepper As per taste				- 1	
Grated chee	ese	5 tbsp				

Menu	Co6			Chilli Veg	Weight Limit	0.3 ~ 0.5Kg
Utensil: Mid	crowave safe (MWS	) bowl				
	ı	nstructions			Method:	
For		0.3 kg	0.4kg	0.5 kg	In a MWS bowl add oil, onions, green chillies,	ginger garlie naete &
Paneer piec	Paneer pieces 3		400g	500g	capsicum. Mix well & cover.	ginger game paste &
		<ol><li>Select category &amp; weight press start.</li></ol>				
Chopped gr	Chopped green chillies		4 nos	5 nos	<ol><li>When beeps, mix well &amp; add soya sauce, chilli sauce, cornflo</li></ol>	
Ginger garlie	c paste	1½ tbsp	2 tbsp	2 ½ tbsp	with ½ cup water), water, salt, pepper and press start.  4. When beeps, add paneer pieces & press start.  5. Mix well & serve.	tart.
Oil		1½ tsp	2 tsp	2 ½ tsp		
Soya sauce		2 tsp	2 1/2 tsp	3 tsp	o. With Well & Serve.	
Cornflour		2 tbsp	2 ½ tbsp	3 tbsp		
Green chilli sauce 3 tbsp 3 ½ tbsp		4 tbsp				
Salt & Pepper As per your taste		e				
Water		1 cup	2 cups	2 ½ cups		

 $<sup>^{\</sup>tiny{\circledR}}$  Do not put anything in the oven during Pre-heat mode. \*Refer page 63, fig -3

Menu	Co7	Thai Chicken	Weight Limit 0.5 kg	
Utensil: M	licrowave safe (MWS	) bowl		
	I)	nstructions	Method:	
Boneless of	chicken	500 gm	1. In a MWS bowl put oil, garlic, sugar, soya sauce, red curry paste,	
Red curry	paste	2 tbsp	broccoli, chicken pieces, mix well. Select category and press start.	
Sugar		1 tsp	2. when beeps, remove. Add red chilli paste, crushed peanuts, sauce of	
Soya sauc	e	2 tbsp	milk, maida, butter, mix well press start.	
Salt		To taste		
Chopped of	garlic	1 tsp	1	
Blanched B	Broccoli (florets)	1 cup		
Peanuts (F	Roasted & crushed)	1/4 cup		
Oil		2 tbsp		
Red chilli p	paste	1 tsp		
For Sauce				
Butter		2 tbsp		
Maida		2 tbsp	1	
Milk		1 tbsp		
Salt & pep	per	To taste		

Menu	Co8		Sweet 8	Sour Veg	Weight Limit	0.1 ~ 0.3 kg
Utensil: Mi	crowave safe (MWS)	bowl				
	In	structions			Method:	
For		0.1 kg	0.2 kg	0.3 kg	In a microwave safe bowl add oil, choppe	d apring anions & garlia rad
lengthwise,	bles (Baby corns cut Broccoli florets, pieces, Pineapple sicum)	100 g	200 g	300 g	chilli paste. Select category & weight and p  When beeps, mix well & cut vegetables, to sugar, soya sauce, pineapple juice, wate start. Stand for 5 minutes.	ress start. omato ketchup, vinegar, salt,
Oil		½ tbsp	½ tbsp 1 tbsp		Start Starte for Strington	
Chopped sp	oring onion & garlic	1/4 cup	½ cup	1 cup		
Red chilli pa	aste	1/4 tsp	1/4 tsp	½ tsp		
Tomato Ket	chup	1/4 cup	1/4 cup	½ cup		
Vinegar			As per taste			
Sugar		½ tsp	1 tsp	1 tsp		
Salt			As per taste	•		
Soya sauce	)	1 tsp	1 tsp	1 tsp		
Pineapple ju	uice	1/4 cup	1/4 cup	½ cup		
Water		1 cup	1 cup	1 cup		
Cornflour		2 tbsp	mixed with 1/2 cu	p water		

Menu	Co9	Mediterranean Crostini <sup>®</sup>	Weight Limit 0.2 kg.
Utensil: Lo	w rack		
	lı	nstructions	Method:
French brea	ad	2 slices	In a bowl, put all the ingredients of marinade & mix well. Keep it for 15-20
Black olives	s (sliced)	½ cup	minutes.
Cheese (gra	ated)	½ cup	2. Butter the bread slices. Top each slice with 2-3 slices of marinated
Butter		2 tbsp	tomatoes. Put chopped olives & sprinkle grated cheese on top.
To be mixe marinated	d together for the tomatoes :		Select the category & press start.     When beeps, keep the bread slices on low rack. Keep the rack in microwave & press start.
Tomatoes (s	sliced)	2 nos.	microwave a press start.
Basil leaves	s (freshly chopped)	1 tsp	
Garlic (chopped)		1 tsp	
Olive oil		2 tsp	
Salt & fresh corns	ly crushed pepper	As per taste	

<sup>&</sup>lt;sup>®</sup> Do not put anything in the oven during Pre-heat mode.

Low Calorie Continental

Menu	Co10			Riso	tto Rice	Weight Limit	0.1 ~ 0.4 kg	
Utensil: Mid	crowave safe (MWS	S) bowl						
	Instructions					Method:		
For		0.1 kg	0.2 kg	0.3 kg	0.4 kg	In a MWS bowl add olive oil, garlic, mushrooms, pe	aa aarrota 8 tamata	
Arborio rice	(soaked)	100 g	200 g	300 g	400 g	puree. Mix well. Select category & weight and press		
Water		200 ml	400 ml	600 ml	650 ml	When beeps, mix well & add rice. Mix well and press		
Chopped ca	Chopped carrots		½ cup	1 cup	1½ cup	When beeps, mix well & add water & salt. Press start.     Mix well & stand for 5 minutes.     Add spinach, tomato puree, cream, grated cheese & coriander/parseley & serve.		
Chopped ga	Chopped garlic		1½ tsp	2 tsp	21/2 tsp			
Peas	Peas		½ cup	1 cup	1½ cup			
Sliced mush	room	1/4 cup	½ cup	1 cup	1½ cup	Contanuer/parserey & serve.		
Chopped co parseley	riander leaves/		As re	quired				
Spinach (ble	ended & pureed)	1/4 cup	½ cup	1 cup	1 cup			
Tomato pure	ee	1/3 cup	½ cup	1 cup	1 cup			
Fresh crean	Fresh cream		4 tbsp	5 tbsp	6 tbsp			
Olive oil	Olive oil 1 tbsp 2 tbsp		3 tbsp	4 tbsp				
Grated chee	Grated cheese As required							
Salt			As pe	r taste				

Menu	Co11	Spaghe	tti with tom	ato sauce	Weight Limit 0.1 ~ 0.3 kg
Utensil: M	licrowave safe (MWS	S) bowl			
		Instructions			Method:
For		0.1 Kg	0.2 Kg	0.3 Kg	In a MWS bowl add spaghetti noodles, water & few drops of oil. Select
Spaghetti r	noodles	100 g	200 g	300 g	category & weight and press start.
Water	Water Olive oil Chopped garlic		800 ml	1200 ml	When beeps, remove & drain the water. Wash the noodles under
Olive oil			1 tbsp 1½ tbsp 1½ tbsp 1½ tbsp		running water to separate.
Chopped g					3. In another MWS bowl add olive oil, garlic, olives, onions, mushrooms,
Chopped to	omatoes	1 cup	1½ cup	2 cup	chopped tomatoes, salt, peppers, oregano & chilli flakes. Press start.  4. When beeps, mix well & add the spaghetti. Mix well & press start. Rip all
Chopped n	nushrooms	1/4 cup	½ cup	1 cup	the basil over it & spread grated parmesan cheese & serve.
Chopped of	nion	½ cup	1 cup	1½ cup	
Sliced olive	es (pitted)	5 nos.	6 nos.	7 nos.	
Fresh basi			As required		
Parmesan cheese As required					
Salt, peppe flakes	er, oregano & chilli		As per taste		

Menu	Co12	Cottage Cheese Tortellini	Weight Limit 8 Pc					
Utensil: N	licrowave safe (MWS) b	owl						
	Ins	structions	Method:					
For		Dough	Dro Desposation for Chaffing .					
Maida		1 cup	Pre-Preparation for Stuffing:  1. In a MWS glass bowl take olive oil & minced garlic, mix and microwave					
Egg		1 no.	100% for 2 minutes. Add mashed paneer & blanced & chopped spinach,					
Olive oil		1 tbsp	salt & pepper. Mix well & microwave 100 % for 2 minutes.					
Salt		As per taste	2. In another bowl take maida, salt, beaten egg & olive oil. Mix well & knead					
Water (to I	(nead the dough)	As required	a firm dough adding enough water. Cover & keep aside for 10-15 minutes.					
For Stuffin	ng		3. Divide the dough into 5-6 equal sized balls & roll out each ball into a long					
Blanched s	spinach	½ cup	& rectangular strip (approx. 65 mm broad) & cut into squares.					
Paneer (ro	ughly mashed)	100 g	4. Fill each square shape with spinach & cottage cheese stuffing (1 tsp					
Olive oil		1 tbsp	Wet the edges with little water & cover with another square & seal it by pressing tightly. There should be no air-bubble left within. Make all					
Garlic (mir	nced)	1 tbsp	tortellinis following same procedure.					
Salt & pep	per	As per taste	Take 500 ml water in a MWS bowl & keep inside the microwave. Select					
For Sauce	)		category & press start.					
Blanced to removed)	matoes (skin	5 nos.	When beeps, put the tortellinis in the boiling water. Cover & press start.     When beeps, remove & strain the tortellinis & place in a serving dish &					
Garlic pod	s	8-10 nos.	keep aside covered.  8. Blend together blanced tomatoes, garlic pods, coriander leaves with a					
Coriander	leaves (fresh)	1 tbsp	blender. Take this puree in a MWS bowl, add olive oil, salt, pepper					
Olive oil 1 tbsp		1 tbsp	oregano & chilli flakes. Mix well & press start.					
Chilli flake	s	1 tsp	9. When cooking ends, pour this sauce over the cooked tortellini & serve					
Oregano		½ tsp	hot.					
Salt, pepp	er	As per taste						

Continental Low Calorie

Menu Co13		Mex	cican Co	rn Rice	Weight Limit 0.1 ~ 0.4 kg
Utensil: Microwave safe (MW	6) glass bowl	& Microwave	safe (MWS	ish & Low rack*	
	Instruction	s			Method:
For	0.1 kg	0.2 kg	0.3 kg	0.4 kg	1. In a MWS glass bowl add rice, cloves, water. Select category & weight
Rice	100 g	200 g	300 g	400 g	and press start.
Cloves	2 nos.	3 nos.	4 nos.	5 nos.	When beeps, remove the bowl & keep aside after mixing.
Oil	½ tbsp	1 tbsp	1½ tbsp	2 tbsp	In another MWS glass bowl add butter & sweet corns & press start.
Water	200 ml	400 ml	600 ml	650 ml	When beeps, add hot sauce, cooked rice, cheese cubes, salt & red chilli power (if required). Mix well. Now take a MWS flat glass dish & spread
Butter	½ tbsp	1 tbsp	1½ tbsp	2 tbsp	chopped tomatoes at the bottom, now layer with cooked rice & press it
Sweet corns	1/4 cup	½ cup	1 cup	1½ cup	down properly. Cover with aluminium foil. Keep the MWS flat glass dish
Hot sauce*	1/4 cup	½ cup	1 cup	1½ cup	on low rack& press start.
Cheese cubes	1 no.	2 nos.	3 nos.	4 nos.	*Note: For Hot Sauce - In a MWS glass bowl take 8 blanded & pureed tomatoes, 4 tbsp butter, 1 cup chopped onions, salt, red chilli powder,
24.7			r taste	•	oregano, sugar, chilli sauce (as per taste), 1 tbsp garlic paste, 2 tbs tomato sauce, a pinch ajwain. Mix well & microwave at 100% for
			r taste		
Tomato (chopped) 2 nos. 3 nos.		4 nos.	5 nos.	minutes.	

<sup>\*</sup>Refer page 63, fig -4

Menu	St1		Khe	ema Balls	Weight Limit 0.1 ~ 0.3 kg
Utensil: Mid	crowave safe (MWS	) flat glass dish	& Microwave sa		
	lı	nstructions			Method:
For	For 0.1 kg 0.2 kg 0.3 kg		0.3 kg	1. Mix all the ingredients together. Make balls from it. Place the balls in	
Chicken Khe	eema	75 gms	125 gms	175 gms	greased MWS flat glass dish. Add 1/2 cup water to the MWS bowl. Place
Boiled & Ma	shed Potato	1 No.	2 No.	3 No.	the MWS glass dish inside the bowl. Cover. Select category & weight
Ginger, Garlic Paste, Salt, Garam Masala, Hara Dhania Lemon Juice			As per your taste		and press start.
Besan	Besan 1 tsp 2 tsp 3 tsp				

Menu	St2	Gajar ka Halwa	Weight Limit 0.3 k			
Utensil: M	icrowave Safe (MWS	) Glass Bowl & Microwave safe (MWS) bowl				
	Ir	structions	Method:			
For		0.3 kg	In a MWS glass bowl take all the ingredients & mix well.			
Grated Gajar		300 gms	2. Add ½ cup water to the MWS bowl.			
Ghee		2 tbsp	3. Keep the MWS glass bowl in the bowl. Cover. Select category & p			
Milk Powde	er	4 tbsp	start.			
Khoya		5 tbsp				
Sugar		4 tbsp				
Elaichi Pov	der and Dry Fruits	As per your taste				

Menu	St3		Sh	akarkandi	Weight Limit (	0.1 ~ 0.3 kg	
Utensil: Mid	crowave safe (MWS)	) bowl & Microwa	ve safe (MWS)	flat glass dish	•		
	lı	nstructions			Method:		
Shakarkand	i	0.1 kg	0.2 kg	0.3 kg	1. In MWS bowl add 1/2 water. Keep the peeled off shakarkandi in MWS fla		
Salt & Chat	Masala		As per your taste		glass dish & put in the bowl. Cover. Select category & weight & pre-		
				start.  2. After steaming sprinkle some salt & chaat masala & serv	re		

Menu	St4	Methi Muthiya			Weight Limit 0.1 ~ 0.3 kg
Utensil: Mi	crowave Safe (MWS	) bowl & Microwa	ave safe (MWS)	flat glass dish	
	lı	nstructions			Method:
For	For 0.1 Kg 0.2 Kg			0.3 Kg	1. Mix all the ingredients. Add some water and make a soft dough. Make
Methi Leaves		1/2 cup	1/2 cup 3/4 cup		small rolls from this mixture. Place rolls on MWS flat glass dish.
Atta		1/4 cup	1/2 cup	3/4 cup	2. Add ½ cup water to the bowl. Keep the MWS flat glass dish in MWS
Besan		2 tbsp	3 tbsp	4 tbsp	bowl. Cover. Select category & weight and Press start.
Suji		1 tbsp	1½ tbsp	3/4 tbsp	
Baking soda	a	1/4 tsp	1/2 tsp	3/4 tsp	
	Ginger garlic chilli paste, As per your taste Dhaniya Powder, Haldi, Salt,				

Menu	St5	Kothimbir Vadi			Weight Limit 0.1 ~ 0.3 kg	
Utensil: M	icrowave safe (MWS	) Bowl & Microwa	ave safe (MWS)	flat glass dish		
	lı	nstructions		Method:		
		0.1 Kg	0.2 Kg	0.3 Kg	Mix all the ingredients together & make vadis out of it.	
		100 g	200 g	300 g	2. In MWS bowl, add 1/2 cup water. Place the vadis on MWS flat glass dish.	
Besan		½ cup	1 cup	1½ cup	Keep in the bowl & cover. Select category & weight and press start.	
Suji		2 tbsp	3 tbsp	4 tbsp	3. Allow to stand for 3 minutes.	
Red chilli powder, salt, garam As masala		As per taste				
Baking pov	vder	Baking powder ½ tsp ½ tsp 1		1 tsp		

Menu	St6			Sarson k	(a Saag	Weight Limit 0.1 ~ 0.4 kg
Utensil: Mid	crowave safe (MWS	) flat glass di	sh & Microw	ave safe (M	WS) bowl	
	li	nstruction	s			Method:
For		0.1 kg	0.2 kg	0.3 kg	0.4 kg	1. In the MWS bowl, add 1/2 water, Place sarson and palak in the MWS flat
Sarson (was leaves)	Sarson (washed & separated   75 g leaves)		150 g	200 g	250 g	glass dish. Keep the MWS flat glass dish in MWS bowl & cover. Select category and weight and press start.
Palak (wash leaves)	ed & separated	20 g	50 g	100 g 150 g		When beeps, remove the MWS bowl, grind the steamed sarson & Palak with water
Oil		1 tbsp	1½ tbsp	2 tbsp	2½ tbsp	3. In a MWS bowl add oil, onion garlic paste, tomato, salt and red chilli
Onion garlic	paste	1 tsp	1½ tsp	2 tsp	2½ tsp	powder and press start. Mix well. 4. When beeps, add grind sarson and palak, water (as required) to the
Tomato (cho	Tomato (chopped) 1/2 cup 1 cup		1 cup	1½ cup	2 cups	MWS bowl. Mix well and press start. Serve it with makki ki roti.
Salt, Red chilli powder As per your tast			our taste		,	
Water			As re	quired		

Menu	St7		Bhafouri	Weight Limit	0.1 ~ 0.2 kg
Utensil: Mi	crowave safe (MWS)	bowl & Microwave safe	(MWS) idli stand*		
	Ir	structions		Method:	
For	0.1 kg 0.2 kg		0.2 kg	Mix all the ingredients together & make balls of	out of the mixture.
Mix dal pas dal)	te (Moong dal, Urad	100 g	200 g	<ol> <li>In MWS bowl, add ½ cup water. Keep the balls in MWS idli stan keep it inside the bowl. Cover. Select category &amp; weight and press</li> </ol>	alls in MWS idli stand and
Ginger- gar	lic paste	½ tbsp	1 tbsp	Allow to stand for 3 minutes.	0, 0, 1
Hing	Hing		inch		
Mitha soda 1/8 tsp		1/4 tsp			
Salt		As pe	r taste		

Menu	St8		Stea	med Peas	Weight Limit	0.1 ~ 0.3 kg				
Utensil: Mi	Utensil: Microwave Safe (MWS) Flat glass dish & Microwave safe (MWS) bowl									
	lı	nstructions			Method:					
For		0.1 kg	0.2 kg	0.3 kg	1. In MWS bowl, add ½ cup water to the MWS bowl, place put the pear					
Shelled pea	as	100 g	200 g	300 g	MWS flat glass dish. Keep in MWS bo					
Salt & Chaa	Salt & Chaat masala As per taste			weight & press start.						
Butter		½ tbsp	1 tbsp	1½ tbsp	2. Remove & add butter, salt & chaat masala	a & serve.				

Weight Limit

0.1 ~ 0.3 kg

Matar Mushroom

Utensil: Microwave Safe (MWS	6) Flat glass dish	& Microwave sa	fe (MWS) bowl	
Instructions				Method:
For	0.1 kg	0.2 kg	0.3 kg	1. Add ½ cup water to MWS bowl, bowl, place the matar and chopped
Matar	50 g	100 g	150 g	mushroom on the MWS flat glass dish, keep in MWS bowl and cover.
Mushroom (chopped)	50 g	100 g	150 g	Select category and weight and press start.
Oil	1 tbsp	1½ tbsp	2 tbsp	2. When beeps, remove.
Onion (chopped)	1/2 cup	1 cup	1 cup	3. In a MWS bowl add oil, onion, tomato puree, salt, red chilli powder, garam masala and press start. Mix well.
Tomato puree	2 tbsp	2½ tbsp	3 tbsp	When beeps, add steamed matar and mushroom to the MWS bowl and
Salt, Red chilli powder, Garam		As per taste	•	add little water, press start. Mix well and add chopped coriander leaves
masala				and serve with roti.

Menu	St10			Avial	Weight Limit	0.1 ~ 0.3 kg	
Utensil: Mid	crowave Safe (MWS	) Flat glass dish	& Microwave saf	e (MWS) bowl			
	lı	nstructions			Method:		
For		0.1 kg	0.2 kg	0.3 kg	1. Add ½ cup water to MWS bowl, place the vegetables	in MWS flat glass	
Cut vegetables (long pieces), Carrot, potato, drumstick, French beans, bottlegourd		100 g 200 g		300 g	dish & keep in MWS bowl and cover. Press start. 2. Select category and weight and press start. 3. When beeps, remove the all from microwave oven.	· ·	
Oil		1 tbsp	1 tbsp	1½ tbsp	<ol> <li>When beeps, in a MWS bowl add 1tbsp oil, mustard se leaves, haldi, salt. Add coconut milk and curd.</li> </ol>		
Mustard seeds, Curry leaves, As Salt, Haldi		As per taste		When beeps, add the steamed vegetables to the coconut milk and p start. Garnish with grated coconut and serve.	onut milk and press		
Coconut mil	k	1/2 cup	1 cup	1½ cup			
Curd (beate	n)	1/2 cup	1 cup	1½ cup			

Menu

St9

<sup>\*</sup> Not Provided with LG standard accessories.

**Tandoor Se** Tandoor Se

Menu	tS1	Grill Chicken	Weight Limit 0.3 kg			
Utensil: H	ligh rack					
	lı	nstructions	Method:			
For		0.3kg	1. Mash brown sugar, garlic paste, sat and pepper together in a pestle			
Chicken dr	rumsticks	300 g	mortar to form a paste.			
For Marin	For Marinate		Add chicken drumsticks and coat with the paste and refrigerate for 6-			
Barbeque	sauce	1 tbsp	hours. 3. Place marinated chicken pieces on High Rack in microwave. Select			
Olive oil		½ tsp	menu and weight and press start.			
Ginger Garlic paste, Cumin powder, Black pepper, Onion paste		1 tbsp	4. When beeps, turn and press start. 5. Now when beeps, again turn and press start. 6. Serve hot with mint chutney or ketchup.			
Salt		As per taste				
Brown sug	jar	2 tbsp				

Menu	tS2	Chicken Lollipops	Weight Limit 0.2 kg
Utensil: H	ligh rack		
	l:	nstructions	Method:
For		0.2 kg	1. Mix the chicken keema with boiled potatoes, ginger garlic paste, red
Chicken keema		200 g	chilli powder, garam masala, amchur powder, salt.
Boiled pota	ato	2 nos.	Coat the lollipops with breadcrumbs.
Ginger gar	lic paste	1½ tbsp	Arrange the lollipops on high rack. Select category and press start.     When beeps, turn the lollipops & press start. Serve with chutney or
Red chilli powder, garam As per masala, amchur powder, salt		As per taste	sauce.
Bread crun	nbs	For coating the lollipops	

Menu	tS3	Chicken Tikka	Weight Limit 0.3 kg
Utensil: H	igh rack		
	lı	nstructions	Method:
For		0.3 kg	Mix all the ingredients of marinade in a bowl.
Boneless c	hicken	300 g	2. Mix boneless chicken with marinade & keep in refrigerator for 2-3 hours.
Oil		For basting	Now place the marinated chicken on high rack.
For Marina	ade		Select category & press start.     When beeps, turn over & baste with some oil. Press start.
Hung curd		2 tbsp	6. When beeps, again turn over. Press start.
Ginger gar	lic paste	2 tbsp	o. Tribinosopo, again tamoron roso start.
masala, re	n masala, chaat ed chilli powder, nasala, Tandoori color	As per taste	

Menu	tS4	Veg Kabab	Weight Limit 0.3 kg						
Utensil: Hi	Jtensil: High rack								
	Ir	structions	Method:						
For		0.3 kg	Mix all the ingredients in a bowl. Mix well & shape them into flat kebabs.						
Boiled pota	ntoes	200 g	2. Keep the kebabs on high rack and keep in microwave. Select category &						
Grated pan	neer	100 g	press start.						
Chopped g	reen chillies	2 nos.	3. When beeps, turn over the kababs & press start again.						
Chopped o	oriander	A few sprigs							
Roughly gro	ound anardana seeds	1 tbsp							
Salt, red ch	nilli powder	As per taste							

Menu	CF1			Omelette	Weight Limit 0.2 ~ 0	0.4 kg
Utensil: Mi	crowave safe (MV	VS) flat glass dish				
		Instructions			Method:	
For		0.2 kg	0.3 kg	0.4 kg	Beat the eggs well & add salt, pepper & coriander leaves.	
Eggs		2 Nos.	3 Nos.	4 Nos.	2. Add oil, tomato & onion to MWS flat glass dish. Select category &	& weight
Oil		½ tbsp	1 tbsp	1 tbsp	and press start.	
Chopped onion, tomato, coriander leaves		½ cup	1 cup	1 cup	When beeps, add the egg mixture. Cover & press start. Allow for 3 minutes.	to stand
Salt, peppe	r		As per taste	•		

Menu	CF2			Noodles	Weight Limit	0.1 ~ 0.3 kg
Utensil: M	icrowave safe (MWS)	bowl				
	In	structions			Method:	
For		0.1 kg	0.2 kg	0.3 kg	In Microwave Safe Bowl take noodles.	water, oil. Select category &
Noodles		100 g	200 g	300 g	weight and press start.	
Water		400 ml	800 ml	1200 ml	2. When beeps, strain noodles & pour cold water over it. In Mi	
Oil		1 tsp	2 tsp	3 tsp	Safe Bowl put some oil and finely chop soyasauce, chilli sauce, MSG, salt & pep	
Vinegar		½ tsp	1 tsp	1 tsp	3. When beep, add noodles and mix well pro	
Soya sauce	е	½ tsp	1 tsp	1 tsp	c. Then beep, add needles and mix tremps	500 5141 11 501 10 1161
Chilli sauce	Э	½ tsp	1 tsp	1 tsp		
	oles - Cabbage, arrot, French beans etc.	½ cup	0.3 kg	1 cup		
Salt, sugar, Pepper, MSG As per taste		•				

Menu	CF3		(	Corn Chaat	Weight Limit	0.1 ~ 0.3 kg
Utensil: Mi	crowave safe (MWS	) bowl				
	lı	nstructions			Method:	
For		0.1 kg	0.2 kg	0.3 kg	1. In a MWS bowl add some water & sweet corns.	Select category &
Sweet corn		100 g	200 g	300 g	weight & press start.	
Mix fruits (P cucumber, a	omegranate, apple)	½ cup	1 cup	2 cup	<ol><li>Transfer the corns in a bowl add mix fruits, salt, red masala, lemon juice. Mix well &amp; serve.</li></ol>	chilli powder, chaat
Salt, red chi masala, lem	illi powder, chaat non juice		As per taste			

Menu	CF4		Pizza <sup>@</sup>	Weight Limit	0.3 kg			
Utensil: Lov	Utensil: Low rack							
	Ir	structions		Method:				
Pizza base		1 Big Pizza base		Select category & press start to preheat.				
Topping		3 tbsp		Spread pizza topping on pizza base, spread chopped vegeta	bles on it.			
	les - Tomato,	1 cup		Sprinkle grated cheese.				
Capsicum, C	Onion			3. When beeps, place the pizza on low rack & press start.				
Grated Chee	ese	1/2 cup						
Oregano & C	chilli flakes (Optional)	As per your taste						

Menu	CF5		Vermice	lli Khichdi	Weight Limit	0.1 ~ 0.3 kg
Utensil: Mi	crowave safe (MWS	) bowl				
	l	nstructions			Method:	
For		0.1 kg	0.2 kg	0.3 kg	1. In a MWS bowl add oil, rai, chana dal, curry	leaves, chopped onion. Mix
Roasted ve	rmicelli	100 g	200 g	300 g	& select category & weight and press start.	
Oil		1 tbps	1½ tbps	2 tbps	When beeps, mix & add tomato. Press start.	
Rai, urad da	al, curry leaves		As per taste 3. When beeps, mix & add vermicelli, water, salt, red			
Chopped or	nion	½ cup	1 cup	1 cup	garam masala. Press start. Stand for 3 minu 4. Squeeze lemon, mix & serve.	tes.
Chopped to	mato	1 No.	2 Nos.	3 Nos.	4. Oqueeze iemon, mix a serve.	
Salt, red ch garam mas	illi powder, haldi, ala		As per taste			
Water		400 ml	800 ml	1200 ml		
Lemon juice	Э		As per taste	•		

Menu	CF6	Chocolate balls	Weight Limit 0.3 kg					
Utensil: Mid	Itensil: Microwave safe (MWS) glass bowl							
	Ir	nstructions	Method:					
Condensed	l Milk (Milkmaid)	1 cup	1. In a MWS safe glass bowl add Condensed Milk (milkmaid), marie					
Marie biscu	it powder	1 cup	biscuit powder, milk powder, Malted Chocolate powder (Bournvita).					
Milk powde	r	½ cup	Select category & press start.					
Malted Chocolate powder (Bournvita)		½ cup	Allow to cool. Make balls out of the mixture. Roll out the balls in the grated coconut.					
Grated coc	onut	½ cup	3. Keep in refrigerator for half an hour.					

<sup>&</sup>lt;sup>®</sup>Do not put anything in the oven during Pre-heat mode.

# Kids' Delight

Menu CF7		\	/eg Burger	Weight Limit 0.1 ~ 0.3 kg
Utensil: High rack				
	Instructions		Method:	
For	0.1 kg	0.2 kg	0.3 kg	1. In a bowl mix all the ingredients for tikkis & prepare round & flat tikkis out
Burger buns for tikkis	1 no.	2 nos.	3 nos.	ofit.
Potatoes (boiled)	100 gm	200 gm	300 gm	Slit the buns into two halves. Apply the butter inside the buns.
Boiled peas	1/4 cup	½ cup	1 cup	Keep the tikkis on the high rack. Select category & weight and press
Chopped ginger	1 tsp	2 tsp	3 tsp	start. 4. When beeps, turn over the tikkis & press start.
Green chillies	1 no.	2 nos.	3 nos.	5. When beeps, remove the tikkis. Now apply tomato sauce on one half of
Chopped coriander leaves	2 tbsp	3 tbsp	4 tbsp	the bun. Keep the cheese slice, then keep tikki & then tomato & cheese
Salt, red chilli powder, garam masala, chaat masala		As per taste		slices & cover with the second half of the bun.  6. Now keep the burger on high rack & press start.
Cornflour		For binding		
Tomato slices	1 no.	2 nos.	3 nos.	
Onion slices	2 no.	4 nos.	6 nos.	
Cheese slices	1 no.	2 nos.	3 nos.	
Butter	1 tsp	2 tsp	3 tsp	
Tomato sauce	1 tbsp	2 tbsp	3 tbsp	

Menu	CF8	Strawberry Custard	Weight Limit	0.5 kg
Utensil: Mi	icrowave safe (MWS	) bowl		
	ı	nstructions	Method:	
For		0.5 kg	In a MWS bowl add milk, strawberry custard powder, sugar.	
Milk		500 ml	Mix well.	
Strawberry	custard powder	3 tbsp	Select category & press start.	
Sugar		50 g	When beeps, stir well. Press start.     When beeps, stir well. Press start. Allow to set in refrigerator.	
Strawberry	pieces	As required	As required 4. when beeps, stir well. Press start. Allow to set in retrigeral	

Menu	CF9	Garlic Bread	Weight Limit 0.3 kg
Utensil: Hig	gh Rack		
	I	nstructions	Method:
For		0.3 kg	1. Mix butter, garlic paste, salt, pepper and oregano together. Apply this
Bread slices	s (French Bread)	4 pcs	mixture to both sides of bread slices. Keep the bread slices on high rack.
Butter		5 tbsp	Select menu and weight and press start.
Garlic paste	)	2 tbsp	When beeps, turn over the slices. Sprinkle the grated cheese and press start.
Grated chee	ese	4 tbsp	Note: Use French bread to make garlic bread.
Salt, pepper flakes	r, Oregano, chilli	As per taste	34.10 d. 04.00

Menu	CF10	Choco Bar	$\cdot \vdash$	Weight Limit 0.2 kg
Utensil: Mi	crowave safe (MWS	S) bowl & Microwave safe(MWS) flat glass dish		
Instructions				Method:
Chocolate of	hips	½ cup	1.	In a microwave safe glass bowl put oats, half amount of butter (4 tbsp),
Oats (crush	ed)	1 cup	7 "	honey and brown sugar. mix well. Select category and press start.
Honey		3 tbsp	7 2.	Grease a microwave flat glass dish with butter and line the dish with
Brown suga	r	4 tbsp	٦؞	butter paper. Again grease it with butter paper.
Butter (softe	ened)	8 tbsp	٦ ٥.	When beeps, remove and pour the oats mixture into greased flat glass dish and press firmly with spoon.
Chopped nu pistachio, w	its (almonds, alnut)	As required	4.	In MWS glass bowl add rest of the butter, chocolate chips. Mix & press start.
				When beeps, pour this mixture on oats & sprinkle chopped nuts. Cut into rectangle bars when set & serve chilled.

Menu CF11	Crea	amy mushr	oom buns	Weight Limit 0.1 ~ 0.3 kg
Utensil: Microwave safe (MWS	6) bowl & High Ra	ick		
Instructions				Method:
For	0.1 kg	0.2 kg	0.3 kg	Take the horizontally cut buns, hollow them to make a cavity in the
Buns (cut into half horizontally)	1 no.	2 nos.	3 nos.	buns for the filling. Soak the removed bun crumbs in milk & keep
Butter	1 tbsp	2 tbsp	3 tbsp	aside.
Garlic (chopped)	1 tsp	2 tsp	3 tsp	2. In a MWS glass bowl put butter, onions, garlic, green chilli,
Green chillies (chopped)	1 no.	2 nos.	3 nos.	mushrooms & mix well. Select category & weight & press start.  3. When beeps, remove and add chopped spinach, grated cheese, salt,
Coriander (chopped)				pepper & oregano. Mix and press start.
Onions (chopped)	1/4 cup	½ cup	1 cup	4. When beeps, mix again. Fill this mixture into the buns. Place the filled
Mushrooms (sliced)	1/4 cup	½ cup	1 cup	buns on high rack. Sprinkle grated cheese (as required) & press start.
Spinach (chopped)	1/4 cup	½ cup	1 cup	Remove & serve hot with tomato ketchup.
Salt & pepper		As per taste		
Oregano	1 tsp	1½ tsp	2 tsp	
Cheese (grated)	1/4 cup	1/4 cup	½ cup	
Milk	1/4 cup	½ cup	1 cup	

Menu	CF12		Brea	d Pudding	Weight Limit 0.1 ~ 0.3 kg
Utensil: Mid	crowave safe (MV	VS) flat glass dish			
		Instructions			Method:
For		0.1 kg	0.2 kg	0.3 kg	Make small pieces of Bread slices. Beat the egg very well . Mix all the
Bread slices	3	2 Nos.	3 Nos.	4 Nos.	ingredient very well.
Milk (for dip	ping the bread)	½ cup	1 cup	1½ cup	2 Pour this mixture into MWS flat glass dish. Select category and weight.
Egg		1 Nos.	2 Nos.	2 Nos.	Press start.
Vanilla Esse	ence	½ tsp	3/4 tsp	1 tsp	
Sugar		3 tbsp	4 tbsp	5 tbsp	
Dry fruits		,	As per your taste		

Menu	CF13	(	Quick chee	sy fondue	Weight Limit	0.2 ~ 0.4 kg
Utensil: Mi	crowave safe (MWS	6) bowl				
		nstructions			Method:	
For		0.2 kg	0.3 kg	0.4 kg	In a MWS bowl add butter & chopped onions.	Select category &
Milk		½ cup	1 cup	1½ cup	weight and press start.	
Butter		1 tbsp	1½ tbsp	2 tbsp	<ol><li>When beeps, remove.</li></ol>	
Cornflour		1 tbsp	1½ tbsp	2 tbsp	Dissolve the cornflour with milk.	all 9 manage atom
Chopped or	nions	1/4 cup	½ cup	½ cup	<ol> <li>Add milk, cheese spread, salt &amp; pepper. Mix w</li> <li>When beeps, mix well &amp; press start.</li> </ol>	eli & press start.
Cheese spr	ead	1/4 cup	½ cup	½ cup	o. Trion books, mix won a processian.	
Salt & pepp	er		As per taste			

Menu	CF14	Cheesy Nachos	Weight Limit 0.3 kg
Utensil: M	icrowave safe (MWS	) flat glass dish	
	li	nstructions	Method:
For		0.3 kg	1. In a MWS flat glass dish add nachos, chopped onion, tomato, pizza
Nachos		300 g	sauce & grated cheese. Select category & press start.
Grated chee	se	1 cup	
Pizza sauce	1	6 tbsp	
Chopped on	ion, tomato	2 cups	

Cake Kids' Delight

Menu	CA1	Walnut Cake <sup>®</sup>	Weight Limit 0.3Kg
Utensil: Me	tal Cake Tin & Low Rack**		
	Instructions		Method:
For		0.3 kg	1. In a bowl beat curd & sugar well till light & fluffy. In another bowl beat
Maida		110 g	eggs with vanilla essence well.
Baking pow	der	1/4 tsp	Sieve maida, baking powder & add walnuts to it.
Walnuts		½ cup	Now add the maida mixture to the beaten curd mixture & add beaten egg mixture as well. Combine all three mixtures & beat well.
Curd		70 ml	4. Grease a metal cake tin or line with a butter paper. Add the cake batter.
Powdered s	ugar	170 g	Select category & press start.
Egg		1 no.	6. When beeps, put the cake tin on low rack & keep in microwave & press
Vanilla esse	nce	1/4 tsp	start.

Menu	CA2		Swiss Roll <sup>®</sup>	Weight Limit 0.2 kg
Utensil: M	etal Cake Tin & Low	Rack**		
	l,	nstructions		Method:
For		0.2 kg		1. Sieve maida & Baking soda . In a bowl add Condensed Milk (Milkmaid)
Maida		80 gm		& butter. Beat well. Add the maida mixture, vanilla essence & mix well.
Condensed	Milk (Milkmaid)	100 ml		2. For spoon dropping consistency add milk or water. Place the butter
Butter		75 gm		paper at the bottom of the tin. Pour the batter.
Baking sod	а	1/4 tsp		<ol> <li>Select category &amp; press start.</li> <li>When beeps, put the tawa on low rack &amp; keep inside microwave. Press</li> </ol>
Vanilla esse	ence	1/4 tsp		start.
Mix fruit jan	n	2 tbsp		

Menu	CA3	Carrot Cake <sup>®</sup>	Weight Limit 0.3 kg		
Utensil: M	etal Cake Tin & Low Rack**		•		
	Instructions		Method:		
For 0.		0.3 kg	1. In a bowl beat curd & sugar well till light & fluffy. In another bowl beat		
Maida		110 g	eggs with vanilla essence well.		
Baking pow	/der	1/4 tsp	<ol><li>Sieve maida, baking powder &amp; add grated carrot to it.</li></ol>		
Grated carr	ot	½ cup	3. Now add the maida mixture to the beaten curd mixture & add beaten		
Curd		70 ml	egg mixture as well. Combine all three mixtures & beat well.  4. Grease a metal cake tin or line with butter paper. Add the cake batter.		
Powdered suger		170 g	5. Select category & press start.		
Egg		1 no.	6. When beeps, put the cake tin on low rack & keep in microwave & press		
Vanilla esse	ence	1/4 tsp	start.		

<sup>&</sup>lt;sup>®</sup> Do not put anything in the oven during Pre-heat mode. \*\*Refer page 63, fig 2

Menu	CA4	Chocolate Cake <sup>®</sup>	Weight Limit	0.3 kg
Utensil: M	etal Cake Tin & Low Ra	ck**		
	Ins	tructions	Method:	
For		0.3 kg	1. In a bowl beat curd & sugar well till light &	fluffy. In another bowl beat
Maida		110 g	eggs with vanilla essence well.	,
Baking powder 1/4 tsp		1/4 tsp	Sieve maida, baking powder & cocoa powder together.	
Cocoa pow	/der	50 g	<ol> <li>Now add the maida mixture to the beaten curd mixture &amp; add mixture as well. Combine all beat well.</li> </ol>	rd mixture & add beaten egg
Curd		70 ml	Grease a metal cake tin or line with butter pa	ner Add the cake hatter
Powder sug	gar	170 g	Select category & press start.	per./ taa irie oake batter.
Egg		1 no.	<ol><li>When beeps, put the cake tin on low rack 8</li></ol>	keep in microwave & press
Vanilla esse	ence	1/4 tsp	start.	

Menu	CA5	Vanilla Cake <sup>®</sup>	Weight Limit 0.3 kg		
Utensil: Me	etal Cake Tin & Low Rack**				
	Instructions	6	Method:		
For		0.3 kg	1. In a bowl beat curd & sugar well till light & fluffy. In another bowl beat		
Maida		110 g	eggs with vanilla essence well.		
Baking pow	der	1/4 tsp	Sieve maida, baking powder together.		
Curd		70 ml	Now add the maida mixture to the beaten curd mixture & add beaten egg mixture as well. Combine all three mixtures & beat well.		
Powdered s	ugar	170 g	Grease a metal cake tin or line with butter paper. Add the cake batter.		
Egg Vanilla essence		1 no.	Select category & press start.		
		1/4 tsp	6. When beeps, put the cake tin on low rack & keep in microwave & press		
			start.		

 $<sup>^{@}\</sup>text{Do}$  not put anything in the oven during Pre-heat mode. \*\*Refer page 63, fig 2

Menu	PA1	Panee	r	Weight Limit 0.5 I	κg	
Utensil: Mi	crowave safe (MWS)	glass bowl				
	In	structions	Т	Method:		
Milk		500ml	Т	1. In a MWS glass bowl add milk and lemon juice/vinegar. Select menu	1&	
Lemon juice	e/Vinager	4 tbsp	$\neg$	press start.		
				When it gives beeps, stir it & again press start.     When beeps, remove the bowl & strain in a muslin cloth & press it.		

Menu	enu PA2 Masala Paneer		Weight Limit 0.5 kg
Utensil: Mi	crowave safe (MWS	) glass bowl	
Instructions			Method:
For		0.5 kg	In MWS glass bowl add milk. Select category and press start.
Milk		500 ml	2. When it gives a beep, remove and add curd, coriander and jeera
Curd		2 tbsp	powder. Press start. When beeps, remove and strain and press in a
Coriander p	owder	1 tbsp	muslin cloth.
Jeera powd	ler	1 tsp	

Menu	CU1 Curc	Weight Limit 0.5 kg		
Utensil: Mi	rowave safe (MWS) glass bowl			
	Instructions	Method:		
Milk	500 ml	In a MWS glass bowl add milk and select menu & press start.		
Starter curd	2 tbsp	2. When beeps add starter culture of curd for inoculation & stir it. Again		
		press start.  3. Now take out the bowl & keep it in a casserole & store in warm place for proceeding appropriate setting temperature & time for 5-6 hours		

Menu	CU2	Flavoured Yo	ghurt <sup>®</sup>	Weight Limit 0.6 kg
Utensil: Mid	crowave safe (MWS)	glass bowl & Low rack***		
	Ins	structions		Method:
For		0.6 kg		In a MWS glass bowl mix all the ingredients. Beat well till smooth.
Curd		200 ml		Select menu & press start. (Pre-heat process)
Condensed	Milk (Milkmaid)	100 ml		3. When beeps, keep the MWS glass bowl on low rack & keep it in
Fresh crean	1	200 ml		microwave. Press start.  4. When cooking ends, take out & allow to come to room temperature.
Flavours (Ve Pineapple e	enilla, Strawberry, ssence)	500 ml		4. Writer downing enus, case out a anow to come to from temperature. Keep in freezer1 hour. Note: In case you use strawberry essence, add a pinch of pink food colour to add colour to the yoghurt. For pineapple youghurt, add pineapple slices the times serving.

 $<sup>^{\</sup>tiny{(8)}}$  Do not put anything in the oven during Pre-heat mode.  $^{\tiny{\#\#}}$  Refer page 63, fig 1

# Tea/Dairy Delight

Menu	dd1				Tea	Weight Limit 1 ~ 4 cups			
Utensil: Mid	Jtensil: Microwave safe (MWS) glass bowl								
	ı	nstruction	s			Method:			
For		1cup	2cups	3cups	4cups	1. In a MWS glass bowl add water, tea leaves & crushed ginger/cardamom			
Water		120ml	240ml	360ml	480ml	(optional). Select category & weight. Press start.			
Tea leaves		1tsp	2tsp	3tsp	4tsp	When beeps, add milk & sugar. Press start.			
Milk		120ml	150ml	225ml	300ml	Serve hot.			
Sugar As per taste			1 cup tea = 150ml approx						
Ginger/card	Ginger/cardamon (crushed) As per taste(optional)			te(optional)					

Menu	dd2	Lemon Tea				Weight Limit 1 ~ 4 cups		
Utensil: Microwave safe (MWS) glass bowl								
Instructions					Method:			
For		1cup	2cups	3cups	4cups	1. In a MWS glass bowl add water, tea leaves. Select category & weight.		
Water		120ml	240ml	360ml	480ml	Press start.		
Tea leaves		1tsp	2tsp	3tsp	4tsp	When beeps, add sugar. Press start.		
Lemon		½ Pc	1 Pc	1 Pc	1 Pc	Add lemon and serve hot.		
Sugar	ugar As per taste			r taste	1 cup tea = 150ml approx			

Menu	dd3		Green Tea			Weight Limit	1 ~ 4 cups		
Utensil: Mid	Utensil: Microwave safe (MWS) glass bowl								
Instructions						Method:			
For		1cup	2cups	3cups	4cups	1. In a MWS glass bowl add water. Select category & weight. Press st			
Water		120ml	240ml	360ml	480ml	When beeps, add green tea leaves. Press start.			
Green tea leaves 1tsp 2tsp 3tsp 4tsp		4tsp	3. Serve hot.						
					1 cup tea = 150ml approx				

Menu	dd4				Coffee	Weight Limit	1 ~ 4 cups	
Utensil: Mi	Utensil: Microwave safe (MWS) glass bowl							
Instructions						Method:		
For		1cup	2cups	3cups	4cups	1. In a MWS glass bowl add water. Select category & weight & press si		
Water	Vater 60ml 120ml		120ml	180ml	240ml	2. Meanwhile in each cup add 1/2tsp coffee (with few water dr	water drops ) &	
Coffee			½ tsp (E	ach cup)	•	sugar. Beat well.		
Milk	Milk 12		150ml	225ml	300ml	When beeps, add milk to boiling water. Press start.		
Sugar As per taste		•	4. Add milk to each cup & serve hot.  1 cup coffee = 150ml approx					
Ginger/cardamon (crushed) As per taste(optional)								

Menu	UC1		Keep warm	Weight Limit	0.3 kg
Utensil: Mi	crowave safe (MWS)	bowl			
Instructions				Method:	
For 0.3 kg				Any cooked food with cover (Rice, Dal, Sabzi, Halwa, Upma etc.) Selemenu and press start.	

Menu	UC2	Garlic peel	Weight Limit 10 Cloves				
Utensil: Mi	Jtensil: Microwave safe (MWS) bowl						
	Instructions	Method:					
Garlic leave	s 10 nos		Take 10 cloves of garlic & keep in MWS glass bowl of microwave oven.     Select menu & press start.     When beeps, take out leaves & cloves will slide right out of their skin, hassle free.				

Menu	UC3	Defrost Veg	Weight Limit	0.2 ~ 0.5 kg	
Utensil: Mi	crowave safe (MWS) bowl				
	Instructions		Method:		
For	0.2	2 ~ 0.5 kg	Veg - (Paneer, Green Peas, Corn etc.) 1.Take in MWS bowl, select menu and weig 2. When beeps, turn the food. Press start.	ght and press start.	

Menu	UC4 Def	frost Non-Veg	Weight Limit	0.5 ~ 1.0 kg	
Utensil: Mi	Utensil: Microwave safe (MWS) bowl				
Instructions			Method:		
For	0.5 ~ 1.0 l	N- 1.	Ion-Veg - (Chicken, Mutton etc.) .Take in MWS bowl, select menu and weight and press . When beeps, turn the food. Press start.	start.	


Menu	UC5	Dehumidification	Weight Limit	0.5 ~ 1.0 kg	
Utensil: Mi	Utensil: Microwave safe (MWS) bowl				
Instructions			Method:		
For	0.5	~ 1.0 kg	Namkin, Biscuits, Bhujia, Papad and Wafers etc.  1.In MWS bowl add the food to be dehumidified. Selec weight and press start.	t menu and	

Menu	UC6	Disinfect Aid	Weight Limit
Utensil: M	crowave safe (MWS) glass utensil & Empty cavit	у	
	Instructions		Method:
			Aid in disinfecting Microwave safe glass utensils - Keep the empty utensil & select category & press start.     Aid in cleaning the cavity- Keep the cavity empty. Select category & press start. When time ends (beeps), clean the cavity with damp cloth.     Note: The oven has a function Disinfect Aid which helps in disinfecting the MWS glass utensil thereby giving clean utensils/cavity.

s & keep on glass tray of microwave oven. press start. ut lemons & squeeze it to get more juice out of them.
k

Steam Clean Steam Clean

Menu	SL1		Steam Clean	Weight Limit	0.3 kg	
Utensil: Mi	Utensil: Microwave safe (MWS) bowl					
	Instructions			Method:		
For		0.3 kg		Take 300ml water in MWS bowl, add 1tbsp vinegar or lemot Select category & press start.     When beeps, wipe with soft and clean napkin. Press start.     When over wipe with soft and clean napkin after taking out powe Note: Use this feature to aid in cavity cleaning.	•	

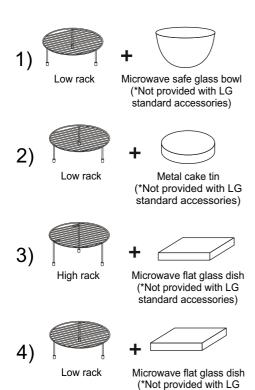

standard accessories)

# List of Ingredients

# Spices

English Name	Hindi Name
Asafoetida	Hing
Basil	Tulsi
Bay Leaf	Tej Patta
Cardamom, black	Moti Elaichi
Cardamom, green	Choti Elaichi
Carom seeds	Ajwain
Cinnamon	Dalchini
Cloves	Laung
Coriander Seeds	Sabut Dhania
Cumin seeds	Jeera
Dry Mango Powder	Amchur
Dry red chilli	Sukhi Sabut Lal Mirch
Fennel	Saunf
Fenugreek leaves, dried	Kasuri Methi
Fenugreek seeds	Methidana
Mustard seeds	Sarson, Rai
Nutmeg	Jaiphal
Oregano	Oregano
Pepper	Kali Mirch
Pomegranate seeds, dried	Anardana
Poppy seeds	Khus Khus
Red Chilli	Lal Mirch
Salt	Namak
Turmeric	Haldi

# Vegetables

English Name	Hindi Name
Mushroom	Kukurmutta
Olives	Jaitun
Onion	Pyaz
Parsley	Ajmoda
Potato	Aloo
Peas	Hari Matar
Radish	Mooli
Red Pumpkin	Lal Kaddu
Spinach	Palak
Spring Onion	Hari Pyaz
Tomato	Tamatar
Turnip	Shalgam
Chenopodium leaves	Bathua
Zucchini	Torai

### Fruits

English Name	Hindi Name
Apple	Seb
Coconut	Nariyal
Grapes	Angoor
Mango	Aam
Pineapple	Anannas
Pomegranate	Anaar
Raw Banana	Kacha Kela

# Vegetables

English Name	Hindi Name
Amaranth	Chavli
Baby corn	Baby corn
Bittergourd	Karela
Bottlegourd	Ghiya
Brinjal/Eggplant	Baigan
Broccoli	Hari Phool Gobhi
Cabbage	Pata Gobhi/Bandh Gobhi
Capsicum	Shimla Mirch
Cauliflower	Phool Gobhi
Carrot	Gajar
Celery	Ajmod
Cluster	Beans Gavar Ki Fali
Coriander leaves	Hara Dhania
Cucumber	Kheera
Curry leaves	Curry Patta
Drumsticks	Drumsticks
French beans	France beans
Garlic	Lehsun
Ginger	Adrak
Lady Finger	Bhindi
Lemon	Nimbu
Lemon Grass	Lemon Grass
Lime	Nimbu
Mint	Pudina

### Cereals

English Name	Hindi Name
Flattened Rice	Poha
Oats	Jaei
Puffed Rice	Murmura
Refined wheat	Flour Maida
Rice	Chawal
Sago	Sabudana
Semolina	Suji
Whole wheat broken	Daliya
Wheat Flour (whole)	Gehun ka Atta

### Pulses

Hindi Name
Chana Dal
Besan
Urad Dal
) Moong Dal (Dhuli)
Rajma
Masoor Dal (Dhuli)
Arhar/Tuvar Dal
Soyabean
-

### **Dry Fruits**

English Name	Hindi Name	
Almonds	Badam	
Cashewnuts	Kaju	
Pistachio	Pista	
Raisins	Kishmish	
Walnuts	Akhrot	

#### Fats & Oils

English Name	Hindi Name
Butter	Makhan
Ghee	Ghee
Oil	Tel
Olive Oil	Jaitun Ka Tel
Mustard Oil	Sarson Ka Tel

#### Miscellaneous

English Name	Hindi Name
Bread crumbs	Bread crumbs
Cornflour	Cornflour
Coffee	Coffee
Cottage cheese	Paneer
Curd	Dahi
Eggs	Ande
Honey	Shahed
Jaggery	Gud
Khoa	Khoa
Milk	Doodh
Powdered Sugar	Bura
Sugar	Cheeni
Tamarind	lmli
Tea	Chai
Saffron	Kesar
Sprouts	Ankur
Vinegar	Sirka

## To Clean Your Oven / अपने ओवन की सफाई

### To Clean Your Oven / अपने ओवन को साफ करना

### 1. Keep the inside of the oven clean

Always unplug your oven before cleaning. Food spatters or spilled liquids stick to oven walls and between the seal and door surfaces. It is best to wipe up spillovers with a damp cloth right away. Crumbs and spillovers will absorb microwave energy and lengthen cooking times. Use a damp cloth to wipe out crumbs that fall between the door and the frame. It is important to keep this area clean to assure a tight seal. Remove greasy spatters with a soapy cloth then rinse and dry. Do not use harsh detergent or abrasive cleaners. The metal tray (model specific) can be washed by hand or in the dishwasher.

1. ओवन के भीतरी हिस्सें को साफ रखें।

हमेशा सफाई से पहले अपने ओवन को अनप्लग करें। खाने के टुकड़े या तरल पदार्थों के छींटे दीवारों पर और सील तथा दरवाजों के बीच की सतह पर विपक जाते हैं। एक गीले कपड़े से इसको तुरंत साफ करना आवश्यक है। ये खाने के छोटे टुकड़े और तरल पदार्थों की बूंदे माइक्रोवेव की ऊर्जा को अवशोषित कर लेते हैं और इस तरह खाना बनने का समय लंबा हो सकता है। दरवाज़े और खांचों के बीच गिरे हुए इन खाने के टुकड़ों को गीले कपड़े से साफ करें। टाईट सील के लिए यह सफाई रखनी बहुत जरुरी है। तैलीय छींटों को हटाने के लिए साबुन से भीगा हुआ कपड़ा इस्तेमाल करें और उसके बाद उसे घो कर सुखा लें। कठोर डिटरजेंट का इस्तेमाल न करें। मत्टीकुक तवा (मॉडल विशेष) को हाथों से या डिशवाशर में घोया जा सकता है।

#### Keep the outside of the oven clean

Clean the outside of the oven with damp soft cloth. To prevent damage to the operating parts inside the oven, the water should not be allowed to seep into the ventilation openings. To clean control panel, open the door to prevent the oven from accidentally starting, and wipe a damp cloth followed immediately by a dry cloth. Press Stop/Cancel after cleaning.

ओवन का बाहरी हिस्सा साफ रखें।

नम मुलायम कपड़े से ओवन के बाहरी हिस्सों को साफ़ करें। ओवन के भीतर इसके काम करने वाले हिस्सों को टूट-फूट से बचाने के लिए पानी को हवा आने वाले रास्तों पर जमा न होने दें। कंट्रोल पैनल को साफ़ करने के लिए दरवाज़ा खुला ही रखें ताकि कहीं गलती से ओवन चालू न हो जाए। फिर इसे एक गीले कपड़े से साफ़ करके सुखे कपड़े से पोंछ दें। सफाई के बाद STOP/Cancel बटन दबाएं।

- It steam accumulates inside or around the outside of the oven door, wipe the panels with a soft cloth. This may occur when the oven is operated under high humidity conditions and in no way indicates a malfunction of the unit.
- अंगर दरवाज़ें के बाहर या भीतर भाप इकड़ी हो जाए तो एक मुलायम कपड़े से पैनल को पोंछ दें। बहुत नमी हो जाने पर ओवन के संचालन के कारण ऐसा हो सकता है यह कोई ओवन की खराबी नहीं है।
- 4. The door and door seal should be kept clean. Use only damp cloth to clean.
- 4. दरवाजे और उनकी सील साफ रखी जानी चाहिए। साफ करने के लिए केवल नम कपड़ें का उपयोग करें।
- 5. Do not use steam cleaners.
- स्टीम क्लीनर्स का प्रयोग न करें।
- 6. Unplug your oven from the electrical socket when you clean control panel. Use only damp cloth to clean.
- कंट्रील पैनल को साफ करते समय अपने ओवन को बिजली के स्विच से अलग करें। साफ करने के लिए केवल नम कपड़े का उपयोग करें।


## Questions & Answers / प्रश्न और उत्तर

FAQ	Answer
What's wrong when the oven light will not glow?	There may be several reasons why oven light will not glow. Either the Lamp/LED has blown or the electric circuit has failed
Does microwave energy pass through the viewing screen in the door?	NO. The holes, or ports, are made to allow light to pass; they do not let microwave energy through.
Why does the BEEP tone sound when a button on the control panel is touched?	The BEEP tone sounds to assure that the setting is being properly entered.
Will the microwave function be damaged if it operates empty?	Yes. Never run it empty.
Why do eggs sometimes pop?	When baking, frying, or poaching eggs, the yolk may pop due to steam build up inside the yolk membrane. To prevent this, simply pierce the yolk before cooking. Never microwave eggs in the shell.
Why is standing time recommended after microwave cooking is over?	After microwave cooking is finished, food keeps on cooking during standing time. This standing time finishes cooking evenly throughout the food. The amount of standing time depends on the density of the food.
Why doesn't my oven always cook as fast as cooling guide says?	Check your cooking guide again to make sure you've followed directions correctly, and to see what might cause variations in cooking time. Cooking guide times and heat settings are suggestions, chosen to help prevent overcooking, the most common problem in getting used to this oven. Variations in the size, shape, weight and dimensions of the food require longer cooking time. Use your own judgment along with the cooking guide suggestions to test food conditions, just as you would do with a conventional cooker.
आमतौर पर पूछे जाने वाले सवाल	जवाब
तब क्या करें जब ओवन की बत्ती न जले?	ओवन की बत्ती के न जलने के कई कारण हो सकते हैं – जैसे कि या तो लैम्प / एलईडी खराब हो गये हैं या कनेक्शन में कोई गड़बड़ी आ गई है।
क्या दरवाज़े के पारदर्शी स्क्रीन से माइक्रोवेव ऊर्जा बाहर आ सकती है?	नहीं। उनसे प्रकाश तो बाहर आ सकता है माइक्रोवेव ऊर्जा नहीं।
जब भी कंट्रोल पैनल का कोई बटन छुआ जाता है तो बीप की ध्वनि क्यों आती है?	बीप की ध्वनि से आपको यह पता चलता है की सेटिंग सही चल रही है।
अगर गलती से ओवन को खाली ही चला दिया जाए तो क्या इसमें गड़बड़ी आ सकती हैं?	हाँ, इसलिए इसे कभी भी खाली नहीं चलाइये।
कभी कभी अंडे क्यों तड़क कर फट जाते हैं?	जब भी अंडे को भूना, तला या पकाया (पोच) जाता है तब अन्दर भाप बनने से इसका योक फट सकता है। इससे बचने के लिए इसको बनाने से पहले इसके योक में एक छेद कर देना चाहिए। माइक्रोवेव के भीतर कभी भी अंडों को शैल के साथ न रखें।
माइक्रोवेव कुकिंग हो जाने के बाद कुछ रुकने को क्यों कहा जाता है?	माइक्रोवेव कुकिंग के ख़त्म हो जाने के बाद भी खाना अन्दर ही अन्दर पकता रहता है तो थोड़ा रुक जाने पर वह पकने का कार्य तब तक समाप्त हो जाता है। इस समापन में लगने वाला समय अन्दर रखे खाने की गहनता पर निर्भर करता है।
कुकिंग गाइड में जैसा लिखा होता है उतनी तेज़ी से ओवन में खाना क्यों नहीं पकता?	ध्यान से दुबारा अपनी कुकिंग गाइड को पढ़ें कि कहीं उसके कदम दर कदम निर्देशों के पालन में आपसे कोई भूल तो नहीं हुई? और इस तरह देखें कि और क्या कारण हो सकते हैं जिससे आपको अधिक समय लग गया। इसमें लिखे गए समय की सीमा का उदेश्य आपके खाने को अधिक पक जाने से बचाना है। खाने के रूप रंग और आकार में विद्यात से इसके निर्माण में भी उसी अनुसार समय कम या अधिक लगता है। आप अपनी समझ के मुताबिक पकने वाले समय का सही अनुमान करें जैसा कि आप अपने पारंपरिक प्रेशर कुकर के साथ करती हैं।

## Two Recipes for Beginners / नवसिखियों के लिए दो व्यंजन विधियां

NOTE: The time variation during cooking of recipe depends upon the ingredients, method adopted & type of food category

ध्यान दें: इस भोजन में लगने वाला समय इसके तत्वों, इसके बनाने की प्रणाली और यह किस वर्ग का भोजन है – इन पर निर्भर करेगा।

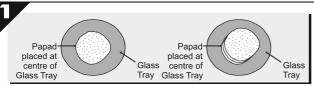

### 1. ROASTED PAPAD\*

#### Procedure:

#### Papad:

- Place the raw papad at the centre of Glass Tray, as shown in the picture above.
- Select Micro-100% Power Level and Cook time.Press START/+30 seconds.
- After Papad cooking give standing time of 30-45 seconds.

#### To Cook Multiple Papads:

Place Multiple papads over one another, as shown in the picture above.

#### Crispy Papad:

- Press START/+30 seconds once without papad.
- Sprinkle little water or oil over the papad.
- After beep, place the papad at the centre and press START/+30 seconds.

\*Note: The cooking time may vary –

- a. As per the composition of the papad material.
- b. As per the Quantity of papad used.

### 1. भुने हुए पापड: विधि

#### पापड :

- ग्लास ट्रे के बीच में कच्चा पापड़ रखें, जैसा कि उपरोक्त चित्र में दर्शाया गया है।
- 2. माइक्रो-100% पावर स्तर और पकाने का समय
- निर्धारित करें | START/+30 seconds दबाएं | 3. पापड़ पक जाने के बाद 30-45 सेकेण्ड्स तक रखा रहने दें |

### अधिक पापड पर्काने के लिए :


बहुत सारे पापड़ एक दूसरे के ऊपर रखें, जैसा कि उपरोक्त चित्र में दर्शाया गया है।

### क्रिस्पी पापड़ :

- पापड़ रखने से पहले START/+30 seconds एक बार दबाएं।
- पापड़ के ऊपर थोड़ा पानी या तेल छिड़कें।
- बीप के बाद, ग्लास ट्रे के बीच में पापड़ रखें, जैसा कि उपरोक्त चित्र में दर्शाया गया है, और START/+30 seconds दबाएं।

\*नोट : पकाने के समय में अन्तर हो सकता है 🗕

- a. पापड की सामग्री की बनावट के अनुसार।
- b. इस्तेमाल किये गए पापड़ की मात्रा के अनुसार।

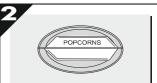

2. POP CORN: Place the pop corn bag to the glass tray properly as instructed on packing. Use START/+30 seconds to set 3~4 minutes. Remove the bag after poping sound has stopped. Take care that bag corners do not touch sides while rotating.

**Note**: Attend poping process carefully. Do not overheat as cause flash fire.

 पाँप कार्न : पैकिंग पर दिये गए निर्देशानुसार पाँप कार्न का बैग काँच की ट्रे पर ठीक से रखें। 3-4 मिनट सेंठ करने के लिए START/+30 seconds का प्रयोग करें। भुनने की आवाज समाप्त होने के बाद बैग को हटा लें। ध्यान रखें कि बैग के कोने घुमाते समय साइड से न छुएं।

नोट: भुनने की प्रक्रिया को ध्यानपूर्वक देखें। आवश्यकता से अधिक गर्म न करें क्योंकि इससे आग लग सकती है।

# Disposal of your old appliance / अपने पुराने उपकरण का निपटान

### Disposal of your old appliance (as per e-waste Rules)



Please check whether crossed out wheeled bin symbol is depicted on the product or its parts, if yes, it means the product is covered by e-waste Management and Handling Rules, 2011 and is required to be recycled, dismantled or scraped in the following manner.

#### 1. <u>Do's</u>:

 a. The product is required to be handed over only to the authorized recycler for disposal.

b. Keep the product in isolated area, after it becomes non-functional/unrepairable so as to prevent its accidental breakage.

#### Don't:

- a. The product should not be opened by the user himself/herself, but only by authorized service personnel.
- The product is not meant for re-sale to any unauthorized agencies/scrap dealer/kabariwalah.
- c. The product is not meant for mixing into household waste stream.
- d. Do not keep any replaced spare part(s) from the product in exposed area.
- 2. Any disposal through unauthorized agencies/person is not prescribed by the Environment (Protection) Act 1986.
- "This product is complied with the requirement of Hazardous Substances as specified under Rule 13 (1) & (2) of the E-Waste (Management & Handling) Rules, 2011".
- 4. To locate a nearest collection centre or call for pick-up (limited area only) for disposal of this appliance, please contact Toll Free No. 1800-315-9999 / 1800-180-9999 for details. All collection centre and pick up facilities are done by third parties with LG Electronics India Pvt. Ltd. Merelv as facilitator.

For more detailed information, please visit: http://www.lg.com/in

9711709999 (LG WhatsApp No.)

## अपने पुराने उपकरण का निपटान (ई-अपशिष्ट नियम के अनुसार)



कृपया जांचे कि क्या पहिएदार बिन प्रतीक को उत्पाद या उसके भागों पर चित्रित किया गया है,यदि हां, तो इसका मतलब है कि उत्पाद को ई— कचरा प्रंबधन और तंचालन के नियमों, 2011 द्वारा कवर किया गया है और निम्नलिखित तरीके से पुनर्नवीनीकरण, विघटित या रकेंप किया जाना आवश्यक है।

#### करें

क- उपकरण को सिर्फ अधिकृत पुनः नवीनीकरणकर्ता को ही निपटारण करने हेतु हस्तानान्तरित करें।

ख- जब उपकरण कार्यारत न हो इसे अलग क्षेत्र में रखे ताकि उपकरण से होने वाली दुर्घटनाओं से बचा जा सके।

#### ना करें

क- इस उपकरण को स्वयं/खुद नही खोलना चाहिए, उपकरण को केवल अधिकृत अधिकारी के द्वारा ही खोला जाना चाहिए।

ख- इस उपकरण को पुन: बिक्री के लिए किसी भी कबाड़ीवाला / भंगार वाला / अनाधिकृत संस्था को न दें।

ग- इस उपकरण को किसी घरेलू अपशिष्ट सामान के साथ मिलाकर न रखें।

घ- उपकरण के बदले हुए या आतरिक पूर्जो को खुले क्षेत्र में न रखें।

- अनाधिकृत विभाग / व्यक्ति के माध्यम से कोई भी निपटान पर्यावरण(संरक्षण) अधिनियम 1986 द्वारा निर्धारित नही है।
- यह उत्पाद ई–अपशिष्ट (प्रबंधन और हथालन) नियम 2011 के अन्तर्गत 13(1) एवं (2) के तहत निर्दिष्ट खतरनाक पदार्थों की आवश्यकता का पालन करता है ।
- 4. उपरोक्त पदार्थों के निपटारन के लिए नजदीकी निपटारन संस्थान (संकीर्ण क्षेत्र) में कॉल करें। अधिक जानकारी के लिए हमारे टोल क्री नम्बर 1800-315-9999 / 1800-1800-9999 पर कॉल करें। सभी संग्रहण केन्द्र व पिक-अप की सुविधाएं किसी थर्ड-पार्टी जो LG Electronics India Pvt. Ltd. को अपनी सेवाएं प्रदान कर रही हों से करवाएं।
  - अधिक जानकारी के लिए देखें वेबसाइट : http://www.lg.com/in
- 9711709999 (LG WhatsApp No.)





MFL70580101 (04)







To know more about LG, visit www.lg.com/in For Corporate/Institutional enquiries, please write to corp.enquiries@lge.com