

# User Guide

Lenovo  
**LEGION**

Lenovo

Lenovo Legion 5 Pro (16", 7)

## **Read this first**

Before using this documentation and the product it supports, ensure that you read and understand the following:

- [Generic Safety and Compliance Notices](#)
- *Safety and Warranty Guide*
- *Setup Guide*

**First Edition (September 2022)**

**© Copyright Lenovo 2022.**

LIMITED AND RESTRICTED RIGHTS NOTICE: If data or software is delivered pursuant to a General Services Administration "GSA" contract, use, reproduction, or disclosure is subject to restrictions set forth in Contract No. GS-35F-05925.

---

# Contents

## About this guide . . . . . iii

## Chapter 1. Meet your computer . . . . . 1

Front . . . . .	1
Base . . . . .	2
Left . . . . .	3
Right . . . . .	4
Rear . . . . .	5
Bottom . . . . .	6
Features and specifications . . . . .	7
Statement on USB transfer rate . . . . .	9
Operating environment . . . . .	9
Avoid constant body contact with specific hot sections . . . . .	9

## Chapter 2. Get started with your computer . . . . . 11

Work with Windows . . . . .	11
Windows help information . . . . .	11
Lenovo Vantage and Lenovo PC Manager . . . . .	12
The Novo Button menu . . . . .	12
Open the Novo Button menu . . . . .	12
Dual-function keys. . . . .	12
Hotkeys . . . . .	13
Dual-function keys without printed icons . . . . .	13
The FnLock switch . . . . .	14

## Chapter 3. Explore your computer . . . . . 15

Manage power . . . . .	15
Check the battery status . . . . .	15
Charge the battery . . . . .	15
Using a Power Delivery compliant USB Type-C charger with the computer . . . . .	15

Set power button behavior. . . . .	16
A power plan . . . . .	16
Set operation mode . . . . .	16
Change settings in UEFI/BIOS setup utility . . . . .	16
What is UEFI/BIOS setup utility . . . . .	17
Open the UEFI/BIOS setup utility . . . . .	17
Enable or disable Fool Proof Fn Ctrl . . . . .	17
Enable or disable always-on . . . . .	17
Enable or disable Flip to Boot . . . . .	17
Set passwords in UEFI/BIOS setup utility . . . . .	17
Password types . . . . .	17
Set administrator password . . . . .	18
Change or remove administrator password . . . . .	18
Set user password . . . . .	19
Enable power-on password . . . . .	19
Set password for the secondary storage device. . . . .	19
Change or remove hard disk password . . . . .	20

## Chapter 4. Help and support . . . . . 21

Frequently asked questions . . . . .	21
Self-help resources . . . . .	21
What is a CRU? . . . . .	22
CRUs for your product model . . . . .	23
Call Lenovo . . . . .	23
Before you contact Lenovo . . . . .	23
Lenovo Customer Support Center. . . . .	23
Purchase additional services. . . . .	24

## Appendix A. Notices and trademarks. . . . . 25



---

## About this guide

- This guide applies to Lenovo product model(s) listed below. Illustrations in this guide may look slightly different from your product model.

Model name	Machine type (MT)
<ul style="list-style-type: none"><li>– Legion 5 Pro 16IAH7H</li><li>– Lenovo Legion 5 Pro 16IAH7H</li></ul>	82RF
<ul style="list-style-type: none"><li>– Legion 5 Pro 16IAH7</li><li>– Lenovo Legion 5 Pro 16IAH7</li></ul>	82S0
<ul style="list-style-type: none"><li>– Legion 5 Pro 16ARH7H</li><li>– Lenovo Legion 5 Pro 16ARH7H</li></ul>	82RG
<ul style="list-style-type: none"><li>– Legion 5 Pro 16ARH7</li><li>– Lenovo Legion 5 Pro 16ARH7</li></ul>	82RY

**Note:** Throughout this guide, features labeled with “Legion 5 Pro 16IAH7” apply equally to Legion 5 Pro 16IAH7H, Lenovo Legion 5 Pro 16IAH7H, Legion 5 Pro 16IAH7, and Lenovo Legion 5 Pro 16IAH7. Features labeled with “Legion 5 Pro 16ARH7” apply to Legion 5 Pro 16ARH7H, Lenovo Legion 5 Pro 16ARH7H, Legion 5 Pro 16ARH7, and Lenovo Legion 5 Pro 16ARH7.

- For further compliance information, refer to the *Generic Safety and Compliance Notices* at [https://pcsupport.lenovo.com/docs/generic\\_notices](https://pcsupport.lenovo.com/docs/generic_notices).
- This guide may contain information about accessories, features, and software that are not available on all models.
- This guide contains instructions that are based on the Windows operating system. These instructions are not applicable if you install and use other operating systems.
- Microsoft® makes periodic feature changes to the Windows® operating system through Windows Update. As a result, the operating system related instructions may become outdated. Refer to Microsoft resources for the latest information.
- The content of the guide is subject to change without notice. To obtain the latest version, go to <https://support.lenovo.com>.




---

## Chapter 1. Meet your computer

---

### Front

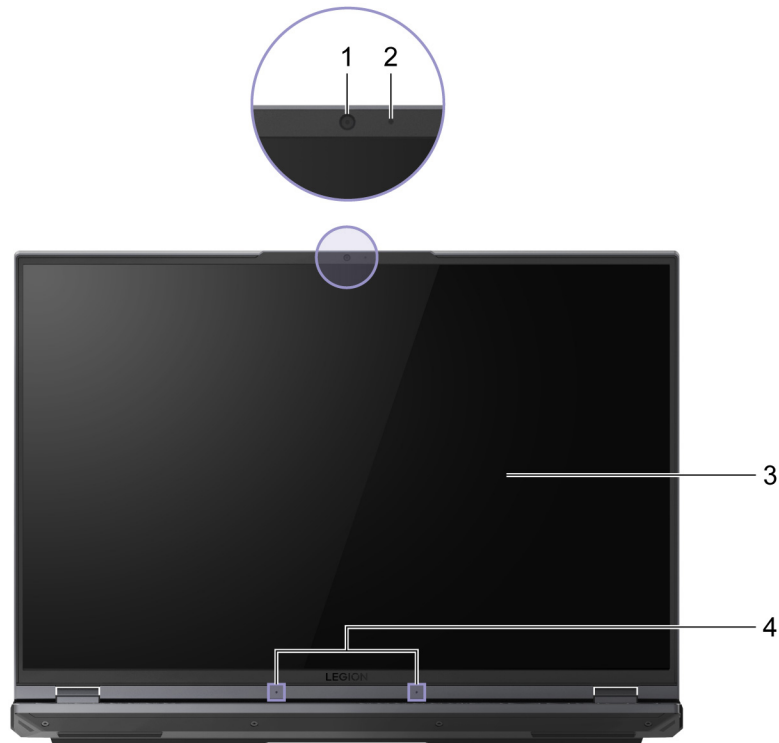

---

1. Camera	Capture still and moving images for taking photos, recording videos, and video conferencing.
2. Camera light	If the light is on, the camera is in use.
3. Screen	Display text, graphics, and videos.
4. Microphones	Capture or record sound and voice.

---

## Base




1. Power button	Press the button to turn on the computer or put the computer into sleep mode. <b>Note:</b> You can turn on the computer by flipping open the LCD screen if Flip to Boot is enabled.
2. Power light	Indicate the power status of the computer. The color of the power light also reflects the currently activated operation mode. Refer to “Set operation mode” on page 16 for how to switch operation modes. <ul style="list-style-type: none"><li>• Solid on: The computer is turned on.<ul style="list-style-type: none"><li>– White: in balance mode</li><li>– Red: in performance mode</li><li>– Blue: in quiet mode</li></ul></li><li>• Blinking: The computer is in sleep mode.</li><li>• Off: The computer is turned off or in hibernation mode.</li></ul>
3. Numeric keypad	To enable or disable the numeric keypad, press the Num Lock key.
4. Touchpad	Perform finger touch and all the functions of a traditional mouse. <b>Note:</b> The touchpad also supports multi-finger gestures. For Windows, you can set them up in <b>Settings → Bluetooth &amp; devices → Touchpad</b> .
5. Wireless antennas	Send and receive radio waves for the built-in Wi-Fi and Bluetooth combo adapter. <b>Note:</b> The antennas are not visible from the outside of the computer.
6. Keyboard	Enter characters and interact with programs. <b>Note:</b> The keyboard also includes hotkeys and function keys for changing settings and performing tasks quickly.



---

## Left

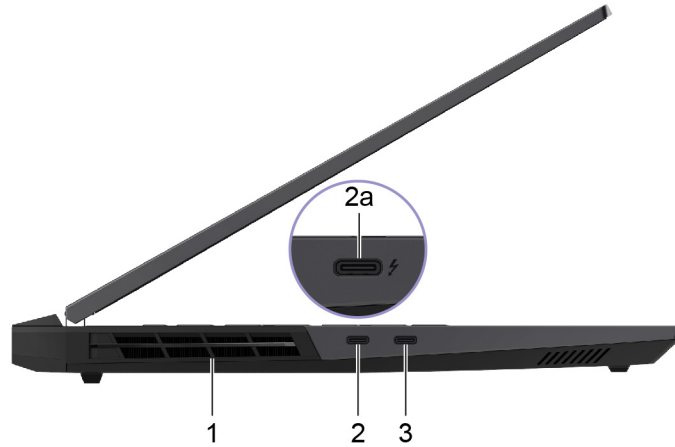

---

1. Ventilation slots (outlet)

Maintain the outgoing airflow to dissipate internal heat.

**Attention:** Do not block the ventilation slots. Otherwise, the computer may overheat.

---

2. Thunderbolt™ 4/USB4® port

This port varies by model and is either a Thunderbolt 4 (2a) or a USB4 port. It utilizes the USB Type-C® connector and can be used for connecting:

- USB data devices
- Display devices, and
- Thunderbolt or USB4 enabled devices

**Note:** This port does not support video output in dGPU Mode. GPU mode can be set in Lenovo Vantage or Legion Zone.

---

3. Multi-function USB port

This port utilizes the USB Type-C connector and can be used for:

- Connecting USB data devices.
  - Connecting display devices.
-

---

## Right



 
---

1. Camera switch	Disable or re-enable the camera.
2. Combo audio jack	Connect to headphones or headsets with a 3.5 mm (0.14 inch), 4-pole plug. <b>Note:</b> This jack does not support standalone external microphones. If you use headsets, choose one with a single plug.
3. USB 3.2 Gen 1 port	This USB port utilizes the USB Standard-A connector. It supports SuperSpeed USB 5 Gbps and is backwards compatible with USB 2.0.
4. Ventilation slots (outlet)	Maintain the outgoing airflow to dissipate internal heat. <b>Attention:</b> Do not block the ventilation slots. Otherwise, the computer may overheat.

---

---

## Rear




---

1. Ventilation slots (outlet)	Maintain the outgoing airflow to dissipate internal heat. <b>Attention:</b> Do not block the ventilation slots. Otherwise, the computer may overheat.
2. Ethernet connector	Connect to a local area network (LAN).
3. Multi-function USB port	This port utilizes the USB Type-C connector and can be used for: <ul style="list-style-type: none"><li>• Connecting USB data devices.</li><li>• Connecting display devices.</li></ul> <b>Note:</b> This port also supports USB Power Delivery and can be used as a secondary power input connector. For details, refer to “Using a Power Delivery compliant USB Type-C charger with the computer” on page 15.
4. HDMI™ connector	Connect to a compatible digital audio device or video monitor, such as an HDTV.
5. USB 3.2 Gen 1 port	This USB port utilizes the USB Standard-A connector. It supports SuperSpeed USB 5 Gbps and is backwards compatible with USB 2.0.
6. USB 3.2 Gen 1 port (always-on)	The always-on connector can charge external devices when the computer is turned off, in sleep or hibernation mode. The always-on function can be turned on or off in the UEFI/BIOS setup utility. <b>Note:</b> If Lenovo Vantage is pre-installed on your computer, you can also change the always-on setting from within that software.
7. Charging light	Indicate whether the computer is connected to ac power. <ul style="list-style-type: none"><li>• Solid white: Connected to ac power; battery charge percentage 91%–100%</li><li>• Solid amber: Connected to ac power; battery charge percentage 1%–90%</li><li>• Off: Not connected to ac power</li></ul>
8. Power connector	Connect to power with the included power cord and ac power adapter.

---

---

## Bottom

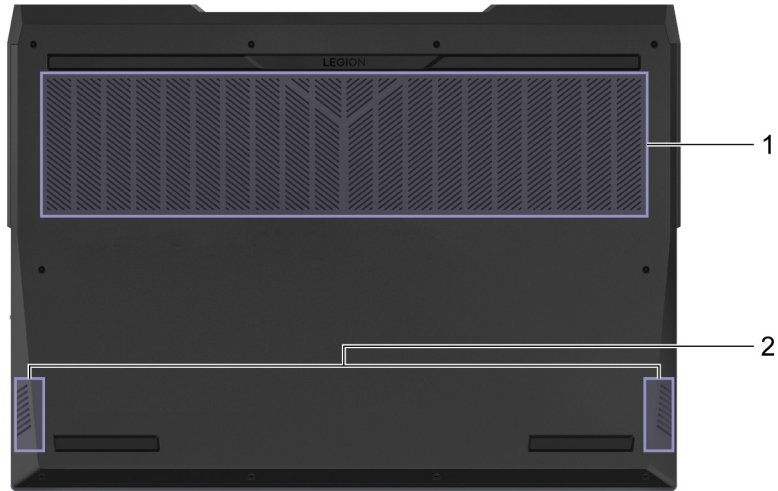

---

1. Ventilation slots (inlet)

Maintain the incoming airflow to dissipate internal heat.  
**Attention:** Do not block the ventilation slots. Otherwise, the computer might overheat.

---

2. Speakers

Produce sound.

---

---

## Features and specifications

---

 
Dimensions	<ul style="list-style-type: none"><li>• Width: 356–360 mm</li><li>• Depth: 260–264 mm</li><li>• Thickness: 20–27 mm</li></ul>
ac power adapter	<ul style="list-style-type: none"><li>• Input: 100 V ac–240 V ac, 50 Hz–60 Hz</li><li>• Output: 20 V dc, 15 A/20 V dc, 11.5 A</li><li>• Power: 300 W/230 W</li></ul>
Battery pack	<ul style="list-style-type: none"><li>• Capacity: 80 Wh</li><li>• Number of cells: 4</li></ul> <p><b>Note:</b> The battery capacity is the typical or average capacity as measured in a specific test environment. Capacities measured in other environments may differ but are no lower than the rated capacity (see product label).</p>
Microprocessor	To view the microprocessor information of your computer, right-click the Start button and then select <b>System</b> .
Memory	<ul style="list-style-type: none"><li>• Type: Double data rate 5 (DDR5) small outline dual in-line memory module (SODIMM)</li><li>• Number of slots: 2</li></ul>
Storage device	<ul style="list-style-type: none"><li>• Type: solid-state drive</li><li>• Form factor: M.2 (2242 or 2280)</li><li>• Number of slots: 2</li><li>• Bus: PCI Express</li></ul>
Screen	<ul style="list-style-type: none"><li>• Size: 16 inches</li><li>• Display resolution:<ul style="list-style-type: none"><li>– 1920 × 1200 pixels, or</li><li>– 2560 × 1600 pixels</li></ul></li></ul>
Keyboard	<ul style="list-style-type: none"><li>• Function keys</li><li>• Hotkeys</li><li>• Numeric keypad</li><li>• Keyboard backlight</li></ul>

---

---

## Connectors and slots

- Power connector
- Combo audio jack
- HDMI 2.1 connector
- Ethernet connector
- USB Standard-A connector × 3
  - Supports SuperSpeed USB 5 Gbps and backwards compatible with USB 2.0.
  - Power output up to 5 V and 0.9 A
  - Power output up to 5 V and 2 A (the always-on USB port)
- USB Type-C connector (rear)
  - Power input up to 20 V and 6.75 A
  - Power output up to 5 V and 3 A
  - DisplayPort 1.4 compliant in DisplayPort Alt Mode
  - Supports SuperSpeed USB 10 Gbps; backwards compatible with SuperSpeed USB 5 Gbps and USB 2.0.
- USB Type-C connector (left, Thunderbolt 4 enabled) (Legion 5 Pro 16IAH7)
  - Power output up to 5 V and 3 A
  - Up to 41.25 Gbps data transfer rate in Thunderbolt Alt Mode
  - DisplayPort 1.4 compliant in DisplayPort Alt Mode
  - Supports SuperSpeed USB 10 Gbps; backwards compatible with SuperSpeed USB 5 Gbps and USB 2.0.
- USB Type-C connector (left, USB4 enabled) (Legion 5 Pro 16ARH7)
  - Power output up to 5 V and 3 A
  - Supports maximum signaling rate of 40 Gbps
  - DisplayPort 1.4 compliant in DisplayPort Alt Mode
  - Supports SuperSpeed USB 10 Gbps; backwards compatible with SuperSpeed USB 5 Gbps and USB 2.0.
- USB Type-C connector (left, connector b)



- Power output up to 5 V and 3 A

**Note:** If external power is supplied through the rear USB Type-C connector, the maximum current for connector (b) is 0.9 A. (applicable to models 82RF and 82S0)

- DisplayPort 1.4 compliant in DisplayPort Alt Mode
- Supports SuperSpeed USB 10 Gbps; backwards compatible with SuperSpeed USB 5 Gbps and USB 2.0.

**Note:** Data rates and performance ratings are dependent on connected devices and cables if they are used. USB Type-C connectors that are DisplayPort 1.4 compliant through DisplayPort alternate mode provide maximum output resolution of 5120 x 3200, at 60 Hz frame rate and color depth of 24 bpp (bits per pixel). The HDMI 2.1 connector supports the maximum output resolution of 7680 x 4320, at 60 Hz frame rate, 8-bit color, and chroma subsampling of 4:2:0. The actual maximum output resolution is dependent on the connected display device and the cable being used.

---

## Security features

- UEFI/BIOS passwords
    - Administrator password
-

- 
- User password
  - Master hard disk password
  - User hard disk password
- 

Wireless features

- Ethernet (10/100/1000 Mbps) network adapter
  - Wi-Fi and Bluetooth combo adapter
- 

## Statement on USB transfer rate

Depending on many factors such as the processing capability of the host and peripheral devices, file attributes, and other factors related to system configuration and operating environments, the actual transfer rate using the various USB connectors on this device will vary and will be slower than the data rate listed below for each corresponding device.

USB device	Data rate (Gbit/s)
3.2 Gen 1	5
3.2 Gen 2	10
USB4 40Gbps	40

## Operating environment

### Maximum altitude (without pressurization)

3048 m (10 000 ft)

### Temperature

- At altitudes up to 2438 m (8000 ft)
  - Operating: 5°C to 35°C (41°F to 95°F)
  - Storage: 5°C to 43°C (41°F to 109°F)
- At altitudes above 2438 m (8000 ft)
  - Maximum temperature when operating under the unpressurized condition: 31.3°C (88°F)

**Note:** When you charge the battery, its temperature must be no lower than 10°C (50°F).

### Relative humidity

- Operating: 8% to 95% at wet-bulb temperature 23°C (73°F)
- Storage: 5% to 95% at wet-bulb temperature 27°C (81°F)

## Avoid constant body contact with specific hot sections

### CAUTION:

When the computer is operating, it should be placed on a hard and flat surface with its bottom area not in contact with user's bare skin. Under normal operating conditions, the temperature of the bottom surface will remain within an acceptable range as defined in *IEC 62368-1*, but such temperatures can still be high enough to cause discomfort or harm to the user if directly touched for over 10 seconds at a time. As such, it is recommended that users avoid prolonged direct contact with the bottom of the computer.





---

## Chapter 2. Get started with your computer

---

### Work with Windows

The following table contains Windows frequently used settings. You can learn the basics and start working with Windows right away.

To configure settings, type the corresponding keywords in the Windows search box and select the best match. Follow the on-screen instructions to customize settings.

Table 1. Basic settings

Functions	Descriptions	Search by keywords
Control Panel	View or change Windows settings, including hardware and software setup and configuration.	Control Panel
Connect to Wi-Fi networks	For models with a wireless LAN module, you can connect your computer to a Wi-Fi® network. Click the network icon in the Windows notification area, and then select a network for connection. <b>Note:</b> The wireless LAN module on your computer may support different standards. For some countries or regions, use of 802.11ax may be disabled according to local regulations.	Wi-Fi
Connect to wired networks	For models with an Ethernet (RJ-45) connector, you can use an Ethernet cable to connect your computer to a wired network.	Ethernet
Airplane mode	Airplane mode is a convenient setting to turn all wireless communications of your computer on and off. You may need to turn it on when boarding an airplane.	Airplane mode
Night light mode	Night light is a switch in Windows that you can turn on and off. When it is turned on, your screen shows warmer colors and the amount of emitted blue light is reduced. Enabling night light reduces the chances of developing eye fatigue or eye strain.	Night light
Adjust color temperature	If night light mode is turned on, you can adjust the color temperature of the screen. <b>Note:</b> Selected Lenovo computers are low blue light certified. These computers are tested with night light turned on and color temperature set to the default value of 48.	Night light
Windows Updates	Microsoft periodically releases feature and security updates to the Windows operating system. Updates that are applicable to your Windows version are downloaded automatically when your computer is connected to the Internet. When updates are downloaded, you are prompted to restart the computer to install these updates. You can also manually check if there are available updates for the installed version of Windows. <b>Attention:</b> Only use Windows Update to download and install updates. Updates downloaded from other sources may include security risks.	Windows Updates

### Windows help information

If the on-screen instructions cannot solve your problem, refer to the following to get the online Windows help information.

- Type Get Help or Tips in the Windows search box and then press Enter. When the app opens, type the problem description and select the matched result.

- Visit Microsoft support Web site: <https://support.microsoft.com>. Enter what you are looking for in the search box and get search results.

---

## Lenovo Vantage and Lenovo PC Manager

They are both apps developed by Lenovo. Using either of them, you can:

- View product information and system status
- Manage and change device settings
- Check for and perform system update

**Note:** This feature is only available on Lenovo Vantage. In Lenovo PC Manager, you can check for and perform driver update.

Depending on the country or region in which your computer is purchased, one of the apps may be pre-installed on your computer. To open it, type its name in the Windows Search box and select the matched result. If neither of the apps is pre-installed, you may install one on your own. Lenovo Vantage is available for download free of charge from the Microsoft Store.

**Note:** App features are subject to change with updates and specific features may not be available on all Lenovo products.

---

## The Novo Button menu

The Novo Button menu can be displayed before the operating system starts. From the menu, you can choose to

- Open the BIOS/UEFI setup utility
- Open the boot device selection menu
- Open the Windows startup options screen

**Note:** From the Windows startup options screen, you can then choose to

Start your computer using a recovery drive

Reset your computer

Open advanced options screen

## Open the Novo Button menu

Step 1. Turn on or restart the computer.

Step 2. Press F9 repeatedly.

---

## Dual-function keys


 

 
 











Some keys on the keyboard are dual-function keys. Each of such keys can provide two functions: the primary function and the secondary function. Most dual-function keys are located in the top row of the keyboard though several letter keys and the Space key are also dual-function keys.

The primary function of a dual-function key is accessed by pressing the key directly and the secondary function is accessed by pressing the key while holding down the Fn key.

**Note:** The Fn key is located in the lower left corner on a Lenovo keyboard.

## Hotkeys

Hotkeys are dual-function keys with an icon printed on the key. The icons indicate the hidden functions of the hotkeys. To use the hidden function, hold down the Fn key.

Hotkey	Function
	Mute/Unmute sound.
	Decrease/Increase system volume.
	Mute/Unmute the microphone.
	Increase/Decrease screen brightness.
	Switch display devices.
	Turn airplane mode on and off.
	Display an app launcher for quick access to Lenovo apps and services. <b>Note:</b> For some models, you may need to connect to the Internet and complete system update for this function to take effect.
	Enable/Disable the touchpad.
	Display thumbnails of all open apps.
	Open the Windows Calculator app.
	Open the Windows Snipping tool.
	Play or pause playback of media.
	Stop playback of media.
	Go to the previous media file in the playlist or folder.
	Go the next media file in the playlist or folder.
	Turn on/off or adjust the brightness of the keyboard backlight. <b>Note:</b> This hotkey must always be used while holding down the Fn key. Selected models include a keyboard with multi-color backlight. For such a keyboard, this hotkey switches among several predefined lighting patterns. Lighting patterns are customizable in Lenovo Vantage or Legion Zone.

## Dual-function keys without printed icons

Some dual-function keys share keys with letter keys and numeric keys. Such keys do not have a dedicated printed icon. The following table lists the secondary functions for these keys.

Key combination	Hidden function
Fn + B	Break
Fn + P	Pause
Fn + S	SysRq
Fn + K	ScrLk
Fn + Q	Switch operation modes

## The FnLock switch

The FnLock is a switch that reverses the primary and secondary functions of top-row dual-function keys. The FnLock switch shares the ESC key (in the upper left corner of the keyboard). To turn it on or off, press Fn + ESC. The following table provides an example of how the FnLock switch changes the default function of the F1 key.

<b>FnLock</b>	<b>FnLock light</b>	<b>Primary function of the F1 key</b>
Off	Off	F1 function *
On	On	Mute/Unmute sound

\* The F1 function is application-dependent. It may have no function if the active application does not have a definition for the key.

---



## Chapter 3. Explore your computer

---

### Manage power

Use the information in this section to achieve the best balance between performance and power efficiency.

### Check the battery status

The battery status icon  or  is in the Windows notification area. You can check the battery status, view the current power plan, and access battery settings quickly.

Click the battery status icon to display the percentage of battery power remaining and change the power mode. A warning message is displayed when the battery is low.

### Charge the battery

When the remaining battery power is low, charge your battery by connecting your computer to ac power.

The battery is fully charged in about two to four hours. The actual charging time depends on the battery capacity, the physical environment, and whether you are using the computer.

Battery charging is also affected by its temperature. The recommended temperature range for charging the battery is between 10°C (50°F) and 35°C (95°F).

#### Note:

You can check the battery temperature in Lenovo Vantage or Lenovo PC Manager.

To maximize the life of the battery, once the battery is fully charged, it must discharge to 94% or lower before it will be allowed to recharge again.

### Using a Power Delivery compliant USB Type-C charger with the computer

The USB Type-C connector on the rear of the computer conforms to *USB Power Delivery Specification*. If you did not carry the included ac power adapter with your computer, you have the option of using a qualified USB Type-C charger (purchased separately) that is also Power Delivery compliant to charge the computer in sleep or powered-off state. Lenovo branded USB Type-C chargers with the following listed maximum ratings are tested to work with the computer. Chargers of other brands with the same ratings should also work but are not thoroughly tested.

- 20 V, 3.25 A
- 20 V, 5 A
- 20 V, 6.75 A

The rear USB Type-C connector is not designed as the primary power input connector. When the computer is operating, the power supplied by the USB Type-C charger may be insufficient. As a result, the computer may not operate at its full capacity and the battery charging may stop or is very slow. Use the included ac power adapter whenever possible.

#### CAUTION:

**When purchasing third-party USB Type-C chargers for use with the computer, choose a product that is safety approved or certified. A disqualified charger may cause damage to your computer or pose an electrical hazard. In many countries and regions, manufacturers or importers of electric chargers can**

submit their products to a certification authority or approved and recognized testing laboratories. Such a product usually carries a mark if it was tested to pass relevant quality and safety standards. For some countries and regions, this certification process is even mandatory. If you live in mainland China, choose a charger with the “CCC” mark; for users in many European countries, choose one with the “CE” mark; for users in the United States and Canada, choose a Listed charger that carries a mark by one of the Nationally Recognized Testing Laboratories. (For example, the “UL Listed” mark). For people living in other countries and regions, consult a qualified electrical engineer for how to select a safety approved electric charger.

## Set power button behavior

By default, pressing the power button puts the computer to sleep mode. However, you can change the power button behavior in Windows Control Panel.

- Step 1. Type Control Panel in the Windows search box and then press Enter. Open the control panel and view by large or small icons.
- Step 2. Select the power options and then click choose what the power button does.

## A power plan

A power plan is a collection of power-saving settings made available by an operating system. With a power plan, you can set idle time-outs for different hardware components to enter a low-power state. The default power plan and some of its idle time-out settings are listed below for computer models pre-installed with Windows.

The listed settings are active when the computer is connected to an electrical outlet. If your computer include a built-in battery pack, a different collection of time-out settings is set to take effect when the computer is operating on battery power.

Power settings	82RF, 82S0	82RG, 82RY
Power plan	Balanced	Balanced
Turn off the display	After 10 minutes	After 10 minutes
Put the computer to sleep	After 30 minutes	After 10 minutes

**Note:** To wake the computer from the sleep state, press the power button or any key on the keyboard.

## Change or customize a power plan

This operation is applicable to computers with pre-installed Windows.

- Step 1. Type power plan in the Windows search box and then press Enter.
- Step 2. Customize a power plan of your preference.

## Set operation mode

Your computer can work in different operation modes. The performance and power consumption of the computer vary in different operation modes. Press **Fn + Q** to cycle through different operation modes.

**Note:** Performance mode is not available when your computer runs on battery power.

---

## Change settings in UEFI/BIOS setup utility

This section introduces what is UEFI/BIOS and the operations you can perform in its setup utility.

## What is UEFI/BIOS setup utility

UEFI/BIOS is the first program that runs when a computer starts. UEFI/BIOS initializes hardware components and loads the operating system and other programs. Your computer may include a setup program (setup utility) with which you can change certain UEFI/BIOS settings.

## Open the UEFI/BIOS setup utility

- Step 1. Turn on or restart the computer.
- Step 2. Press F2 repeatedly.
- Step 3. On the welcome screen, select **More Settings**.

## Enable or disable Fool Proof Fn Ctrl

- Step 1. Open the UEFI/BIOS setup utility.
- Step 2. Select **Configuration**.
- Step 3. Change the **Fool Proof Fn Ctrl** setting to **Enabled** or **Disabled**.
- Step 4. Select **Exit** → **Exit Saving Changes**.

When enabled, the Fn key and the Ctrl key can be used interchangeably for key combinations involving the **Ctrl** key. For example, you can press either **Ctrl + A** or **Fn + A** to select all text in a text editing application.

## Enable or disable always-on

For some Lenovo computers with always-on connectors, the always-on function can be enabled or disabled in the UEFI/BIOS setup utility.

- Step 1. Open the UEFI/BIOS setup utility.
- Step 2. Select **Configuration** → **Always On USB** and press Enter.
- Step 3. Change the setting to **Disabled** or **Enabled**.
- Step 4. Select **Exit** → **Exit Saving Changes**.

## Enable or disable Flip to Boot

When Flip to Boot is enabled, you can turn on the computer by flipping open the screen.

- Step 1. Open the UEFI/BIOS setup utility.
- Step 2. Select **Configuration**.
- Step 3. Change the setting for **Flip to Boot**.

**Note:** You may also set Flip to Boot in Lenovo Vantage or Lenovo PC Manager.

---

## Set passwords in UEFI/BIOS setup utility

This section introduces the types of passwords that you can set in the UEFI (Unified Extensible Firmware Interface) or BIOS (Basic Input/Output System) setup utility.

### Password types

You can set various types of passwords in the UEFI/BIOS setup utility.

Password type	Pre-requisite	Usage
Administrator password	No	You must enter it to start the setup utility.
User password	The administrator password must be set.	You can use the user password to start the setup utility.
Master hard disk password	No	You must enter it to start the operating system.
User hard disk password	The master hard disk password must be set.	You can use the user hard disk password to start the operating system.

#### Notes:

- All passwords set in the setup utility consist of alphanumeric characters only.
- If you start the setup utility using the user password, you can only change a few settings.

## Set administrator password

You set the administrator password to prevent unauthorized access to the UEFI/BIOS setup utility.

**Attention:** If you forget the administrator password, a Lenovo authorized service personnel cannot reset your password. You must take your computer to a Lenovo authorized service personnel to have the system board replaced. Proof of purchase is required and a fee will be charged for parts and service.

- Step 1. Open the UEFI/BIOS setup utility.
- Step 2. Select **Security → Set Administrator Password** and press Enter.
- Step 3. Enter a password string that contains only letters and numbers and then press Enter
- Step 4. Enter the password again and press Enter.
- Step 5. Select **Exit → Exit Saving Changes**.

Next time you start the computer, you must enter the administrator password to open the setup utility. If **Power on Password** is enabled, you must enter the administrator password or the user password to start the computer.

## Change or remove administrator password

Only the administrator can change or remove the administrator password.

- Step 1. Open the UEFI/BIOS setup utility using the administrator password.
- Step 2. Select **Security → Set Administrator Password** and press Enter.
- Step 3. Enter the current password.
- Step 4. In the **Enter New Password** text box, enter the new password.
- Step 5. In the **Confirm New Password** text box, enter the new password again.

**Note:** If you want to remove the password, press Enter in both text boxes without entering any character.

- Step 6. Select **Exit → Exit Saving Changes**.

If you remove the administrator password, the user password is also removed.



## Set user password

You must set the administrator password before you can set the user password.

The administrator of the setup utility might need to set a user password for use by others.

- Step 1. Open the UEFI/BIOS setup utility using the administrator password.
- Step 2. Select **Security** → **Set User Password** and press Enter.
- Step 3. Enter a password string that contains only letters and numbers and then press Enter. The user password must be different from the administrator password.
- Step 4. Enter the password again and press Enter.
- Step 5. Select **Exit** → **Exit Saving Changes**.

## Enable power-on password

If the administrator password has been set, you can enable power-on password to enforce greater security.

- Step 1. Open the UEFI/BIOS setup utility.
- Step 2. Select **Security** → **Power on Password** and press Enter.  
**Note:** The administrator password must be set in advance.
- Step 3. Change the setting to **Enabled**.
- Step 4. Select **Exit** → **Exit Saving Changes**.

If power-on password is enabled, a prompt appears on the screen every time you turn on the computer. You must enter the administrator or user password to start the computer.

## Set password for the secondary storage device

Permanent data is stored on secondary storage devices. Your computer may include one or more solid-state drive or hard disk drive as secondary storage device(s). You can set passwords for secondary storage devices in the setup utility to prevent unauthorized access to your data.

**Attention:** Be extremely careful when setting a hard disk password. If you forget the hard disk password, a Lenovo authorized service personnel cannot reset your password or recover data from the hard disk. You must take your computer to a Lenovo authorized service personnel to have the hard disk drive replaced. Proof of purchase is required and a fee will be charged for parts and service.

- Step 1. Open the UEFI/BIOS setup utility.
- Step 2. Select **Security** → **Set Hard Disk Password** and press Enter.  
**Note:** If your computer model includes more than one secondary storage device, you can set separate password for each device. If you start the setup utility using the user password, you cannot set hard disk password.
- Step 3. Follow on-screen instructions to set both master and user passwords.

**Note:** The master and user hard disk passwords must be set at the same time.

- Step 4. Select **Exit** → **Exit Saving Changes**.

If the hard disk password is set, you must provide the correct password to start the operating system.

## Change or remove hard disk password

- Step 1. Open the UEFI/BIOS setup utility.
- Step 2. Select **Security**.
- Step 3. Change or remove the hard disk password.

To change or remove master password, select **Change Master Password** and press Enter.

**Note:** If you remove the master hard disk password, the user hard disk password is also removed.

To change user password, select **Change User Password** and press Enter.

**Note:** The user hard disk password cannot be removed separately.

- Step 4. Select **Exit → Exit Saving Changes**.

---

## Chapter 4. Help and support

---

### Frequently asked questions

---

How do I partition my storage drive?	Refer to <a href="https://support.lenovo.com/solutions/ht503851">https://support.lenovo.com/solutions/ht503851</a>
What should I do if my computer stops responding.	Press and hold the power button until the computer turns off. Then restart the computer.  1. Carefully unplug the ac power adapter and turn off the computer immediately. The more quickly you stop the current from passing through the computer the more likely you will reduce damage from short circuits.  <b>Attention:</b> Although you might lose some data or work by turning off the computer immediately, leaving the computer on might make your computer unusable.  2. Wait until you are certain that all the liquid is dry before turning on your computer.  <b>CAUTION:</b> <b>Do not try to drain out the liquid by turning over the computer. If your computer has keyboard drainage holes on the bottom, the liquid will be drained out through the holes.</b>
What should I do if I spill liquid on the computer?	
Where can I get the latest device drivers and UEFI/BIOS?	<ul style="list-style-type: none"><li>• Lenovo Vantage or Lenovo PC Manager</li><li>• Lenovo Support Web site at <a href="https://support.lenovo.com">https://support.lenovo.com</a></li></ul>

---

### Self-help resources

Use the following self-help resources to learn more about the computer and troubleshoot problems.

Resources	How to access?
Troubleshooting and frequently asked questions	<ul style="list-style-type: none"><li>• <a href="https://www.lenovo.com/tips">https://www.lenovo.com/tips</a></li><li>• <a href="https://forums.lenovo.com">https://forums.lenovo.com</a></li></ul>
Accessibility information	<a href="https://www.lenovo.com/accessibility">https://www.lenovo.com/accessibility</a>
Reset or restore Windows	<ul style="list-style-type: none"><li>• Use Lenovo recovery options.<ol style="list-style-type: none"><li>1. Go to <a href="https://support.lenovo.com/HowToCreateLenovoRecovery">https://support.lenovo.com/HowToCreateLenovoRecovery</a>.</li><li>2. Follow the on-screen instructions.</li></ol></li><li>• Use Windows recovery options.<ol style="list-style-type: none"><li>1. Go to <a href="https://pcsupport.lenovo.com">https://pcsupport.lenovo.com</a>.</li><li>2. Detect your computer or manually select your computer model.</li><li>3. Click <b>Diagnostics</b> → <b>Operating System Diagnostics</b> and then follow the on-screen instructions.</li></ol></li></ul>

---

Resources	How to access?
<p>Use Lenovo Vantage or Lenovo PC Manager to:</p> <ul style="list-style-type: none"> <li>• Download and install the latest drivers and firmware.</li> <li>• Configure hardware settings</li> <li>• Diagnose computer hardware problems.</li> <li>• Check the computer warranty status.</li> </ul>	Use Windows Search.
<p>Product documentation:</p> <ul style="list-style-type: none"> <li>• <a href="#">Generic Safety and Compliance Notices</a></li> <li>• <i>Safety and Warranty Guide</i></li> <li>• <i>Setup Guide</i></li> <li>• This <i>User Guide</i></li> <li>• <i>Regulatory Notice</i></li> </ul>	<ol style="list-style-type: none"> <li>1. Go to <a href="https://support.lenovo.com">https://support.lenovo.com</a>.</li> <li>2. Detect your computer or select computer model manually.</li> <li>3. Select <b>Documentation</b> and filter out the documentation you want.</li> </ol>
<p>Lenovo Support Web site with the latest support information of the following:</p> <ul style="list-style-type: none"> <li>• Drivers and software</li> <li>• Diagnostic solutions</li> <li>• Product and service warranty</li> <li>• Product and parts details</li> <li>• Knowledge base and frequently asked questions</li> </ul>	Visit <a href="https://support.lenovo.com">https://support.lenovo.com</a>
Windows help information	<ul style="list-style-type: none"> <li>• Use <b>Get Help</b> or <b>Tips</b>.</li> <li>• Use Windows Search or the Cortana® personal assistant.</li> <li>• Microsoft support Web site: <a href="https://support.microsoft.com">https://support.microsoft.com</a></li> </ul>

## What is a CRU?

Customer replaceable units (CRUs) are parts that can be upgraded or replaced by the customer. A Lenovo computer may contain the following types of CRUs:

### Self-service CRU

Parts that can be installed or replaced easily by customer themselves or by trained service technicians at an additional cost.

### Optional-service CRU

Parts that can be installed or replaced by customers with a greater skill level. Trained service technicians can also provide service to install or replace the parts under the type of warranty designated for the customer's machine.

If you intend to install a CRU, Lenovo will ship the CRU to you. You might be required to return the defective part that is replaced by the CRU. When return is required: (1) return instructions, a prepaid shipping label, and a container will be included with the replacement CRU; and (2) you might be charged for the replacement CRU if Lenovo does not receive the defective CRU within thirty (30) days of your receipt of the replacement CRU. For full details, see the *Lenovo Limited Warranty* at [https://www.lenovo.com/warranty/llw\\_02](https://www.lenovo.com/warranty/llw_02).

---

## CRUs for your product model

The table below lists the CRUs and CRU types that are defined for your product model.

Part	Self-service CRU	Optional-service CRU
Power cord	X	
ac power adapter	X	

### Notes:

- CRU replacement instruction is provided in one or more of the following publications and are available from Lenovo at any time upon your request.
  - the product *User Guide*
  - the printed publications that came with the product
- Replacement of any parts not listed above, including the built-in rechargeable battery, must be done by a Lenovo-authorized repair facility or technician. Go to <https://support.lenovo.com/partnerlocation> for more information.

---

## Call Lenovo

If you have tried to correct the problem yourself and still need help, you can call Lenovo Customer Support Center.

## Before you contact Lenovo

Record product information and problem details before you contact Lenovo.

Product information	Problem symptoms and details
<ul style="list-style-type: none"><li>• Product name</li><li>• Machine type and serial number</li></ul>	<ul style="list-style-type: none"><li>• What is the problem? Is it continuous or intermittent?</li><li>• Any error message or error code?</li><li>• What operating system are you using? Which version?</li><li>• Which software applications were running at the time of the problem?</li><li>• Can the problem be reproduced? If so, how?</li></ul>

**Note:** The product name and serial number can usually be found on the bottom of the computer, either printed on a label or etched on the cover.

## Lenovo Customer Support Center

During the warranty period, you can call Lenovo Customer Support Center for help.

### Telephone numbers

For a list of the Lenovo Support phone numbers for your country or region, go to <https://pcsupport.lenovo.com/supportphonenumberlist>.

**Note:** Phone numbers are subject to change without notice. If the number for your country or region is not provided, contact your Lenovo reseller or Lenovo marketing representative.

### **Services available during the warranty period**

- Problem determination - Trained personnel are available to assist you with determining if you have a hardware problem and deciding what action is necessary to fix the problem.
- Lenovo hardware repair - If the problem is determined to be caused by Lenovo hardware under warranty, trained service personnel are available to provide the applicable level of service.
- Engineering change management - Occasionally, there might be changes that are required after a product has been sold. Lenovo or your reseller, if authorized by Lenovo, will make selected Engineering Changes (ECs) that apply to your hardware available.

### **Services not covered**

- Replacement or use of parts not manufactured for or by Lenovo or nonwarranted parts
- Identification of software problem sources
- Configuration of UEFI/BIOS as part of an installation or upgrade
- Changes, modifications, or upgrades to device drivers
- Installation and maintenance of network operating systems (NOS)
- Installation and maintenance of programs

For the terms and conditions of the Lenovo Limited Warranty that apply to your Lenovo hardware product, see “Warranty information” in the *Safety and Warranty Guide* that comes with your computer.

---

## **Purchase additional services**

During and after the warranty period, you can purchase additional services from Lenovo at <https://pcsupport.lenovo.com/warrantyupgrade>.

Service availability and service name might vary by country or region.

---

## Appendix A. Notices and trademarks

### Notices

Lenovo may not offer the products, services, or features discussed in this document in all countries. Consult your local Lenovo representative for information on the products and services currently available in your area. Any reference to a Lenovo product, program, or service is not intended to state or imply that only that Lenovo product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any Lenovo intellectual property right may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any other product, program, or service.

Lenovo may have patents or pending patent programs covering subject matter described in this document. The furnishing of this document does not give you any license to these patents. You can send license inquiries, in writing, to:

Lenovo (United States), Inc.  
8001 Development Drive  
Morrisville, NC 27560  
U.S.A.

Attention: Lenovo Director of Licensing

LENOVO PROVIDES THIS PUBLICATION "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some jurisdictions do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

Changes are made periodically to the information herein; these changes will be incorporated in new editions of the publication. To provide better service, Lenovo reserves the right to improve and/or modify the products and software programs described in the manuals included with your computer, and the content of the manual, at any time without additional notice.

The software interface and function and hardware configuration described in the manuals included with your computer might not match exactly the actual configuration of the computer that you purchase. For the configuration of the product, refer to the related contract (if any) or product packing list, or consult the distributor for the product sales. Lenovo may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

The products described in this document are not intended for use in implantation or other life support applications where malfunction may result in injury or death to persons. The information contained in this document does not affect or change Lenovo product specifications or warranties. Nothing in this document shall operate as an express or implied license or indemnity under the intellectual property rights of Lenovo or third parties. All information contained in this document was obtained in specific environments and is presented as an illustration. The result obtained in other operating environments may vary.

Lenovo may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Any references in this publication to non-Lenovo Web sites are provided for convenience only and do not in any manner serve as an endorsement of those Web sites. The materials at those Web sites are not part of the materials for this Lenovo product, and use of those Web sites is at your own risk.

Any performance data contained herein was determined in a controlled environment. Therefore, the result obtained in other operating environments may vary significantly. Some measurements may have been made on development-level systems and there is no guarantee that these measurements will be the same on generally available systems. Furthermore, some measurements may have been estimated through extrapolation. Actual results may vary. Users of this document should verify the applicable data for their specific environment.

This document is copyrighted by Lenovo and is not covered by any open source license, including any Linux agreement(s) which may accompany software included with this product. Lenovo may update this document at any time without notice.

For the latest information or any questions or comments, contact or visit the Lenovo Web site:

<https://support.lenovo.com>

### **Trademarks**

Lenovo, the Lenovo logo and Lenovo Legion are trademarks of Lenovo. Thunderbolt is a trademark of Intel Corporation or its subsidiaries. Microsoft, Windows, and Cortana are trademarks of the Microsoft group of companies. DisplayPort is a trademark of the Video Electronics Standards Association. The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries. Wi-Fi is a registered trademark of Wi-Fi Alliance. USB Type-C and USB4 are registered trademarks of USB Implementers Forum. All other trademarks are the property of their respective owners.