



RESOUND 2

15W Portable Bluetooth Speaker

USER MANUAL


Package Contents :

- Wireless Speaker
- Charging Cable
- User Manual

Product Features :

- 2.0CH Portable Bluetooth speaker
- Water resistant IPX5, perfect for beach, poolside, boat and more outdoor activities
- With A2DP Bluetooth, wireless stream music from any Bluetooth-enabled device
- TWS function, achieve true wireless playing with double enhanced stereo sound
- Hands-free Mic for easy picking up the call
- USB Flash drive support
- Three modes of RGB Lighting
- Line-in function, suitable for PC, MID, TV and other audio devices
- Built-in lithium rechargeable battery 2000mAh

Product Details :

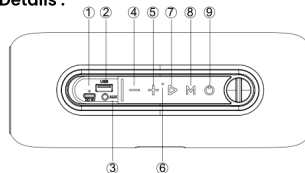

- ① Type-C Charging Jack
- ② USB Port
- ③ AUX Port
- ④ Backward/Volume Down
- ⑤ Forward/Volume Up
- ⑥ Mic. Hole
- ⑦ Play/Pause
- ⑧ Mode Button
- ⑨ Power Button

Specifications :

- Bluetooth version : V5.0
- Sound output : 15W
- Battery Capacity : 3.7V, 2000mAh
- Play time : Upto 5 hours
- Frequency Response : 80HZ-16KHZ
- Bluetooth range : 10m
- Product size : 242(L)*92(W)*92(H)MM

Bluetooth Mode :

Power Button : Long-press for Power On/Off.

Activate Bluetooth of mobile phone and pair with the Resound 2.

Mode Button : Short-press to switch the function modes, Long-press to pair or disconnect TWS.

Play/Pause : Short-press to play or pause, Long-press to turn the three different light modes and turn it on/off.

Backward/Volume Down : Short-press for volume down, Long-press for last song.

Forward/Volume Up : Short-press for volume up, Long-press for next song.

Short-press **Backward and Forward** Button at the same time to disconnect Bluetooth connection.

TWS Mode :

Turn on 2 identical speakers, both under BT mode. Select one speaker and Long-press Mode button to pair TWS, the speaker will make a tone to start to pair, and there will be a prompt tone again after paired successfully.

Connect the paired speaker with your phone via Bluetooth and play wirelessly. Long-press Mode button again to disconnect TWS.

AUX-IN Mode :

Power Button : Long-press for Power On/Off.

Mode Button : Short-press to switch the function modes.

Play/Pause : Short-press to mute the speaker, Long-press to turn the three different light modes and turn it on/off.

Volume Down : Short-press for volume down, Long-press no function.

Volume Up : Short-press for volume up, Long-press no function.

Hands-free Call :

- Under Bluetooth connection status, if there is an incoming call, user can short-press Play/Pause button to accept the call or long-press Play/Pause button to reject the call.
- During the call, user can long-press Play/Pause button to switch to talking on the phone.
- Short-press Play/Pause button to end the call.

Reset Functionality:

If the speaker does not turn off or respond, user can short-press the RESET button in Aux Port with a small round pin.

How to charge :

- The charger is not included in the package, please charge this speaker via a standard 5V/1-3A charger or via a PC.
- Charge time should be 4 hours.
- To protect the battery, please do not use the speaker while it is charging.

DOS AND DON'TS

To ensure safe operations for your speaker, please follow these rules:

1. Always place the speaker in a safe location.
2. Avoid excessive pressure on either equipment.
3. When not in use, switch off the speaker and unplug them from the power source.
4. If the product is defective, kindly do not attempt to fix it yourself. We recommended professional help.
5. Keep the product away from water, to avoid internal damage.

www.portronics.com

For Support

Visit : www.portronics.com

Email : help@portronics.com

Contact No. : +91 9555245245, 011-42413131

(Working Hrs. : Monday - Saturday 10:00am - 6:00pm)



For E-waste & ROHS compliance refer to <http://www.portronics.com/ewaste.html>