

boat

NIRVANA ION





PACKAGE CONTAINS:

- 1x Pair of TWS Earbuds
- ⊕x2 _ 0× 0× ____ x1 ____ x1



1x User Manual
 1x Warranty Card
 1x Catalogue
 1x FAQ Card

POWER ON (FIRST TIME USER)

Step 1: To with the activuts on (Climart Power On) simply open the lid of the charging case (when earbuds are incide). Our IMPP" (Incita Wales N° Pair) Tachnology enables the serbuds to power on automaticity, get connected and enter the connection mode Step 2: Both the aeruds automatically pair with each other. The earbuds enter the Connection Mode, indicated slow breathing white LED on the master earbud.

Step 3: Turn on the Bluetooth functionality on your phone/media device & scan Step 4: Search for 'Nirvana Ion' and pair accordingly.

Congratulations! Your earbuds are now connected successfully via Bluetooth

Bluefooth ON

- Paining induct class to Warmington under paining time is missed, then you will need to reconnect the earbuds and follow the above-mentioned procedure. - Subsequent Usage: Nirvana lon remembers previously connected devices; once switched on, the earbuds automatica.

econnect to the previously connected



SINGLE FARRUD USAGE

SINGLE EARBUD USAGE

Step 1: Please note that both the earbuds can be used in mono mode. Use Smart / Manual Power On for switching on the desired earbud. It step 2: The safetted earbud surforatically where the connection mode step 3: Turn on Bilaetooth on your phone/media device and search for "Nivrane lon' to connect."

Notes:

To switch to Stereo mode, simply take out the other earbud from the case, it will automatically power on and pair with the previously selected earbud, hence enabling Stereo usage.

You cannot skip tracks or return to the previous tracks in Mono mode.



CHARGING THE EARBUDS

Step 1: Plaze insert the earbuds back inside the charging case in correct orientation and close the case lid Step 2: Once the earbuds are fully charged, the charging case automatically switches off to save power.

LED INDICATORS

Item	(Charging State)
Earbuds Charging	LED stays white
Earbuds - Fully Charged	LED stays OFF

CASE LED INDICATION: EARBUDS REMAINING BATTERY

When earbud's battery is <55%, the charging case LED thrws red for 5 seconds whenever the arbude should not be found in the thing should be seconds whenever the arbude should not be seconds whenever the seconds are taken out or put into the case.

When earbud's battery is <70%, the charging case LED throw green for 5 seconds whenever the sectious are taken out or put into the case.

CHARGING THE CASE

Step: To charge the case, plug one end of the provided cable into the case and connect the other end to a computer/ well adapter/ powerbank, etc.

REMAINING CASE BATTERY INDICATOR

- (when earboids are outside the case and the case-lid gets opened):

 If the battery x29%, red LED flashes 3 times
 If the battery x39%, red LED flashes 3 times
 If the battery 30%-70%, white LED flashes 3 times
 If the battery 30%-70%, white fleD flashes 3 times
 If the battery 30% (lit) charged, the case LED stays solid green for 5 seconds

BASIC FUNCTIONS

BASIC FUNCTIONS

Voice Assistant: Tap the right earbud's touch control 4 times to activate default voice assistant.

Voice Assistant: Tap the right earbud's touch control 4 times to activate and the rest of the

OR

Single tap on either earbud's CTC to play or pause music

Next Track: When playing music, double tap the right earbud's touch
control to skip to the next cong.

Previous Track: When playing music, double tap the left earbud's touch
control to return to the previous song.

Volume Up. 3 tap con right earbud increases volume by 25%.

Volume Track: Tap con right earbud decreases volume by 25%.

by default.

You can thoose either of the two EQ modes, i.e., Bass mode for bash-heavy sound whereas Balanced mode for a more balanced auditory experience. Simply long touch the left earbud's touch control for 2 seconds to change the EQ mode.

BEAST™ MODE

BEAST** MODE

Long touch the right earbuid's touch control for 2 seonds to switch to Low
Latency mode also known as the BEAST** Mode. Made for the Gamer: e. BCAST*
Gamers; BEAST** Mode reduces the latency significantly and improves the
overall gaming experience. With BEAST** mode, the earbuids activate low
latency mode especially made for gaming.

ENx™ TECH

SMADT DOWED OFF

Step 1: After usage, remove both the earbuds from your ears Step 2: Place the earbuds back into the charging case in correct orientation and step the sear list.

close the case lid Step 3: The earbuds will automatically switch off (and enter charging mode)

EACTORY RESET

Perform the Factory Reset in case you face any difficulty while operating your Nirvana Ion

'NOTE: Before performing reset, clear "Nirvana ion" from pairing device history by forgetting device.

Step 1: Place the earbuds inside the case
Step 2: While the earbuds are inside the case, long press the Reset button
located outside the case for loceconds, until the LED flashes 5 times on the
earbuds as well as the case
Step 3: Close the case lift, well for 5 seconds and then reopen it again.

Congratulations! Your Nirvana Ion has been Reset, now you may perform a fresh pairing procedure to establish connection.



· Please follow the instructions to operate · Please don't use the earbuds in extreme temperatures

Please don't use the earous in extreme temperatures
Please don't use the product near water
Please keep the product away from heat sources, as the heat may damage it
Don't jam the ports such as charger port, LED port, etc.
It is recommended to utilize the product below the maximum volume in

order to protect hearing and extend the ear-buds' service life

Advisable: The earbuds start at a 100% volume and it may need to be reduced when the earbuds are switched on at first.

TROUBLESHOOTING

Potential Problem	Solution
If one earbud is not working	Perform the Factory Reset
If earbuds are not in connection /scan mode	Perform the Factory Reset
If earbuds disconnect during	Charge the earbuds or perform the
phone call	Factory Reset
If there are other exceptions in	Place the earbuds back into the charging
usage	case and try using them again or perform
	the Factory Reset
If the Touch Controls don't	After long usage, residual stains & perspiration
seem to respond	can affect the touch control area, please use a
	clean cloth to wipe those areas softly

Bluetooth Version	V5.2
Water Resistance	IPX4
	Yes
Music Playtime	24H (Earbuds); About 96H (Case);
ASAP Charge	Yes
No. of Mics	2 per Earbud (4x)
BEAST Mode™	Yes
Low Latency	60ms
Transmission Range	10m
Driver Size	10mm*2
Frequency	20Hz-20kHz
Battery	70mAh*2 (Earbuds) 600mAh (Case)
Charging Time	1H Earbuds; 2.5H Case
Standby Time	200Н
Weight	4.9g*2 Earbuds; 45.5g Case
Charging Interface	Type C

