




Jazz Pro- 2.1 Channel Soundbar



User Manual

Important Safety Instructions

 **WARNING:** To reduce the risk of electric shock, do not dismantle the product and do not expose the product to rain or moisture. No user-serviceable parts inside. Refer servicing to qualified personnel only.

1. Read the user manual before use. Keep all instructions for future reference
2. Always operate the product from a power source of the same voltage, frequency and rating as indicated on the rating label.
3. This product is intended for indoor, household use only.
4. To protect against electric shock: do not immerse unit, plug or cord in water or spray with liquids; do not place unit on windowsills or other places where it may be exposed to dripping or splashing of water; do not place vases or similar objects filled with liquids near the unit.
5. Do not use this product in the immediate vicinity of water such as bathtubs, washbowls, swimming pools etc. where the likelihood of immersion or splashing occur.
6. Keep the unit away from heat sources like radiators, heat registers, stoves or other products that produce heat. No open flame sources like candles should be placed on the unit.
7. Use only with attachments/accessories specified by the manufacturer. Use of attachments/accessories not recommended can be hazardous.
8. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
9. This product is not a toy! Children should be supervised to ensure that they do not play with the appliance.
10. Do not cover the unit during use. Do not impede ventilation by covering ventilation openings with cloths, curtains or similar items.
11. Do not operate the product with a damaged cord or plug or if the product malfunctions, or is dropped or damaged in any manner.
12. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid hazard.
13. For safety reasons, do not remove any covers or attempt to access the inside of the product.
14. Do not clean the unit with any harsh chemicals as this might damage the finish. Wipe clean with a dry cloth.
15. When removing the power plug from the wall outlet, always pull directly on the plug; never pull on the cord.
16. Do not expose the batteries to excessive heat, direct sunlight, fire or similar.
17. Do not throw used batteries in your household rubbish. Dispose of it responsibly according to your local authority guidelines.

Remote Control Description

Using the remote control:

1. POWER

Press this button to power on or power off.

2. MODE

Press this button to switch the mode within Bluetooth, USB, Aux-in, HD-in (ARC-in) and Optical-in.

3. VOL+

Press VOL+ to up the volume of the soundbar

4. I◀◀

Under Bluetooth and USB mode, press this button will go to previous song.

5. MOVIE

Press this button will enter MOVIE mode sound effect.

6. PAIR

Under Bluetooth mode, press this button will disconnect the connection between soundbar and sound sourcing device (such as your mobile phone), press this button will reconnect the previous sourcing device again.

7. RESET

Press this button will resume the factory sound setting.

8. MUTE

Under work mode, press this button to turn off sound of soundbar, press it again to turn on the sound.

9. ▶||

 
When playing music, press this button to pause playing, and repress to play continue

10. ▶▶I

Under Bluetooth and USB mode, press this button will go to next song.

11. VOL-

Press VOL- to down the volume of the soundbar.

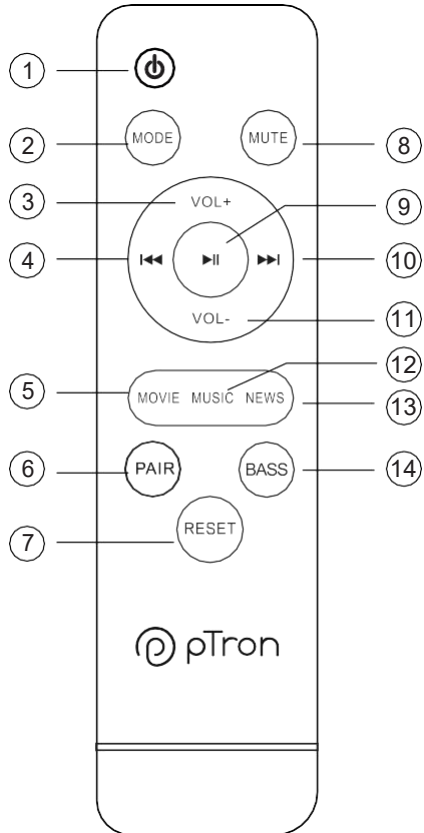

12. MUSIC

Press this button will enter MUSIC mode sound effect.

13. NEWS

 
Press this button will enter NEWS mode sound effect.

14. BASS

Press the BASS key, and then press volume up or volume down to adjust the amplitude of the bass.

Front/Back panels

FRONT



1. POWER/MODE

Long press this button to power on or power off
Short press this button to change mode

2. +

 
Press + to up the
increase the volume of the
soundbar

3. —

Press — to decrease the volume of the soundbar.

4. AUX

After switching on the soundbar, change to AUX input mode. Plug in the 3.5mm AUX cable to the AUX IN connector on the soundbar and start playing from the music device

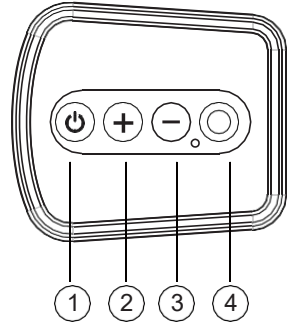

BACK

 


1. USB

2. HD/ARC

3. OPTICAL

4. SW. OUT

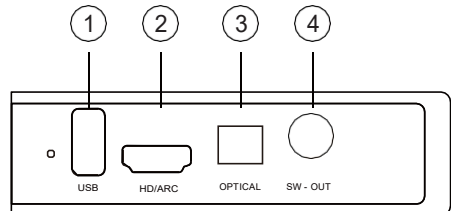


Connection schematic

Connecting the soundbar to the TV


1. Connect the subwoofer to the SW-OUT port of the soundbar.
2. Connect the soundbar to your TV using the HDMI ARC (Audio Return Channel), optical audio cable, or Bluetooth, depending on the model and your TV's capabilities.

 Note: Alternatively, you can use the AUX cable (included) to connect the 'AUX-IN' port on the soundbar to the Auxiliary out or the Headphone jack on the TV.

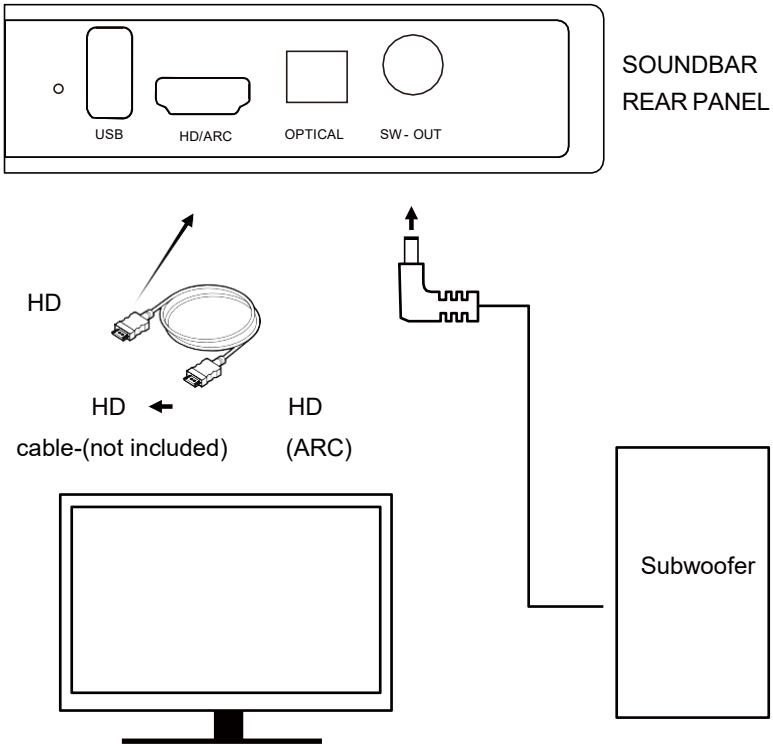

Connecting the soundbar to other devices

 1. Plug one end of the optical cable into the optical output port of devices (blu-ray/DVD player, gaming consoles) and insert the other end of the optical cable into the optical input port on your soundbar.
2. Other audio sources: Connect with Bluetooth/AUX-IN.

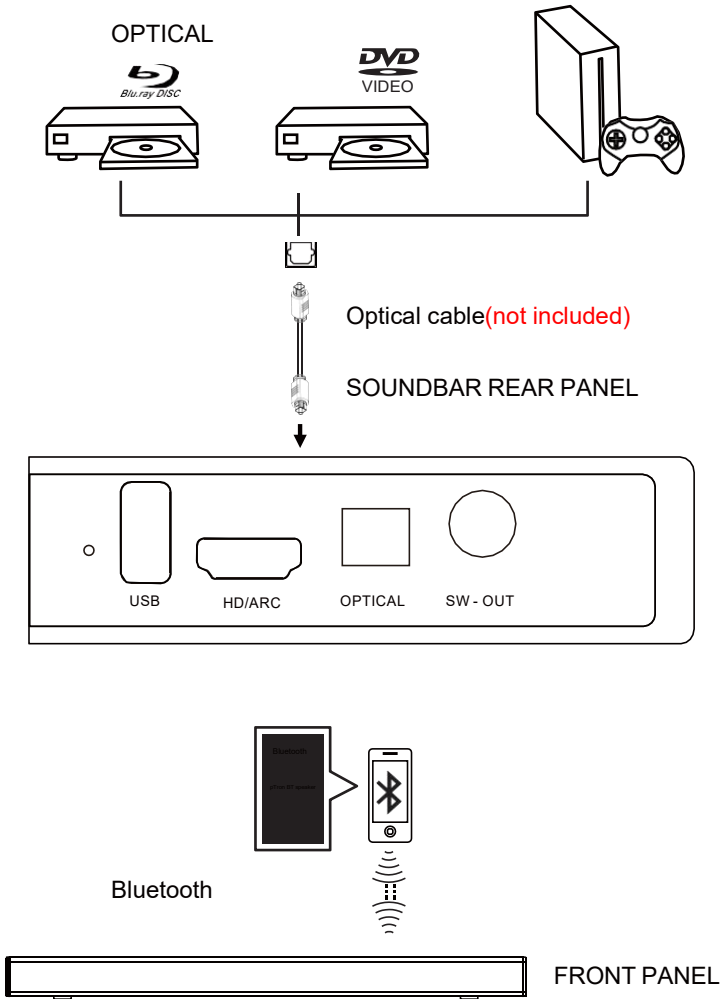

Operating Instructions:

Connect the sound bar power plug to the AC power socket, and then press the power key of the soundbar. The display glows with a prompt voice, which means that it has successfully powered on. Long-press the Power/Mode button on the side panel or the Mode key on the remote control to choose the required mode.

Bluetooth connection:

1. Press the 'MODE' button repeatedly until Blue-Connect Mode is selected.
Display shows 'BL'
2. On your Bluetooth-enabled device chose 'pTron BT Speaker' the name of the soundbar. The display blinks indicating that it is waiting for pairing, once pairing is successful, the indicator remains on, display shows 'BL' and stop flashing.
3. Now you can play music from your Bluetooth-enabled device on the sound bar.
Press the ◀◀ or ▶▶ button on the remote control to play the previous or next song.

Aux Input

If using the Aux cable connect the Speaker to audio equipment, select 'AU' by using the Mode key on the remote control or the Power/Mode key on the side panel. 'AU' will be displayed on the display accompanied by 'AUX' voice prompt.

HD/ARC Input

 
If using HDMI cable connect Speaker to audio equipment, through the mode button on the remote control or the Power/Mode key on the side plate to select 'HD', screen displays 'HD' accompanied by 'HD' voice prompt.

OPTICAL Input

If using OPTICAL cable to connect speaker, through the mode button on the remote control or the Power/Mode key on the side plate to select 'OPTICAL', screen displays 'OPTICAL' accompanied by 'OPTICAL' prompt.

Connection schematic

RECOMMENDED PLACEMENT

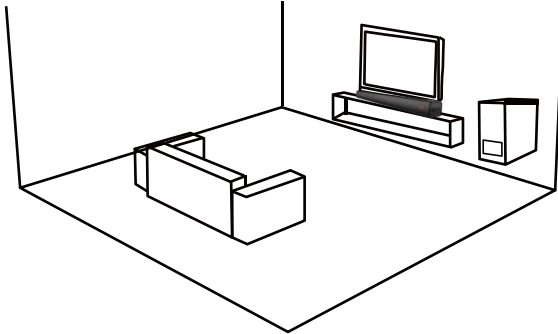

Soundbar: Under the TV (if wall-mounted) / in front of the TV

Subwoofer: On the floor, near the TV (or in the front corner of the room)

Packing Box Content

1 Sound Bar Speaker, 1 Subwoofer, 1 Remote, 1 Aux cable, 1 User Manual/Warranty QR Card

What is Covered in Warranty?

- ✓ Manufacturing defects in materials and workmanship of the product ONLY. This warranty applies when the product is used under normal conditions and the purpose for which the product was designed.
- ✓ No warranty on product accessories such as remote, Aux cable.
- ✓ To avail warranty, Product Registration is Mandatory at <https://ptron.in/apps/product-registration>
- ✓ Please read through the complete warranty details at <https://ptron.in/pages/repair-service-warranty>

Customer Care Details:

Mail: support@ptron.in

Tel: 040 - 67138888

Service Centers List: <https://ptron.in/pages/ptron-service-centers>

Disclaimer: The color and specifications shown in or mentioned in the user manual may differ from the actual product. Images shown are for representation purposes only. Other product logos and company names mentioned herein may be trademarks or trade names of their respective owners.