



## Fusion Concert Bluetooth Soundbar - User Guide



**Important:** The pTron "Fusion Concert" Bluetooth soundbar is set at 60% default volume. You can increase the volume through the control panel on the speaker.



### **POWER ON & PAIRING: -**

- i. **POWER ON:** Power on the speaker by sliding the power button towards the right, Speaker led light will be turn on and also speaker will respond with a voice prompt.
- ii. Open the Bluetooth function on your device and search for the available Bluetooth.
- iii. Click on "pT Soundbar" to connect
- iv. **POWER OFF:** Power off the speaker by sliding the power button towards the Left.

### **Bluetooth Mode: -**

**Bluetooth Version:** Bluetooth 5.3

Bluetooth pairing name: "pT Soundbar"

Just Turn on the Speaker. It will Automatically Connect to the Last Connected Device.

**Note:** The last connected device must be within 10 meters of the speaker and the Bluetooth function must be turned on.

### **AUX Mode**

- i. Connect the device with the 3.5mm aux cable and the speaker will enter into the AUX mode with voice prompts.


### **TF/USB Mode**

- i. **Use TF Card:** Insert a TF card into the TF slot to activate the TF card mode
- ii. **Use a USB drive:** Insert a USB stick or pen drive into the slot to activate the USB drive mode.

**Note:** This speaker can support TF/USB up to 32GB.

### **TO CHARGE THE SPEAKER: -**

- i. Connect the USB type-C cable to the speaker charging port and the other end of the cable to a USB 5V/1A power source.
- ii. The charging led light will continuously glow during the charging. The charging LED light will turn off when the speaker is fully charged.

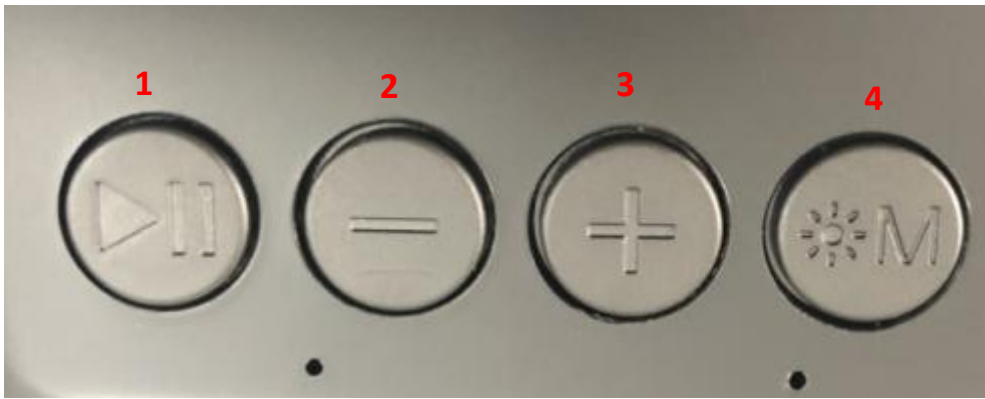

### **1. Play/Pause Button:**

1. Press one time to play or pause music
2. Press two times to redial the last calling number
3. Long press for TWS mode

### **2. Minus Button:**

1. One time press the button for previous song
2. Long press to decrease the volume

### **3. Plus Button:**

1. One time press the plus button for next song
2. Long press to increase the volume.

### **4. Mode Button:**

1. If a TF card/USB drive is already plugged into the speaker but you want to play a song via Bluetooth then just press the Mode button to enable playback thru Bluetooth connected device. To switch back to playback from TF card/USB drive, just press the Mode button again.
2. Single press the button to change mode. Long press for LED light changes & LED off.

**FM mode:** Press one time mode button "M" to change the Bluetooth mode to FM mode.

**FM search:** In FM mode, press & hold down Play/Pause button for 2s to automatically search for channels

**Next Station:** One time press the " + " button.

**Previous Station:** One time press the " - " button.

**Note:** *The charging cable works as an FM antenna in FM mode, so it is mandatory to connect the charging cable in FM mode.*






**LED lights:** This speaker comes with 10 different LED light modes; you can customize the lights for perfect vibes.

1. **Change the Led light mode:** You can change the LED light by long pressing (2sec) the Mode "M" button.

2. **Turn off these lights:** Press & hold (2 sec) ten times mode "M" button to turn off the LED lights.

## How to establish a TWS connection?

1. Turn on both the devices, speaker in proximity of each other within 1m distance.
2. Select one of the devices and long-press the "  " button. Both devices will pair with each other, and the speaker will respond with a voice prompt.
3. In your phone, search for " pT Soundbar" and click on the same. Once the connection has been established the two devices can play music simultaneously.
4. To disconnect TWS, kindly press the play/pause "  " button.
5. Wish to establish a TWS connection again- Switch the mode back to Bluetooth Mode, then long press the "  " button. Both speakers will connect automatically.

### Troubleshooting Scenario 1: Connectivity Issue

1. Turn OFF the Speaker and charge 100%.
2. UN-pair with the connected Bluetooth device.
3. Restart the Bluetooth device.
4. After 100% charging switch ON the speaker and pair it with the Bluetooth device again.

### Troubleshooting Scenario 2: Sound is distorted/low volume/low bass/low quality?

1. Check if the connected device does not have any equalizer settings applied.
2. Check if the problem still occurs if the device is moved closer and all obstacles in the middle are removed.
3. Check if the distortion or quality lowers at all volumes or only at high volumes.
4. Check the sound on different media players and different devices and if the distortion happens on all devices or only on specific ones.
5. Check if the problem occurs at all levels of charging or only at low charging levels.
6. Check if the speaker does not have water droplets, in case they do, use the blow dryer to dry out any water from a distance.

### Safety Precautions

- Keep the device out of extreme heat and humidity or corrosive environment.
- Play time may vary depending on personal habits.
- Using incompatible USB cable or high voltage chargers can damage the product & void the product warranty. We strongly recommend using a good quality DC5V-1A chargers & the USB cable included in the package.
- Please don't over-charge the product as it will decrease the service life of battery.
- Read all warnings on the product and in the operating instructions.
- Don't jam the ports such as charger port, LED port, etc.
- It is recommended to utilize the product below the maximum volume in order to protect your hearing.
- Please don't open/temper the product or product's battery.
- Please keep the product out of children's reach.
- Dispose the product responsibly and adhere to your local authority guidelines.

### Packing Box Content

1 Sound Bar Speaker, 1 USB Type-C charging cable, 1 Aux cable, 1 User Manual/Warranty QR Card

### What is Covered in Warranty?

- ✓ Manufacturing defects in materials and workmanship of the product ONLY. This warranty applies when the product is used under normal conditions and the purpose for which the product was designed.
- ✓ No warranty on product accessories such as charging USB cables, Aux cable.
- ✓ To avail warranty, Product Registration is Mandatory at <https://ptron.in/apps/product-registration>
- ✓ Please read through the complete warranty details at <https://ptron.in/pages/repair-service-warranty>

### Customer Care Details:

**Mail:** support@ptron.in

**Tel:** 040 - 67138888

**Service Centers List:** <https://ptron.in/pages/ptron-service-centers>

**Disclaimer:** The color and specifications shown in or mentioned in the user manual may differ from the actual product. Images shown are for representation purposes only. Other product logos and company names mentioned herein may be trademarks or trade names of their respective owners.