



 
PURE SOUND 105

200W Bluetooth Soundbar with Wired Subwoofer

Package Contents

1. Soundbar 1N
2. Wired Subwoofer 1N
3. Remote Control 1N
4. User Manual 1N
5. Audio Cable 1N

Remote Control

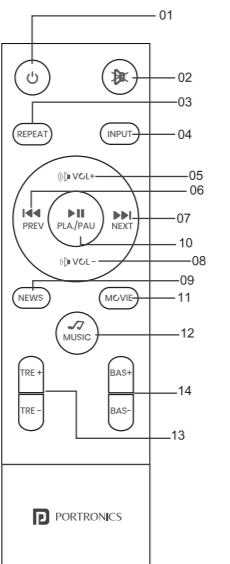


- 01- **Power Button**- When the device is in off mode, a single press of this key will initiate the On Mode. Conversely, when the device is in the On Mode, a single press of this key will power it down into off Mode
- 02- **Mute** - In any operational mode, press this key once to toggle the 'mute' function on or off for the system.
- 03- **Repeat** - For USB or SD card playback, press the button once to repeat the current song, and press it again to enable sequential playback of all songs in order.
- 04- **Input** - Pressing this button will toggle between multiple modes, including Bluetooth, Aux, SD Card, USB Flash Drive, Optical in and HDMI modes.
- 05- **Volume Increase**- A single press of the button will increase the volume.
- 06- **Previous Track** - When Operating in USB, SD, or Bluetooth Mode, a single press of this key activates the 'last song' function. Please note that this function is not applicable in other modes.
- 07- **Next Track** - When operating in USB, SD, or Bluetooth mode, a single press of this key will activate the 'next song' function. Please note that this function is not available in other modes.
- 08- **Volume Decrease** - A single press of the button will Decrease the volume.
- 09- **News Mode** - A single press of this key will activate the DSP 1 sound mode, specifically the news mode

- 10- **Play/Pause** - When in USB, SD, or Bluetooth mode, a single press of this key will play or pause the current audio. In Bluetooth mode, a long press of the 'Play/Pause' button will disconnect.
- 11- **Movie Mode** - A single press of this key will activate the DSP 3 sound mode, specifically the Movie mode
- 12- **Music Mode** - A single press of this key will activate the DSP 2 sound mode, specifically the Music mode
- 13- **Treble Button**- Pressing "Tre+" will raise the treble, while pressing "Tre-" will lower the treble setting.
- 14- **Bass Button** - Pressing "Bas+" will raise the Bass, while pressing "Bas-" will lower the bass setting.

Remark :

1. Do not expose the apparatus to high temperature, weather, moisture.
2. Do not attempt to disassemble the product to avoid electric shock only professional should perform service.
3. Please turn off the power and pull out the plug when you do not use this product.

 Control Panel Diagram :

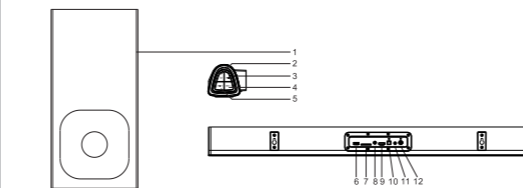

- (1) Subwoofer
- (2) MODE
- (3) Play/Pause
- (4) VOL-/Last Music
- (5) VOL+/Next Music
- (6) USB Input
- (7) SD Card Slot
- (8) AUX IN
- (9) H-ARC
- (10) Optical
- (11) DC in
- (12) BASS Out

SPEAKERS

	SATELLITE SPEAKER	SUBWOOFER
Driver Size	2inch x4	6.5inch
Impedance	8Ω	4Ω
Frequency Range	40Hz-20KHz	40Hz-150Hz

AMPLIFIERS

Channel Separation	45db
Signal to Noise Ratio	75db
Power Requirements	
Voltage	AC100-240V~(DC24V 4.0A)
Frequency	50/60Hz

 
AC POWER

IMPORTANT NOTES


- Make sure the power supply is proper and never handle the power cord or its plug with wet hands when plugging into, or unplugging from an outlet.
- Ensure that the main power switch is in the "OFF" position before connecting the AC power cord to the power supply to avoid damage to the unit.
A damaged power cord can easily cause an electric shock or fire hazard; Never use a power cord after it has been damaged.

Battery Installation

- Open the battery flap
- Insert one battery without the polarity reversed.
- Close the battery flap
- Keep within 5 meter range, 30 degree angle while aiming at the unit.
Precautionary note:
Remove the battery when the unit is not being used for a long period of time.

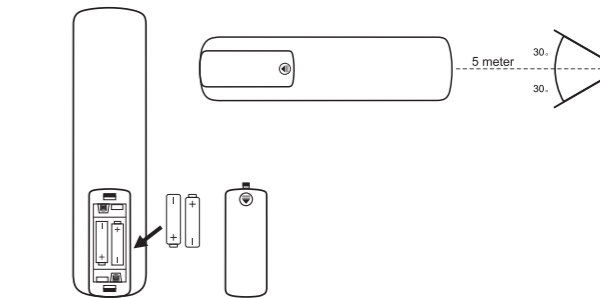

Back Panel Connection Diagram :

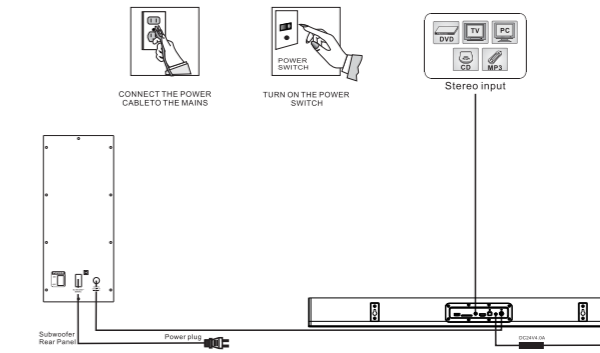 

www.portronics.com

For Support

Visit : www.portronics.com

Email: help@portronics.com

Contact No. : +91 9555245245 , 011-42413131

(Working Hrs. : Monday - Saturday 10:00am - 6:00pm)



For E-waste & ROHS compliance refer to <http://www.portronics.com/ewaste.html>