 


# SONY®

## Television

 
### Reference Guide

K-65S26 / 65S26B / 65S25 / 65S25B / 55S26  
 K-55S26B / 55S25 / 55S25B / 50S26 / 50S25  
 K-50S21 / 50S21B / 50S20 / 50S20B / 43S26  
 K-43S25 / 43S21 / 43S21B / 43S20 / 43S20B

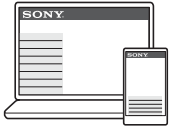


[https://rd1.sony.net/help/tv/lgar1/h\\_ga/](https://rd1.sony.net/help/tv/lgar1/h_ga/)

5-058-401-01(1)

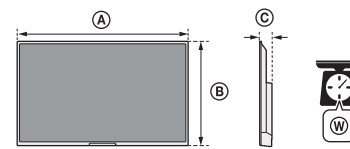


	(mm)*1			(kg)*1
	A	B	C	W
K-65S26 / 65S26B / 65S25 / 65S25B	1463	852	87	21.4
K-55S26 / 55S26B / 55S25 / 55S25B	1243	729	84	13.9
K-50S26 / 50S25 / 50S21 / 50S21B / 50S20 / 50S20B	1127	662	77	9.8
K-43S26 / 43S25 / 43S21 / 43S21B / 43S20 / 43S20B	971	575	77	7.8

 \*1 (Approx.)


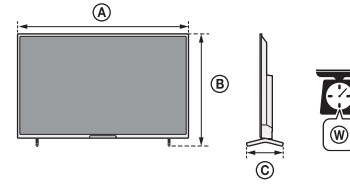


	(mm)*1			(kg)*1
	A	B	C	W
K-65S26 / 65S26B / 65S25 / 65S25B	1463	914	337	22.1
K-55S26 / 55S26B / 55S25 / 55S25B	1243	790	291	14.5
K-50S26 / 50S25 / 50S21 / 50S21B / 50S20 / 50S20B	1127	729	259	10.0
K-43S26 / 43S25 / 43S21 / 43S21B / 43S20 / 43S20B	971	643	259	8.0

 \*1 (Approx.)

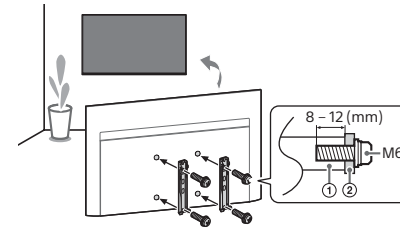

  - ① Wall-Mount Attachment
- ② Wall-Mount Bracket

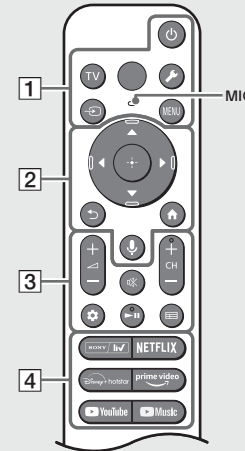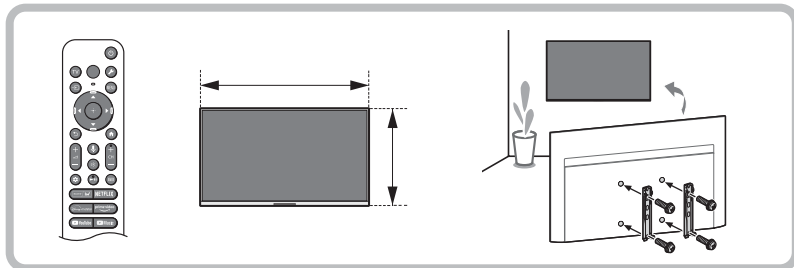

The remote control shape, layout, availability and function of remote control buttons may vary depending on your region/country/TV model/TV settings.

- 1 **⏻ (Power)**  
**TV:** Display TV channel list or switch to input.  
**⚙️ (Quick settings):** Display Quick Settings.  
**➡️ (Input select):** Display and select the input source, etc.  
**MENU (Control menu):** Display the Control menu.
- 2 **▲ / ▼ / ◀️ / ▶️ / ⏪ / ⏩:** On screen menu navigation and selection.  
**⏪ (Back)**  
**🏠 (Home)**  
**🗣️ (Google Assistant / Microphone):** Use Google Assistant\*\* or voice search\*\*.
- 3 **🔊 + / - (Volume)**  
**🔇 (Mute)\*3**  
**CH + / - (Channel)**  
**⚙️ (Dashboard):** Display Dashboard.  
**⏸️ (Pause)**  
**📺 (Guide):** Display the digital programme guide of TV or TV box\*\*.
- 4 **App buttons**

- \*1 Only for limited region/country/model/language.
- \*\*2 Google Assistant or voice search requires an Internet connection.
- \*\*3 Accessibility shortcut is available by pressing and holding 🔇 (Mute).
- \*\*4 [TV box setup] setting is required.

## About Manuals

Please retain the manuals for future reference.

### Paper manual

Setup Guide (on top of the product) / Reference Guide (this manual) / Safety and Other Information.


### Help Guide (On screen Manual)

- To open it, select [Settings] → [Help and feedback] → [Help] or select [Help] in the Home Menu, if [Help] does not exist, select [See all] → [Help].
- You can refer to the Help Guide with your smartphone (visit website provided on the front cover of Reference Guide).

Read and understand the contents of this manual before operating this product.

### Note

- Instructions about "Installing the TV to the Wall" are included within this TV's instruction manual.
- Read the supplied safety documentation for additional safety information.
- Images and illustrations used in the supplied manuals are for reference and may differ from the actual product.
- Setting menus are subject to change without notice due to software updates. For latest information, visit Sony support website.

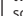**IMPORTANT - Read the End User Software Licence Agreement before using your Sony product.** Using your product indicates your acceptance of the End User Software Licence Agreement. The software licence agreement between you and Sony is available online at Sony website (<https://www.sony.net/tv-software-licences2/>) or on your product screen. Press  (Quick Settings) on the remote control and select [Settings] → [System] → [About] → [Legal information] → [Notices and licences].

### Location of the identification label

Labels for the TV Model No. and Power Supply rating are located on the rear of the TV. For models with supplied AC adapter: Labels for AC adapter Model No. and Serial No. are located on the bottom of AC adapter.

### Installing the TV to the Wall

**Using the optional Wall-Mount Bracket (not supplied)**  
This TV's instruction manual only provides the steps to prepare the TV for Wall-Mount installation before it is installed on the wall.

Your TV can be mounted to a wall using a suitable Wall-Mount Bracket (not supplied). If the Table-Top Stand is attached to the TV, the TV may require detaching the Table-Top Stand (models with Table-Top Stand only).  
Prepare the TV for the Wall-Mount Bracket before making cable connections.

**For product protection and safety reasons, Sony strongly recommends that installation of your TV on the wall be performed by qualified professionals. Do not attempt to install it yourself.**

- Follow the instruction guide provided with the Wall-Mount Bracket for your model. Sufficient expertise is required in installing this TV, especially to determine the strength of the wall for withstanding the TV's weight.
- The screws for installing the Wall-Mount Bracket to the TV are not supplied.
- Be sure to store the unused screws and Table-Top Stand in a safe place until you are ready to attach the Table-Top Stand (models with Table-Top Stand only). Keep the screws away from small children.

 
### Note

- Read the supplied safety documentation for additional safety information.

## Detaching the Table-Top Stand from the TV

K-50S26 / 50S25 / 43S26 / 43S25 only


Detach the Table-Top Stand from the TV.

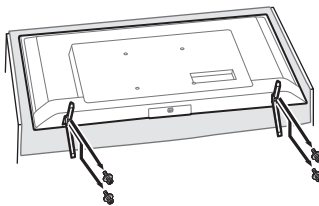


### Note

- Make sure to place TV on the place where you put a soft cloth on to prevent damaging display's surface.
- When installing the Wall-Mount Bracket, do not use the screws removed from the Table-Top Stand.
- Be sure to store the removed Table-top Stand and its screws in a safe place, keeping them away from children. You will need them if you want to use the TV on a table in the future. The Table-Top Stand cannot be purchased separately.

 
- Remove the screws from the rear of the TV.

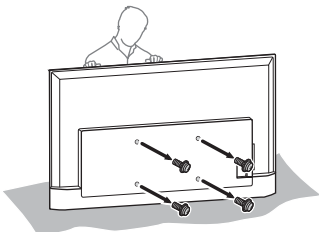

 - Attach the Wall-Mount Attachment (not supplied) to the rear of the TV (to make it parallel with the wall).

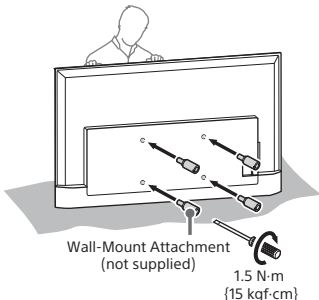

 - Attach the Wall-Mount Bracket (not supplied) using the screws (not supplied).

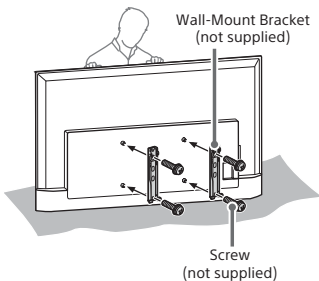

## Note

- If using an electric screwdriver, set the torque at approximately 1.5 N·m (15 kgf·cm).
- Be sure to fasten the Wall-Mount Attachment when attaching them to the TV. Use only a flat head screwdriver to install the Wall-Mount Attachment. Use of another tool might result in over torquing the Wall-Mount Attachment and damaging the TV.
- Be sure the TV is vertical before turning on. To avoid uneven picture uniformity do not power on the TV with the panel facing down.

## Troubleshooting

General troubleshooting for issues like: black screen, no sound, frozen picture, TV does not respond, or network is lost, do the following steps.

- Restart your TV by pressing the power button on the remote control for about five seconds. Select [Restart] and TV will restart. If the TV does not recover, try unplugging the AC power cord (mains lead) then press the power button on the TV and release it. Wait for two minutes, and plug in the AC power cord (mains lead). Or, press the power button on the TV for about 40 seconds until the TV turns off.
- Refer to the Help menu shown below.
- Connect your TV to the Internet and perform a software update. Sony recommends you to keep your TV software updated. Software updates provide new features and performance improvements.
- Visit Sony support website (information provided at the end of the supplied safety documentation).

**When you plug in the TV, the TV may not be able to turn on for a while even if you press the power button on the remote control or the TV.**

 
It takes time to initialize the system. Wait for about one minute, then operate it again.

**The remote control does not function.**

- Replace the batteries.

**The parental lock password has been forgotten.**

- Enter 4357 for the PIN and enter the new PIN.

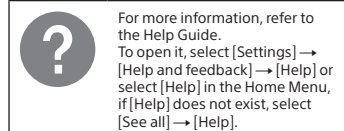

## Specifications

### System

Panel system  
LCD (Liquid Crystal Display) Panel, LED Backlight  
TV system  
Analogue: B/G  
Digital: DVB-T/DVB-T2  
Satellite: DVB-S/DVB-S2  
Colour system  
PAL/SECAM  
Channel coverage  
Analogue: UHF/VHF/Cable  
Digital: UHF/VHF  
Satellite: Intermediate Frequency 950-2150 MHz  
Sound output (W)  
10 + 10  
Wireless technology  
Protocol IEEE 802.11a/b/g/n/ac  
Bluetooth® Version 5.0

### Input/Output jacks

Antenna (aerial)/cable  
75 ohm external terminal for RF input  
Satellite antenna  
Female F Type Connector, 75 ohm  
LNB 13 V / 18 V & 22 kHz tone

HDMI IN 1/2/3 (HDMI IN 3 eARC/ARC)

DIGITAL AUDIO OUT (OPTICAL)

Two channel linear PCM: 48 kHz 16 bits, Dolby

Audio

USB (K-50S21 / 50S21B / 50S20 / 50S20B / 43S21 / 43S21B / 43S20 / 43S20B)

USB 2.0, 500 mA

USB 1/2 (K-65S26 / 65S26B / 65S25 / 65S25B

/55S26 / 55S26B / 55S25 / 55S25B / 50S26 / 50S25 / 43S26 / 43S25)

USB 1/2 (USB 2.0, 500 mA)

LAN (10BASE-T/100BASE-TX)

DC IN 19.5 V (K-50S26 / 50S25 / 50S21 / 50S21B / 50S20 / 50S20B / 43S26 / 43S25 / 43S21 / 43S21B / 43S20 / 43S20B only)

AC adapter input

### Power and others

Power requirements

except models with supplied AC adapter

110 V - 240 V AC, 50/60 Hz

models with supplied AC adapter only

19.5 V DC with AC adapter

Rating: Input 100 V - 240 V AC, 50/60 Hz

Screen size (measured diagonally) (Approx.)

(inches/cm)

K-65S26 / 65S26B / 65S25 / 65S25B: 65 / 163.9

K-55S26 / 55S26B / 55S25 / 55S25B: 55 / 138.8

K-50S26 / 50S25 / 50S21 / 50S21B / 50S20 / 50S20B: 50 / 125.7

K-43S26 / 43S25 / 43S21 / 43S21B / 43S20 / 43S20B: 43 / 108.0

Power consumption

Indicated on the rear of the TV

Standby power consumption\*1\*2 (W)

0.5

Display resolution (horizontal × vertical) (pixels)

3 840 × 2 160

Output rating

500 mA (for USB)

### Others

Operating temperature

0 °C - 45 °C

\*1 Specified standby power is reached after the TV finishes necessary internal processes.

\*2 Standby power consumption will increase when your TV is connected to the network.

### Note

- Optional accessories availability depends on countries/region/TV model/stock.
- Design and specifications are subject to change without notice.
- Subscriptions for services and applications may be required and additional terms, conditions and/or charges may apply when using Google Assistant.
- Visit Sony website for more information on product specifications.

### Trademark information

- Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

