



**BOSCH**

# Vita**Extract** Slow juicer

**MESM5...**

**MESM7...**

**[en]**

Instruction manual

Slow juicer


6

**A**


6



7

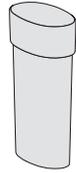


4

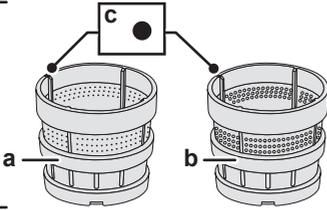

5\*




8

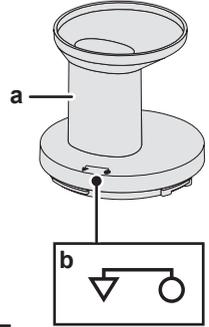


3




2

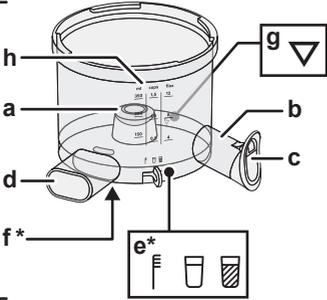


9

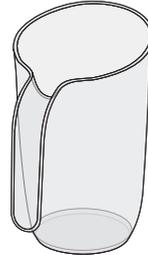

10

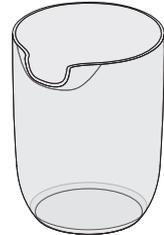

1


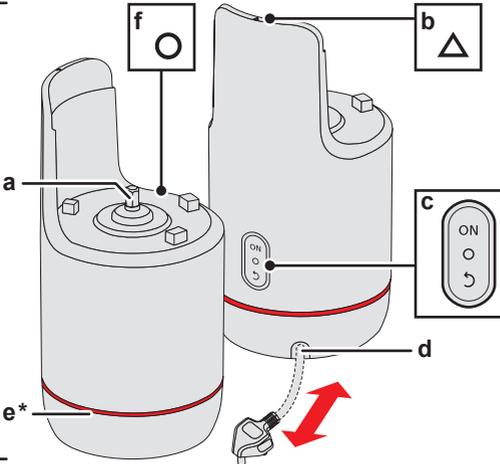




11





12

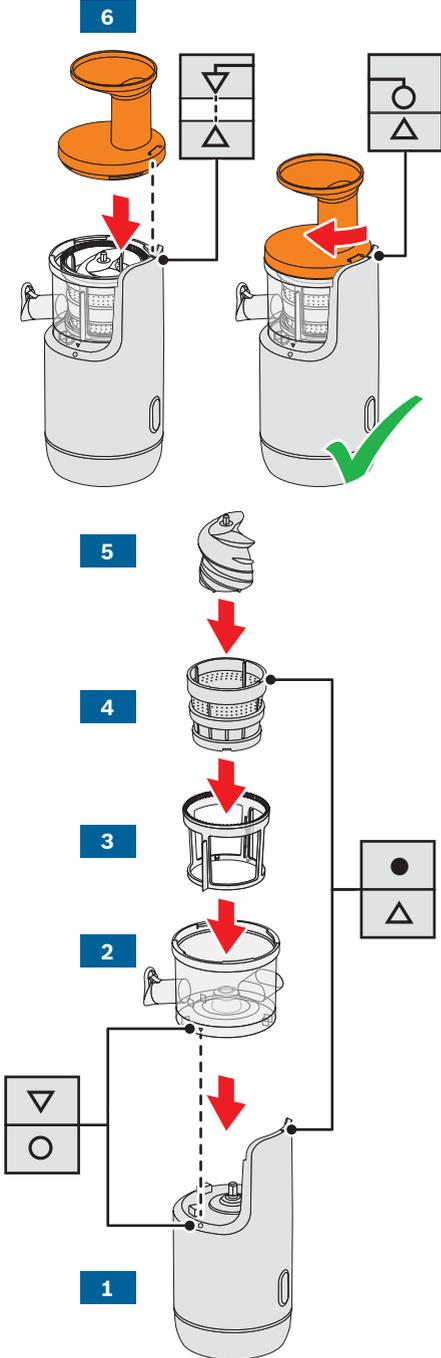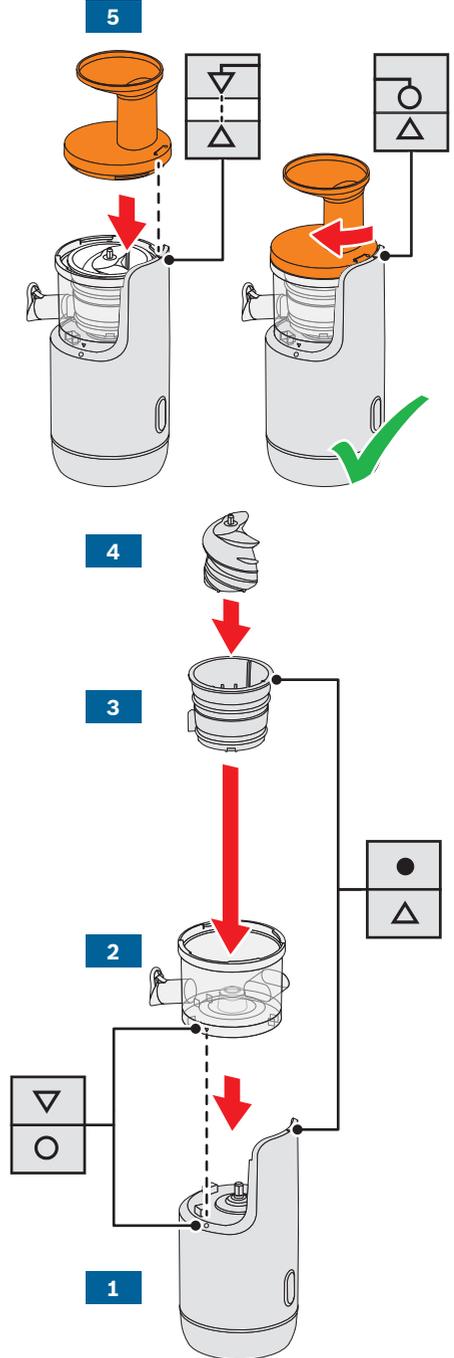


**B****C**

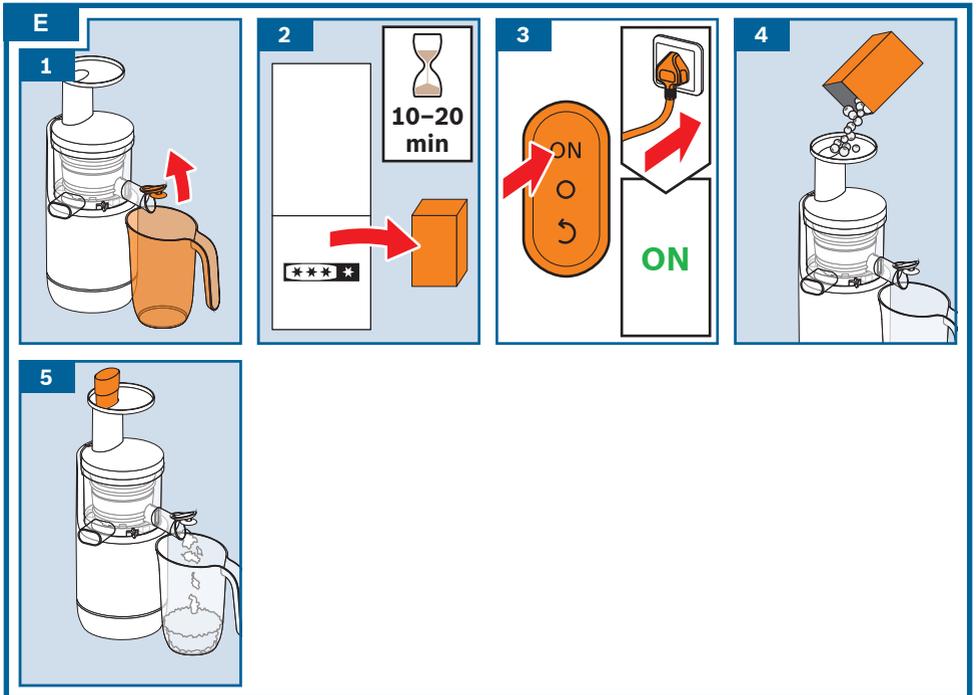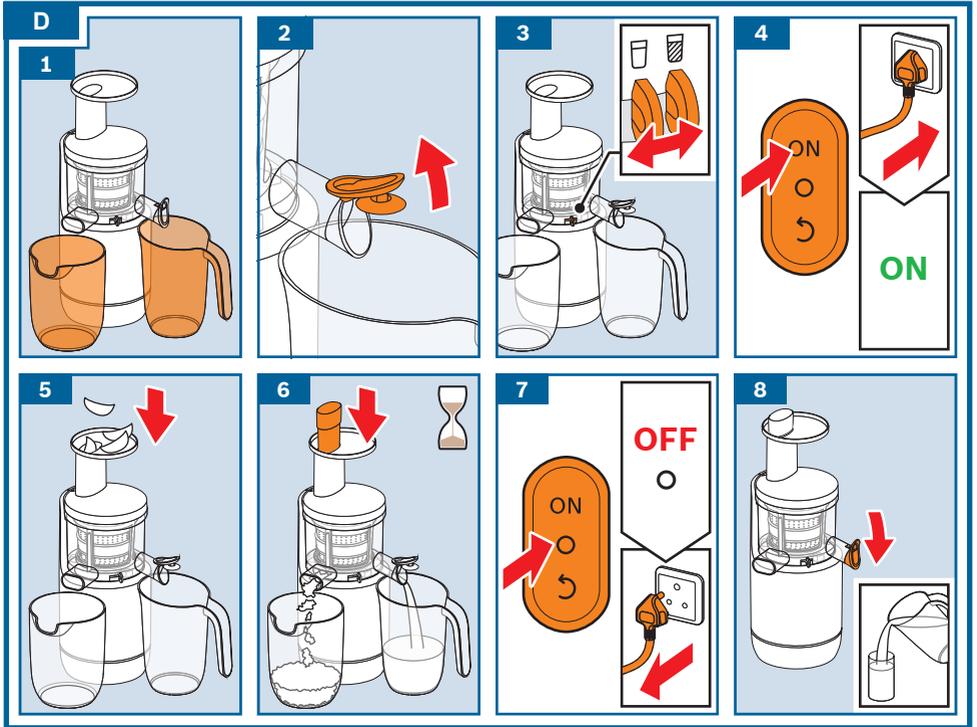

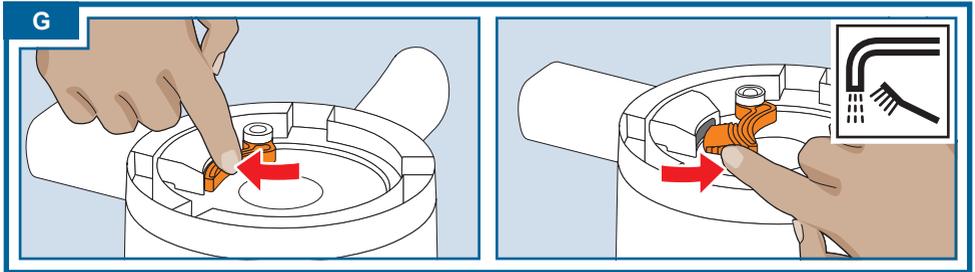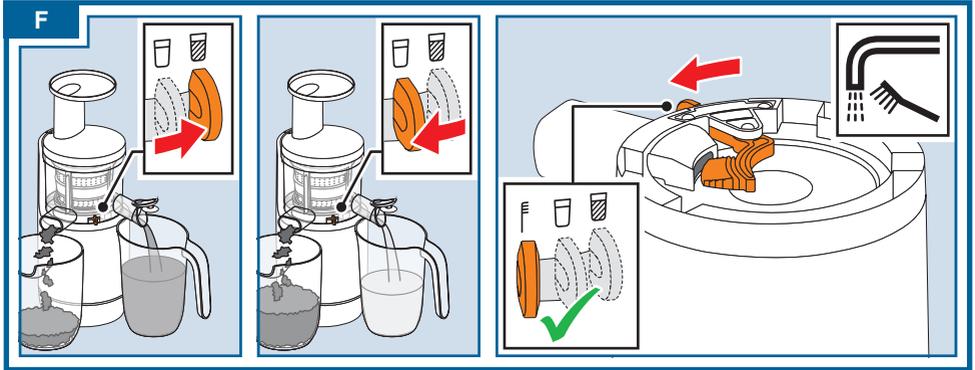

**H**

	✓	✓	✓	✓	✓	✓
	⚠ X	✓	✓	✓	✓	✓
	⚠ X	X	✓	✓	✓	✓

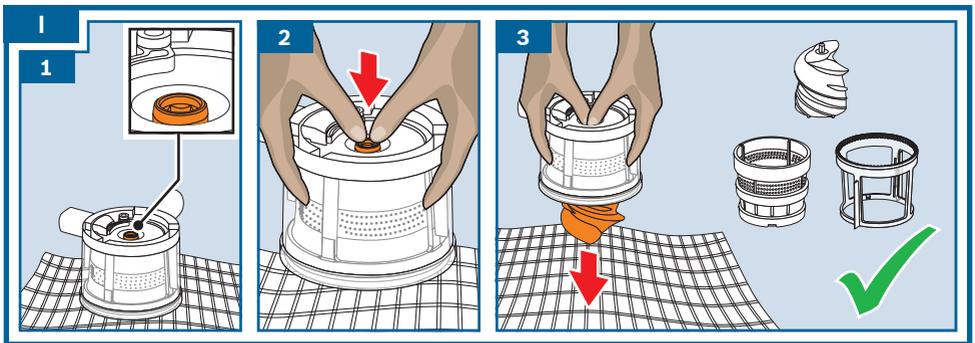

## Intended use

This appliance is intended for domestic use only.

The appliance is suitable for squeezing fresh juice from fruit or vegetables. The appliance is suitable for making sorbet from frozen fruit or vegetables when using the sorbet insert piece. The appliance must not be used for processing other substances or objects.

Additional applications are possible if the accessories approved by the manufacturer are used. Only use the appliance with approved genuine parts and accessories. Never use the accessory parts for other appliances.

Only use the appliance indoors at room temperature and up to 2000 m above sea level.

---

## Important safety information

Read and follow the instruction manual carefully and keep for later reference! Enclose these instructions when you give this appliance to someone else. If the instructions for correct use of the appliance are not observed, the manufacturer's liability for any resulting damage will be excluded.

This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and/or knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Keep children away from the appliance and connecting cable and do not allow them to use the appliance. Children shall not play with the appliance. Cleaning and user maintenance must not be made by children.

### Risk of electric shock and fire!

- Connect and operate the appliance only in accordance with the specifications on the rating plate. Do not use the appliance if the power cord and/or appliance are damaged. Only our customer service may repair the appliance, e.g. by replacing a damaged power cord, in order to avoid hazards.
- Never connect the appliance to timer switches or remote-controllable sockets. Never leave the appliance unattended while it is switched on!
- Do not place the appliance on or near hot surfaces, e.g. hobs. The power cord must not come into contact with hot parts or be pulled across sharp edges.
- Never immerse the base unit in water or place it in the dishwasher. Do not steam-clean the appliance. Do not use the appliance with damp hands.

- After each use, whenever the appliance is unsupervised, prior to assembly, prior to disassembly, prior to cleaning and in the event of an error, the appliance must always be disconnected from the mains.

**⚠ Risk of injury!**

- Before replacing accessories or additional parts which move during operation, the appliance must be switched off and disconnected from the power supply. Immediately after using the appliance, wait for it to stop.
- Only operate the appliance in its fully assembled state. Never operate it without a correctly placed and locked lid!
- Never reach into the feed chute with your hands during operation. Do not insert any objects (e.g. wooden spoons) into the feed chute. Only use the pusher provided!
- Keep hands clear of rotating parts. Use the appliance only with genuine parts and accessories.

**⚠ Risk of suffocation!**

Do not allow children to play with packaging material.

**⚠ Caution!**

We recommend that the appliance is never switched on for longer than is necessary to process the ingredients. Do not operate at no-load.

**⚠ Important!**

It is essential to clean the appliance thoroughly after each use or after it has not been used for an extended period. → *“Cleaning”* see page 11

**Congratulations on the purchase of your new Bosch appliance. You can find further information about our products on our website.**

---

**Contents**

Intended use.....	6
Important safety information.....	6
Overview .....	8
Before using for the first time.....	8
Symbols and markings .....	8
Adjusting lever / seal for fruit pulp .....	9
Preparation .....	9
Use .....	10
Cleaning .....	11
Disposal.....	12
Guarantee.....	12
Troubleshooting.....	13

## Overview

→ Fig. A

### 1 Base unit/motor unit

- a Drive shaft
- b Marking  $\Delta$
- c Switch (3-level)
  - ON = On
  - O = Off
  - $\curvearrowright$  = Reversing function

d Mains cable

e LED-Ring\*

f Marking O

### 2 Juice drum

- a Seal for drive shaft
- b Aperture for juice
- c Sealing cap for juice (drip-stop)
- d Aperture for fruit pulp
- e Adjusting lever with seal for fruit pulp and markings  $\text{f}$   $\text{g}$   $\text{h}$  \*
- f Seal for fruit pulp\*
- g Marking  $\nabla$
- h Scale

### 3 Rotating brush with silicon scraper

### 4 Strainer insert pieces

- a Fine
- b Coarse
- c Marking ●

### 5 Sorbet insert piece\*

- a Marking ●

### 6 Juicer screw

### 7 Pusher

### 8 Lid

- a Feed chute
- b Marking  $\nabla$   $\text{O}$

### 9 Container for juice

### 10 Container for fruit pulp

### 11 Cleaning brush

### 12 Recipe book

\* Depending on the model

## Before using for the first time

Before the new appliance can be used, it must be fully unpacked, cleaned and checked.

### Caution!

Never operate a damaged appliance!

- Remove the base unit and all accessories from the packaging and dispose of all packing materials.
- Check that all the parts are present and examine them for obvious damage.
  - Fig. A
- Thoroughly clean and dry all parts before using for the first time.
  - "Cleaning" see page 11

## Symbols and markings

Symbol	Meaning
	Fit the lid ( $\nabla$ ) and screw on securely ( $\text{O}$ ).
	Marking on the base unit for fitting the lid and for the insert pieces.
	Marking on the insert pieces.
	Fit juice drum ( $\nabla$ ).
	Marking on the base unit for fitting the juice drum.
<b>ml</b> <b><u>350</u></b>	Max. capacity. If the juice reaches the <b>350 ml</b> marking, finish processing and empty the juice drum.
	Markings on the juice drum for the adjusting lever *: cleaning, little fruit pulp, lot of fruit pulp.

## Adjusting lever / seal for fruit pulp

### → Fig. 14 – Models with adjusting lever for seal

The consistency of the juice can be controlled using the adjusting lever for fruit pulp.

- For juice with a lot of fruit pulp, slide the lever to the right (14a).
- For juice with less fruit pulp, slide the lever towards the centre (14b).
- To clean/rinse out, remove the juice drum, turn over and slide the lever to the stop as shown (14c).

### → Fig. 15 – Models with seal

The seal for fruit pulp ensures that the juice has a constant consistency.

- When making juice or sorbet, the seal must sit correctly in the aperture for fruit pulp.
- To clean/rinse out, remove the juice drum, turn over and pull out the seal.

## Preparation

### Risk of injury

Do not insert the mains plug until all preparations for working with the appliance are complete and all individual parts are assembled correctly and connected to the base unit.

### Caution!

Never place the juice drum onto the base unit without the seal for the drive shaft. Ensure that the seal also sits correctly after placing it onto the base unit.

**Important:** Before re-assembling, check that the aperture is completely closed by the seal for fruit pulp. → “Adjusting lever / seal for fruit pulp” see page 9

## Preparing to squeeze juice

### → Image sequence 1

1. Place the base unit onto a stable and level work surface.

2. Place the juice drum onto the base unit. When doing so, align the recesses on the base of the juice drum with the counterparts on the base unit (observe  markings). The juice drum must sit flush and firmly on top of the base unit.
3. Place the rotating brush into the juice drum.
4. Place the desired strainer insert piece (coarse or fine) into the rotating brush (observe markings ).

**Important:** Ensure that the aperture and the notches on the base sit firmly on top of their counterparts on the juice drum. The strainer insert piece must not be able to turn any further.

5. Place the juicer screw into the strainer and press down until it sits on top of the drive shaft.
6. Place the lid on top () and turn it as far as possible in a clockwise direction (.

## Preparing to make sorbet

### → Image sequence 2

1. Place the base unit onto a stable and level work surface.
2. Place the juice drum onto the base unit. When doing so, align the recesses on the base of the juice drum with the counterparts on the base unit (observe  markings). The juice drum must sit flush and firmly on top of the base unit.
3. Place the sorbet insert piece in the juice drum (observe markings .

**Important:** Ensure that the aperture and the notches on the base sit firmly on top of their counterparts on the juice drum. The sorbet insert piece must not be able to turn any further.

4. Place the juicer screw into the sorbet insert piece and press down until it sits on top of the drive shaft.
5. Place the lid on top () and turn it as far as possible in a clockwise direction (.

## Preparing food

**Important:** Only process ripe fruit and vegetables. Unripe or over-ripe fruit will very quickly clog the juicer screw and its strainer.

- Remove stones or seeds (e.g. for plums, peaches, cherries etc.).
- Remove hard peel/skin (e.g. for melons, pineapples, cucumbers, potatoes etc.).
- Fruits and vegetables with thin peel/skin (e.g. apples, pears, carrots, radishes, salad, cabbages, parsley, spinach, grapes, strawberries, celery etc.) only need to be washed.
- Peel citrus fruits and remove the white pith, as the juice may taste bitter otherwise.
- Chop up large fruits and vegetables beforehand so they fit into the feed chute without having to force them in.

---

## Use

### Risk of injury

- Only operate the appliance in its fully assembled state.
- Never operate it without a correctly placed and locked lid.
- Do not reach into the feed chute with your fingers. Use the supplied pusher only!

### Caution!

Always use the sorbet insert piece to process frozen fruits. Do not process fruit that gets very hard by freezing (eg. strawberries).

**Important:** If the juice reaches the **350 ml** marking, finish processing and empty the juice drum.

## Squeezing juice

### → Image sequence

- Prepare the appliance as described.  
→ “Preparing to squeeze juice” see page 9
- 1. Place one container under each of the apertures for juice and fruit pulp.
- 2. Open the sealing cap for the juice.

3. Slide the adjusting lever for fruit pulp (depending on the model) as wished either towards the centre () or all the way to the right ()
4. Plug the mains plug into the mains. Move the switch to **ON**. The appliance starts. The LED ring lights up (depending on the model). The rotating brush rotates.
5. Add the prepared food to the feed chute.
6. Only use the pusher provided to push the food further. The juice flows into the right-hand container. The squeezed fruit pulp will be collected in the left-hand container.
7. Once the processing is complete or the juice container is full, move the switch to **O** and wait for the appliance to come to a stop.
8. Close the sealing cap for the juice and empty the container.

### Notes:

- To improve the amount of juice produced, preferably process ingredients containing lots of juice at the beginning and end of processing (e.g. oranges, tomatoes, watermelon, etc.). Process hard or fibrous Ingredients in-between.
- Fill the food into the feed chute one portion at a time.
- Stuffing it in excessively does not accelerate the processing and leads to the drum overflowing.

## Making sorbet

### → Image sequence

1. Prepare the appliance as described with the sorbet insert piece. → “Preparing to make sorbet” see page 9  
Place a container under the aperture for the juice. Open the sealing cap for the juice.
2. Plug the mains plug into the mains. Move the switch to **ON**. The appliance starts. The LED ring lights up (depending on the model).
3. Add the frozen food to the feed chute.

- Only use the pusher provided to push the food further. The sorbet produced will be collected in the container.

## Reversing function

The reversing function is designed to release food that has got stuck by briefly running the worm gear in reverse.

- Move the switch to **O** and wait for the appliance to come to a stop.
- Move the switch to **↺** and keep it pressed.
- After approx. 3-5 seconds, release the switch and wait for the appliance to come to a stop.
- Move the switch to **ON** and continue with the juicing.

**Note:** If food that has got stuck is not released by briefly putting the appliance into reverse, switch the appliance off, unplug it and clean it. → “*Cleaning*” see page 11

### Warning!

The reversing function must be used for several seconds or it will no longer be possible to switch on the appliance.

## After using the appliance

- Empty both containers and then place them under the apertures for juice and fruit pulp again.
- Close the sealing cap and slide the adjusting lever for the fruit pulp all the way to the right.
- Pour a little water (approx. 150 ml) into the feed chute and move the switch to **ON**.
- After a short time, open the sealing cap and slide the adjusting lever for fruit pulp all the way to the left.
- Let the appliance slow down and stop completely before switching it off.
- Move the switch to **O** and wait for the appliance to come to a stop.
- Disconnect the mains plug.
- Clean all parts immediately after use.

## Cleaning

The appliance and the individual parts used must be thoroughly cleaned after each use.

### ⚠ Risk of electric shock!

- Unplug the appliance before cleaning it.
- Never immerse the base unit in liquids and do not clean in the dishwasher.
- Do not steam-clean the appliance.

### Caution!

- Do not use any cleaning agents containing alcohol or spirits.
- Do not use any sharp, pointed or metal objects.
- Do not use abrasive cloths or cleaning agents.
- Do not clean the individual parts in the dishwasher.

### Notes:

- When processing food such as carrots, plastic parts may become discoloured. This can be removed with a few drops of cooking oil.
- Completely open the seal for fruit pulp. → “*Adjusting lever / seal for fruit pulp*” see page 9

In **Fig. 11** you will find a summary of how to clean the individual parts.

### Dismantling the appliance

- Rotate the lid to the marking (  ) and remove.
- Remove the assembled juice drum.
- Then dismantle the juicer screw, strainer or sorbet insert piece and the rotating brush one by one.

**Note:** If the individual parts in the juice drum are jammed (e.g. due to remnants of fruit), proceed as follows.

### → Image sequence 11

1. Turn the juice drum over, putting a cloth underneath.
2. On the underside carefully press on the drive shaft of the juicer screw until it releases.
3. Remove all individual parts.

### **Cleaning the base unit**

- Wipe the outside of the base unit with a soft, damp cloth and dry off.

### **Cleaning additional parts**

- Clean the juice drum, rotating brush, strainer insert pieces, sorbet insert piece, juicer screw and pusher with detergent solution, a soft cloth/sponge and the brush provided or place them in the dishwasher.
- The brush provided is particularly suitable for thorough cleaning of the apertures for juice and for fruit pulp.
- Clean the lid with detergent solution and a soft cloth/sponge or a soft brush and then rinse under running water.
- Leave all parts to dry or dry them off with a cloth.

---

## **Disposal**



Save the environment - dispose your e-waste in an environmentally friendly manner by contacting designated e-waste collection centers. Please check our website <https://www.bosch-home.in/> for more details.

---

## **Guarantee**

The guarantee conditions for this appliance are as defined by our representative in the country in which it is sold. Details regarding these conditions can be obtained from the dealer from whom the appliance was purchased. The bill of sale or receipt must be produced when making any claim under the terms of this guarantee.

Changes reserved.

## Troubleshooting

Problem	Reason	Remedy
The appliance does not start when switched on.	Appliance has no power supply.	Insert the mains plug into the socket.
	The lid is not sitting correctly on the juice drum.	Place the lid onto the juice drum correctly. Observe the markings. If the lid cannot be closed, disassemble and reassemble the parts again. Ensure that all individual parts sit correctly.
	The appliance stopped during use.	The reversing function must be used for several seconds or it will no longer be possible to switch on the appliance.
The appliance stops during use.	Too much food to be squeezed or hard seeds/stalks in the appliance.	The reversing function must be used for several seconds or it will no longer be possible to switch on the appliance. → <i>“Reversing function” see page 11</i>
	The lid is not sitting correctly on the juice drum.	Place the lid onto the juice drum correctly.
The juice drum cannot be positioned on the base unit correctly.	The adjusting lever for fruit pulp is incorrectly adjusted or the seal is not in the correct position.	Check the setting/seal. → <i>“Adjusting lever / seal for fruit pulp” see page 9</i>
The juice is too runny or too viscous.	The adjusting lever for fruit pulp is incorrectly adjusted or the seal is not in the correct position.	Check the setting/seal. → <i>“Adjusting lever / seal for fruit pulp” see page 9</i>
	Quantity in the appliance is too large.	Do not process excessive quantities simultaneously.
The appliance motor is running loudly.	The appliance is incorrectly assembled.	Disassemble and reassemble the appliance as described. → <i>“Preparation” see page 9</i>

**If you are unable to solve the problem, always call the hotline!  
You will find the telephone numbers at the back of these instructions.**

# WARRANTY

1. This product is warrantied by the company (warranty) to be free from defects in materials and workmanship for a period of 2 years from the date of purchase (warranty period)
2. This product is covered under warranty against any manufacturing defect or workmanship for a period of **TWO YEARS** from the date of purchase. Should a defect develop during the warranty period, Bosch undertakes to repair the appliance **FREE OF CHARGE** through any of the authorised service centres.
3. **Warranty and service:**

For any information, grievances or queries please contact our customer care helpline: 1-800-266-1880, or write to us at [service.in@bosch-home.com](mailto:service.in@bosch-home.com). The company will register your service request and retain a computer record of your service request. To make a warranty claim, you must provide proof of purchase.
4. **CLAIM:**
  - a. The claim must be made within the warranty period.
  - b. Bosch will repair or replace any defective parts and correct any problems resulting from poor workmanship free of charge.
  - c. Service to the product shall be carried out at your home or the store, whereby the customer has to take the product to the store where the product was purchased at the purchaser's risk, responsibility and cost.
  - d. While the company will make every effort to carry out the necessary repairs at the earliest opportunity, the company is under no obligation to do so within a stipulated time period. Claims, if any, to this warranty shall in no case exceed the purchase price of the product.
  - e. In case of repairs or replacement of any part(s) of the product, this warranty will thereafter continue and remain in force only for the unexpired period of the warranty.
  - f. Replacement of parts would be purely at the discretion of the company alone. If the entire product is being replaced (subject to the sole discretion of the company), the same model will be replaced, and in the event such model has been discontinued, it shall be replaced with the model of equivalent price at the time of purchase.
- g. Replacement criteria from warranty terms do not stand if "no problem found" type diagnosis is made and perceived intermittent errors that cannot be reproduced are noticed.
- h. The authorised technician concerned will advise whether to effect repair on site or at the authorised service centre.
- i. This warranty will be terminated automatically after a period of 24 months from the date of purchase even if the product was not in use for any time during the warranty period for any reason.
5. This warranty shall be rendered null and void if:
  - a. The product is physically damaged
  - b. The product is modified, maintained or repaired by a party not authorised by Bosch.
  - c. The product is installed, maintained and operated in ways other than as recommended by Bosch.
  - d. The product is used for commercial purposes.
  - e. The product is faulty or damaged due to electrical faults external to the product.
  - f. Malfunctions or damage resulting from insects, natural calamities, fire and/or accidents.
  - g. The model number, serial number or warranty stickers have been removed or tampered with.
  - h. In case any spare part or any other part is used in the functioning of the appliance which does not comply with the safety parameters approved by Bosch.
6. **Warranty limitations**
  - a. The warranty is not transferable from one user/customer to another.
  - b. The Bosch warranty does not entail a warranty of functionality or any obligation to repair or replace a defective product if that defect is a result of physical breakage, improper installation or connections, electrical faults external to the product, misuse or unauthorised modification of the product.

## IMPORTANT NOTE:

This product is designed for sale and use in India only. The applicability of conditions as provided for claiming Warranty, are valid for use in India not outside of India.

# WARRANTY CARD



Customer's Name

Address

City	Pin	State
------	-----	-------

Telephone	Mobile
-----------	--------

E-mail	Model/E-Nr
--------	------------

Serial No.

Date of Purchase	Date of Expiry
------------------	----------------

Dealer's Name

Dealer's Signature and Stamp	Customer's Signature
------------------------------	----------------------

**Note:** Warranty will start from the date of purchase.

## Customer Service

Regardless of the nature of your concern, you can always be sure of personal attention from the Bosch Customer Service: on the internet and on the phone.

**[www.bosch-home.com/in](http://www.bosch-home.com/in)**

**1-800-266-1880 (toll-free)**

**E-mail: [service.in@bosch-home.com](mailto:service.in@bosch-home.com)**

**BSH Household Appliances  
Manufacturing Pvt. Ltd.**

Arena House, 2nd Floor Main Building,  
Plot No.103, Road No.12,  
MIDC, Andheri East  
Mumbai 400093

Toll Free 1-800-266-1880 \*

**[www.bosch-home.com/in](http://www.bosch-home.com/in)**

\* Mon-Sat: 8.00 am to 8.00 pm  
(excluding public holidays)



**8001197140**

(010316)