

**EXECUTIVE 10/7.0/3.0  
KG1400 RPM**  
User Manual

**IFB**  
Set Yourself Free

TRUSTED BY OVER **7 MILLION** SATISFIED CUSTOMERS



Microwave Oven Built-in-Oven Dishwasher DC & FF Refrigerators Chimney I Built-in-Hob Top Load Front Load 100% Clothes Dryer Air Conditioner

**TRI-SHIELD PROTECTION**

**4** YEAR MACHINE WARRANTY

**10** YEAR MOTOR WARRANTY  
T&C apply

**10** YEAR SPARES SUPPORT  
**100% PEACE OF MIND**

UF421PKMAN762      A

www.ifb.com | July 2024

Shop 24x7 @ [www.ifbappliances.com](http://www.ifbappliances.com) | Email [customerservice@ifbglobal.com](mailto:customerservice@ifbglobal.com) | Call 080 458 45678/080 695 45678  
[www.facebook.com/IFBappliances](https://www.facebook.com/IFBappliances) [twitter.com/IFBappliances](https://twitter.com/IFBappliances) [www.instagram.com/ifbappliances/](https://www.instagram.com/ifbappliances/)  
[www.youtube.com/channel/UCJTIHxPTfez4mrbVBIQLb9Q](https://www.youtube.com/channel/UCJTIHxPTfez4mrbVBIQLb9Q)




**Read instructions before switching on the washing machine. Observe safety guidelines for installation.**



## Welcome to the IFB family.

India's best fully automatic washing machine is now at your service.  
Here's to your freedom!

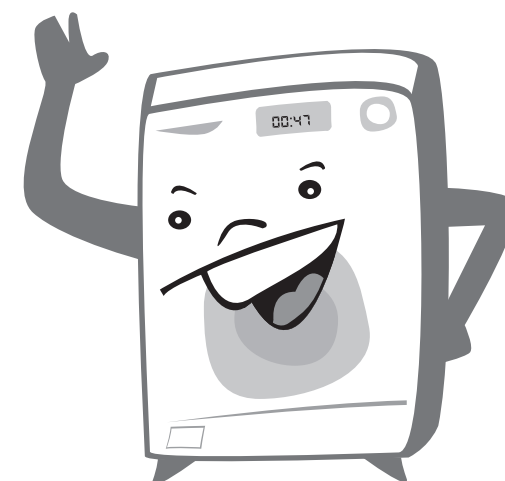

# The A to Z of your washing machine




- POWER ON/OFF
- OPTIONS/ESSENTIALS
- AROMA
- STEAM
- RINSE
- WiFi/WiFi AP



- DRY/CLEAR
- TIME DRY
- TEMPERATURE
- SPIN
- TIME SAVER/FAVOURITE
- START/PAUSE

Simplify your laundry experience with our quick display panel guide. There are so many options to explore in the Washer Dryer Refresher.

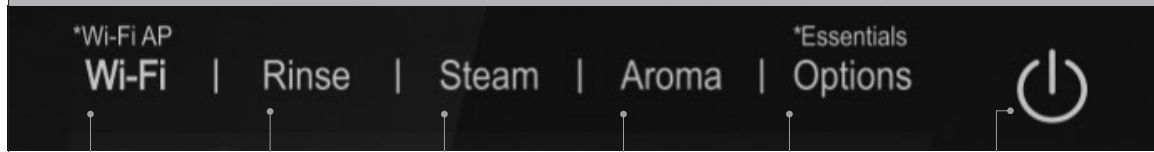

\*Wi-Fi AP

Wi-Fi

Rinse

Steam

Aroma

\*Essentials

Options



**WiFi/WiFi AP\* Button**  
to connect your machine in WiFi Direct or WiFi Remote mode


**Rinse Button**  
to select Extra Rinse option

**Steam Button**  
to select Steam option

**Aroma Button**  
to select Aroma option

**Options/ Essentials\* Button**  
to select the different options available for the program

**Power ON/OFF Button**  
to turn ON and switch OFF the machine

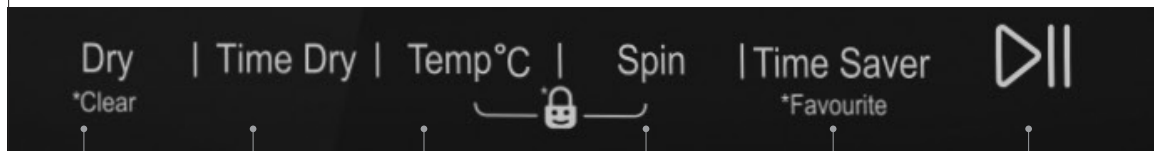

Dry

Time Dry

Temp°C

Spin

Time Saver



\*Clear

\*Favourite

**Dry/Clear Button**  
to select and deselect Dry options

**Time Dry Button**  
to select Time Dry option

**Temperature Button**  
to select the different temperatures available


**Spin Button**  
to select the different spin speeds available

**Time Saver/Favourite Button**  
to select Time Saver/Favourite option

**Start/Pause Button**  
to Start/ Pause the machine or program

Single Press or Touch the button for selecting any function.  
Press or Touch and Hold the button for 3-5 secs to select the functions with \* marks.

**Note** Status symbols glow when their respective settings are in operation

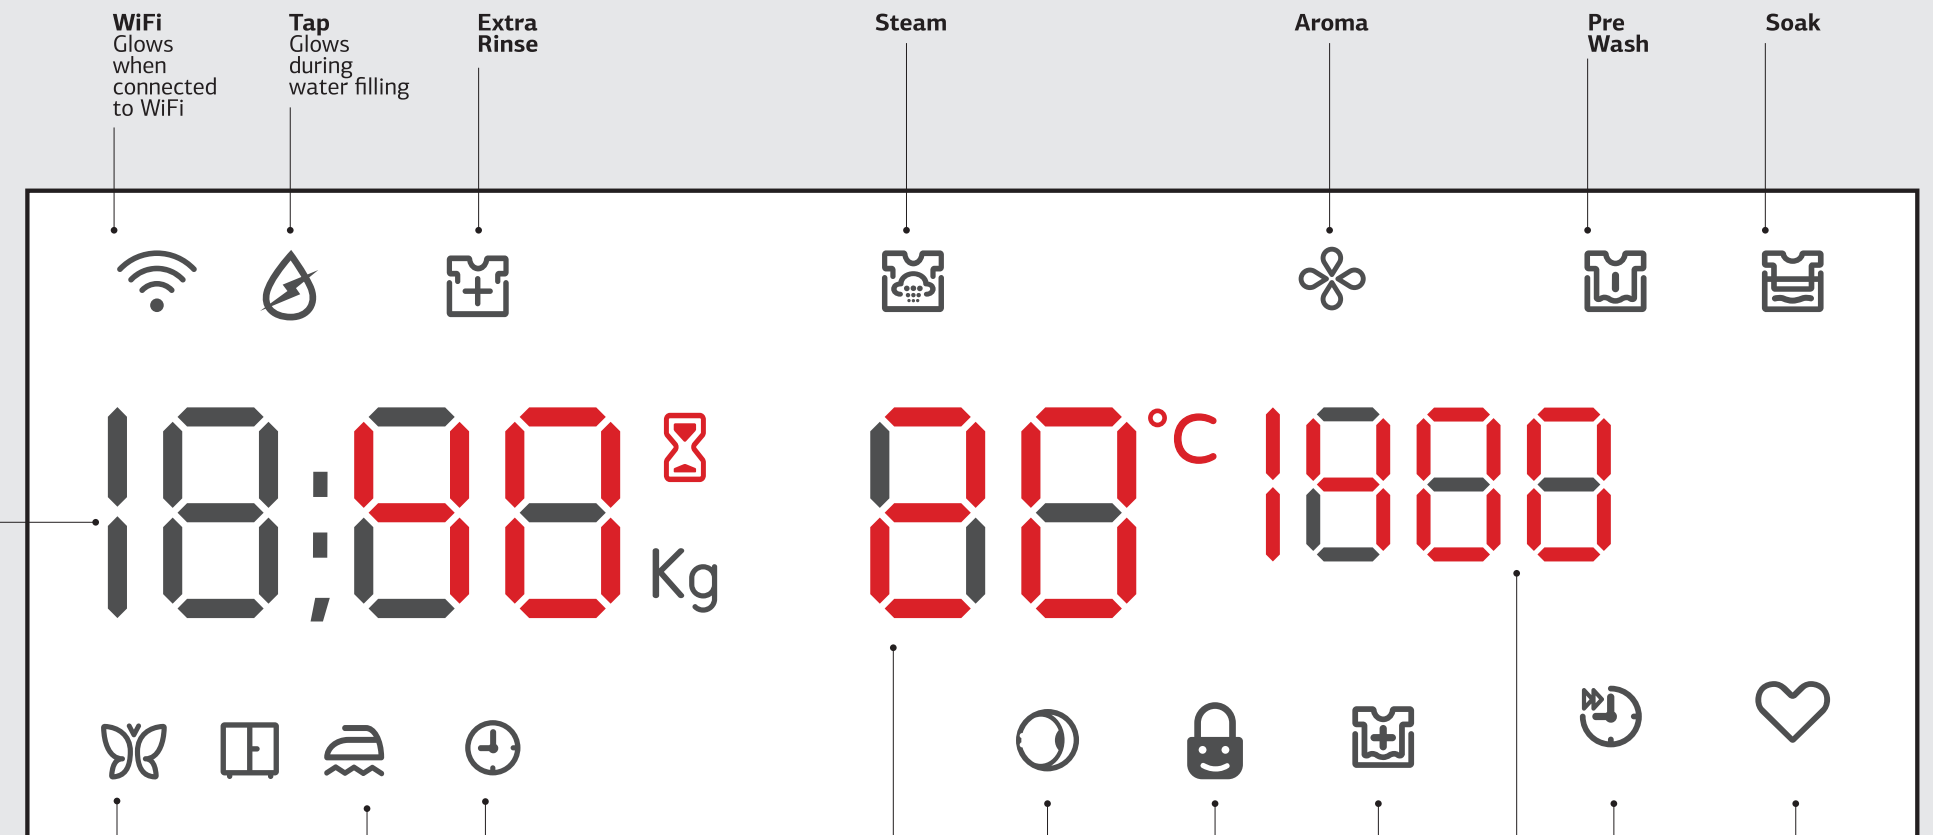

**WiFi**  
Glow when connected to WiFi

**Tap**  
Glow during water filling

**Extra Rinse**

**Steam**

**Aroma**

**Pre Wash**

**Soak**

**Indicates**  
the program cycle time.

18:00 Kg

88°C 1888



**3 Dry Modes Gentle Dry, Cupboard Dry & Iron Dry**

**Time Dry**

**Indicates**  
Temperature settings selected



**Door**  
Glow when the door is open, flashes during door unlocking and remains OFF when the door is locked



**Child Lock**  
Glow when activated



**Laundry Add**  
Glow to indicate the function is available in Pause Mode



**Time Saver**



**Favourite**

**Indicates**  
selected Spin Speed settings



**Time Left**  
Glow to indicate the time left

**Kg**

**Kg**  
Glow to indicate the maximum capacity of the program in Kg

**Symbols status for Extra Rinse, Steam, Aroma, Pre Wash, Soak, Dry Modes, Time Dry, Time Saver**  
**Glow** Function is selected  
**Flash** Function is available for selection  
**Off** Functions cannot select or not selected

### Smart moves to get your laundry done right!

Choose the option that suits your style

**Smart phone** compatible washing with WiFi connectivity, download the IFB app. Let Xpert Wash guide you.



### In a rush?

Get the laundry done quick with Wash + Dry 2 hr program Or select the Time Saver option with any program



Time Dry



Time Save

### 99.99% germ free wash for clothes

Get hygienic clothes and stay healthy with Extra Rinse, Steam, Hot Rinse and Tub Clean.



Extra Rinse



Steam



Hot Rinse



Tub Clean

### Clean with Steam

Choose Steam with any program and try IFB's unique *Power Steam™* with 2X steam for germ free, soft clothes!



Steam



Hot Rinse



Tub Clean

### Forgot to add something?

Pause the wash and use the Laundry Add Option to put in clothes



Laundry Add

### 5 drying modes for the complete laundry experience

Customise drying as per your preference—ready to put into the cupboard, ready to iron or gentle drying for your delicates



Cupboard Dry



Time Dry



Iron Dry



Gentle Dry



Eco Dry

### Refresh special clothes in a jiffy!

Put in 1-2 items and turn the knob to the Refresh wash program. Removes odours and wrinkles from clothes—your party clothes are ready to wear in almost no time at all.



Steam



### Safety guidelines for installation

- Keep the packaging material. It may come in handy when shifting residence.
- Old hoses must not be reused. Always use the new hoses delivered with the machine.
- Before cleaning the machine, ensure you disconnect the main electricity supply and take the plug off the socket.
- Not removing all the packaging and transit bolts before using the appliance may lead to serious damage. Please do not operate the machine until the transit bolts have been removed.
- All washing machine installation work must be carried out only by authorised IFB Care service personnel.
- Do not install this appliance in a location where gas may leak. This may result in electric shock or fire. In the event of a gas leak (such as propane gas, LPG etc), ventilate immediately without touching the power plug. Do not touch the appliance or power cord.
- Pre-installation work such as plumbing and electrical connections must be carried out by a qualified fitter, electrician or technician.
- Do not operate the appliance where inflammable substances such as oil, benzene or highly inflammable gas are present. Such materials may cause fire or explosions. Never use combustible detergents.
- Do not use a ventilating fan. A spark may result in an explosion or fire.
- Do not use drying option/function for items that have been treated or soaked in vegetable/cooking oil, which may result in a fire hazard. Items treated with oil can ignite spontaneously when exposed to heat.

- Do not install your washing machine in rooms where temperatures below freezing may occur. Frozen hoses may burst under pressure. The reliability of the electronic control unit may be impaired at temperatures below freezing point and above 50°C.
- Install the machine in a room with adequate ventilation. Avoid a room with no windows. The back of the machine should be at least 4 inches (100 mm) away from the wall.

**Note** If the appliance is housed in a built-in cabinet, proper ventilation must be ensured.

- Do not install the machine in a damp area or bathroom with exposure to a direct shower.
- Protect the machine from direct sunlight and rainfall.
- Do not place the machine on a slanting, uneven or unstable surface.
- Your product uses higher spin speeds to remove water at the end of wash cycle.
- In order to ensure that the product operates more silently and vibration free, it must be levelled and balanced on its feet such that all four washer feet presses with equal pressure against the floor.
- A concrete floor is the most suitable installation surface for a washing machine, being far less prone to vibration during the spin cycle than wooden floorboards.
- The washing machine is not suitable for connection to a hot water supply.
- To be operated with cold mains water and standard detergents and care products that are suitable for use in front load washing machines. Do not use detergents for hand wash.
- The machine is designed to operate with water flow pressure between 0.3–10 Bar (3.5–10 Ltr/min). Lower water pressure can lead to malfunction of your machine.

**Note** Keep the tap ON throughout both washing and drying cycles to ensure proper drying of clothes.



## Safety instructions

Read all instructions and explanations for installation carefully before use. Follow them carefully. Keep this user manual handy for later use.

### **Any damage caused by cockroaches or other vermin will not be covered by the appliance guarantee.**

- Do not install and use a damaged machine. Before connecting the machine, ensure that the connection data on the data plate (fusing, voltage and frequency) match the main electricity supply. If in any doubt, consult IFB Care.
- Do not wash or dry articles that have been cleaned, washed, soaked in or dabbed with combustible or explosive substances (such as oil, paint, gasoline, degreasers, dry cleaning solvents, kerosene etc). This may result in fire or explosions.
- Do not use items if industrial chemicals have been used for cleaning.
- Do not use items containing foam rubber (also known as latex foam) or similarly textured materials. Foam rubber can, when heated, produce fire through spontaneous combustion.
- Do not use items rinsed in fabric softeners to eliminate the effects of static electricity unless recommended by the manufacturer of the fabric softener or product.



## Caution

- Undergarments that contain metal reinforcements should not be placed in the dryer. Loose metal reinforcements could damage the tumble dryer.
- Do not use underwear trimmed with lace in the tumble dryer. Doll cushions, and trims on dress suits may come loose.
- Do not use plastic articles such as shower caps or babies' waterproof napkin covers in the tumble dryer.
- Do not use the rubber backed articles, clothes filled with rubber pads, rubber boots or rubber coated tennis shoes in the tumble dryer.
- Do not dry unwashed items in the tumble dryer.
- Do not use the drying function after applying a chlorine bleach agent to the laundry during a wash or drying cycle. Otherwise, the laundry may become discoloured or the material may be damaged.
- Do not use the drying function for clothing with fur lining or made from acrylic material. This may result in the drying function being degraded.
- Do not touch the insides of the drum or the washing machine surface during or just after drying as it may be hot. This may result in burns.
- Do not use heat sensitive garments made from leather, mink, fur, silk etc.
- Do not use clothes trimmed with buttons in the tumble dryer. Heat can cause them to break.
- Do not use hard bleeding clothes.
- Do not use electric furry or bulky blankets.
- Before using the machine for the first time, check that the transit bolt at the rear has been removed (Refer Safety guidelines for installation).
- Wall clearance of 10 cm (rear) and 2 cm (sides) should be maintained for proper ventilation while installing the machine.



### Caution

- Turn OFF the stopcock if the machine is to be left for any length of time (eg holiday) especially if there is no floor drain (gully) in the immediate vicinity.
- Do not let children play near or with the appliance. Kindly ensure close supervision when the appliance is used near children.
- Appliances are not intended for use by children, however when children become old enough to operate the appliance, it is the responsibility of the parents or legal guardians to ensure they are supervised or trained about the safe use of the product
- Cleaning and user maintenance should not be performed by children without supervision.
- The manufacturer cannot be held responsible for the consequences of an inadequate earthing system. Connect the machine to a grounded outlet protected by a 16A Fuse or MCB Have the appliance checked by a qualified technician or licensed electrician if you are in doubt as to whether the machine has been properly grounded.
- Improper earthing connection may result in electrical shock.
- For safety reasons do not operate this appliance on an extension cable. Extension cables do not guarantee the required safety of the appliance. There is danger of overheating.
- The machine is built in accordance with current safety requirements.



### Caution

- Unauthorised repairs can result in unforeseen dangers for the user, for which the manufacturer cannot accept responsibility. Only authorised IFB Care service personnel should undertake repairs.
- The machine is completely isolated from the electricity supply only when it is switched OFF at the wall socket and its plug is taken out, or it is switched OFF from the main source, or the main fuse is taken out or the MCB switched OFF.
- This machine must only be connected to the onsite water supply using a new hose kit. Old hoses must not be reused. Only genuine IFB original spare parts should replace faulty components. Only when these parts are fitted can the safety standards of the machine be guaranteed.
- If the connection cable is faulty, it must be replaced only by authorised IFB Care service personnel to protect the user from danger.
- A washer and dryer should never be stacked without using the proper stacking kit. Doing so is extremely dangerous, as the dryer may vibrate off the washing machine during use.



### Caution Hot

#### Emergency Door Opening

Please use the emergency lever to open the door during power failure. This keeps your clothes safe as the inside chamber may be hot at the time the power failure happens.

Keep the door slightly open in case there is power failure during the drying phase and be careful not to touch the door glass and laundry immediately after opening the door as they will be extremely hot. For more details, please refer topic 'Emergency Door Lock Release'.



### About eWaste

eWaste or Electronic Waste or Waste Electrical and Electronic Equipment (WEEE) are the terms used to describe old, end-of-life or discarded appliances using electricity.

### Do's

- Always dispose of products that have reached end-of-life by calling an authorised local eWaste recycler.
- Always drop off used electronic products, batteries or accessories at your nearest authorised eWaste recycler when they reach end-of-life.
- Whenever possible, or as instructed, sort packaging materials according to responsible waste disposal and recycling options.

### Don'ts


- Do not dismantle electronic products on your own.
- Do not throw electronic products in bins with a 'Do Not Dispose' sign.
- Do not give eWaste to informal and unorganised sectors such as local scrap dealers and rag pickers.
- Do not dispose of your product in garbage bins along with municipal waste that ultimately reaches landfills.

- Do not pull the cord to disconnect the plug. Hold the plug itself. Do not insert or remove the plug with damp hands.
- Do not drag or move the washing machine if it contains the wash load or when in operation.
- Do not spill water over the machine. In case of spillage, wipe dry. Avoid the machine coming in contact with floor cleaning chemicals.
- Do not wash or spray water over the switch or control panel.
- Do not wash shoes or utensils in the machine.
- Use detergent recommended for the washing machine.
- Keep your machine dry to avoid corrosion/rusting. Take special care to wipe the machine after cleaning its coin trap.
- Check the labels on garments for fabric care instructions.
- The machine is tested with water during assembly to check its performance. Condensed droplets may remain inside the drum. It is advisable to run the machine without a wash load using the Cotton maximum temperature program with detergent for the first time after installation.
- Ensure that the machine is connected to a 3 pin socket with good earthing and 16 Amp MCB or other automatic short circuit protection devices.
- Textiles that have been pre-treated in solvent based cleaning agents must be thoroughly rinsed in clean water before being washed in the machine.
- Never use solvent based cleaning agents in this machine, as this may result in damage to component parts and create toxic fumes. Such detergents also pose a threat of fire and explosion hazards.
- If excessive vibrations observed on trolley then trolley, needs to be replaced immediately as it can affect reliability of machine thereby reducing the machine life.

### Risks of Improper Handling of eWaste

eWaste usually includes components which, if disposed of improperly, hold environmental consequences such as air, water and soil pollution and also pose risks to human health.

By ensuring this product is disposed of correctly, you will

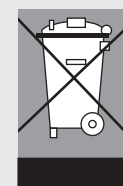

help prevent potential negative consequences for the environment and human health.

Components and materials used in the manufacture of this washing machine are fully compliant with provisions of hazardous substances outlined in eWaste Management Rules, 2016.

### For Detailed Information and Disposal Request

Contact IFB Care at 08045845678/08069545678 and provide your details to our representative to request your product to be picked up for disposal.



- Only use dyes specified by the manufacturer as suitable for use in a domestic washing machine. Always read the manufacturer's instructions carefully.
- Colour runs and dye removers contain sulphur compounds, which can cause damage such as corrosion. Do not use such products in this machine.
- For machines with a porthole door, remember that the porthole glass will be hot when washing at very high temperatures. Do not let children touch it.
- Always make sure that the drum is stationary before removing clothes. Reaching into a moving drum is extremely dangerous.

### Flooding danger

- While hooking the drain hose into a wash basin, check that the water drains quickly to prevent the sink from overflowing. Make sure the drain hose is secure so that the force of the water flowing out of it does not dislodge it. Otherwise, this will result in flooding.
- Take care to ensure that foreign objects (eg nails, pins, coins, paper clips etc) do not find their way into the machine with the washing. These may damage components of the machine (eg suds container, drum etc), which in turn can result in damage to the wash load.



## Contents

	PAGE
• Safety guidelines	08
• Safety instructions	09
<b>Chapter 1: Getting started with your machine</b>	
• Installing your machine & safety guidelines	17
• Before you start	19
<b>Chapter 2: Working your machine</b>	
• 6 easy steps to do your laundry	20
• Finishing	34
• Washing guide map	37
• Key features	42
<b>Chapter 3: Get more from your machine</b>	
• Tips for best results	45
• Maintenance and cleaning	49
<b>Chapter 4: Useful information</b>	
• Troubleshooting	53
• Display	57
• Technical specifications	62
• Service record	64
• Warranty	68

**Warning** Electrical safety of this appliance can only be guaranteed when continuity is complete between it and an effective earthing system which complies with local and national safety regulations. It is important that this basic requirement is present and regularly tested. When there is any doubt the onsite wiring system should be inspected by a qualified electrician. IFB cannot be held liable for the consequences of an inadequate earthing system (eg electric shock etc).



**Precautions** This appliance conforms to safety requirements. Inappropriate use can lead to injury or damage to property. Please read this user manual carefully. It contains information on safety, installation, use and maintenance.

Use only less foaming detergents in this machine to avoid inconvenience or damage. It will help you to use your new washing machine optimally and avoid accidents or damage to the appliance.

# Getting started with your machine

## Installing your machine & safety guidelines

### 1 Select the right spot

Unpack and place the new washing machine in proximity to both water and electrical connections. Ensure that the floor is properly levelled.

### 2 Removing the transit bolts

- Use a spanner to remove the transit bolts.
- Insert plastic caps provided.
- Keep the transit bolts carefully as they will be required in case you need to shift the machine again.
- Please do not operate the machine until the transit bolts have been removed.

### 3 Levelling

- Level the machine by using the adjustable screws provided at the bottom for levelling.
- Make sure that the machine rests on all four feet on a level surface.



### 4 Connection to the water supply


- The water inlet of the machine has a collar with parallel internal threads.
- The water supply point with an external thread/parallel thread should be available within 1 metre of the machine location.
- Do not stretch the water supply hose.



**Note** After connecting inlet hose to water tap, turn on the water tap to flush out foreign substances such as dirt, sand or sawdust in the pipelines.






### 5 Connection to the drain hose

- The machine drains via a drain pump.
- Direct the end of the drain hose into a sink or a basin.
- The drain hose can be placed directly on the floor or can be extended and placed over the sink to a maximum height of 1 metre from the floor.

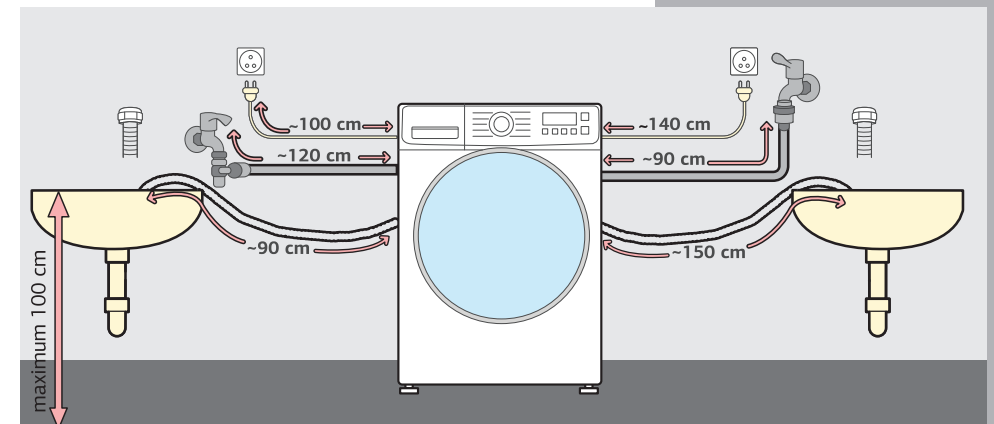

### 6 Electrical connection

- It is mandatory to have a 16 Amp, 3 pin 220–240 V AC, 50 Hz electrical point with a 16 Amp MCB or automatic short circuit protection device within 1 metre of the machine's location.
- Make sure your home has proper earthing and there is a firm connection between the plug and the socket. IFB recommends a separate MCB on the socket of the washing machine.
- Proper earthing of the power socket is critical to reliable performance.

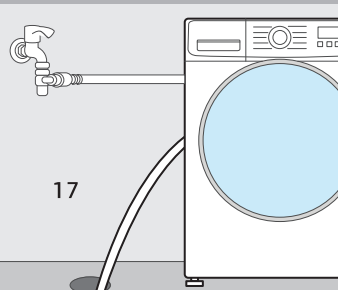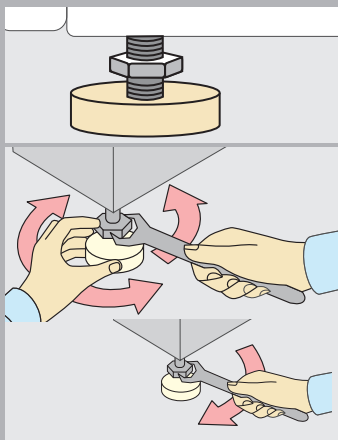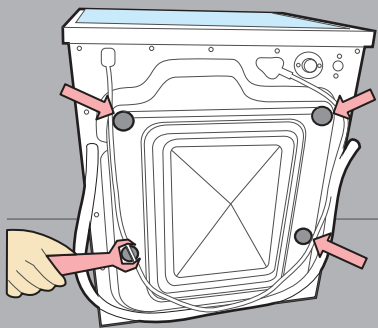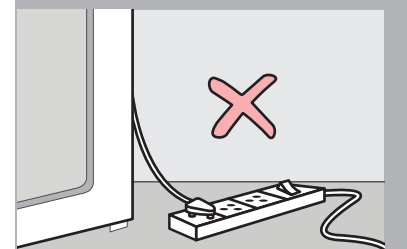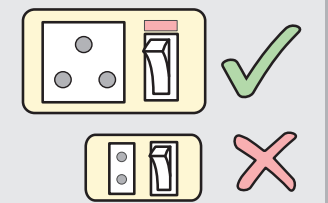

# 1

## Before you start

### Check your machine

Ensure that the washing machine has been installed and connected properly.

#### • Electrical connection

It is mandatory to have a 16 Amp, 3 pin 220–240 V AC, 50 Hz electrical point with a 16 Amp MCB or automatic short circuit protection device.

#### • Water connection

A water supply point with an external/parallel 3/4" thread should be available within 1 metre of the machine's location. Turn ON the tap after the connection is secure.

#### • Drain water hose

Direct the end of the drain hose onto the floor or into a sink or basin up to a maximum height of 1 metre. Hook the hose over the edge of the basin and secure the same.

**Your machine was tested before leaving the factory. To remove any water left over from testing procedures, the first wash cycle should be carried out without laundry in the washing machine.**

- Turn ON the water tap.
- Pull out the detergent dispenser drawer completely.
- Pour approximately 20 g of detergent into the detergent dispenser drawer.
- Close the detergent dispenser drawer.
- Set the Program Selector knob to Cotton and set maximum temperature settings.
- Press the Start/Pause button.
- When the End message is displayed, turn OFF the Program Selector.


# 2

## Working your machine

### 6 easy steps to do your laundry



#### 1 Sort the laundry

- Remove everything from pockets.
- Close zippers, hooks and strings.
- Pre treat collars, cuffs and stains.
- Sort the laundry.
- Check for wash care symbols/labels.

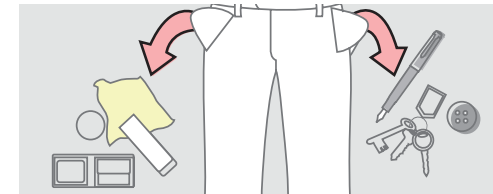


#### 2 Load the laundry

- Check and remove any small articles or any laundry items left inside the drum or on the rubber gasket.
- Place garments loosely inside the drum.
- Load garments one by one.
- Close the door and press till you hear a click.

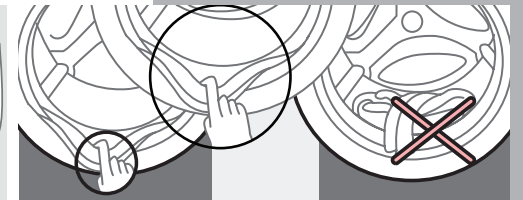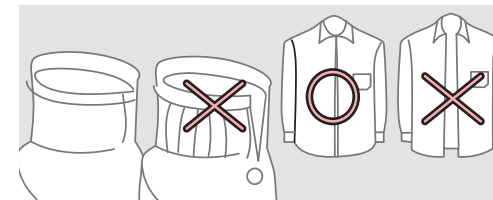

# 2

# 3

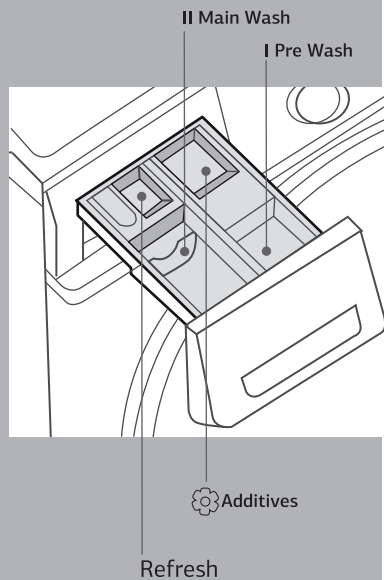

Do not pull out detergent dispenser tray during water filling.

### Add detergent

- You can either use powder detergent or liquid detergent based on your requirement.

#### For Powder Detergent

- Pull out the detergent dispenser drawer completely, pull up the flap and dispense the correct amount of detergent in the Main Wash II compartment.
- For heavily soiled clothes, use the Pre Wash option and add detergent to the Pre Wash I compartment.
- Close the detergent drawer.

#### For Liquid detergent

- Pull out the detergent dispenser drawer completely, put down the flap and dispense the correct amount of detergent in the Main Wash II compartment.
- For heavily soiled clothes, use the Pre Wash option and add detergent to the Pre Wash I compartment.
- Close the detergent drawer.

**Note** When you use the liquid detergent

- Always keep the flap down
- Do not exceed the maximum level marked on the flap
- Do not set the "Prewash" phase
- Do not set the "Time Delay"
- Do not use gelatinous or thick liquid detergents

#### For Softener

- Pull out the detergent dispenser drawer completely and dispense the correct amount of softener in the Additives compartment.
- Close the detergent drawer.

**Note** If the Aroma function is selected, do not add softener in the Additives compartment.

#### For Refresh and Aroma

- Pull out the detergent dispenser drawer completely and dispense the correct amount of IFB Refresh Fragrance in the Refresh compartment.
- Close the detergent drawer.




## What's unique about your Washer Dryer Refresher?




### Wash+Dry 2Hr

Express wash and dry in just 2 hours. Upgrade your laundry experience with seamless washing and drying

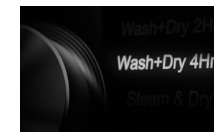

### Wash+Dry 4Hr

Wash+Dry in one go. No need to wait for the wash cycle to complete and then move the clothes to your dryer

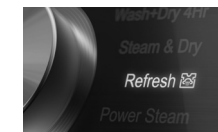

### Refresh

Avoid frequently dry cleaning your special clothes. A steam only program removes wrinkles, eliminates odour and 99.99% germs. Get fragrant, ready to wear clothes in minutes




### Power Steam

A 30 minutes program that uses steam twice to kill germs. Maintains fabric's texture, colour and shape. Suited for sports wear, gym wear and uniforms. Exclusive option of drying and adding a fragrance to your clothes

### Select program

- Switch the washing machine ON.
- Turn the Program Selector knob to the required program position. The Start/Pause LED will flash.

PROGRAM	TYPE OF LAUNDRY
Wash + Dry 2 Hr/ Wash + Dry 4 Hr	Lightly soiled laundry made of various types of cotton, synthetics and easy care garments except special garments such as silk, delicates, dark clothes, wool, duvets, curtains etc.
Refresh 	Cotton, synthetic and mixed fabrics items. Use this program to remove odour and dewrinkle the laundry.
Power Steam®	Lightly soiled cotton, synthetic and mixed fabrics items. This cycle removes stains effectively.
CradleWash®	Hand wash only garments, as well as delicates, washable fabrics made of satin, synthetic or sheer fabrics.
Wool	Machine washable woollen garments only. A neutral wool wash detergent is recommended.
Express 15'	Lightly soiled, coloured laundry made of cotton, linen, synthetic or blended fabrics.
Mix/Daily	Various types of cotton, synthetic or easy care garments except special garments such as silk/delicates, dark clothes, woollens, duvets, curtains etc.
Cotton/Cotton Eco	Cotton colour-fast garments such as shirts, trousers, uniforms, bed and table linen, towels, nightdresses, pyjamas, underwear etc.
Synthetic	Daily wear garments made of polyester, acrylic or polyamide.
Anti-Allergen	Cotton and linen fabrics in direct contact with skin, such as bed linen, pillows, underwear, nappies, towels etc.
Baby Wear	Baby clothes, underwear, cloth diapers, pillows, bedsheets etc. A high temperature wash and extra rinses ensure perfect cleaning for sensitive skin.
Bulky	Machine washable curtains made of cotton and easy care fabrics. Washes large items such as blankets, bedding covers, sofa covers, pillow covers and bedspreads.

DRYING OPTION	TYPE OF LAUNDRY
Cupboard Dry/Eco Dry	Use this program to dry the clothes enough to be removed and folded. Can be used for everyday clothes such as cottons and mixed.
Iron Dry	Use this program to receive ready-to-iron cotton or linen fabrics, at the end of the cycle.
Gentle Dry	Use this program for easy care textiles and synthetic fabrics. It is suitable for easy care and mixed laundry clothes that require low temperatures for drying.
Time Dry	Use this program to dry the laundry for the specified period of time, depending on the type of fabric, amount of laundry and moisture content.
Aroma	Use this program to remove bad odours from the laundry.

### Note

- To get complete drying ensure that the laundry items are of similar material and thickness and avoid overloading the washing machine by stuffing too many items.
- Do not tumble dry woollen laundry items.
- Laundry items of woven and loop knit material may shrink based on the material quality. These items should be stretch back into shape soon after drying.
- Permanent press and linen items should be taken out soon after the cycle ends to reduce wrinkles.
- Always check the garment manufacturer's instructions
- Do not tumble dry any items made from or containing rubber or plastic items. Also avoid drying fibreglass articles in your washing machine to prevent skin irritation due to mixing of glass fibres with your other laundry.
- Do not set drying programs for synthetic curtains, clothes with metal insets, nylon stockings, quilts, bed covers, duvets, anoraks, sleeping bags, fabrics with residue of hair sprays, nail solvents or similar items.
- Choose wash/additional option.
- To change/cancel the program during the washing machine run, press the power ON/OFF button and wait for 2 secs. Then select the new program.



**Select wash options**

Select the different options by touching the desired Options button.

**Temperature**

- You can change the default temperature within a given range.
- The default temperature for the program will be displayed after the program capacity on the display. A °C default symbol or selected temperature will glow during program run.
- Touch the Temp button on the control panel to change the temperature.
- The temperature selection sequence will be Cold, 20°C, 30°C, 40°C, 60°C, 95°C, Eco-cold, Eco-20, Eco-30, Eco 40, Eco-60, Eco-95 and Repeat. Eco option provides optimum wash quality while consuming minimum energy, water and detergent.
- You can select more wash options or touch the Start/Pause button to start the program.


 
**Spin Speed**

- You can change the default Spin Speed within a given range.
- The default Spin Speed for the program will be displayed. Press the Spin button to check the selected Spin Speed during program run.
- Touch the Spin button on the control panel to change the Spin Speed.
- The Spin Speed selection sequence will be No Spin, 400 RPM, 600 RPM, 800 RPM, 1000 RPM, 1200 RPM, 1400 RPM, Rinse Hold and Repeat.
- The selected Spin Speed RPM will be displayed on the LED display.
- You can select more wash options or touch the Start/Pause button to start the program.

Temp°C

Spin

**Rinse Hold**

- Rinse Hold pauses the program during its final rinse. If clothes are left unattended after the final spin for a long time it will cause creasing. During Rinse Hold, clothes will remain stationary in the water after additives rinse.  message will appear on the display. The program will remain on hold for the user to select the Spin Speed/ Spin Cancel or press Start/Pause.
- Press the Spin Speed button till  symbol is displayed on the display to select the Rinse Hold option.
- You can select more wash options or touch the Start/Pause button to start the program.

**Options/IFB essentials**

Touch the Options button on the control panel to select the various options available. To scroll through them, touch the Options button until the desired option is highlighted. Different options such as Pre Wash and Soak can be selected using the Options button. The corresponding symbol will glow once the desired option is selected. Other available options such as Extra Rinse, Steam, Aroma and Time Saver can be selected using their respective buttons.

**Essentials**

Touch and hold the Options/Essentials button on the control panel for 3 secs to order IFB essentials. A single beep will sound. Further details of order will be received via SMS on registered mobile number.

**Selection of Options**

- During option selection, the corresponding symbols will flash.
- During option selection, the default or already selected option symbol will glow.
- Non-available option symbols will remain OFF.
- Touch the Options button to select the required option. The corresponding symbol will glow indicating the option has been selected.

Rinse

\*Essentials  
Options

**Pre Wash**

- If the Pre Wash option is selected, the clothes are given a preliminary wash before the main wash.
- Touch the Options button on the control panel once to select the Pre Wash option.
- The Pre Wash option symbol will glow, indicating that the option has been selected.
- You can select more Wash Options or touch the Start/Pause button to start the program.

**Soak**

- Soak clothes in soapy water for a calculated amount of time to more easily dislodge soilage during the main wash cycle. After this, it automatically continues with the normal wash cycle.
- During soaking, the clothes will remain stationary for about 10 mins.
- Touch the Options button on the control panel twice to select the Soak option.
- The Soak option symbol will glow, indicating that the option has been selected.
- You can select more Wash Options or touch the Start/Pause button to start the program.
- It is not advisable to soak coloured garments for a long time because they are likely to bleed colour.

**Time Saver/Favourite**

- This option allows you to save time by decreasing the program time.
- Touch the Time Saver button on the control panel to select & deselect the Time Saver option.
- The Time Saver option symbol will glow, indicating that the option has been selected.
- You can select more Wash Options or touch the Start/Pause button to start the program.

**Favourite**

- The Favourite option allows you to set any program along with options as a favourite program.
- To set a program as favourite, select the required program and options.
- Touch and hold the Time Saver/Favourite button Eco button on the control panel for 3 secs to set the program as a favourite option.
- The Favourite option symbol will glow, indicating that the program has been set as favourite.
- To select or deselect the Favourite program, touch and hold the Eco button for 3 secs.

**Extra Rinse**

- An additional rinse cycle is executed to remove any residual detergent from fabrics, giving them a softer texture. A maximum of 3 additional rinses can be selected.
- Touch the Rinse button on the control panel to select the Extra Rinse option. The Extra Rinse option symbol will glow, indicating that the option has been selected.
- Extra Rinse 1–3 can be selected depending upon the program selected.
- You can select more options or touch the Start/Pause to start the program.

**Hot Rinse**

- A Hot Rinse cycle is executed during the additive step, for an effective and thorough wash.
- The Hot Rinse option can only be selected via My IFB mobile App.
- You can select more wash options or touch the Start/Pause button to start the program.

# 2

## Steam

### Steam

- If the Steam option is selected, steam is produced inside the drum at the most effective time to enhance the wash.
- Touch the Steam button on the control panel to select the Steam option. The Steam option symbol will glow, indicating that the option has been selected.
- You can select more wash options or touch the Start/Pause button to start the program.

### Aroma

- This option can be used to remove bad odours from the laundry.
- Touch the Aroma button on the control panel to select and deselect the Aroma function.
- The Aroma symbol will glow, indicating that the option has been selected.

### Note

- Steam option can be selected for Cotton, Synthetic, Mix/Daily, Anti-Allergen, Wash+ Dry 4Hr, Bulky, Baby Wear, Steam & Dry, Refresh and Power Steam programs.
- It is normal that steam may not be visible during the wash/steam cycle.
- Do not touch the door during the steam cycle as the surface may be very hot.
- Do not attempt to open the door forcibly or reach into the machine during the steam cycle. The steam can cause severe burns.

### Tub Clean Program

Run this program to eliminate any impurities, scaling, bacteria and unpleasant smell from the washing machine.

Before running the Tub Clean program, empty the washing machine drum; there should not be any clothes in the washing machine during the Tub Clean program.

To run the Tub Clean program—

### IMPORTANT

- Do not put laundry in the washing machine during tub Clean.
- Do not use any Descale or any cleaning agents/additive with Tub Clean program.
- Switch ON the washing machine.
- Tub Clean program can only be selected via My IFB App. Display will show Tub for 1 sec, then clean for 1 sec and then Program Time for 1 sec.
- The Spin & Dry LED will glow on the control panel.
- Press Start/Pause button to start the Tub Clean program.
- END message will be displayed when program finishes.

**Note** If you do not regularly use washing programs with temperatures over 60°C, it is recommended to run the Tub Clean program at least once per month.


### Dry/Clear

Touch the Dry button on the control panel to select the dry options available. To scroll through them, touch the Dry button until the desired option is highlighted. Different options such as Iron Dry, Cupboard Dry, Gentle Dry, and Repeat can be selected by using the Dry button. The corresponding symbol will glow once the desired option is selected. Other dry option such as Eco dry can be selected via MY IFB app.

### Clear

Use this button to deselect all the dry options selected. Touch and hold this button for 3 secs to clear all the dry modes selected.

# 2

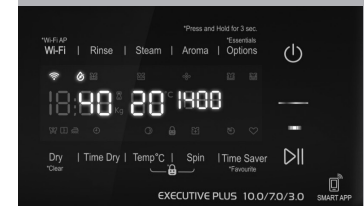

## Dry \*Clear



### To select the Dry option with program/only Dry

- Select the required program for washing. The Dry option LED will flash and the default dry option LED symbol will glow (which can be deselected).
- Dry options can be selected/deselected using the Dry button on the control panel.
- The first press of the Dry button will select Iron Dry. Every subsequent press of the Dry button will select the other dry options in the following sequence— Cupboard Dry, Gentle Dry, and Repeat.
- The selected Dry option LED will glow and the available Dry option LED will flash.

**Note** Dry option is available for Cotton, Synthetic, Mix/Daily, Express 15', Baby Wear, Steam & Dry, Anti Allergen, Refresh, Power Steam, Wash + Dry 4 Hr, and Wash + Dry 2 Hr programs.



### Delay Start

- Before starting a program, you can specify the time after which the program starts.
- This option can be selected or deselected by using My IFB mobile app.
- The Delay Start can be set from a minimum of 30 minutes to a maximum of 19 hours.
- A program time in steps of 30 minutes up to the first hour and in steps of 1 hour up to 19 hours can be selected.
- You can select more wash options or touch the Start/Pause button to start the program.

### Child Lock

- You can safeguard your washing machine to prevent any unintentional changes to the selected options and to the program sequence by activating the Child Lock.
- To select the Child Lock, touch the Spin and Temperature buttons simultaneously for 3 secs.
- The Child Lock symbol will glow on the LED display if the Child Lock has been activated.
- No changes can be made while the program is running.
- If the appliance is switched OFF and then back ON while a program is running, the program will continue from the point at which it was interrupted.
- The door will remain locked at the end of the program.
- You can disable the Child Lock by touching the Spin and Temperature buttons simultaneously for 3 secs till the Child Lock symbol goes OFF.

Temp°C | Spin  


**Drum Lamp**

- Drum Lamp will remain ON for a maximum of 5 mins after power ON, during pause and during END of program.
- The Drum Lamp will go OFF automatically after 5 mins. Open the door to switch the Drum Lamp ON.
- During Pause mode, the Drum Lamp will remain ON for 1 min.
- The Drum Lamp switches OFF once the program has started.

**Note** For the Cotton Eco program, the Drum Lamp will not come ON after program END.

**WiFi/WiFi AP**

- Refer WiFi instructions booklet for further assistance.

**Start Washing/Drying**

- Touch the Start/Pause button to start washing/drying. The Start/Pause LED will glow.
- Program status LED symbols will glow as the program progresses.
- To interrupt the cycle and change wash/dry options or to add/remove laundry, touch the Start/Pause button once to pause the program.
- Door status will be displayed after touching the Start/Pause button. The door cannot be opened if the water inside the drum is above the rubber sleeve level or if the water temperature inside the drum is too high.

**Note** The Start/Pause LED will flash only after closing the door. Close the door firmly and then press Start/Pause.

**Finishing**


Please ensure you take the following steps after the program has ended to ensure the safety of your machine.

- For washing: When program ends, 'End' message will be shown on the display.
- The door can be opened after the above message is displayed.
- For drying: "Cd and End message will toggle on the display since the temperature inside the drum is high.
- The program for cooling the drum runs until the temperature in the drum has dropped.
- This process will last for 15 min with Cd and End message toggling on the display.

**Note** The door cannot be opened during this step. Wait till END message is displayed to open the door.


- You can touch the Start/Pause button or power OFF the machine to end this process. The door will then be unlocked and the laundry can be taken out.
- Do not touch the inside of the drum or door surface just after drying as it will be hot.
- The machine has been programmed to switch OFF all visual displays such as LEDs to save energy. The Start/Pause LED will slowly blink after the end of the program. This is in line with the latest Energy Using Product norms (EUP).


**1**

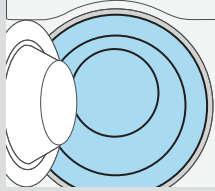

Open door and remove laundry.  
Wipe the moisture from the door and door seal.  
Leave the door ajar to dry the drum.


**2**

 

Express 15' Wash+Dry2Hr  
Mix/Daily Wash+Dry4Hr  
Cotton Spin & Dry  
Synthetic Refresh   
Anti-Allergen PowerSteam®  
Baby Wear CradleWash®  
Bulky Wool

Turn the machine OFF and Switch OFF the input power supply to the washing machine.  
Wipe off the panel and cabinet with a dry cloth to remove the moisture.

**3**

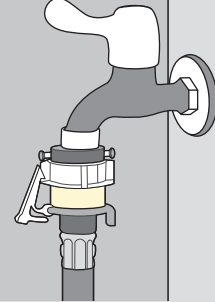

Turn OFF the tap.



## Emergency Door Lock Release

### Note

Emergency Door Lock Release should be used only during power OFF/power failure.

If Emergency Door Lock Release is used during a program, the program will end.


### Precautions to be taken before Emergency Door Lock release





- Wash water and laundry may be hot. Leave to cool down.
- Removing laundry from the drum while it is rotating can cause injury.
- Water spillage from the drum can cause damage. Do not open the door if water can be seen through the door glass. Drain the water using the emergency drain pipe and then release the door lock.

### To use the Emergency Door Lock Release during power failure

The program will continue after the power supply is restored. In case the laundry needs to be removed during power failure, switch OFF the power supply from the mains. Open the filter door, drain the water, if any, through the drain hose and pull down the emergency lever. The door can then be opened.

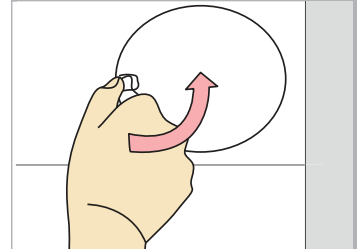

Emergency Lever

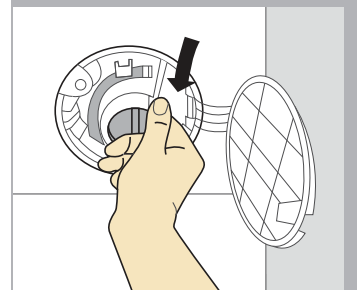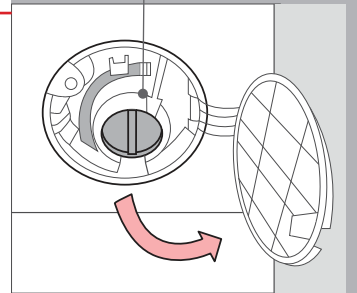



## Washing guide map

Program	Options															
	Pre Wash	Soak	Eco	Time Saver	Anti Crease	Extra Rinse	Hot Rinse	Steam	Aroma	Rinse Hold	Dry	Favourite	Delay	Spin Speed RPM	Temperature °C	Laundry Weight Kg
Wash+Dry 2 Hr	X	X	X	X	X	✓	X	✓	✓●	✓	✓	✓	✓	400-1200	Cold, 30,40	2.5
Wash+Dry 4 Hr	✓	✓	✓	✓●	✓●*	✓	✓	✓	✓●	✓	✓	✓	✓	400-1200	Cold, 20, 30,40	5.0
Spin & Dry	X	X	X	X	✓●*	✓	X	✓	✓	✓	✓	✓	✓	400-1400/No Final Spin	X	6.5
Refresh	X	X	X	✓●	✓●*	X	X	✓●*	X	X	✓	✓	X	X	X	1.0 or (1-3 items)
PowerSteam®	X	X	X	X	X	✓	X	✓●*	✓●*	✓	✓	✓	✓	400-800	X	3.0
CradleWash®	X	X	X	X	X	✓	X	X	X	✓	X	✓	✓	400-600/No Final Spin	Cold, 30, 40	2.0
Wool	X	X	X	X	X	✓	X	X	X	✓	X	✓	✓	400-800/No Final Spin	Cold, 30, 40	2.0
Express 15'	X	X	X	X	X	✓	X	X	✓	✓	✓	✓	✓	400-1200/No Final Spin	Cold, 30, 40	3.0
Mix/Daily	✓	✓	✓	✓	✓●*	✓	✓	✓	✓	✓	✓	✓	✓	400-1200/No Final Spin	Cold, 20, 30, 40	3.5
Cotton	✓	✓	✓	✓	✓●*	✓	✓	✓	✓	✓	✓	✓	✓	400-1400/No Final Spin	Cold, 20, 30, 40, 60**, 95	10
Synthetic	✓	✓	✓	✓	✓●*	✓	✓	✓	✓	✓	✓	✓	✓	400-1200/No Final Spin	Cold, 20, 30, 40, 60	3.5
Anti Allergen	X	✓	✓	✓	✓●*	✓●	✓	✓	✓	✓	✓	✓	✓	400-1000/No Final Spin	40, 60, 95	3.0
Baby Wear	X	✓	✓	✓	✓●*	✓	✓	✓	✓	✓	✓	✓	✓	400-800/No Final Spin	Cold, 40, 60	3.0
Bulky	✓	✓	X	✓	✓●*	✓	X	✓	X	✓	X	✓	✓	400-800/No Final Spin	Cold, 40, 60	2.0
Tub Clean	X	X	X	X	X	X	X	X	X	✓	X	✓	X	X	Cold, 60, 95	X

✓ Option available and can be selected.

X Option not available and cannot be selected.

✓● Available by default and can be deselected.

✓●\* Available by default and cannot be deselected.

**Note** For 3.0 Kg Refresh, deselect the Time Saver option by pressing the Time Saver button on the control panel. For Spin and Dry, Rinse Hold is available only if Extra Rinse option is selected and no Final Spin is available only when all Dry options are de-selected. Program/Options available via My IFB mobile APP—Tub Clean/Eco/Hot Rinse/Delay. Anticrease is not an option for user selection.

\*\*Program setting for BEE test in conformity with IEC 60456 with maximum Spin Speed selection settings.

### Note


To select the Drain cycle:

- Select Spin & Dry program
- Deselect Aroma and Steam.
- Set Spin Speed to 0 RPM.
- Press the Start/Pause button to run the Drain cycle.

## Washing symbols—a guide

	Resistant material
	Delicate fabric
	Washable at 95°C
	Washable at 60°C
	Washable at 40°C
	Washable at 30°C
	Hand wash
	Dry clean only
	Wool seal
	Bleachable in cold water
	Do not bleach
	Do not dry clean
	Dry flat
	Hang to dry
	Dry on clothes hanger
	The item can be tumble dried
	Tumble dry, normal heat
	Tumble dry, reduced heat
	Do not tumble dry

## Drying guide map

Program	Options						
	Cupboard Dry	Eco Dry *	Time Dry	Iron Dry	Gentle Dry	Spin Speed RPM	Laundry Weight Kg
Wash + Dry 2 Hr	X	X	✓	✓●	X	400–1200	2.5
Wash + Dry 4 Hr	✓	X	✓	✓●	✓	400–1200	7.0
Spin & Dry	✓	✓	✓	✓●	✓	400–1400	7.0
Refresh 	X	X	✓●	X	X	X	1.0 or (1-3 items)
PowerSteam®	X	X	✓	X	X	400–800	3.0
Express 15'	X	X	✓	X	X	400–1200	2.5
Mix/Daily	✓	✓	✓	✓	✓	400–1200	3.5
Cotton/Cotton Eco	✓	✓	✓	✓	✓	400–1400	7.0
Synthetic	✓	✓	✓	✓	✓	400–1200	3.5
Anti Allergen	✓	✓	✓	✓	✓	400–1000	3.0
Baby Wear	✓	✓	✓	✓	✓	400–800	3.0

\* Option available only via My IFB APP.

✓ Option available and can be selected.

X Option not available and cannot be selected.

✓● Default and can be deselected only by selecting different Dry option.

**Note** For proper drying, limit large items such as blankets, bath robes, towels etc to 1–2.

During the drying process, if the program is interrupted by pressing the Start/Pause button, starting any other program will display 'Hot' on the display, provided the temperature inside the drum is above 50°C.

**Note** With Cotton Eco 60\*\* program, the actual wash temperature attained will be lower than 60°C, although the wash performance will be at par with the cotton 60°C program.

- Depending on water pressure, water hardness, water inlet temperature, quantity and type of textile, detergent used, foam detection, unbalance detection, degree of soiling, ambient condition, selected additional function and power supply fluctuations, the actual values given in the user manual, or with the machine, can deviate from the declared standard values as they are tested according to laboratory conditions.
- Program time can also skip or extend due to above mentioned conditions.
- The last run program is selected by default.
- Machine detects the weight of the laundry during the program run and automatically adjusts the Time/Rinse Water. Press and hold the Options button once during the program run to check the total number of wash cycles completed by your washing machine.

**Note** The design and specifications (includes colour/shades/aesthetic/features etc.) are subject to change without prior notice due to continuous improvement and product development.

Some of the wash programs are designed to rotate with different drum movements and RPMs. It should not be interpreted as a fault. Do not close the tap during drying phase.

## Key features

### ADVANCED WASH TECHNOLOGY

#### 3D Wash

Jets of water and showers from paddles ensure complete soaking of clothes. Water mixed with detergent gets injected into your clothes with a spraying mechanism for the best wash.

#### Aqua Energie

Energises water to get the best out of detergents and takes it deep inside the fabric to dislodge the dirt.

#### Crescent Moon Drum

Smooth crescent moon grooves on the surface of the drum create a gentle water cushion that prevents damage to fabrics.

#### BLDC Motor Technology

Experience quieter operations and an energy efficient wash with IFB SmartDrive Technology as compared to the conventional universal motor drive.

#### Hot Rinse

For effective and thorough rinsing.

#### 9 Swirl Wash

9 Swirl technology that gently cares for your clothes.



## INTELLIGENT WASH PROGRAMS AND OPTIONS

More than 100 specific, thoughtfully designed programs and options give your clothes a magical experience that is tough on stains and gentle on clothes.

### Time, Energy and Water Saving

Eco, Express 15', Time Saver

### Fabric Friendly

Cotton, Synthetic, Mix/Daily  
Wool, CradleWash<sup>®</sup>

### Hygiene

Baby Wear, Anti Allergen, Tub Clean, Hot Rinse

### Customised for Convenience

Bulky, Spin & Dry, Power Steam<sup>®</sup>, Refresh, Aroma

### User friendly Options

Pre Wash, Soak, Temperature, Extra Rinse, Steam,  
Rinse Hold, Spin Speed, Delay Start, Anti Crease, Hot Rinse

### Powered By AI

A neural network-based algorithm detects the weight of laundry. It then optimizes the wash—duration, water level, wash actions and the level of gentleness needed. "AI" will be shown on the display for the applicable cycles.

**Note** Available on selected models only.

## WASHING MACHINE CARE

### High-Low Voltage Protection

A smart microcontroller continuously monitors the online voltage fluctuations and temporarily stops the program to protect the machine in case the voltage drops below  $150 \pm 10$  V or rises above  $270 \pm 10$  V. The program will resume once the voltage is within safe operating range.

### Program Memory Backup

The program resumes from where it left off in case of power failure. No repetition of cycles saves time, water, power and adds longevity to the machine.



## USER CONVENIENCE

### Auto Imbalance System

This system automatically determines the unbalanced clothes in the machines and redistributes the clothes, making the machine extremely stable in the spin cycle.

### Child Lock

Prevents children from tampering with machine settings.

### Laundry Add

Lets you add laundry even after the wash cycle has started.

### Anti Crease

Reduces wrinkling of clothes after the final spin, making them easy to iron.

### Auto Foam Control System

Extra foam generated in the machine is detected by special sensors and is controlled.

### Tub Clean

 
Eliminates any impurities, scaling, bacteria and unpleasant smells from the washing machine.

### CradleWash<sup>®</sup>

India's first wash program for delicate fabrics provides gentle care that uses a soft to-and-fro, rocking movement.

### Drum Lamp

Drum Lamp provides light inside the drum, helping the user to load or unload the laundry when using the machine in darkness.



# 3

## Get more from your machine

### Tips for best results

#### Before washing

- Empty all pockets.
- Remove metal parts.
- Close any zips and fasten hooks etc before washing.
- Do not wash anything in the machine that is specified as non-machine washable on the wash care label.

#### While sorting

- Separate polyester fabrics from cotton fabrics.
- Try to have a mix of large and small clothes in each wash load.
- Dark clothes should be washed separately and not with whites.

#### While loading

- Load large items first, preferably half the wash load.
- Do not wash single items—add one or two similar items.
- Place small items such as infants' socks, nylon stockings, handkerchiefs etc in a Wash Care bag,, pillow case or something similar as they may get caught around the door. This will also save your laundry from getting lost.

#### Water softening

- In case of hard water, use water softening agents or adjust detergent dosage as recommended by the detergent manufacturer.

# 3

### Easy tips to remove stains

- Ensure you use warm water for soaking or pre washing stained laundry.
- Fresh stains are easier to remove.
- Knowing what kind of stain it is, how old it is, what kind of fabric it is and whether the fabric is colour-fast (check the care label) always helps treat a stain better.
- Always start with cold or warm water as hot water can set in stains. Washing and drying can sometimes set in stains.
- When bleach is recommended, always use a fabric safe one.
- Put the stained area face down on a paper towel or white cloth. Apply the stain remover to the back of the stain. This forces the stain off the fabric instead of through it.

STAIN	TREATMENT
Chewing gum, Adhesive tape, Rubber, Cement	Use ice in a plastic bag to harden the gum. Scrape off what you can and then sponge with white spirits.
Blood	Rinse immediately in COLD water. If stain remains, soak in COLD water with an enzyme pre wash.
Chocolate, Cocoa	Sponge with COLD water and soak in an enzyme pre wash. If stain persists, rub a little detergent and rinse in COLD water.
Coffee	Blot up quickly and rinse out in COLD water. Rub in a little detergent and wash in the maximum temperature allowed for the fabric type.
Cream, Milk, Ice Cream	Rinse in COLD water and wash normally. If stain is still apparent, sponge with white spirits.



# 3

STAIN	TREATMENT
Deodorant	Rub the affected area with white vinegar and rinse out in COLD water. Sponge with white spirits. Treat stiffened areas with enzyme pre wash.
Egg	Soak in a COLD enzyme pre wash, rinse and wash normally.
Fabric Softener	Rub affected areas with bar soap and wash normally.
Fruit	Treat as soon as possible by sponging with COLD water. Rub a little detergent on the stain and wash normally.
Grass	Sponge with white spirits. Rub in an enzyme pre wash and wash normally.
Grease, Oil	Lay the affected area face down on an absorbent cloth and work from the back. Sponge with white spirits or dry cleaning fluid. Wash normally.
Iron, Rust	Apply lemon juice and salt and place in the sun. Wash normally.
Collars, Cuffs, Cosmetics	Pre-treat with pre wash stain remover or rub with bar soap.
Mildew	Wash in WARM water and detergent. Moisten area with lemon juice, dry in the sun and wash normally. If stain persists and fabric allows, use a bleach.
Mud	Brush off dry mud and rinse in COLD water. If stain persists rub in a little detergent and wash normally.


# 3

STAIN	TREATMENT
Paint (Oil Based)	Scrape off any fresh paint and sponge with a non-flammable dry cleaning fluid and wash normally.
Paint (Water Based)	Treat while still wet. Rinse in WARM water and wash normally.
Scorch Marks	Dampen a cloth with hydrogen peroxide, lay it over the affected area and press with a fairly hot iron.
Ink	Some inks may be impossible to remove and washing may set them in. Use a pre wash stain remover, denatured alcohol or non-flammable dry cleaning fluid.
Nail Polish	May be impossible to remove in some cases. Place stain face down on paper towels. Apply nail polish remover to the back of the stain. Repeat, placing paper towels frequently. Do not use acetate fabrics.
Shoe Polish	Liquid: Pre-treat with a paste of granular detergent and water. Paste: Scrape residue from fabric. Pre-treat with Pre wash stain remover or non-flammable dry cleaning fluid. Apply detergent into dampened area and wash using bleach safe for fabric.
Candle wax, Crayon	Scrape off surface wax. Place stain face down between paper towels. Press with warm iron until wax is absorbed. Replace paper towels frequently. Treat remaining stain with a Pre wash stain remover or non-flammable dry cleaning fluid. Hand wash to remove solvent and wash using bleach safe for fabric.

## Maintenance and cleaning of your washing machine





### Cleaning the detergent dispenser drawer

- Remove detergent residues regularly.
- Pull out the detergent dispenser drawer.
- Clean the detergent dispenser drawer with warm water.
- Clean the siphon. Remove the siphon from the compartment and wash under running warm water.
- Detergent residues can build up in the water jets on top of the detergent dispenser drawer housing.
- Before fixing the detergent dispenser drawer, use a bottle brush to clean them out.

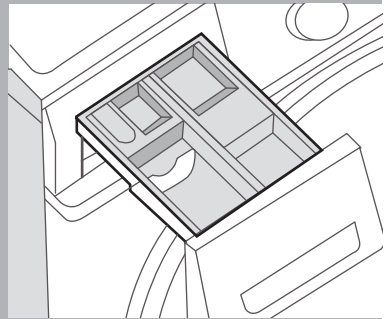

### Cleaning the water hose mesh filter

- Turn OFF taps. Disconnect power supply to the machine. Unscrew the inlet hose from the machine and tap. Drain water from the hose.
- Remove the filter mesh from the tap end of the inlet hose and clean under running water with a brush.
- Pull the sieve out of the magnetic valve with a pair of flat nosed pliers. Clean the sieve under running water with a brush. Then fit the sieve back into the valve.

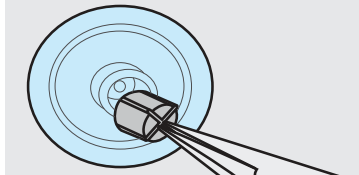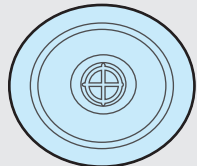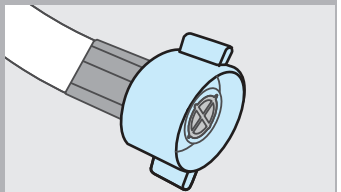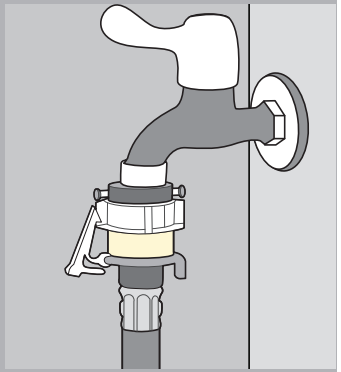


- Screw the inlet hose back to the machine and the tap. Ensure that the sieve and filter are in place. Turn ON the water tap to check if the connection is watertight.


**Note** Presence of excess dirt/sediments/sand in water can affect the wash quality as well as the reliability of water inlet valve.

### Cleaning the filter

- Filter should be cleaned frequently in order to increase the life of the drain pump.

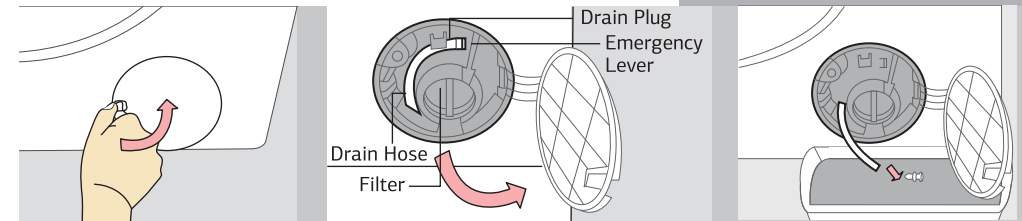

- Open the detachable bottom door by using a coin or key.
- Place a shallow container near the bottom door. Pull out the drain hose and open the drain plug to drain the water from the machine into the container.
- After draining the water through the drain plug, open the filter by rotating it anti-clockwise and remove foreign objects like coins, pins or hooks, if any.

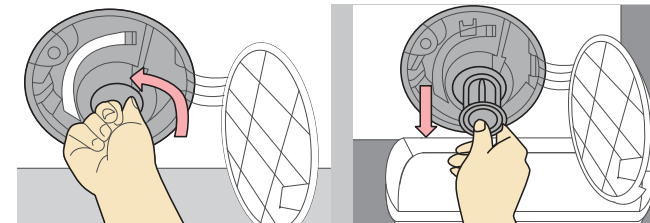

- Tighten the filter and drain plug to their original positions and close the bottom door.
- Do not open the filter during a program run.

# 3

## Use of Descalant

- Use Descale minimum after 24 months of installation.
- Do not use Descale with Tub clean. Tub clean does not need any additive.
- Use Descale after 6 months or more as per hardness of water in your water supplies.
- Use only one Descale packet one time. Do not use more.



DESCAL  
Appliance Descaler  
brought to you by IFB.  
Call IFB Care for details.

**IFB**  
essentials

**DESCAL**  
Appliance Descaler

I'LL REMOVE  
LIMESCALE  
& MAKE YOUR  
APPLIANCE  
**LIVE**  
LONGER



## Cloth weights

### Bottoms

Lungi/Dhoti	200 g
Skirts	200 g
Trousers	250 g
Jeans	400 g

### Tops

Cotton shirts	280 g
Other shirts	200 g
Cotton blouses	140 g
Other blouses	100 g
Woollen sweaters	400 g
Heavy sweaters	300 g
Light sweaters	150 g

### Other clothes

Cotton saree	650 g
Synthetic saree	350 g
Bath towels	600 g
Hand towels	250 g
Pyjama kurta	400 g
Panties	60 g
Cotton vests	100 g
Underslips	100 g
Long socks, 2 pairs	150 g
Short socks, 2 pairs	85 g
6 handkerchiefs	85 g
12 napkins	1.1 Kg

### Sheets

Cotton (double)	1 Kg
Cotton (single)	500 g
Non cotton (double)	650 g
Non cotton (single)	400 g

### Pillow slips

Cotton pillow slips	110 g
Other pillow slips	85 g

### Tablecloths

Small	230 g
Large	600 g
Table napkins (4)	150 g

### Bedsread

	3 Kg
--	------

### Blankets

Wool	2 Kg
Acrylic	1.5 Kg



Laundry Items	10 Kg	7 Kg	3 Kg
Bath towels	4	2	1
Shirts	5	4	1
Blouses	4	3	1
Skirts	5	4	1
Pair of pants	2	1	1
Pairs of jeans	3	2	0
T-shirts	4	3	1
Sets of pyjamas	4	4	1
Tea towels	4	2	1

Let's make washing easier.  
Here is a list of clothes  
and their approximate  
weights to help you figure out  
a perfect wash load.

The chart indicates average weights of clothes. The recommended weights of your wash load should not be exceeded to ensure that your washing machine gives your clothes an effective wash. Suggested weights are approximate and may vary.

# 4

## Useful information about your machine

### Troubleshooting

When the washing machine does not function properly, check the following points before you contact your service provider.

#### SYMPTOM LED Display does not glow.

PROBABLE CAUSE	SOLUTION
<ul style="list-style-type: none"> <li>Power supply is not turned ON.</li> <li>Electrical power cord may not be plugged in or connection may be loose.</li> <li>Program not selected.</li> </ul>	<ul style="list-style-type: none"> <li>Ensure that the supply mains switch is ON.</li> <li>Make sure that the plug is plugged in and check for loose connection in plug/socket.</li> <li>Ensure that the program is selected.</li> </ul>

#### SYMPTOM Washing machine door does not open.

PROBABLE CAUSE	SOLUTION
<ul style="list-style-type: none"> <li>Machine is in operation.</li> <li>Door open not possible.</li> <li>Child Lock is active.</li> <li>Refer Emergency Door Lock Release note.</li> </ul>	<ul style="list-style-type: none"> <li>Check if the program is active. If yes, pause the program check door symbol indication. For safety reasons, the washing machine door cannot be opened when water level temperature or speed is too high.</li> <li>Check if 'dLE' message is shown on the display.</li> <li>Disable the Child Lock and try to open the door.</li> </ul>

#### SYMPTOM Program does not start.

PROBABLE CAUSE	SOLUTION
<ul style="list-style-type: none"> <li>Machine Start/Pause button not pressed.</li> <li>Water supply tap not turned ON/ no water supply/low water pressure</li> <li>Door not closed properly.</li> <li>Program either in Pause/Soak or Rinse Hold mode.</li> </ul>	<ul style="list-style-type: none"> <li>Ensure that the Start/Pause button is pressed. Start/Pause LED will glow when touched.</li> <li>Open tap fully and ensure that there is water supply with normal water pressure.</li> <li>Open and close the door firmly.</li> <li>Check the status on the display and refer to the user manual.</li> </ul>

# 4

#### SYMPTOM Water does not enter into machine. Detergent not being flushed into the drum.

PROBABLE CAUSE	SOLUTION
<ul style="list-style-type: none"> <li>Water supply tap not turned ON/ no water supply/low water pressure.</li> <li>Door not closed properly.</li> <li>Bent inlet hose, sieve or inlet valve/inlet hose clogged.</li> </ul>	<ul style="list-style-type: none"> <li>Open the tap fully and ensure that there is water supply with normal water pressure.</li> <li>Open and close the door firmly.</li> <li>Check if the inlet hose is bent or sieve is blocked.</li> </ul>

#### SYMPTOM Suds escaping from detergent dispenser tray. Excessive foam in drum. Residues of detergent on clothes.

PROBABLE CAUSE	SOLUTION
<ul style="list-style-type: none"> <li>Detergent used is not a front load detergent.</li> <li>Excessive detergent used.</li> <li>Overloading of clothes.</li> <li>Cold wash program.</li> <li>Low water pressure.</li> </ul>	<ul style="list-style-type: none"> <li>Use detergent recommended for front load washing machines only.</li> <li>Reduce the detergent dosage.</li> <li>Do not overload the washer.</li> <li>Use hot wash program.</li> <li>Start when water pressure is normal.</li> </ul>

#### SYMPTOM Water leakage from machine.

PROBABLE CAUSE	SOLUTION
<ul style="list-style-type: none"> <li>Inlet hose connection loose.</li> <li>Filter not tightened.</li> <li>Inlet hose leaking.</li> </ul>	<ul style="list-style-type: none"> <li>Check and tighten the inlet hose connection.</li> <li>Check and tighten the filter.</li> <li>Contact IFB Care.</li> </ul>

#### SYMPTOM Machine does not drain.

PROBABLE CAUSE	SOLUTION
<ul style="list-style-type: none"> <li>Filter clogged.</li> <li>Drain hose end above 1 metre from the floor level.</li> <li>Drain hose kinked or clogged.</li> </ul>	<ul style="list-style-type: none"> <li>Check and clean the filter.</li> <li>Drain hose should be placed between 1 metre to ground level.</li> <li>Clean and straighten the drain hose.</li> </ul>

Wash only machine washable door mats/bath mats in the washing machine. Washing of non washable mats will cause lint/fibre build up and may lead to clogging of the drain pump.

**SYMPTOM Machine does not spin or clothes stay wet.****PROBABLE CAUSE**

- Load is too small. Unbalanced load.
- Overloading of clothes.
- Spin Speed is set to 0 RPM or lower Spin Speed is selected.
- Rinse Hold option selected.
- Filter clogged.
- Excessive/high foaming detergent.

**SOLUTION**

- Add 1 or 2 similar items to help balance the load. Rearrange load to allow proper spinning.
- Load clothes as per the fabric type and capacity recommended for chosen program.
- Select higher Spin Speed.
- At Rinse Hold stage, press Start/Pause button.
- Check and clean filter.
- Use detergent recommended for front load washing machines only.

**SYMPTOM Machine vibrates more during spinning.****PROBABLE CAUSE**

- Machine not levelled properly.
- Filter clogged partially.
- Unbalanced load.

**SOLUTION**

- Check and level the machine.
- Check and clean the filter.
- Add 1–2 similar items to help balance the load. Rearrange load to allow proper spinning.

**SYMPTOM Motor noise.**

- It is normal for noises to be heard while motor is running.

**SYMPTOM Pump noise.**

- It is normal for noises to be heard from the pump during the start up and final stage of draining. However, check for filter clogging.

**SYMPTOM Program cycle time delayed.  
Balance time on display remains unchanged.**

- It is normal as the washing machine time may vary depending upon the type and quantity of laundry, inlet water pressure, inlet water temperature, variations in power supply and other usage conditions.
- If there is an unbalanced load then the machine may make several attempts to redistribute the clothes in order to minimise the vibrations resulting in extended program duration.

**SYMPTOM Poor soil removal.****PROBABLE CAUSE**

- Incorrect detergent dosage.
- Use of cold wash program.
- Load size not as per capacity.
- Stains on clothes.
- Mix of heavily soiled items with lightly soiled items.

**SOLUTION**

- Use correct amount of detergent for load size and water hardness.
- Use hot wash program.
- Use correct load size.
- Pre-treat stain and any soil according to directions given under 'Easy tips to remove stains'.
- Separate heavily soiled items from lightly soiled ones.

**SYMPTOM Blue stains on clothes.****PROBABLE CAUSE**

- Excessive fabric additives/cheaper quality additives.

**SOLUTION**

- Do not overfill fabric softener and do not pour liquid fabric softener directly onto fabric.

**SYMPTOM Black or grey marks on clothes.****PROBABLE CAUSE**

- Less quantity detergent/hard water.
- Some clothes with existing stains.

**SOLUTION**

- Use correct amount of detergent for load size, amount of soil and water hardness.
- Do not mix good clothes with stained clothes.

**SYMPTOM Yellow or brown rust stains.****PROBABLE CAUSE**

- Dirty incoming water.

**SOLUTION**

- Before washing run water for a few minutes to clean lines or start the program only when the water is clean.
- To restore a discoloured load of whites, use rust remover safe for fabric.

**SYMPTOM Residue of detergent.****PROBABLE CAUSE**

- Overloading of clothes.
- Excessive use of detergent.
- Cold wash program.

**SOLUTION**

- Do not overload the washer.
- Use proper amount of detergent.
- Use hot wash program.

**SYMPTOM Buttons not working.****PROBABLE CAUSE**

- Button not pressed/touched properly.

**SOLUTION**

- All the buttons are sensitive and need to be gently tapped/touched with the finger.

If the problem persists, contact IFB Care.

# 4

## Display

### The LED Display gives you complete information

- Program selection
- Wash/dry options selection
- Balance time of the program
- Program status
- Problem/fault indications, if any
- Child Lock selection
- WiFi status



For any code which is not present in the following list or if the suggested solution does not fix the problem, call IFB Care or an authorised dealer.

DISPLAY MESSAGE	PROBABLE CAUSE	SOLUTION
	At the Rinse Hold step this code will toggle.	Touch Start/Pause button
	Code will be displayed during Delay Start mode.	or select Drain program.
	Door not closed properly. Door not locked.	Open and then close the door properly.
	Door not getting unlocked.	Switch OFF the washing machine, wait for 2 mins and check if the door will open. Do not try to open the door forcibly. If the door cannot open or if the same message is displayed, switch OFF the washing machine and contact IFB Care.

# 4

DISPLAY MESSAGE	PROBABLE CAUSE	SOLUTION
	Water tap turned OFF. Water supply not available or low water pressure.	Turn ON the tap. Washing machine will start automatically on resumption of water supply.
	Sieve/filter blocked in water inlet hose. Bent/damaged water inlet hose.	Clean the sieve filter (Refer topic Cleaning the water hose mesh filter). Remove bend/damage.
	Cloth trapped between drum and door area.	Clean the sieve filter (Refer topic Cleaning the water hose mesh filter). Remove bend/damage.
		Switch OFF the washing machine and wait for 2 secs. Run Drain program. After END, rearrange the clothes and restart the required program. If the same message appears again, switch OFF the appliance and contact IFB Care.
		Switch OFF the washing machine and wait for 2 mins. Run Drain program. After END, rearrange the clothes and restart the required program. If the same message appears again, switch OFF the washing machine and contact IFB Care.
		Switch OFF the machine by pressing the power button and wait for 2 secs, then restart. If the same message appears, switch OFF the washing machine and contact IFB Care.

# 4

## DISPLAY MESSAGE

## PROBABLE CAUSE

## SOLUTION

dP

Water not drained.

Touch Start/Pause button to restart the drain.

Filter is blocked.

Switch OFF the appliance. Drain out the water using the drain pump and then clean the filter.

Exhaust hose clogged/bent.

Clean exhaust hose/remove bend.

dht/  
IntC/FAn

Press the Start/Pause button to pause or start the program. Switch OFF the machine by pressing the Power button and wait for 2 secs, then restart. If the error persists, switch OFF the washing machine and contact IFB Care.

Hot

Water temp is above 60°C at the start of program.

Start New/Drain program once the water cools down to approximately 60°C. Switch OFF the washing machine, wait for 2 secs and restart. If the same message appears again, switch OFF the washing machine and contact IFB Care.

# 4

## DISPLAY MESSAGE

## PROBABLE CAUSE

## SOLUTION

oFL

PrS

H/270

Input voltage is high.

Washing machine will start automatically after the voltage decreases to the safe operating level. If this error display persists/occurs frequently, contact your electrician to locate the fault in the electrical system.

Lo/150

Input voltage is low.

Machine will start automatically after the voltage increases to the safe operating level. If this error display persists/occurs frequently, contact your electrician to locate the fault in the electrical system.

Unb

Laundry load is unbalanced.

If the laundry load is small (eg a pair of jeans, 2-3 Turkish towels, a bathrobe etc) it can lead to an unbalanced condition. Add 1-2 similar items to help balance the load and rearrange the load to allow proper spinning.



## Technical specifications

<b>Model</b>	EXECUTIVE 10/7.0/3.0 Kg 1400 RPM
<b>Power Supply</b>	220–240 V Single Phase 50 Hz
<b>Dimensions</b>	62.3 cm (D) x 59.8 cm (W) x 85.8 cm (H)
<b>Net Weight</b>	75 Kg
<b>Capacity</b>	3.0 Kg of dry cotton 7.0 Kg of dry cotton 10 Kg of dry cotton
<b>Wash Care Program</b>	14 (>100 with Options)
<b>Selector Buttons</b>	Spin Speed, Aroma, Time Saver, Time Dry, Temperature, Dry, WiFi, Extra Rinse, Steam, Options, Start/Pause, Power ON/OFF
<b>Selector Knob</b>	Program Selector
<b>Spin Speed</b>	400–1400 RPM or Spin Cancel
<b>Water Consumption*</b>	≤ 9 Ltr/Kg/Cycle
<b>Water Pressure</b>	0.3–10 Bar (3.5–10 Ltr/min)
<b>Rating</b>	Refer Product Label
<b>Drain Pump Rating</b>	30 W
<b>Heater Rating</b>	2000 W
<b>Drum</b>	Stainless Steel

\*Program setting for BEE test in conformity with and IEC 60456.



**IFB  
CARE**  
CALL 08045845678/  
08069545678



**Service record**

Complaint	Comments, attended by	Date



**IFB**  
Set Yourself Free

Businesswoman  
in the morning

Blogger by evening  
Indulge in your passion.  
Do more with your time.  
Set Yourself Free with IFB.

### Installation report

Model \_\_\_\_\_ Serial no \_\_\_\_\_

Customer's name \_\_\_\_\_

Phone (residence) \_\_\_\_\_ (office) \_\_\_\_\_

Address \_\_\_\_\_  
\_\_\_\_\_

### Installation check points

Machine delivered on \_\_\_\_\_

Machine installed on \_\_\_\_\_

### Service engineer to tick appropriately

- |   |                              |                             |
|---|------------------------------|-----------------------------|
| • Any major transit damage to the machine observed?   | yes <input type="checkbox"/> | no <input type="checkbox"/> |
| • Supply voltage at the time of installation?   | <input type="text"/> Volt    |                             |
| • Earthing available?   | yes <input type="checkbox"/> | no <input type="checkbox"/> |
| • Plug point (16 Amp 220–240 V with MCB or other automatic short circuit protection devices) available? | yes <input type="checkbox"/> | no <input type="checkbox"/> |
| • If MCB is not available, has the customer been advised to correct the same?                           | yes <input type="checkbox"/> | no <input type="checkbox"/> |
| • Advised to turn OFF machine after use?  | yes <input type="checkbox"/> | no <input type="checkbox"/> |
| • Is the input water pressure as per machine requirement?   | yes <input type="checkbox"/> | no <input type="checkbox"/> |
| • What is the input water pressure at the water point?  | <input type="text"/> Bar     |                             |
| • Machine levelling procedure and importance explained?   | yes <input type="checkbox"/> | no <input type="checkbox"/> |
| • Rat protection mesh installed?  | yes <input type="checkbox"/> | no <input type="checkbox"/> |
| • Detergent and bleach recommendation, relevant Detergent Dispenser Tray chambers explained?            | yes <input type="checkbox"/> | no <input type="checkbox"/> |
| • Safety instructions explained?  | yes <input type="checkbox"/> | no <input type="checkbox"/> |
| • Explained all features of the washing machine to the customer?  | yes <input type="checkbox"/> | no <input type="checkbox"/> |
| • Display function explained (if applicable)?   | yes <input type="checkbox"/> | no <input type="checkbox"/> |

**Service engineer to tick appropriately**

• Explained procedure for cleaning coin trap/rubber sleeve/inlet hose filter?	yes <input type="checkbox"/>	no <input type="checkbox"/>
• Explained common error codes (if applicable)?	yes <input type="checkbox"/>	no <input type="checkbox"/>
• Explained unbalance error in Spin mode?	yes <input type="checkbox"/>	no <input type="checkbox"/>
• Explained Program Selection, program and button options (or knobs), indicator lamp/status LED/LCD function, buzzer function (if applicable)?	yes <input type="checkbox"/>	no <input type="checkbox"/>
• Explained troubleshooting?	yes <input type="checkbox"/>	no <input type="checkbox"/>
• Checked following for proper order?		
- Inlet hose	yes <input type="checkbox"/>	no <input type="checkbox"/>
- Detergent Dispenser Tray	yes <input type="checkbox"/>	no <input type="checkbox"/>
- Drain hose	yes <input type="checkbox"/>	no <input type="checkbox"/>
• Informed user of the need to keep drain hose straight and maximum height of draining?	yes <input type="checkbox"/>	no <input type="checkbox"/>
• Machine installed on trolley?	yes <input type="checkbox"/>	no <input type="checkbox"/>
• Genuine IFB trolley?	yes <input type="checkbox"/>	no <input type="checkbox"/>
• Warranty terms explained?	yes <input type="checkbox"/>	no <input type="checkbox"/>

Note: MCBs and proper earthing are critical to the safety of the appliance. Operating the appliance without them is not advisable and may be injurious and fatal.

Installed by (Engineer) \_\_\_\_\_ Signature \_\_\_\_\_

**Customer's response**

• The installation person was courteous and helpful      Yes     No

• I would describe my experience with the process of installation as  
 Unacceptable     Non-satisfactory     Satisfactory     Very satisfactory

I certify that the above information and checks have been done to my satisfaction and I am fully satisfied with the installation of the washing machine. The above points have been explained and I have done the installation as per above.

\_\_\_\_\_  
**Customer's Signature**                      **Date**                      **Time**

**Warranty—Customer copy**

Model \_\_\_\_\_

Serial no \_\_\_\_\_

Dealer's name \_\_\_\_\_

Date of purchase \_\_\_\_\_

Customer's name \_\_\_\_\_

Address \_\_\_\_\_

\_\_\_\_\_

\_\_\_\_\_

Phone \_\_\_\_\_

Email \_\_\_\_\_

Motor serial no \_\_\_\_\_