

WARRANTY TERMS & CONDITIONS

The warranty will be effective only if the warranty card is completed and returned to company within 15 days from the date of purchased. our guarantee the provision of free services of KRISONS product within the warranty period from its date of purchased from Authorised dealer.

This period and conditions of our services are as follows :

- The warranty covers services by our KRISONS Authorised service center. The warranty card together with invoice must be presented when servicing is required. The warranty card is irreplaceable in the event of lose.
- Repair services will be provided for defects arising from normal usage for the following period commencing from the date of purchase from KRISONS Services center. (parts would be replaces when necessary)
 - Electrical parts 6 months
 - Technical services free 6 months
- Under the following circumstance, service and parts will be chargeable even within warranty period.
 - Failure to present the warranty card and invoice when service is required Full particulars not clearly shown or alterations made against information. For E.g. Alteration of date of purchases. serial number altered or removed.
 - This unit being tempered with, altered in any way by any unauthorised technicians or which has been subjected to misuse, negligence or accident. This warranty does not cover damage occurring in transit by or from the customer.
 - The defect is caused by the attack of household pests, fire lighting, natural disasters pollution, abnormal voltage or the usage of generator.

Panel Function Cylinder Black, Red Star, Blue Star, Silver Star

Output Power :

Front Speakers : 20w x 2 (THD+N=10%, 1KHz)

Speakers Unit : Frontspeakers : 4"/3 Ω x2

Power : 3.7 V / 1800 mAh

Compatible : Smartphone's and tables supporting Bluetooth (A2DP) Protocol.

Frequency Response :

Front Speakers : 840 Hz - 10 KH

Separation :> 35 db

s/nRatio : 65db

- Main Unit - 1Pc.
- RemotecControl-1Pc.
- Wired Mic-1Pc
- Operating Manual - 1Pc.
- Chargeable Cable - 1Pc.
- Warranty Card.

Marketing and Manufacturing by :

ZYTEL ENTERPRISE PRIVATE LIMITED

Address : A-137, 2nd Floor, Okhla Industrial Area, Phase-2, New Delhi-110020, INDIA

E-mail : service@krisons.com

Website : www.krisons.com

Customer Helpline No. : +91 9910016757, 8287124581

(Timing : 10.30 AM-6.00PM (Monday - Saturday))

USER MANUAL

KRISONS®



**Cylinder Black
Red Star, Blue Star, Silver Star**

Bluetooth Speaker


Dear User,

Thank you for purchasing this products. You are requested to read this manual carefully before using this device.

CAUTION :


- Do not place the system in the high-temp and humid environment prevent it from raining or rough handling and strong shock.
- In order to avoid electric shock and other accidents do not open the set for repair without any professional guidance.
- In case fragments or other liquids is accidentally sprinkled inside the cabinet please switch off power immediately in case of repair please visit to the professional maintenance for help.
- Switch off the power and take off the charger from the power socket when the system is not on work.
- Keep it safe from water drops or splashing water. and no liquids container should be a allowed to be put on its top side.
- Keep the cabinet vent away from the wall by least 20 mm the vent should not be blocked from air. Do not keep it close to the fire.

Key Function of Front Panel & Back Panel Panel Function Cylinder Black, Red Star, Blue Star, Silver Star

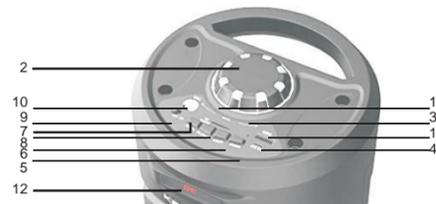

- USB/ Pen Drive Port.** (You can play Audio songs in MP3 Format)
- Rotary Volume control.**
- Charging indicator.** (During charging this will indicate in Red)
- 5V Charging socket.** You can charge with any charger whose capacity is Minimum 1 Amp or More
- Mode.** Short press Change the function to FM, Bluetooth, Line in/Aux & USB.
Long Press You can switch the Front Speaker LED to OFF & ON
- Next ►► (USB):** Short press will be next song. Long press will be fast forward the saong.
(FM): Short press preset program will change (+) Long press will be manual search of FM station (+).
(Bluetooth): Next Song.
- Previous ◀◀ (USB):** Short press will be Previous song Long press will be fast rewind the song. .
(FM): Short press preset program will change (-) Long press will be manual search of FM station (-)
(Bluetooth): Previous Song
- Play/Pause: Short press: (FM,USB & Bluetooth):** You can play & pause the songs. Long Press: its work only in FM, if you long press in FM, it will Auto tune the FM channel and memorized also sequentially
- ON/ Off Switch.**
- Mic Socket.**
- Micro SD Card Socket:** (You can play Audio songs in MP3 Format)
- Display.**

Remote Key Function

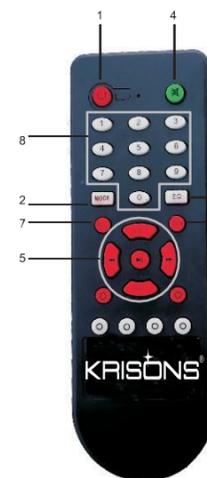

- Power :** While press off the product comes in standby mode, display goes off No function will work.
- Mode : Short press** change the function to FM, Bluetooth, Line in/Aux & USB.
- Equalizer Function :** Select Audio Effect through Pre equalized (e.i.) Jazz, Rock, Pop, Classic, Country Normal.
Note : This function will work only during USB Play & Blouthooth.
- Mute :** While press you can mute the sound.
- CURSOR BUTTON :**
 - Volume :** +/- Volume will be Increase or Decrease in all mode.
 - Next ►► (USB) : Short press** Next song will be change **Long press** Will be Fast forward the song.
(FM) : Short press Next preset programme will be change
Long Press will be Manual search of FM programme.
(Bluetooth) : Next Song will be play.
 - Previous ◀◀ (USB) : Short press** Previous song will be change **Long press** Will be Fast rewind the song.
(FM) : Short press Previous preset programme will be change
Long Press will be Manual search of FM programme.
(Bluetooth) : Previous Song will be play.
- Play/Pause (USB, FM & Bluetooth) :** You can play & pause the songs.
Long Press Its work only in FM, if you long press in FM it will auto tune the FM Channel & memorized also sequentially.
- SCAN :** Auto tune the FM channel and memorized also sequentially.
- REPEAT :** You can choose option of song play Repeat Random, folder option while USB play.
- Numeric Buttons :** (0-9) You can select song track while Playing USB drive and change FM Programme directly.

WARRANTY CARD

WARRANTY REGISTRATION CERTIFICATE

Mr/Mrs/Ms First Name :

Last Name :

Address

.....

Contact No.

Model No.

Serial No.

Date of Purchased :

Invoice No.

Retail outlet/Website name Where Purchased :

.....

Purchased Order No./Date

