


# Aura Buds

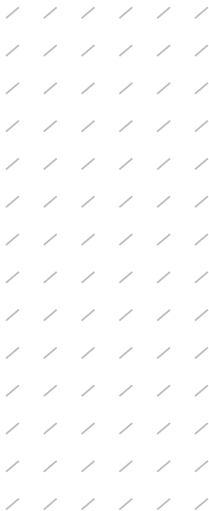

Please refer to this manual before using the product

## **TABLE OF CONTENTS**

• Package Contents and Features	<b>01</b>
• Specifications	<b>02</b>
• Power and Pairing	<b>03</b>
• Reset and Sizing	<b>04</b>
• Charging	<b>05</b>
• Controls	<b>06</b>
• Warranty	<b>08</b>
• Safety	<b>09</b>

## PACKAGE CONTENTS



Noise Aura Buds x 1



USB Type-C charging cable x 1



Charging case x 1



S X 1

L X 1

Ear-tips

User manual x 1

## **SPECIFICATIONS**

- Earbud weight: 4g each earbud
- Speaker driver size: 12mm
- Supported profiles: AAC, SBC
- Bluetooth version: 5.3
- Earbud charging time: Up to 45 minutes
- Working voltage: 5V
- Standby time: Up to 200 hours
- Playtime: Up to 8 hours at 70% volume
- Bluetooth range: 10m
- Waterproof rating: IPX5
- Working temperature: 0-50°C

## **CHARGING CASE SPECIFICATIONS**

- Charging case weight: 34.1g
- Charging port: Type-C
- The number of earbud charges from the case: Up to 6 times
- Case charging time: up to 90 minutes
- Total playtime with charging case: Up to 60 hours

## POWER ON

The earbuds will automatically turn on as soon as the charging case is opened.

## POWER OFF

The earbuds will automatically turn off once placed inside the charging case and the case is closed.

## PAIRING

- Open the charging case.
- Turn on the Bluetooth of your device.
- Select 'Add Device' and select Noise Aura Buds from the list of devices.
- Your Noise Aura Buds are now paired with your device and ready to use.

Note: Your Noise Aura Buds will automatically connect to the last paired device as soon as you open the charging case.

## DUAL PAIRING

- Connect your Aura Buds with Device 1.
- Turn off the Bluetooth of Device 1, and connect Noise Airwave with Device 2.
- Turn on Bluetooth of Device 1, both the devices will be paired and are ready to use.

 


## RESET

- Make sure your earbuds are fully charged.
- On your paired devices, delete/remove Noise Aura Buds from the list of paired devices in the Bluetooth menu.
- Open the charging case and take out the earbuds.
- Long press and hold the touch surface of both the earbuds for 7 seconds.
- The earbud will give a prompt that they have been reset.
- Put the earbuds back in the charging case.
- Close the charging case and repeat the pairing process.

## CHOOSING YOUR EAR-TIP SIZE

Earphones are fitted with medium-sized tips. However, if you find they don't fit perfectly, please remove and try the small and large ear tips.



Follow the images and chart to learn how to wear earbuds in the right manner.

## CHARGING

### Earbuds

Place both earbuds in the case to charge them.

#### Indication (on case)

- Solid white LED (2 Sec) = Charging



Charging

No LED = Fully charged



Fully charged

### Case

Charge the case via the supplied Type-C charging cable preferably from any PC or laptop as compared to a USB charger.

#### Indication

- Flashing white LED = Charging



Charging

- Solid white LED = Fully charged



Fully Charged

## CONTROLS



### Play/Pause

Tap either earbud twice



Tap twice



Tap twice



### Previous Song

Tap the left earbud thrice



Tap thrice



### Next Song

Tap the right earbud thrice



Tap thrice



### Volume Up

Tap the right earbud once



Tap once



### Volume Down

Tap the left earbud once



Tap once





### Answer Call

Tap either earbud twice



Tap twice



Tap twice



### End Call

Tap either earbud twice



Tap twice



Tap twice



### Reject Call

Touch and hold either earbud for 2 seconds



Touch and hold



Touch and hold



### Voice Assistant

Tap right earbud four times



Tap four times



### Gaming mode

Touch and hold either earbud for 2 seconds



Touch and hold



Touch and hold

## WARRANTY

The warranty covers your Noise product, including accessories against manufacturing defects (if any) for 1 year from the date of purchase.

### Things that are not covered in the warranty

- Unauthorized tampering, modifications or repairs of the product.
- Physical damage of the product on the account of abuse, handling, storage, installation, or testing including any use that is not in accordance with the product manual or documentation, or any other instruction provided along with the Noise product.

For further information on product replacement/refund-related queries, please refer to the terms and conditions mentioned in our online return policy section on [www.gonoise.com](http://www.gonoise.com).

## REGISTER YOUR WARRANTY

[www.gonoise.com/pages/warranty-registration](http://www.gonoise.com/pages/warranty-registration)



SUPPORT AND SERVICE



1 YEAR LIMITED WARRANTY



SCAN ME

## CUSTOMER QUERY

For any assistance, please reach out to us at [support.gonoise.in](mailto:support.gonoise.in)

## SAFETY FOR YOU AND YOUR NOISE AURA BUDS

Follow these tips to get the best out of your new Noise Aura Buds:



Do not expose the earbuds to liquids, moisture or humidity as they have electronics and batteries inside.



Don't try to disassemble your earbuds. There are no user-serviceable parts inside it.



Don't use abrasive cleaning solvents to clean your new earbuds. Wipe them down with a slightly damp cloth if and when necessary.



Try not to drop the earbuds and keep them away from sharp objects such as keys in your pockets.



Remove and clean the earbud tips regularly to ensure that you always enjoy the best sound possible.



Only charge your earbuds from 5V USB ports such as phone chargers and laptops or PCs.



Do not expose the earbuds to extremely high or low temperatures as this may damage the battery or even deform the plastic parts.



Never listen to music at high volume or you may permanently damage your hearing.



Don't throw the earbuds in a fire to dispose it. The internal battery may explode.



Pay attention to your surroundings and never wear any earphones while riding, driving or walking in traffic.

