 


Buds VS104

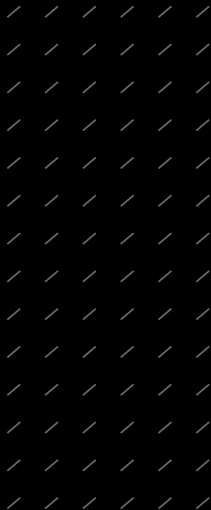

Please refer to this manual before using the product

TABLE OF CONTENT

• Package Contents & Features	01
• Specifications	02
• Power and Pairing	03
• Reset	04
• Charging	05
• Controls	06
• Warranty	08
• Safety	09

PACKAGE CONTAINS



Noise Buds VS104



USB Type-C charging Cable x 1



Charging Case x 1



S X 1

 
 


M X 1



L X 1

FEATURES

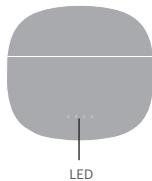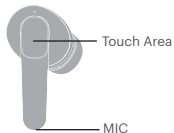

SPECIFICATIONS

Earbud weight: 3 grams each earbud

Speaker driver size: 13 mm

Supported profiles: A2DP, HFP, HSP, AVRCP

Bluetooth version: 5.2

Earbud charging time: Up to 30 minutes

Working voltage: 3.7 V

Standby time: Up to 120 hours

Playtime: Up to 7 hours at 70% volume

Bluetooth range: 10 m

Waterproof rating: IPX5

Working temperature: 0 - 40°C

CHARGING CASE SPECIFICATIONS

Charging case weight: 34 grams

Charging port: USB Type-C

Number of earbud charges from case: Up to 5.5 times

Case charging time: Up to 1.5 hours

Total playtime with charging case: Up to 45 hours

POWER ON

The earbuds will automatically turn on opening the charging case.

POWER OFF

The earbuds will automatically turn off once placed inside the charging case with the lid closed.

PAIRING

- Open the charging case.
- Turn on the Bluetooth of your device.
- Select Add Device and from the list of devices, select Noise Buds VS104
- Your Noise Buds VS104 are now paired with your device and ready to use.

Note: Your Noise Buds VS104 will automatically connect to the last paired device as soon as you take them out of the charging case.



POWER ON



POWER OFF

RESET

- Make sure your earbuds are fully charged.
- On your paired devices, delete/remove Noise Buds VS104 from the list of paired devices in the Bluetooth menu.
- Open the charging case. Take out the ear buds.
- Long press both the earbuds for 5 seconds.
Earbud LED will blink once for 1 second then power off.
- Put earbuds back to the charging case, close the lid.
- Repeat the pairing process.

CHOOSING YOUR EAR TIP SIZE

Earphones are fitted with medium-sized tips. However, if you find they don't fit perfectly, please remove and try the small and large ear tips.

Follow the images and chart to learn how to wear the earbuds in the right manner.



CHARGING

Earbuds

Place both earbuds inside the case to charge them.

Indication

● **Blinking Red LED**



Charging

○ **No Light**



Fully Charged

Case

Charge the case via the supplied Type-C charging cable, preferably from any PC, laptop, or USB charger.

Indication

● **Red LED Blinking**



Charging

● **No LED**



Fully Charged

CONTROLS



Play/Pause

Tap either earbud twice



Tap twice



Tap twice



Previous Song

Long press the left earbud for 2 seconds



Long press
for 2 seconds



Next Song

Long press the right earbud for 2 seconds



Long press
for 2 seconds



Volume Up

During Music: Tap the right earbud once
During calls: Long press the right earbud



Tap once



Long press



Volume Down

During Music: Tap the left earbud once
During calls: Long press the left earbud



Tap once



Long Press



Answer Call / End a call

Tap twice on either earbud to answer
Tap twice on either earbud to end



Tap twice



Tap twice



Reject Call

Long press either earbud for
2 seconds



Long press
for 2 seconds



Long press
for 2 seconds



Voice Assistant

Tap either earbud thrice



Tap thrice



Tap thrice

WARRANTY

The warranty covers your Noise product, including accessories against manufacturing defects (if any) for 1 year from the date of purchase.

Things that are not covered in the warranty

- Unauthorized tampering, modifications or repairs of the product.
- Physical damage of the product on the account of abuse, handling, storage, installation or testing including any use that is not in accordance with the product manual or documentation, or any other instruction provided along with the Noise product.

For further information on product replacement/refund related queries, please refer to the terms and conditions mentioned in our online return policy section on **www.gonoise.com**.

REGISTER YOUR WARRANTY

www.gonoise.com/pages/warranty-registration



SUPPORT AND SERVICE



1 YEAR LIMITED WARRANTY



SCAN ME











CUSTOMER QUERY

For any assistance, please reach out to us at support.gonoise.com



SAFETY FOR YOU AND YOUR NOISE BUDS VS104

Follow these tips and you & your Noise Buds VS104 will be happy together for a very longtime.

-  Do not expose the earbuds to liquids, moisture or humidity as they have electronics and battery inside.
-  Don't use abrasive cleaning solvents to clean your new earbuds. Wipe them down with a slightly damp cloth if and when necessary.
-  Remove and clean the earbud tips regularly to ensure that you always enjoy the best sound possible.
-  Do not expose the earbuds to extremely high or low temperature as this may damage the battery or even deform the plastic parts.
-  Don't throw the earbuds in a fire to dispose of it. The internal battery may explode.
-  Don't try to disassemble your earbuds. There are no user serviceable parts inside it.
-  Try not to drop the earbuds and keep them away from sharp objects such as keys in your pockets.
-  Only charge your earbuds from 5V USB ports such as phone chargers and laptops or PCs.
-  Never listen to music at high volume or you may permanently damage your hearing.
-  Pay attention to your surroundings and never wear any earphones while riding, driving or walking in traffic.

