

pTron

## InTunes Pro

Bluetooth Headphones



Instruction Manual

### PAIRING

1. Make sure your phone, computer or music device is turned on and within 1 meter of each other.
2. Hold down the centre multifunction button for about 3 seconds until Blue & Red LED light starts flashing quickly.
3. Activate the Bluetooth feature on your phone or device and set it to search for Bluetooth device (discoverable).
4. Select **pTron InTunes Pro** from the list of found devices.
5. If asked for, enter passcode "0000" to pair and connect the headphones to your device.
6. Once successfully paired, the LED light will flash Blue once every few seconds.

### PLAYBACK/CONTROLS

1. Press multifunction button Play/Pause to start and pause audio.
2. Long Press (**Volume +**) button to skip forward to next track. Short Press the (**+**) button to increase volume.
3. Long Press (**Volume -**) button to go back to previous track. Short Press the (**-**) button to decrease volume.

**NOTE:** The controls will not function when charging.

### CHARGING THE HEADPHONES

1. Use the Micro USB cable and connect headphones to your computer or adaptor device made for USB charging. A red LED indicator will turn on when the headphones are charging. The red LED light will turn off when headphones are fully charged.

### CAUTION

- Do not use abrasive cleaners to clean your headphones because this could cause scratches and damage.
- Do not bring your headphones in to contact with any sharp objects because this could cause scratches and damage.
- Do not insert anything into your headphones unless otherwise specified in the user instructions. This may damage the internal components.
- Do not attempt to repair, modify, or disassemble the headphones yourself, it does not contain any user-serviceable components.
- Do not attempt to replace the headphone battery, it is built-in and is not changeable.
- Observe all signs and displays that require an electrical device or RF radio product to be switched in designated area.
- Dispose of the headphones and the headphone battery in accordance with local regulations.
- Do not dispose of the battery with regular household waste.

### CALLS

1. To answer an incoming call, short press the centre multifunction button.
2. To end call, press the centre multifunction button for about 1 second.

### FIRE AND ELECTRIC SHOCK HAZARD

- Do not expose the headphones to extremely high or low temperatures.
- Do not leave the headphones in direct sunlight for extended periods of time.
- Do not leave the headphones near open flames such as cooking burners, candles, or fireplaces.
- Do not use the headphones in open while it is raining as it is water resistant, not waterproof.
- Do not put water or any other liquid on the headphones.
- Do not block any ventilation openings.

### Disclaimer

The colors and specifications shown/mentioned in the user manual may differ from the actual product. Images shown are for representation purpose only. Other product logos and company names mentioned herein may be trademarks or trade names of their respective owners.