

Learn about your new

Noise

Buds MVP 102

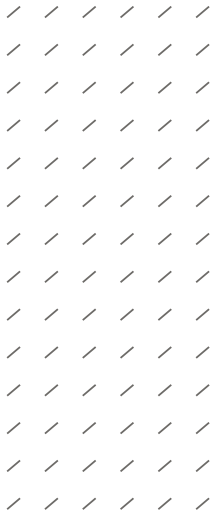


TABLE OF CONTENTS

Package Contents	01
Specifications	02
Power and Pairing	03
Reset and Sizing	04
Charging	05
Controls	06
Warranty	08
Safety	09

PACKAGE CONTAINS



Noise Buds MVP 102



Charging Case



USB Type-C charging Cable x 1



Extra Ear-tips (S x 1/L x 1)

EARBUD SPECIFICATIONS

Earbud weight: 4.0g(each)

Speaker driver size: 11mm

Supported profiles: A2DP/AVRCP/HFP/SPP/AVDTP

Bluetooth version: 5.3

Earbud charging time: Up to 45 minutes

Working voltage: 5V

Standby time: Up to 500 hours

Playtime: Up to 8 hours at 60% volume

Bluetooth range: 10m

Waterproof rating: IPX5

Working temperature: 0-45°C

CHARGING CASE SPECIFICATIONS

Charging case weight: 32.0g

Charging port: Type-C

The number of earbud charges from the case: 6.5 times

Case charging time: Up to 90 minutes

Total playtime with charging case: Up to 60 hours

POWER ON

The earbuds will automatically turn on, on opening the charging case.

POWER OFF

The earbuds will automatically turn off once placed inside the charging case with the lid closed.

PAIRING

Open the charging case.

Select 'Add Device' and select Noise Buds MVP 102 from the list of devices.

Your Noise Buds MVP 102 are now paired with your device and ready to use.

Note: Your Noise Buds MVP 102 will automatically connect to the last paired device as soon as you take them out of the charging case.

RESET

Make sure your earbuds are fully charged.

On your paired devices, delete/remove Noise Buds MVP 102 from the list of paired devices in the Bluetooth menu

Take out the earbuds from the charging case

Touch and hold either earbud for 10 seconds.

The LED will blink white 3 times in both earbuds, indicating earbuds have been reset.

Place the buds inside the charging case and repeat the pairing process.

DUAL DEVICE PAIRING

Connect your Buds MVP 102 with Device 1

Turn off the Bluetooth of Device 1, and connect Buds MVP 102 with Device 2

Turn on Bluetooth of Device 1 and select Noise Buds MVP 102 from the list of devices in Device 1, both the devices will be paired and are ready to use

CHOOSING YOUR EAR TIP SIZE

Earbuds are fitted with medium-sized tips. However, if you find that they don't fit perfectly, please remove them and try the small and large ear tips. Follow the images and chart to learn how to wear earbuds in the right manner.



CHARGING

Earbuds

Place both earbuds inside the case to charge them.

Indication (on case)

- ⦿ Flashing White LED  Charging

Charging Case

Charge the case via the supplied Type-C charging cable, preferably from any PC or laptop as compared to a USB charger.

Indication (on case)

- ⦿ Flashing White LED  Charging
- Solid White LED  Fully Charged

CONTROLS



Play/Pause

Tap either earbud twice



Tap twice



Tap twice



Previous Song

Tap the left earbud thrice



Tap thrice



Next Song

Tap the right earbud thrice



Tap thrice



Volume Up

Tap the right earbud once



Tap once



Volume Down

Tap the left earbud once



Tap once

CONTROLS



Answer Call / End Call
Tap either earbud twice



Tap twice



Tap twice



Reject Call
Touch and hold either earbud
for 2 seconds



Touch and hold



Touch and hold



Voice Assistant
Tap either earbud four times



Tap four times



Tap four times



Gaming Mode
Touch and hold either earbud
for 2 seconds



Touch and hold



Touch and hold

WARRANTY

The warranty covers your Noise product, including accessories against manufacturing defects (if any) for 1 year from the date of purchase.

Things that are not covered in the warranty

Unauthorized tampering, modifications or repairs of the product.

Physical damage of the product on the account of abuse, handling, storage, installation or testing including any use that is not in accordance with the product manual or documentation, or any other instruction provided along with the Noise product.

For further information on product replacement/refund related queries, please refer to the terms and conditions mentioned in our online return policy section on **www.gonoise.com**.

REGISTER YOUR WARRANTY

www.gonoise.com/pages/warranty-registration



SUPPORT AND SERVICE



1 YEAR LIMITED WARRANTY



SCAN ME

CUSTOMER QUERY

For any assistance, please reach out to us at support.gonoise.com

SAFETY FOR YOU AND YOUR NOISE BUDS MVP 102

Follow these tips and you & your Noise Buds MVP 102 will be happy together for a very longtime.



Do not expose the earbuds to liquids, moisture or humidity as they have electronics and battery inside.



Don't try to disassemble your earbuds. There are no user serviceable parts inside it.



Don't use abrasive cleaning solvents to clean your new earbuds. Wipe them down with a slightly damp cloth if and when necessary.



Try not to drop the earbuds and keep them away from sharp objects such as keys in your pockets.



Remove and clean the earbud tips regularly to ensure that you always enjoy the best sound possible.



Only charge your earbuds from 5V USB ports such as phone chargers and laptops or PCs



Do not expose the earbuds to extremely high or low temperature as this may damage the battery or even deform the plastic parts.



Never listen to music at high volume or you may permanently damage your hearing.



Don't throw the earbuds in a fire to dispose it. The internal battery may explode. .



Pay attention to your surroundings and never wear any earphones while riding, driving or walking in traffic.

noise