

boAt



ROCKERZ
551 ANC PRO


boAt

ROCKERZ 551 ANC PRO

Thank you for choosing boAt Rockerz 551 ANC Pro. This manual is meant to guide you through functionalities of the Active Noise Cancelling headphones. Please think of this manual as your guiding map. Knowledge of Bluetooth and device connection is essential for steering of this boAt. Therefore, we strongly advise that this manual is thoroughly read before beginning the product usage, and referred to in times of difficulty.

PACKAGE CONTENTS

- 1 boAt Rockerz 551 ANC Pro
- 1 Type-C Cable
- 1 AUX Cable
- 1 User Manual
- 1 Warranty card

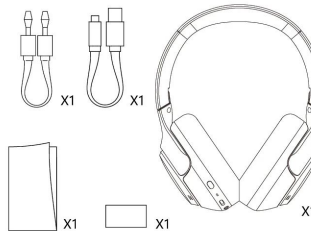

OVERVIEW



FUNCTIONS

Power On: Press and hold the MFB (Multifunction Button) for 2 seconds to switch the headphone on.
Power Off: Press and hold the MFB (Multifunction Button) for 4 seconds to power off the headphone.

BLUETOOTH PAIRING

Step 1: Press and hold the MFB for 2 seconds to turn on the headphone and put them into pairing mode, indicated by white and red LED flashes.
Step 2: Open your device's Bluetooth menu and search for 'Rockerz 551 ANC Pro' to pair.

Congratulations! The ANC headphone has been paired with your media device.



BASIC FUNCTIONALITIES

Play/Pause: Short press MFB to play/pause a track
Next Track: Press and hold the Volume Up button for 1 second to skip to the next track
Previous Track: Press and hold the Volume Down button for 1 second to return to the previous track
Answer Call: Short press the MFB during an incoming call
End Call: Short press the MFB during an ongoing call
Reject Call: Double press the MFB to reject any incoming call
Voice Assistant: Triple press the MFB to activate your device's default Voice Assistant
Volume Increase: Short press the Volume Up button in steps
Volume Decrease: Short press the Volume Down button in steps
Reset: Press and hold the Volume + & Volume - button simultaneously for 4 seconds

ANC:

Adapted ANC: Short press the ANC button to activate ANC mode; short press to deactivate the same & switch to Normal mode (Default)
The Cycle of Operation: Ambient -> ANC ON -> Normal Mode (ANC OFF)

Adaptive ANC:

Press the ANC button 2 times to activate Adaptive ANC. Please wait for 3 seconds for the headphones to assess your surroundings and cancel external noise.
Note: Adaptive ANC will work only in ANC mode.

ENx™ TECH:

Our ENx™ tech algorithm cancels out the background noise so that you can be heard crystal clear via voice calls. One need not activate ENx™ as the mic is equipped with the same and activated by default.

Deliver your voice without interruptions anywhere – traffic, railway stations, airports, work space; literally anywhere!

CHARGING

Insert one end of the USB Type-C cable into the Type-C interface of the headphone and connect the other end to any USB charger or charging device. While charging the LED stays solid red. Once the headphones get fully charged, the LED turns into solid white.

Note: While charging, the headphone cannot be powered on or used. Also, when the battery is low, it gets indicated by red LED flashes.

CHARGING NORMS & GUIDELINES: -

Charger/Adapter at 5V/2A and Standard Cable (35 strands @0.10mm diameter/strand)

SPECIFICATIONS

Driver Size	40mm*2
Headphone Type	Hybrid ANC
Bluetooth	V5.4
THD	5%
Noise Cancellation	Up to 42dB
Playtime	Up to 72 Hours (non ANC mode, 60% volume)
Playtime ANC on	Up to 40 Hours (ANC mode; 60% volume)
Charging Time	1.5 hours
Wireless Range	10m
Charge Interface	USB Type-C
SNR	70dB
Frequency	20Hz-20KHz
Battery	500mAh

SAFETY CAUTIONS

Please don't dismantle the product in any way, as this can lead to a fire or electrical breakdown and completely damage the product. As this is extremely unsafe, we ask that any maintenance of servicing of the headphones is done only through a qualified service provider/manufacturer.

Please do not remove the battery by yourself, this is a task meant to be managed by a service provider/manufacturer. Replacing the current battery with an ill-fitting set can result in a fire or electric hazard, therefore it is strongly advised against.

Please clean the headphones with the utmost of care with only a damp soft cloth, if cleaning is required. Please do not use any oily volatile liquid. In addition, ensure that the headphones are kept away from extremely hot or cold substances.

Any damage to the headphones that is NOT a manufacturing issue will make the products warranty null and void. Please take the greatest care of your headphones to ensure that no such occurrences take place.

Do not use headphones when it is unsafe to be wearing them, such as while operating a vehicle, crossing a street, or during any activity where full awareness of your surroundings is required. This is because it is dangerous to drive while wearing headphones as it decreases your ability to hear sounds like another car's horn or an emergency vehicle's sirens.

You must choose a qualified charger (Output=5V) from a regular manufacturer to charge the headphone. You must charge the headphones if it has not been used for more than 12 months.

boAt



ROCKERZ
551 ANC PRO