

# Noise Buds VS102 Elite

 


Please refer to this manual before using the product

## **TABLE OF CONTENTS**

• Package Contents and Features	<b>01</b>
• Specifications	<b>02</b>
• Power and Pairing	<b>03</b>
• Reset and Sizing	<b>04</b>
• Charging	<b>05</b>
• Controls	<b>06</b>
• Warranty	<b>08</b>
• Safety	<b>09</b>

## PACKAGE CONTENTS



Noise Buds VS102 Elite x 1



USB Type-C charging cable x 1



Charging case x 1



S X 1

L X 1

Ear-tips

User manual x 1

Thank you card x 1

## **SPECIFICATIONS**

- Earbud weight: 4.2 g each earbud
- Speaker driver size: 11 mm
- Supported profiles: A2DP/AVRCP/HFP/SPP/AVDTP
- Bluetooth version: 5.3
- Earbud charging time: Up to 30 minutes
- Working voltage: 5V
- Standby time: Up to 500 hours
- Buds Playtime: Up to 7 hours at 70% Volume
- Bluetooth range: 15 m
- Waterproof rating: IPX5
- Working temperature: 0-45°C

## **CHARGING CASE SPECIFICATIONS**

- Charging case weight: 28 g
- Charging port: Type-C
- The number of earbud charges from the case: 5 times
- Case charging time: Up to 90 minutes
- Total playtime with charging case: Up to 40 hours

## POWER ON

The earbuds will automatically turn on when you open the charging case.


## POWER OFF

The earbuds will automatically turn off once placed inside the charging case with the lid closed.

## PAIRING

- Open the charging case.
- Turn on the Bluetooth of your device.
- Select 'Add Device', and from the list of devices, select 'Noise Buds VS102 Elite'.
- Your Noise Buds VS102 Elite are now paired with your device and ready to use.

Note: Your Noise Buds VS102 Elite will automatically connect to the last paired device as soon as you take them out of the charging case.

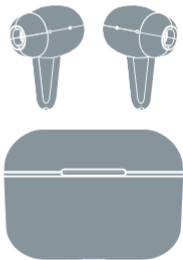

## RESET

- Make sure your earbuds are fully charged.
- On your paired devices, delete/remove Noise Buds VS102 Elite from the list of paired devices in the Bluetooth menu.
- Take out the earbuds from the charging case.
- Long press both earbuds for 10 seconds.
- The LED will blink 3 times and a voice prompt saying “reset” will indicate earbuds have been reset.
- Place the earbuds inside the charging case and repeat the pairing process.

## CHOOSING YOUR EART-TIP SIZE

Earbuds are fitted with medium-sized tips. However, if you find that they don't fit perfectly, please remove them and try the small and large ear-tips.

Follow the images and chart to learn how to wear earbuds in the right manner.



## CHARGING

### Earbuds

Place both earbuds inside the charging case to charge them.

### Indication (on case)

- Solid White LED = Charging



Charging

### Case

Charge the case via the supplied Type-C charging cable, preferably from any PC or laptop as compared to a USB charger.

### Indication (on case)

- Flashing red LED = Charging



Charging

- No LED = Fully Charged



Fully Charged

## CONTROLS



### Play/Pause

Tap either earbud twice



Tap twice



Tap twice



### Previous Song

Tap the left earbud thrice



Tap thrice



### Next Song

Tap the right earbud thrice



Tap thrice



### Volume Up

Tap the right earbud once



Tap once



### Volume Down

Tap the left earbud once



Tap once







### Answer Call

Tap either earbud twice



Tap twice



Tap twice



### End Call

Tap either earbud twice



Tap twice



Tap twice



### Reject Call

Touch and hold either earbud for 2 seconds



Touch and hold



Touch and hold



### Voice Assistant

Tap right earbud four times



Tap 4 times



### Gaming Mode

Touch and hold either earbud for 2 seconds.



Touch and hold



Touch and hold



## WARRANTY

The warranty covers your Noise product, including accessories, against manufacturing defects (if any) for 1 year from the date of purchase.

### Things that are not covered in the warranty are listed below:

- Unauthorized tampering, modifications or repairs of the product.
- Physical damage of the product on the account of abuse, handling, storage, installation or testing including any use that is not by the product manual or documentation, or any other instruction provided along with the Noise product.

For further information on product replacement/refund-related queries, please refer to the terms and conditions mentioned in our online return policy section on **[www.gonoise.com](http://www.gonoise.com)**.

## REGISTER YOUR WARRANTY

[www.gonoise.com/pages/warranty-registration](http://www.gonoise.com/pages/warranty-registration)



SUPPORT AND SERVICE



1 YEAR LIMITED WARRANTY



SCAN ME

## CUSTOMER QUERY

For any assistance, please reach out to us at [support.gonoise.in](mailto:support.gonoise.in)

## SAFETY FOR YOU AND YOUR NOISE BUDS VS102 ELITE

Follow these tips to get the best out of your new Noise Buds VS102 Elite:



Do not expose the earbuds to liquids, moisture or humidity as they have electronics and batteries inside.



Do not try to disassemble your earbuds. There are no user-serviceable parts inside it.



Don't use abrasive cleaning solvents to clean your new earbuds. Wipe them down with a slightly damp cloth if and when necessary.



Try not to drop the earbuds and keep them away from sharp objects such as keys in your pockets.



Remove and clean the earbud tips regularly to ensure that you always enjoy the best sound possible.



Only charge your earbuds from 5V USB ports such as phone chargers and laptops or PC chargers.



Do not expose the earbuds to extremely high or low temperatures as this may damage the battery or even deform the plastic parts.



Never listen to music at a high volume or you may permanently damage your hearing.



Do not throw the earbuds in a fire to dispose them. The internal battery may explode.



Pay attention to your surroundings and never wear any earbuds while riding, driving or walking in traffic.

