

Airwave Max 5



Please refer to this manual before using the product

TABLE OF CONTENT

• Package Content	01
• Product Overview	02
• Wear & Adjust	03
• Pairing	04
• Specifications	05
• Charging	06
• Power ON/OFF	07
• ANC Button Controls	08
• Force Pairing	09
• Volume/Power Button Controls	10
• Reset	12
• Dual Connection	13
• Wired Playback	14
• Warranty	15
• Safety	16

PACKAGE CONTENT



Noise Airwave Max 5 x 1

User manual x 1

Warranty card x 1




Charging cable x 1



Audio cable x 1

PRODUCT OVERVIEW

- | | | | |
|---|-------------------------|----|--|
| 1 | Volume Up/Next Track | 2 | Volume Down/ Previous Track |
| 3 | Multi-function Button | 4 | Bluetooth Indicator |
| 5 | ANC Button | 6 | Microphone for Noise Cancellation/Call |
| 7 | USB-C Port | 8 | Charging Indicator |
| 9 | Ventilation Tuning Hole | 10 | Microphone for Noise Cancellation |

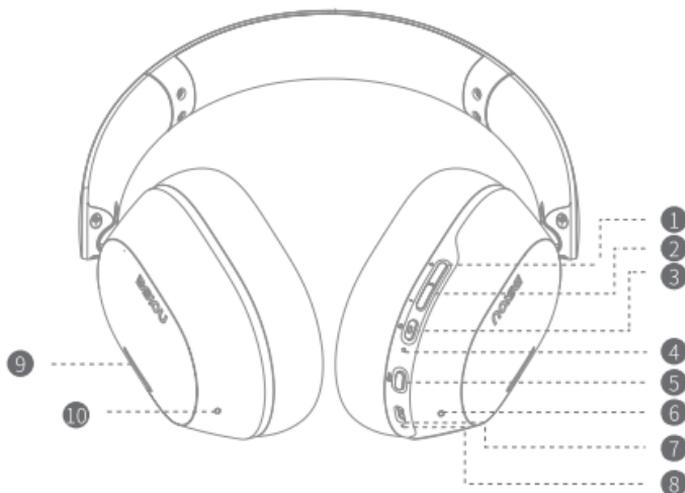

WEAR & ADJUST





Adjust the headphone to properly fit your head, and match L/R earcups with your L/R respectively.

PAIRING

After powering on, it will automatically enter pairing mode, and the white indicator on the right headphone will flash quickly. Search for “Noise Airwave Max 5” for a match, and when the connection is successful, the light will turn on for 1 second and off for 1 second.

Note: the headphone will automatically power off if the connection is not complete within 10 minutes.

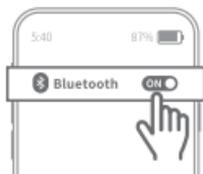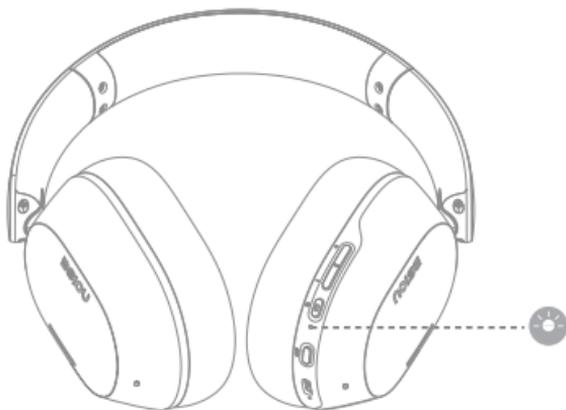


SPECIFICATIONS

Product Name	Noise Airwave Max 5
Bluetooth Version	5.4
Frequency Band	2400MHz-2483.5MHz
Max. RF Output Power	4dBm
Transmission Distance	10m/33ft Max (no blocking)
Bluetooth Profile	HFP/AVRCP/A2DP/BLE/SPP
Codecs	AAC/SBC
Frequency Response	20Hz-40kHz
Charging Port	Type-C
Battery Type	Polymer lithium-ion battery
Battery Capacity	600mAh 3.7V (2.22Wh)
Limited Charging Voltage	6.2 V
Charging Input	5V 600mA
Charging Time	About 1.5 hours
Operating Time	About 80 hours (ANC OFF) About 50 hours (ANC ON)

CHARGING

1.5 hours to fully charge.

Note: low power mode is red light 1 seconds off, please charge in time.

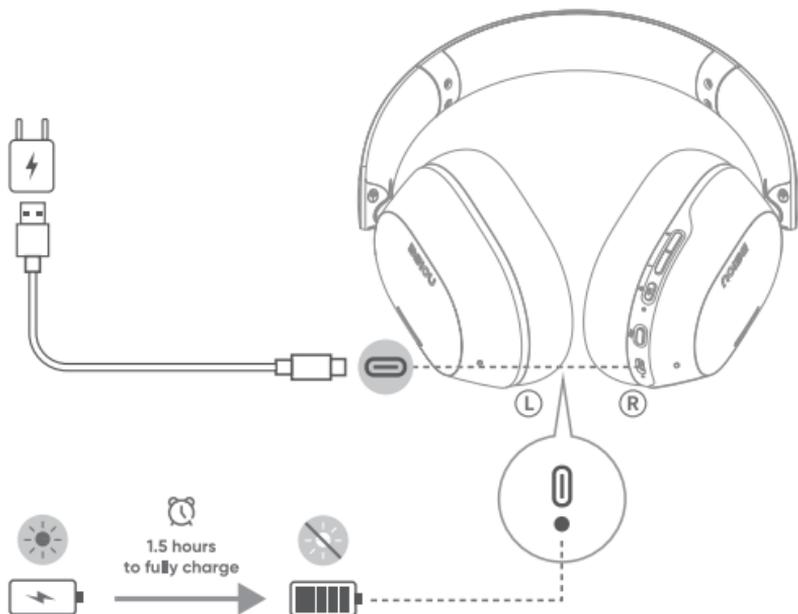


POWER ON/OFF

POWER ON

Press and hold  for 2 seconds till the white indicator turns on for 1 second.

POWER OFF

Press and hold  for 3 seconds till the red indicator turns on for 1 second.

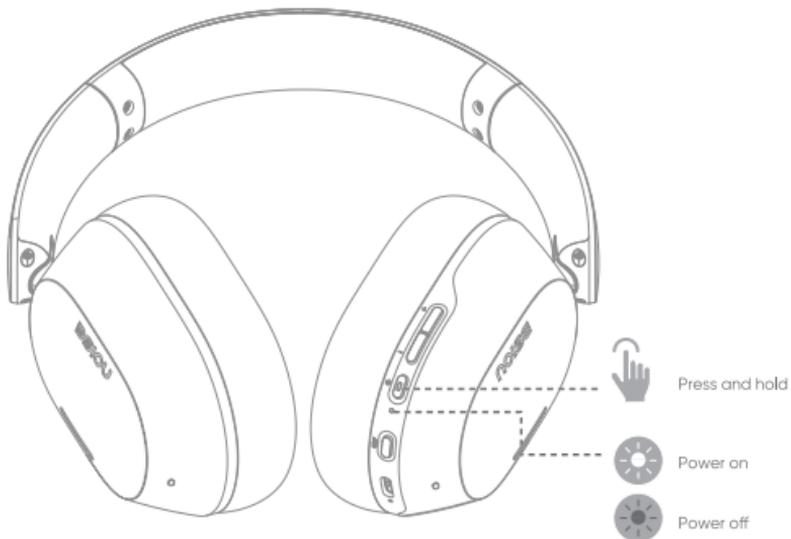


ANC BUTTON CONTROLS

Short Press: Cycle through “ANC off/ANC on/Ambient”


Press and Hold for 1 second: Switch between music & gaming mode (powering off or charging will restore the headphones to the default music mode).

Adaptive noise reduction mode: In the noise reduction mode, press the ANC button and volume up (+) for 1 second at the same time to enable/disable the adaptive noise reduction mode, and finally return to the default noise reduction mode.

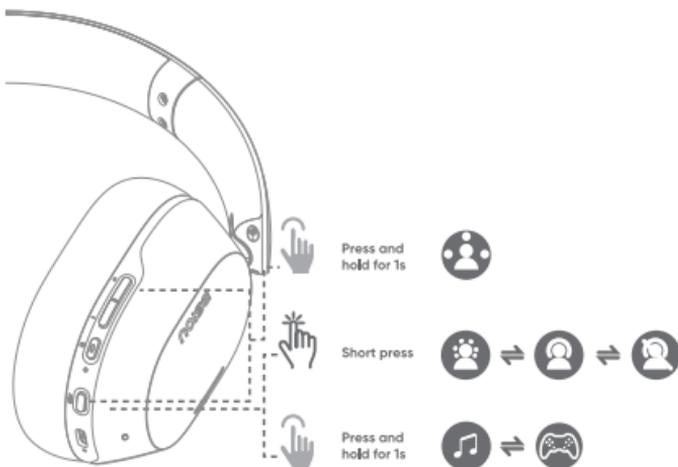


FORCE PAIRING

When power on, short press the  for the 3 times to force the headphone into pairing mode. The white bluetooth indicator will flash quickly.

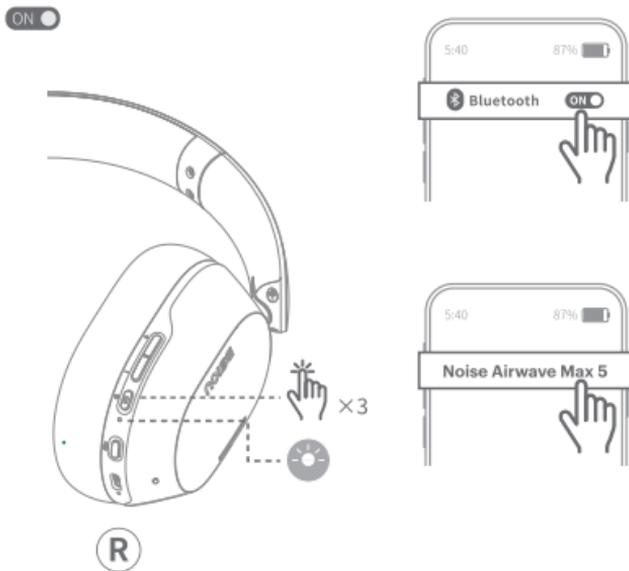

VOLUME BUTTON/POWER BUTTON CONTROLS

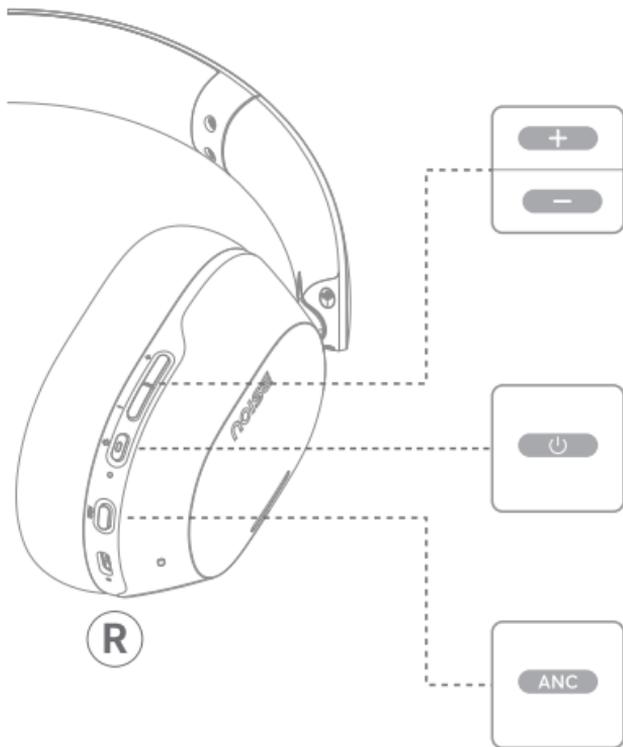


VOLUME BUTTON/POWER BUTTON CONTROLS

	<ul style="list-style-type: none"> ×1 Short press ×2 Short press twice × 1s Press & hold for 1s ×3 Short press thrice	<ul style="list-style-type: none"> Play/Pause/Answer/End call Activate voice assistant Reject call Enter pairing mode
	<ul style="list-style-type: none"> ×1 Short press × 2s Press & hold for 2s	<ul style="list-style-type: none"> Volume up Next Track
	<ul style="list-style-type: none"> ×1 Short press × 2s Press & hold for 2s	<ul style="list-style-type: none"> Volume down Previous Track
	<ul style="list-style-type: none"> × 1s Press & hold for 1s ×2 Short press twice	<ul style="list-style-type: none"> Game mode/music mode Spatial Audio on/off

RESET

Turn it off: Press and hold the  power button for 3 seconds.

Resetting: Press and hold the power button for 10 seconds. The red/white indicator would be on for 3 seconds, indicating the resetting is completed.

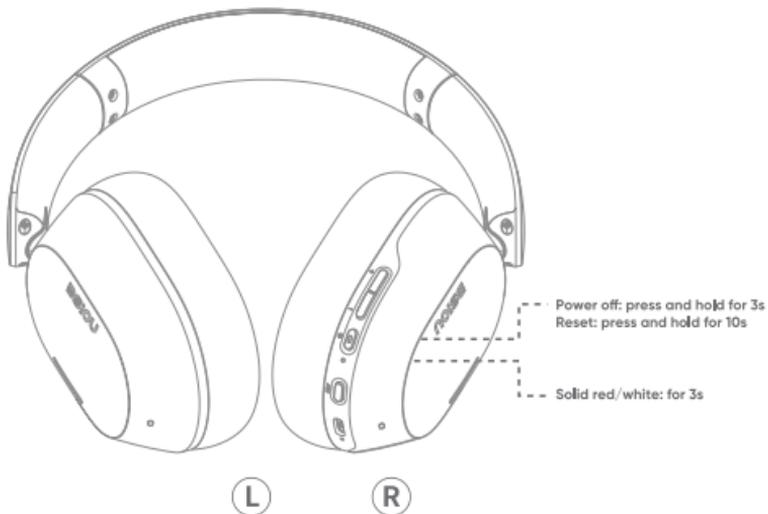

DUAL CONNECTION

Turn on your first phone's **bluetooth**, search for "Noise Airwave Max 5" and make a pair connection.


Complete pairing with the 1st phone (or tablet/computer).

Short press the power button for 3 times to put headphones into pairing mode.

Connect to "Noise Airwave Max 5: in the **bluetooth** list of your second device.

Note: The headphone can only play music from one device at a time. There may be momentary delay when switching devices due to different brands/versions and their compatibility.

If one of the devices disconnects after dual connections, the headphones will remain connected to the other device and will attempt to reconnect to the disconnected device within 10 minutes.

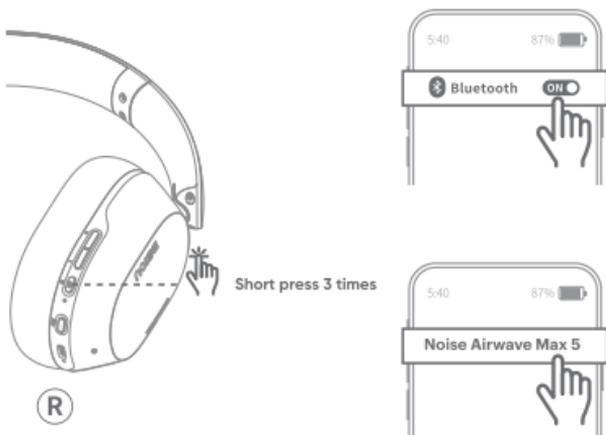


WIRED PLAYBACK

Use the included audio cable to connect the headphones to your device and control audio playback on it.

Note: The USB-C audio cable included with this product only supports audio transmission and should not be used for charging.

Some phones are limited by the system version, and you may not be able to use the headphones button and the microphone functions in wired mode.

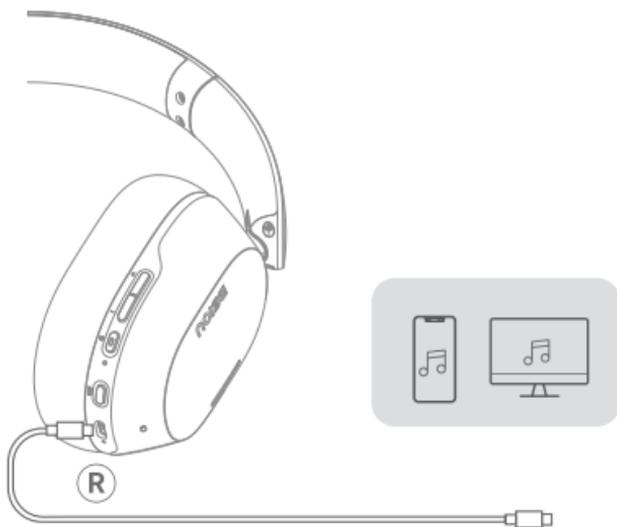

WARRANTY

The warranty covers your Noise product, including accessories, against manufacturing defects (if any) for 1 year from the date of purchase.

Things that are not covered in the warranty are listed below:

Unauthorised tampering, modifications or repairs of the product.

Physical damage of the product on the account of abuse, handling, storage, installation or testing including any use that is not by the product manual or documentation or any other instruction provided along with the Noise product.

For further information on product replacement/refund-related queries, please refer to the terms and conditions mentioned in our online return policy section on www.gonoise.com.

REGISTER YOUR WARRANTY

www.gonoise.com/pages/warranty-registration

✔ SUPPORT AND SERVICE

🕒 1 YEAR LIMITED WARRANTY



SCAN ME

CUSTOMER QUERY

For any assistance, please reach out to us at support.gonoise.in

SAFETY FOR YOU AND YOUR NOISE AIRWAVE MAX 5

Follow these tips to get the best out of your new Noise Airwave Max 5:

-  Do not expose the headphone to liquids, moisture, or humidity as they have electronics and batteries inside.
-  Do not try to disassemble your headphone. There are no user-serviceable parts inside it.
-  Do not use abrasive cleaning solvents to clean your new headphone. Wipe them down with a slightly damp cloth if and when necessary.
-  Avoid dropping the headphone and keeping them away from sharp objects such as keys in your pockets.
-  Do not expose the headphone to extremely high or low temperatures as this may damage the battery or even deform the plastic parts.
-  Only charge your headphone from 5V/1A ports such as phones and laptops or PC chargers.
-  Do not throw the headphone in a fire to dispose them. The internal battery may explode.
-  Avoid listening to music at a high volume or you may permanently damage your hearing.
-  Pay attention to your surroundings and never wear any headphone while riding, driving, or walking in traffic.

noise