

Oven Toaster Griller  
**OTG 9** LITRES

INSTRUCTION MANUAL



Model Code:

**WCOTG01JK09A03**


230V~50Hz, 650W

**Important Safeguards:**

When using electrical appliances, basic precautions should always be followed, which include the following:

- Read all instructions carefully.
- Do not touch hot surfaces.
- Close supervision is necessary when any appliance is used by or near children.
- To protect against electric shock, do not immerse cord, plug, or any parts of the appliance in water or other liquids.
- Do not let the cord hang over the edge of table or counter, or touch hot surfaces.
- Do not operate the appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner. Return appliance to the nearest authorized service center for examination, repair, or adjustment.
- Do not place the appliance on or near a hot gas or electric burner.
- When operating the oven keep at least four inches of space on all sides of the oven to allow for adequate air circulation.
- Unplug from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning.
- To disconnect, turn the control to the OFF position, before removing the plug. Always hold the plug, and never pull the cord.
- Do not cover CRUMB TRAY or any part of the oven with metal foil. This may cause overheating of the oven.
- Exercise extreme caution when removing tray or disposing off hot grease or other hot liquids.
- Do not clean the appliance with metal scouring pads.
- Never leave the appliance unattended while grilling or toasting.
- Oversized metal utensils must not be placed inside the appliance as they may create a fire or risk of electric shock.
- Do not place any item onto the oven or cover the oven with flammable material during operation as it may cause fire.
- Do not place any of the following materials in the oven: cardboard, plastic, paper, or anything similar.
- Do not store any materials, other than manufacturer recommended accessories, in this oven when not in use.
- Always wear protective, insulated oven gloves when inserting or removing items from the hot oven.
- Do not use the appliance for other than its intended use.
- This appliance is for HOUSEHOLD USE only.

**List of Components:**

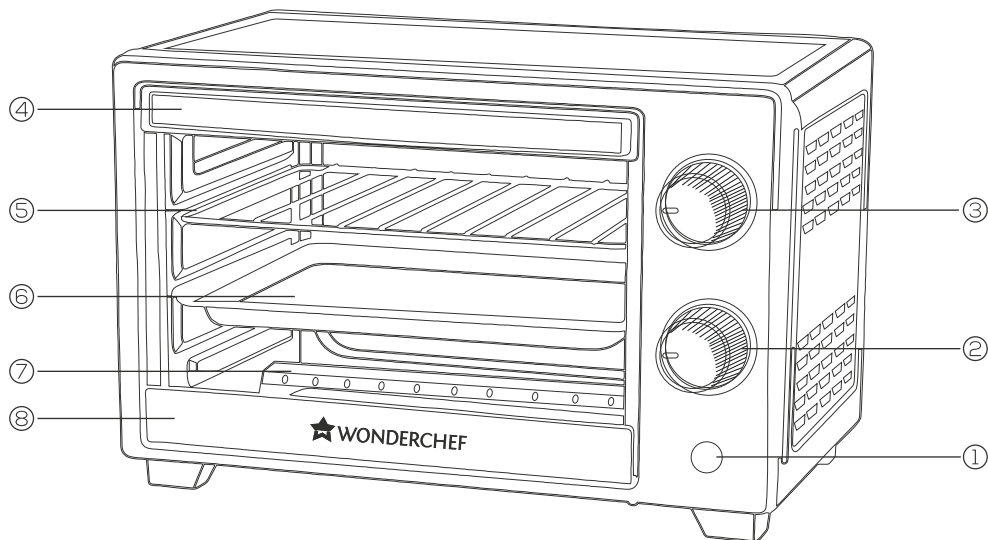

**List of Components:**

- |                     |                      |
|---------------------|----------------------|
| 1. Power light      | 2. Times             |
| 3. Selector Dial    | 4. Glass door handle |
| 5. Baking rack      | 6. Baking pan        |
| 7. Heating elements | 8. Glass door clips  |

**Accessories:**









- Baking Pan
- Baking Rack

**Before Use:**

- Ensure that there is enough ventilation around the oven.
- Ensure that the oven is completely dry before use.
- The oven should not be placed on an untreated wooden surface. Place the oven on a heat resistant surface.
- The feet of the oven could leave marks on the table, if this happens, remove the marks with a damp cloth.

**Cooking Guide**

Please use the baking pan for greasy food to prevent from catching a fire due to grease is dropped.

Temperature	Recipe	Quantity	Baking Part	Cooking Time	Preheat
Toast	Toast	1 - 2	-----	2-4 min.	10 min.
High	Pizza Toast	1 - 2 (25mm of thickness)		7-10 min.	10 min.
	Gratin	1 (150 g)		9-12 min.	10 min.
	Frozen Pizza (To heat up)	1 (15 - 20cm)		12-14 min.	10 min.
	Frozen Chicken Nuggets (To heat up)	4 - 8 (25g / Piece)		12-15 min.	10 min.
	Frozen Deep Fry (To heal up)	4 (40g / Piece)		13-15 min.	10 min.
	Baked Sweet Potatoes	4 (15 mm of sliced) (50g / piece)		14-15 min.	10 min.
Mid	Deep Fry Potatoes	1 - 4 (60 g / piece)		8-13 min.	10 min.
	Cookies	6 (10 mm of sliced) (20-30 g / piece)		9-12 min.	10 min.
Low	Butter Roll (To heat Up)	3~6 (50 g / piece)	-----	3-5 min.	10 min.

- Cooking times in the table are approximately time which varies depending on the type and quantity of food. Please adjust time by quantity and temperature for your taste.
- Ensure to check condition of food from time to time while cooking.
- Please preheat toaster oven before cooking or heating food up except toast. Withoutpreheat, food may burn or may take longer time to cook.
- When breads are toasted continuously, toasting color get lighter. Please set cooking time longer from second time of toasting.
- If it takes more than 15 minutes to cook the food, set the timer again.
- If the food has not been sufficiently heated, use the timer to heat it further, checking from time to time.
- Do not use the toaster oven for steaming. (Steam will cause malfunction.)
- When cooking with foil, such as when baking large potatoes, use caution to prevent the foil from coming in contact with the heater. (The foil might melt away and adhere to the surface of the heater, causing malfunction.)

**Oven Use:**

- Turn the selector dial to the desired position.
- Turn the timer dial clockwise to the desired cooking time.
- The power light will light up after the timer is turned on, and will go out when the timer is turned OFF.
- When the cooking time is over, the timer will auto shut off and the bell will ring.
- If the cooking is finished earlier than the set cooking time, please turn back the timer to OFF to turn off the oven.
- During the first use of this oven, there could be an emission of light smoke from the oven, this is normal. After 5 minutes the smoke will disappear.
- In order to get better cooking performance, it is recommended to pre-heat the oven for about 10 minutes.

**Grill Cooking:**

- Turn the selector to the GRILL setting (top heating tube).
- Turn the timer to the desired grill time.
- When the grilling is done, turn back the timer to OFF position to turn off the oven.

**After Use:**

- Turn the timer to OFF.
- Turn the selector to OFF.
- Unplug the appliance from the outlet.
- Wait until the oven is completely cooled before starting the cleaning process.

**Maintenance and Cleaning:**

- Unplug the appliance and allow it to cool before cleaning.
- Do not immerse the appliance in water. All surfaces can be cleaned with a clean damp cloth.
- Do not use abrasive cleaners or sharp utensils to clean the appliance.
- Clean the interior chamber with a clean damp cloth.

**Specifications:**

Model No.: WCOTG01L096501

230V AC 50Hz 650W

**WONDERCHEF HOME APPLIANCES PVT. LTD.**

Unit No. 303, 3rd Floor, B Wing, Supreme Business Park, Hiranandani Gardens, Powai, Mumbai - 400076,  
Maharashtra, India | Customer Care Number: 18602660788\* | Email Id: care@wonderchef.in

[www.wonderchef.com](http://www.wonderchef.com)

\*Standard charges apply.