



ZEBRONICS
ALWAYS AHEAD



User Manual

www.zebronics.com



Dear Customer,

Thank you for purchasing **ZEB-YOGA 90 PLUS** wireless neckband earphone. Please read this user manual carefully before operation & save this user manual for further reference.

Note:

- Avoid the use of this product at the high temperature and high humidity environment.
- Avoid self-disassemble of product or it will result in the failure of warranty.
- Please charge the product with power adapter output rated voltages DC 5V.

Caution:

Listening at high volumes can cause hearing impairment. Please limit your usage time at high volumes.

Features

Wireless BT earphone with Neckband

Volume/Media Control

Magnetic Earpiece

Call Function

Voice Assistant support

Dual Pairing

Built-In Rechargeable Battery

Type-C Charging

Specifications

BT version	: 5.0
Supported BT profile	: HSP / HFP / A2DP / AVRCP
Drive size	: 10mm
Speaker impedance	: 32Ω
Playback time	: 10H*
Charging time	: 1H
Talk time	: 10H*
Standby time	: 38H
Net weight	: 31.3g

Package Contents

Neckband	: 1 Unit
Ear buds	: 2 Pairs
Charging cable	: 1 Unit

**at 50% volume*

Charging Instruction

Connect a Type-C cable to the charging port of the earphone & connect the other end of the cable to a 5V DC adapter.

LED Indication

Charging Indication: RED LED glows.

Full Charge Indication: RED LED turns OFF.

BT Discover Mode: RED & BLUE LED blinks alternately.


When connect to a phone: BLUE LED will blink once in an interval of 5 secs.

Usage Instruction

Bluetooth Pairing Instruction


Step 1: In Off state, long press the POWER button until the earphone goes into pairing mode (Red/Blue LED will blink alternately.)

Step 2: Switch on the BT menu on your phone & search for the BT name "**ZEB-YOGA 90 PLUS**", tap to connect it.

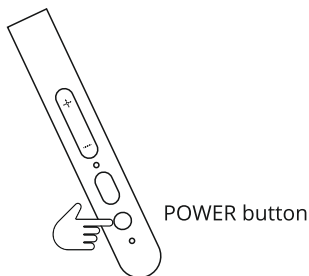

Call Function

Press the MFB button to answer/hang-up the call. Press and hold the MFB Button for 2 seconds to reject an incoming call. Double press the MFB button to redial the last number dialed.

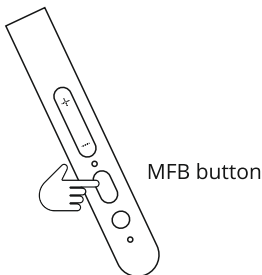

Activating Voice Assistant

When the earphone is connected to a smart phone, press and hold the MFB button 2 seconds to wake up the phone's voice assistant.

Media/Volume control

Press the MFB button once to play or pause media. Long press the " + " button to select Next Track, single press to increase the volume. Long press the " - " button to select Prev Track, single press to decrease the volume.

