

 Reboot Go to Reboot to restart your watch.

 Power off Go to Power off to power off your watch.

You can choose to reset. Do note if you choose to reset, all your data and settings will be erased.

# WATCH FEATURES

# Activity

You can check your daily activity progress in terms of the steps taken, distance covered, calories burned and active time

# Heart Rate

ColorFit Ultra 2 supports 24/7 heart rate tracking. You can select the measurement frequency in the app settings. To measure your heart rate in real time, ac to the Heart Rate monitor. You can view the all-day data on the watch and app. Note: Make sure your arms and wrists are still and there is no space between your watch and the wrist.



You can view your most recent sleep record and sleep quality in various sleep stages in the NoiseFit app. The feature will measure the device records of the user's sleep cycle, sleep states (light sleep and deep sleep), wake time and REM.

### SpO2

ColorFit Ultra 2 supports viewing of the ighest and lowest values of Blood Oxygen level of the day and the measurement data throughout the day. To measure your blood oxygen level real time, go to the Blood Oxygen monitor and let it

Note: Make sure your arms and wrists are still and there is no space between your watch and the wrist.

# Stopwatch

A stopwatch can be set on the watch. You can also set lap times in the stopwatch.







Breathe

ColorFit Ultra 2 supports 24 hour stress level measurement and viewing of all day measurement

To measure the stress levels real time, go to the Stress Level feature and wait for it to measure Note: Make sure your arms and wrists are still and here is no space between your watch and the wrist.

Stress

The Breathe feature helps you adjust your breathing rhythm as per your convenience. You can choose from 3 speeds (fast, moderate and slow) to adjust your breathing duration. After the session, you can also see the change in the beats per minute. Go to the Breathe feature, choose the time luration and speed and tap on start to ente the cycles of breathing and inhalation. Note: During this period, if you swipe right or press a button, breathing is interrupted and you can choose to practice again or complete the cycle.

# Weathe


ColorFit Ultra 2 supports 7-day weather viewing in a location of your choice as long it is synced with the NoiseFit app. You car view today's current weather and for the next 6 days. Open the Weather app on your watch and change the location to see the weather of your current location.

# Music

You can control your favourite songs and podcasts that play from your phone right on your wrist as long as the watch is connected with the NoiseFit app in your phone. You can play/pause music, go to next/previous track and increase/decrease volume.

# Stocks

You can update yourself with stock market information with this feature. Go to app and add Stock information

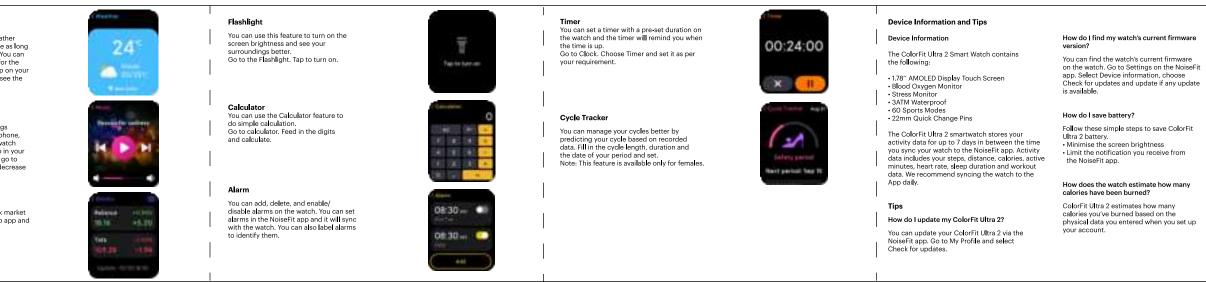

# How do I change my activity goals?

You can do it through the NoiseFit app. Go to My Profile. Go to Setup and select My Objectives. Change your goals and confirm.

### How do I log my weight?

(ou can log in your weight the first time you setup your NoiseFit app. However, you can update the weight later via NoiseFit app. Go to My Profile, select Personal Information and change or update your weight. You ca update birthday, height, country and email id as well.

### Disposal and Recycling Information

ectrical and electronic devices may not be disposed of with domestic waste. Consumers are obliged by law to return the electrical and electronic device at the and of their service lives to the public collecting points set up for this purpose or point of sale. Details to this are defined by the national law of the respective country. By recycling, reusing the materials or other forms of utilising old devices, you are making an important contribution to protecting our environment.

# Regulatory and Safety Information

USA: Federal Communications Commission (FCC) Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following following measures: two conditions:

This device may cause harmful interference, and this device must accept any interference received, including interference that may equipment and receiver. cause undesired operation.

larning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and ound to comply with the limits for a Class B digital device, pursuant to part 15 of the FC0 Rules. These limits are designed to provide reasonable protection against harmful nterference in a residential installation. This equipment generates, uses and can radiate adio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this 76 equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on the user is ncouraged to try to correct the interference by one or more of the

Increase the separation between the

 Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Reorient or relocate the receiving antenna.

 Consult the dealer or an experienced adio/TV technician for help.

The ColorFit Ultra 2 smartwatch is not a toy. The watch contains small components that could be a choking hazard and are not intended for use by small children or pets. Unless otherwise specified, devices and services are not a medica device and are not intended to diagnose, treat, cure or prevent any disease. We develop products and services to track daily activity and wellness information as accurately as possible. The accuracy of devices are not intended to be equivalent to medical devices or scientific measurement devices.

### In some cases, prolonged use of products may cause skin irritation. Prolonged contac may contribute to skin irritation or a lergies in some users. To reduce the possibility of irritation, keep the watch and watch band clean and dry. Don't wear it too tight and give your wrist a rest by removing the watch after an extended period of wear. If you feel soreness, tingling, numbness, burning or tiffness in your hands or wrists while or after wearing the watch, please immediately discontinue use.

Safety Instructions Do not disassemble the battery on

vour own. Do not expose ColorFit Ultra 2 to extremely high or low temperatures Charge the battery in a cool. ventilated room. Do not open, crush, bend, deforr puncture or shred secondary cells o batteries. In the event of a battery break or leak, prevent battery liquid contact with skin or eyes. If this happens, immediately flush the areas with water (DO NOT RUB THE EYE) or

seek medical help. Keep the batteries out of children's reach and in a safe place to prevent · Do not place the batteries in the

· Do not short-circuit. Short-circuiting may damage the battery. Shortcircuiting can occur when a metallic object, such as coins, causes the direct connection of positive and negative terminals of the battery.

 Do not use your product in a sauna or steam Do not dispose of batteries in the fire as that

may cause an explosion. Dispose of used batteries in accordance with your local regulations. Do not dispose it as household

 Use only the charging cable supplied to charge the battery. Do not charge for more than 24

• Do not attempt to repair or maintain the watch yourself, service and maintenance should be performed by authorised technicians only. An device failure should be referred to our aftersales service personne. • To prevent device damage, accessory damage

and device failure, always protect the device against strong impact or shock.

# Customer Support

If you experience any problem with the watch, it may be fixed by restarting your watch. For any assistance, please reach out to us at support.gonoise.in

# FCC STATEMENT

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

This device may not cause harmful interference, and This device must accept any interference received, including interference that may cause

undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

## RF warning statement:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.